
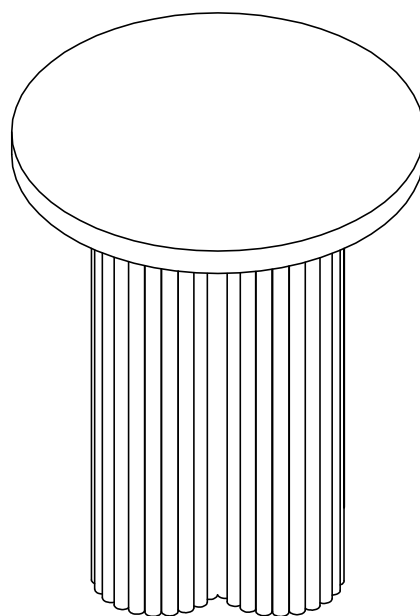



Installation Instruction

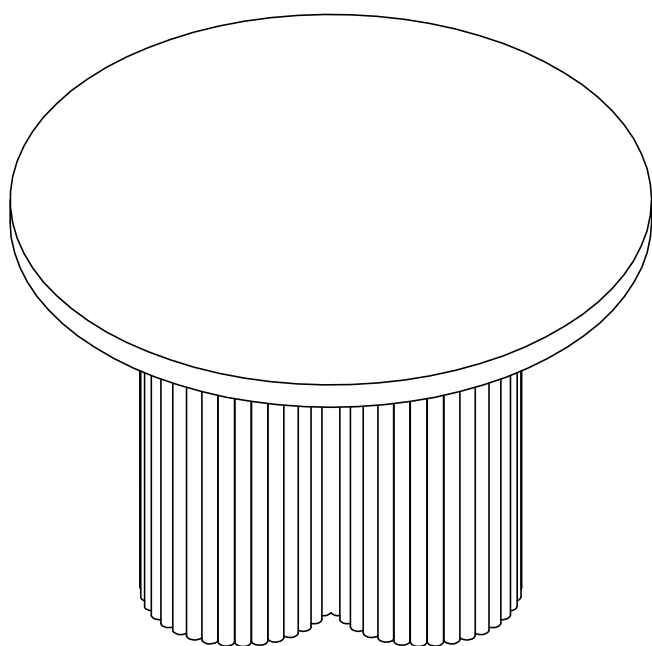

Assembling

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100 | **35**
lbs table top lbs per

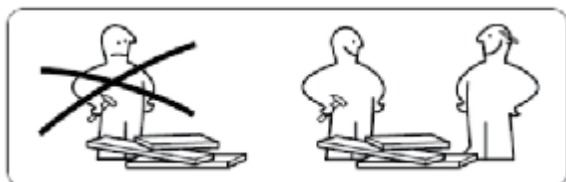


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	32
B	Cam Lock 15X9MM	32
C	Screw M6X22MM	8
D	Wrench M4X55MM	1
E	EVA foot mat	8
F	Hole position sticker	32

The Hardwares


Ⓐ



Ⓑ



Ⓒ




Ⓓ



Ⓔ



Ⓕ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories


Code	Description	Qty
1	Large panel	1
2	Large connecting plate	1
3	Base plate	1
4	Large support plate	4
5	Large curtain	4
6	Small panel	1
7	Small connecting plate	1
8	Small base plate	1
9	Small support plate	4
10	Small curtain panel	4

The Accessoriess

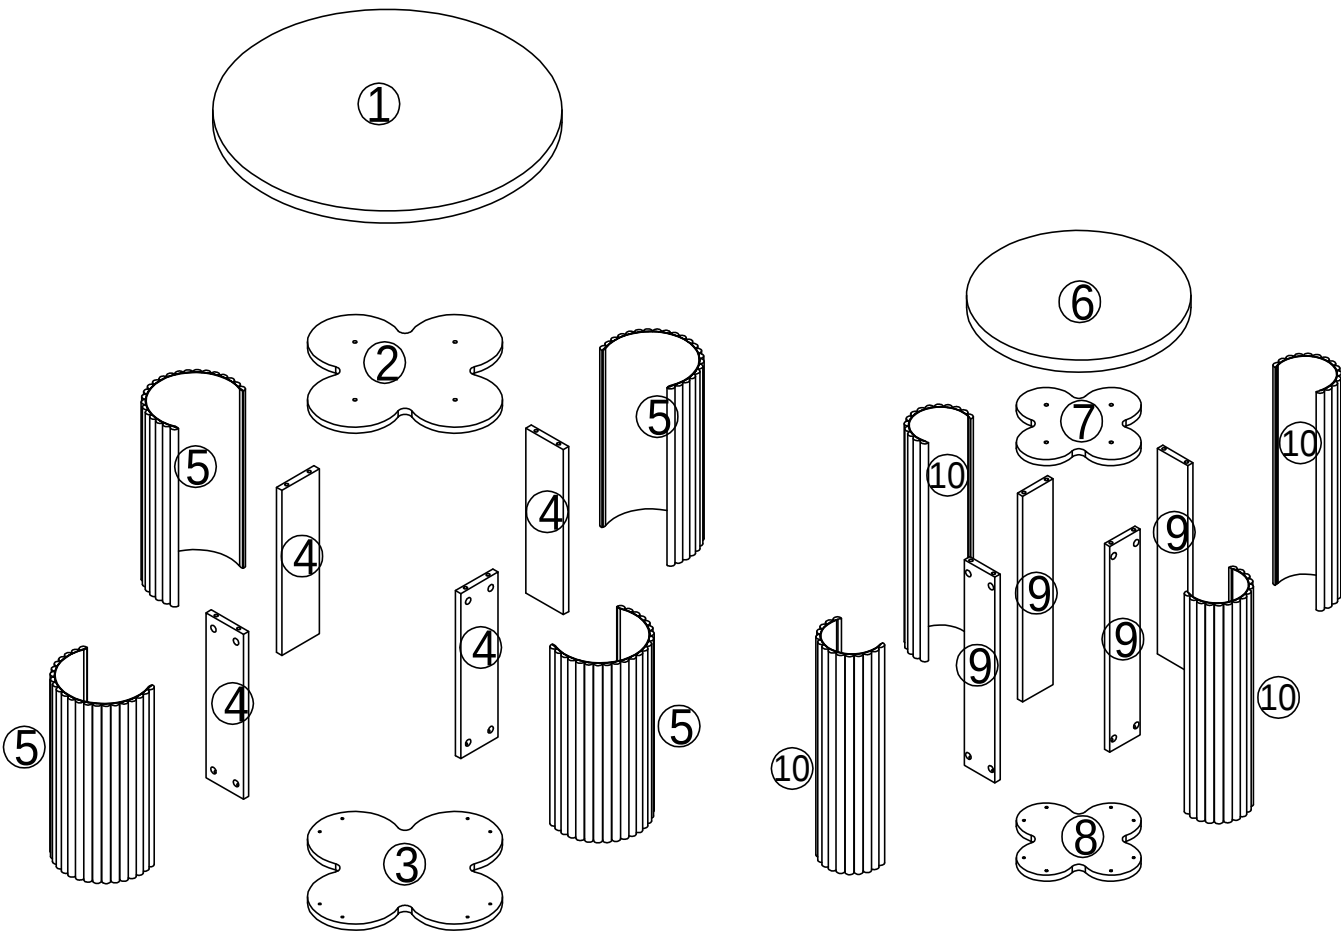


Step 1


A	x 16
	

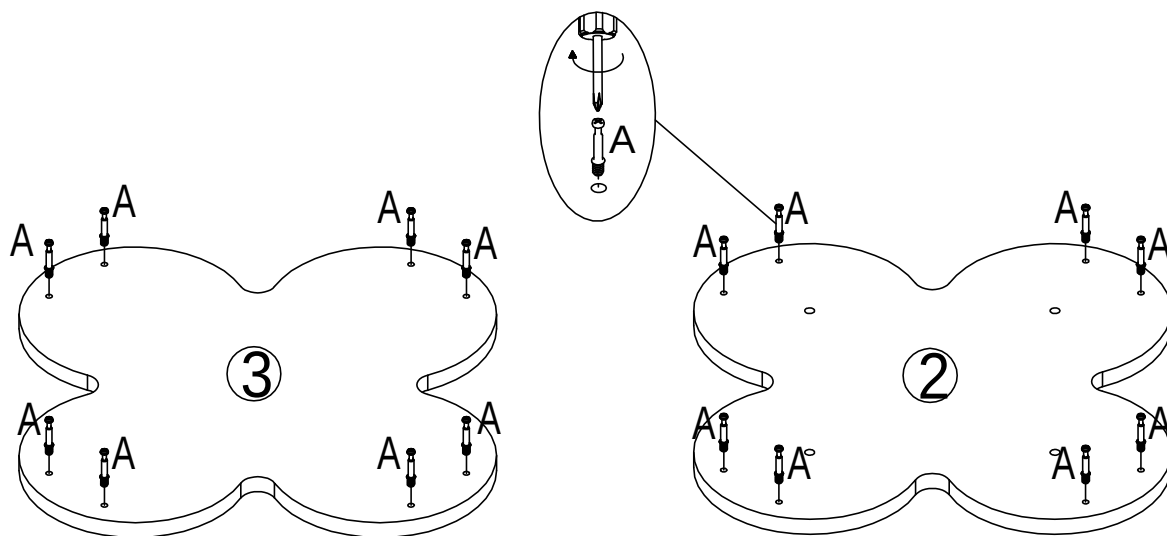









Step 2

C	x 4
	









D	x 1
	

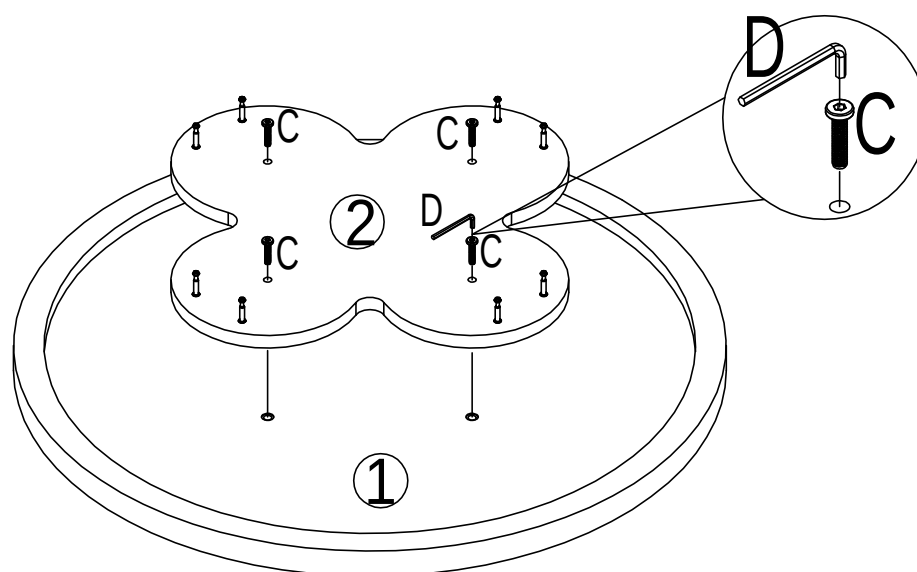

Step 3

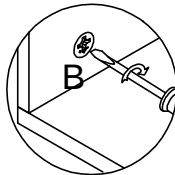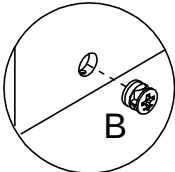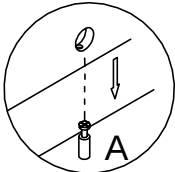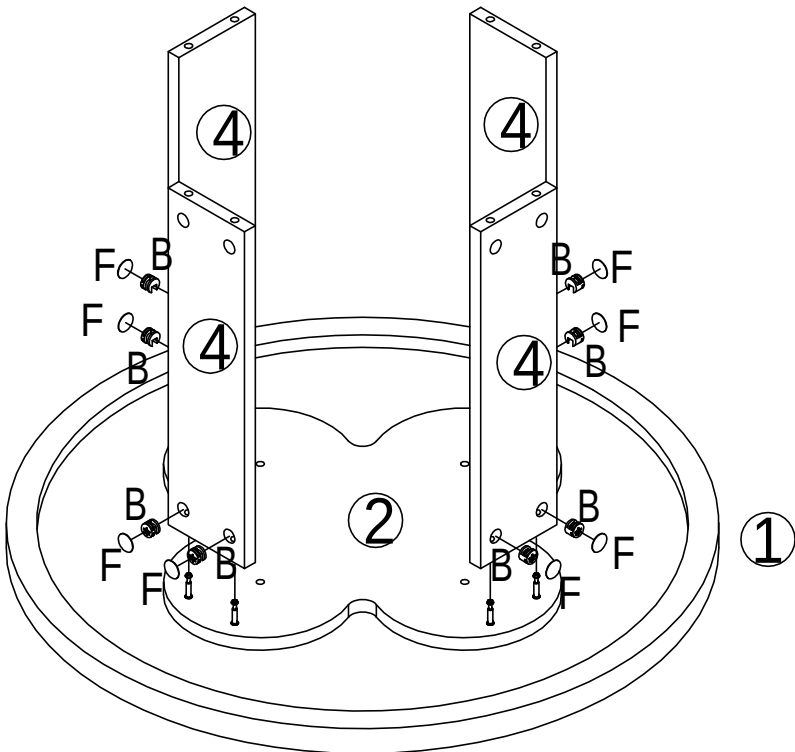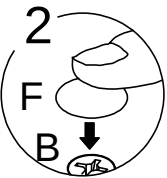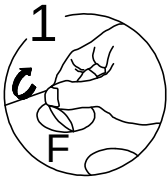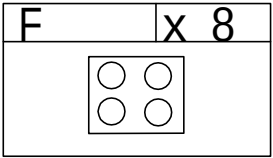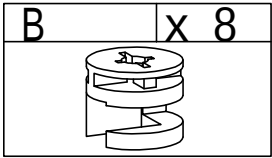


Step 4

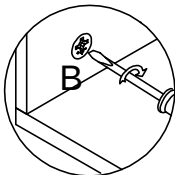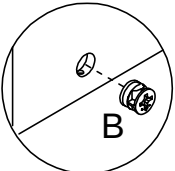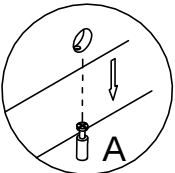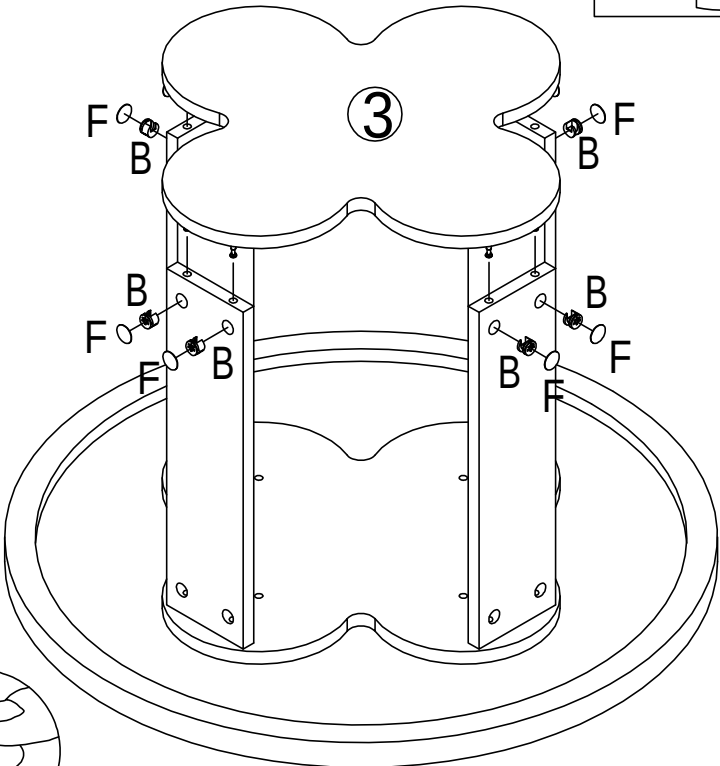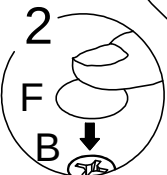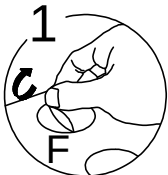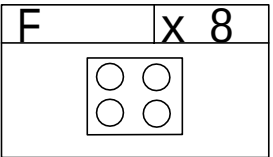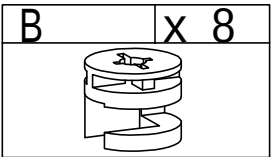


Step 5


Attach Board 5 neatly to the Velcro of Board 2 and 3
(Attention: Please fully stretch Board 5 and then stick it tightly along the Velcro to avoid gaps that affect the appearance. If there are obvious gaps, tear them off and stick them again.)

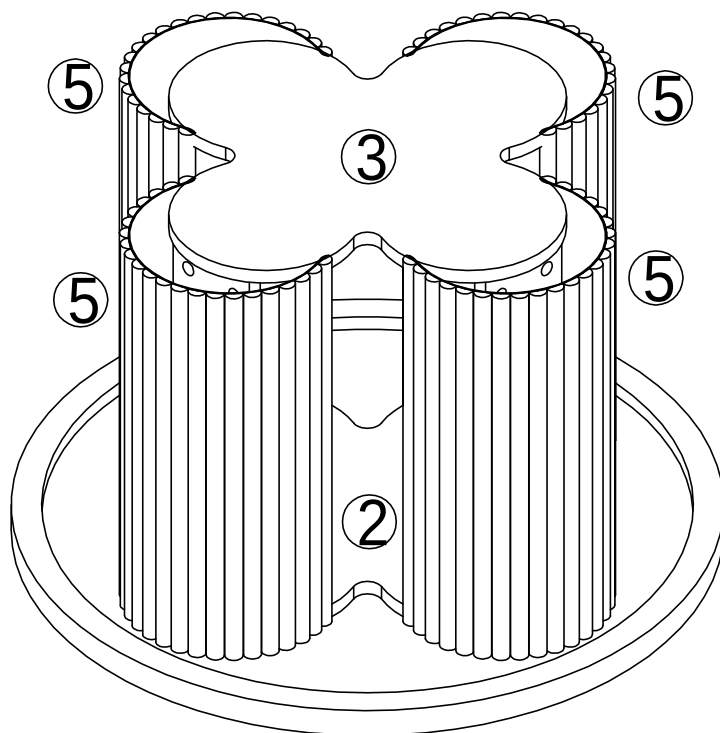


Step 6

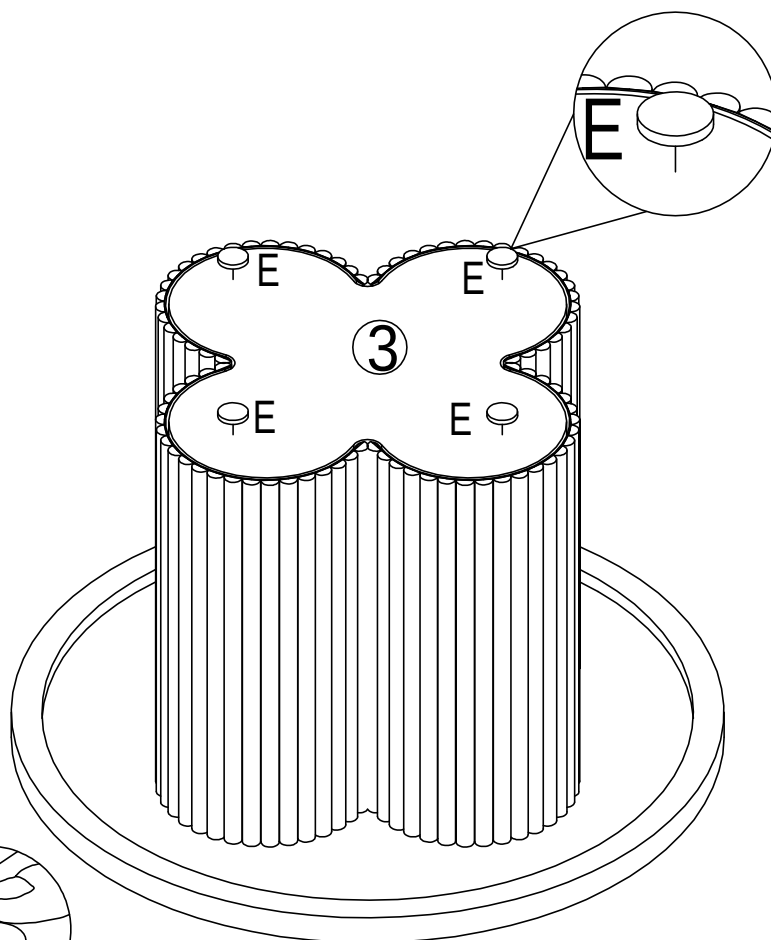


E	x 4
	

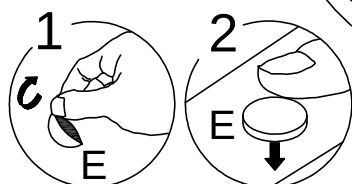


Step 7


A	x 16
	

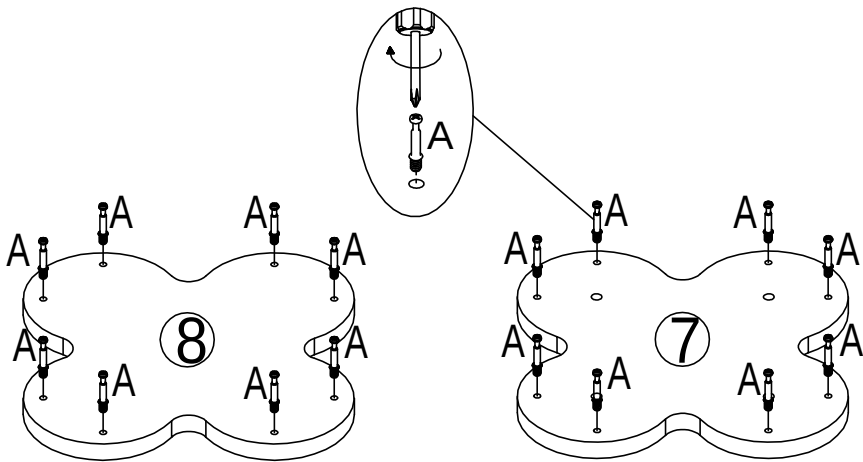



Step 8






C	x 4
	

D	x 1
	

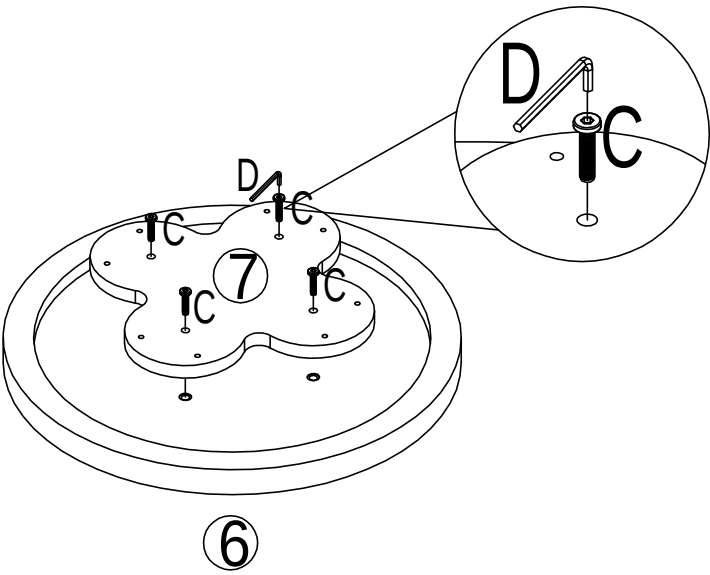







Step 9

B	x 8	F	x 8
			

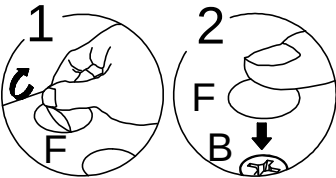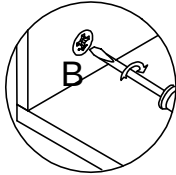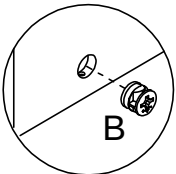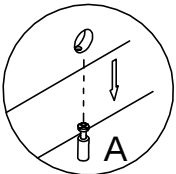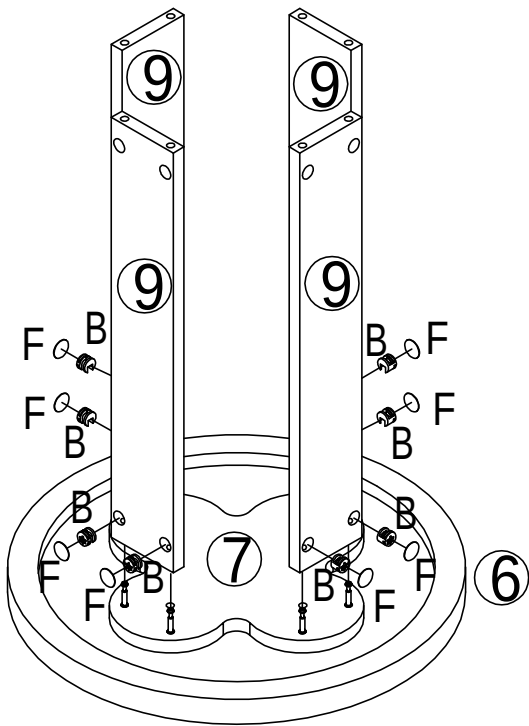


Step 10


B	x 8	F	x 8
			

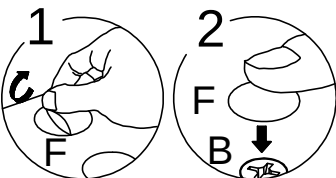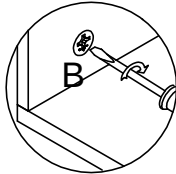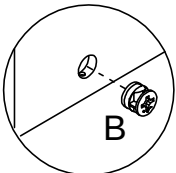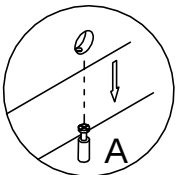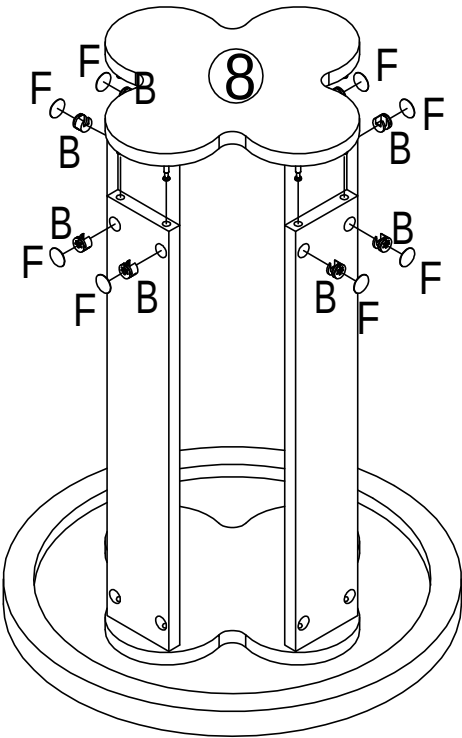

Step 11 Attach Board 10 neatly to the Velcro of Board 7 and 8
 (Attention: Please fully stretch Board 10 and then stick it tightly along the Velcro to avoid gaps that affect the appearance. If there are obvious gaps, tear them off and stick them again.)

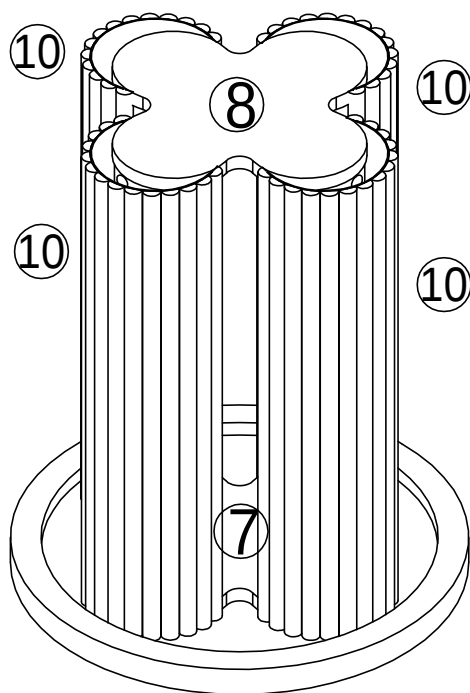


Step 12

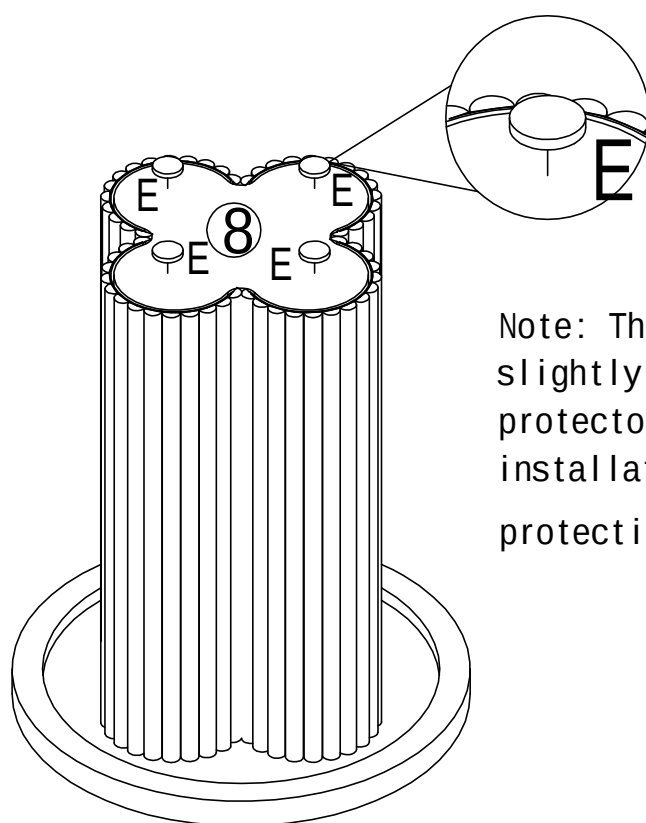

E	x 4

Note: The table may wobble slightly with floor protectors installed. Skip installation if floor protection is unnecessary.

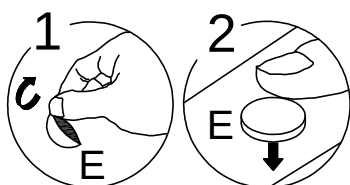

Step 13

