





ASSEMBLY INSTRUCTION

NO	PARTLIST	QTY
1	 METAL FRAME	1PC
2	 CENTER SUPPORT	1PC
3	 METAL SLAT	9PCS
4	 METAL SLAT WITH HOLE	1PC
5	 SLIP COVER	1PC
ITEM	HARDWARE	QTY
A	 JCB SCREW M6 x 35MM	6PCS
B	 SPRING WASHER M6 x 12MM	8PCS
C	 FLAT WASHER M6 x 19MM	8PCS
D	 HEX NUT M6 x 19MM	4PCS
E	 L-KEY M4 x 65MM	1PC
F	 WRENCH	1PC


STEP 1

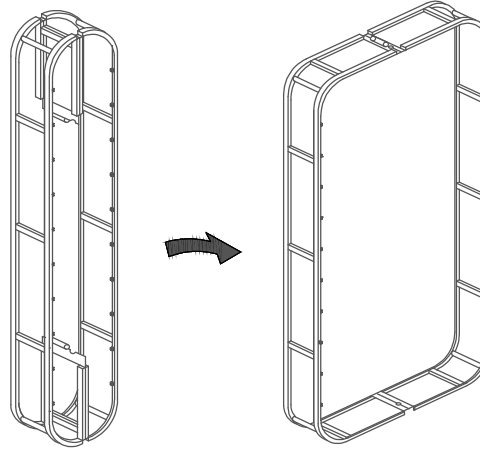


STEP 2

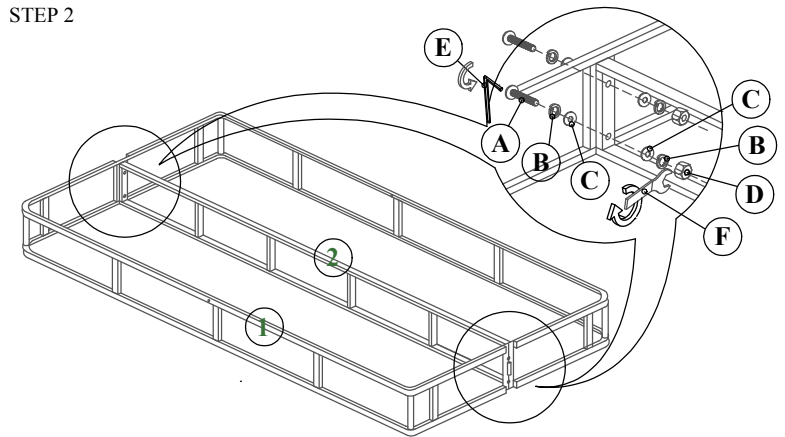

STEP 3

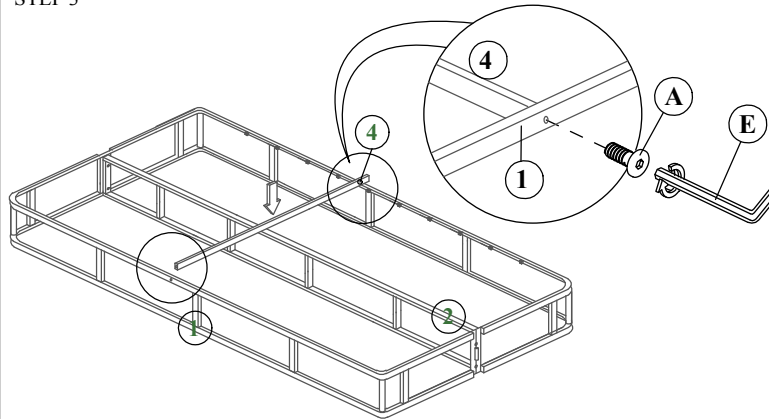


STEP 4

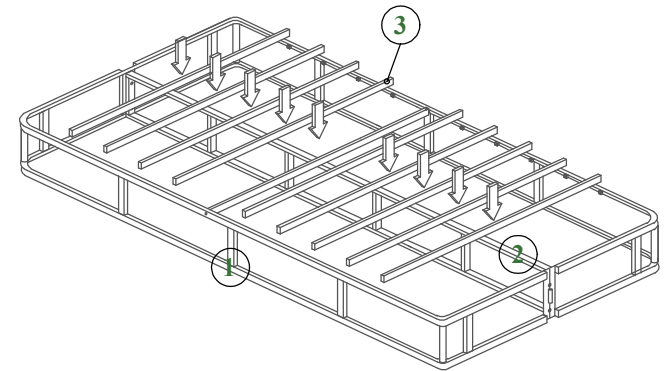


STEP 5

Remark : Lift up the box spring and put it on slip cover

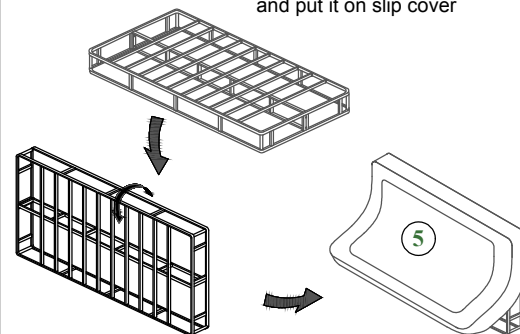


STEP 6

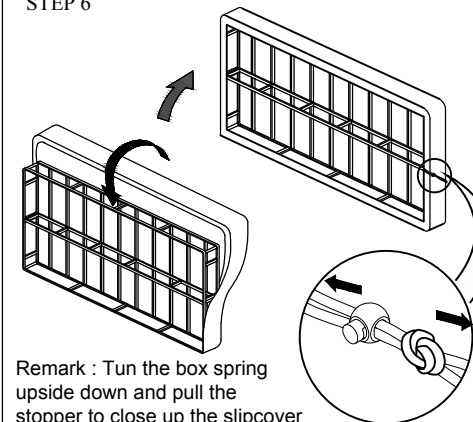

Remark : Tun the box spring upside down and pull the stopper to close up the slipcover

STEP 7

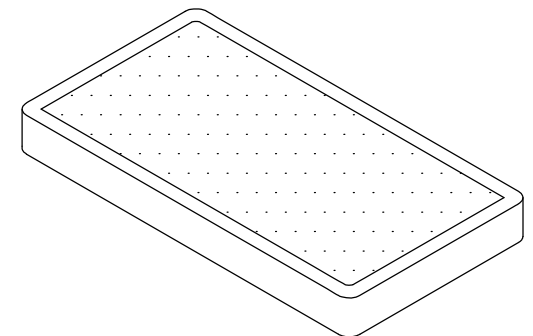

**ASSEMBLY
COMPLETED**