



7

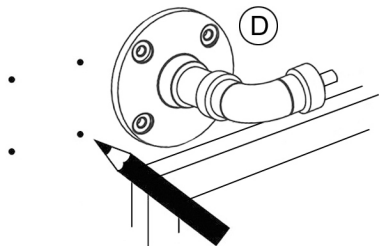

Use end bracket (D) as a guide to mark location for mounting screws (A). To ensure that the end bracket placement is correct, we recommend that you attach the rod (G) to end bracket (D) and attach it to corner connector (E). See step 10 for assembly instructions. Use level if necessary.


8

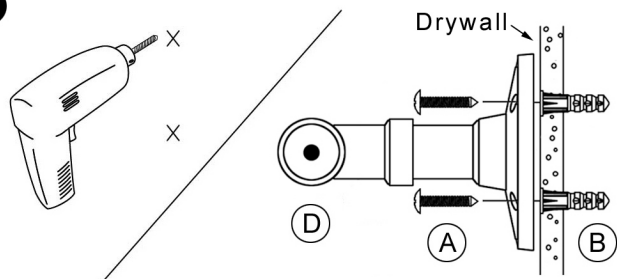

Drill pilot holes into wall with 1/4" drill bit (not included). Insert wall anchors (B) and attach bracket (D) using mounting screws (A). Wall anchors may not be necessary if drilling into studs.

9


SIDE RODS

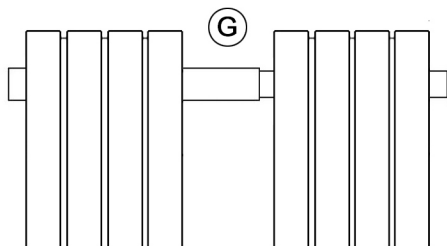

Extend telescoping rod (G) slightly. Place drapery panels (not included) on the rod.


10

SIDE RODS

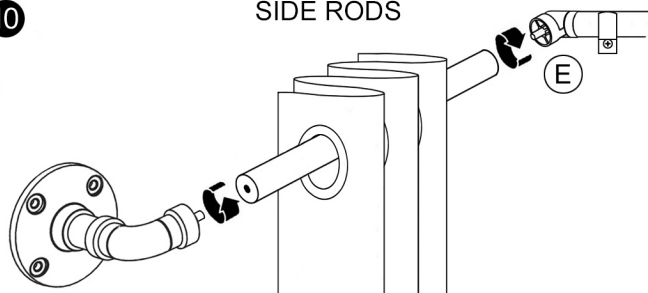

Extend rod to desired length and screw onto corner connector (E), then screw rod onto end bracket (D). Repeat steps 7-10 for other side rod.

11

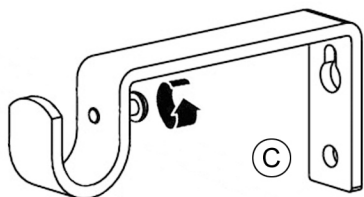

Tighten set screws on brackets (C) to secure rod in place.