
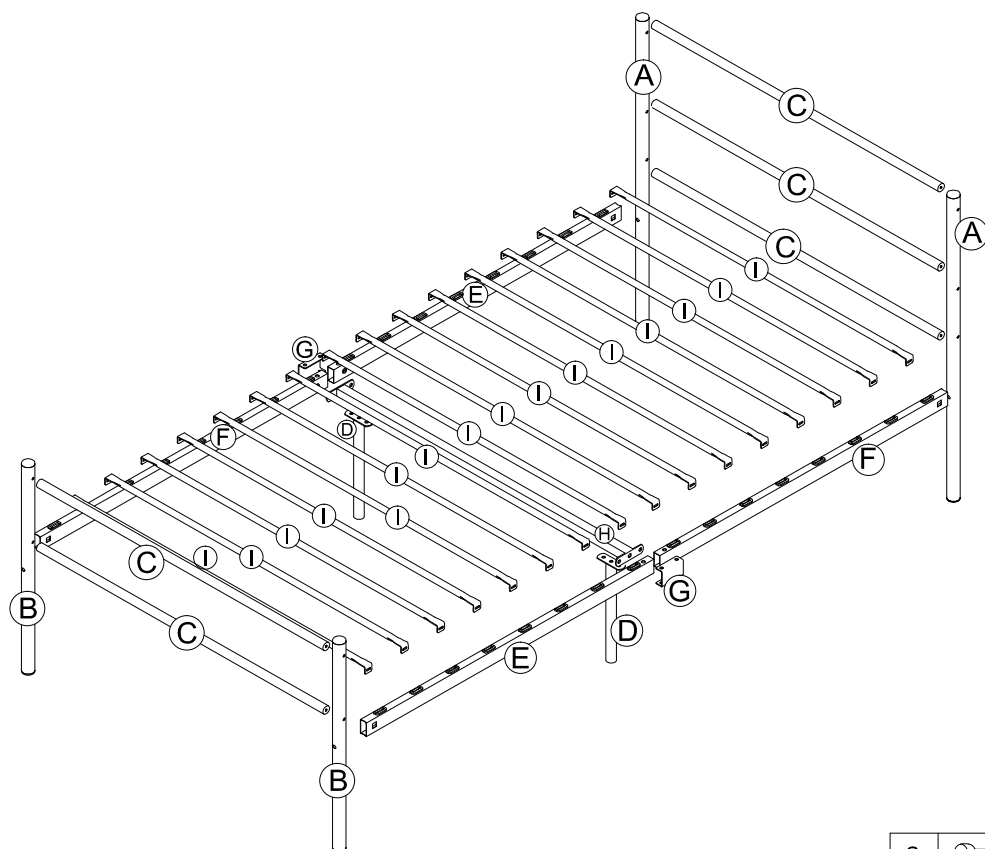


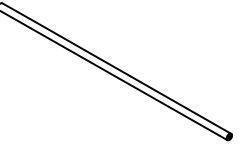

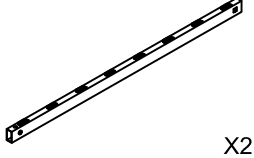
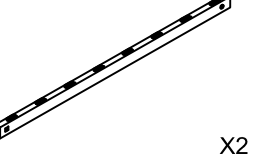

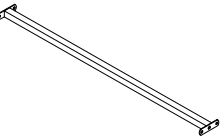


ASSEMBLY INSTRUCTIONS


Attention: Do not tighten the screws until all of them are in right positions.

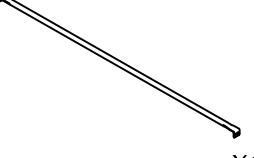


a		M8x65mm	X4
b		M6x50mm	X14
c		M6x15mm	X8
d		M6	X10
e		M6	X4
f			X4
g			X1
i			X1


A  X2	B  X2	C  X5	D  X2
E  X2	F  X2	G  X2	H  X1
I  X16			

step 1

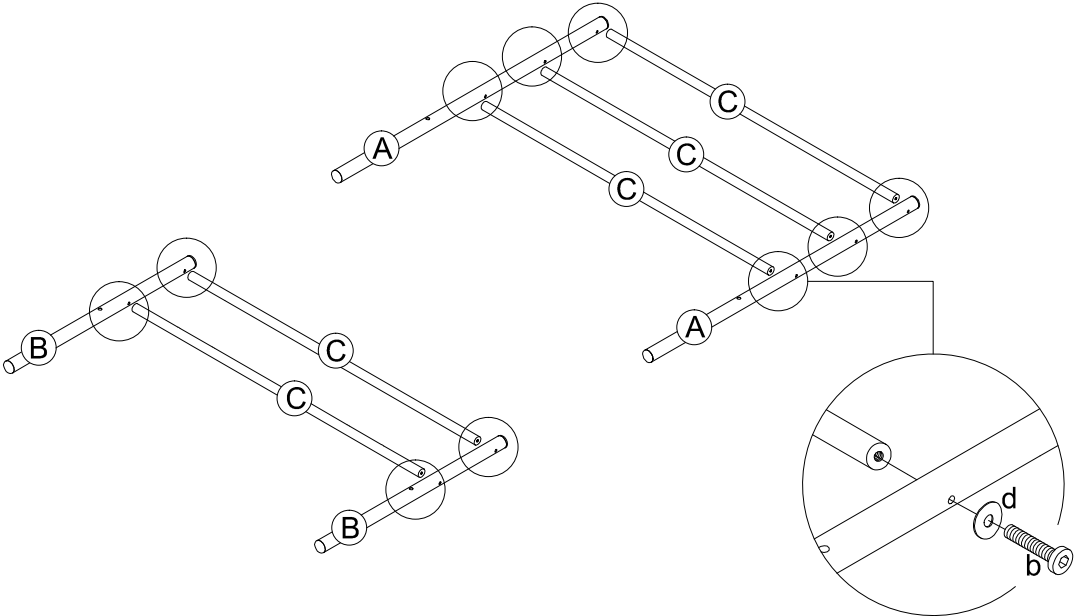


b		X10
d		X10


step 2

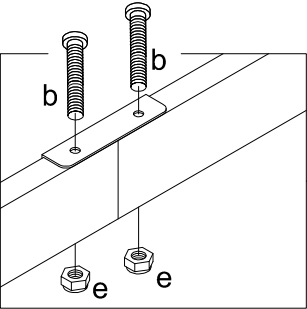


b		X4
e		X4

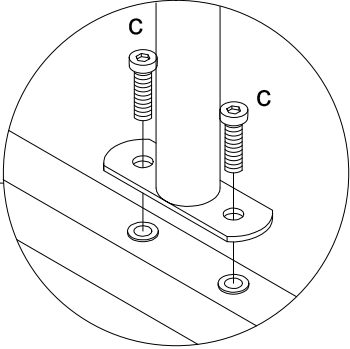

c		X4
---	---	----

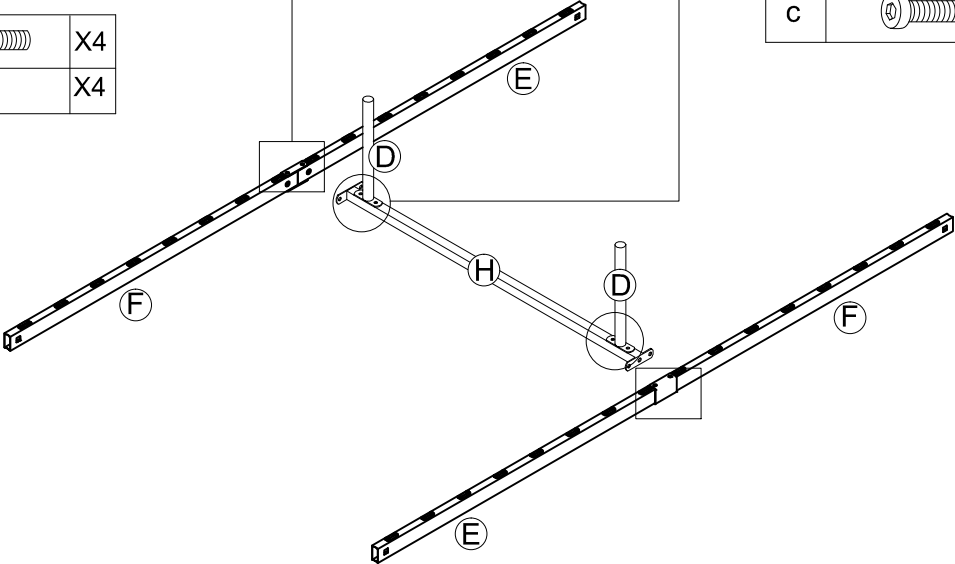

step 3

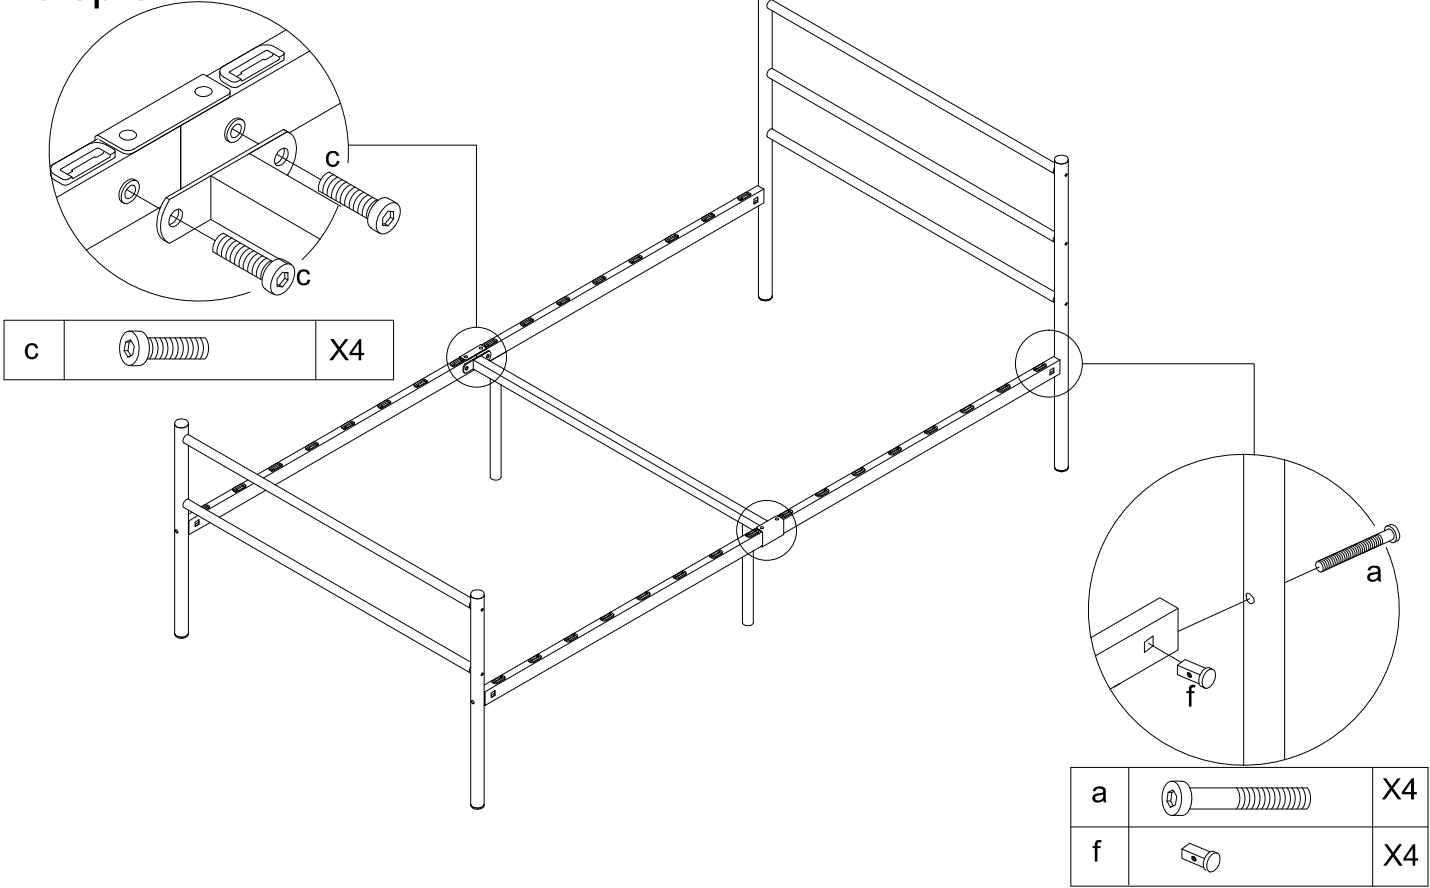

step 4

