
WamBam
Fun Name. Serious Fence.

4ft Aluminum Surface Mount Posts

52¾" x 4 ⅝" x 4 ⅝"

30 minutes
Approximate assembly time

Scan the QR code
for an assembly video

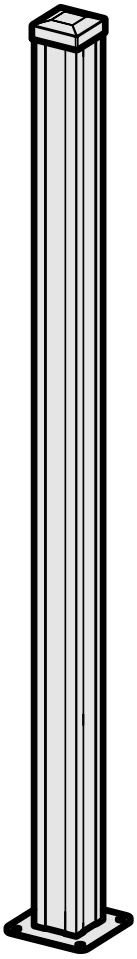

BL19131

Assembly Instructions

www.wambamfence.com

parts.nychbrands.com

877-778-5733

hmmm@wambamfence.com

Ver. 1

Need Help or Replacement Parts?

Our US-based customer service team is available Monday-Friday, 9am-5pm EST.

- Website: https://parts.nychbrands.com
- Email: hmmm@wambamfence.com
- Phone: 704-892-5222 or 877-778-5733

For faster service, have your item number (BL19131 / BL19132) and part name ready. A batch lot number (found on the end of the box) is also helpful if available — it helps us identify and resolve any production issues on our end.

Need To Return an Item?


Please let us help resolve any issues before initiating a return. If a return is still necessary, it must be initiated with the retailer where the product was purchased.

Parts Included


A - 4ft Surface Mounted Aluminum Post



B - Black Post Cap

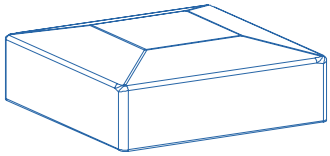


Buying Guide

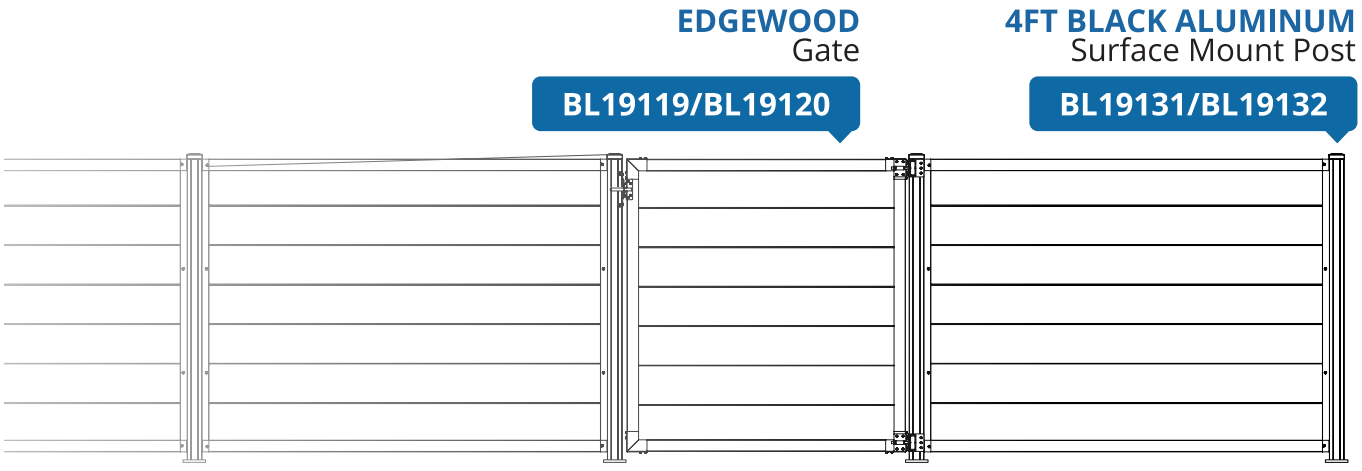


Required Tools And Hardware - Concrete Mount (NOT INCLUDED)


Hammer Drill

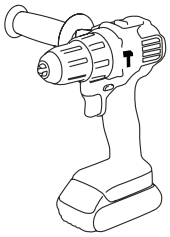


⅜" Concrete Drill Bit

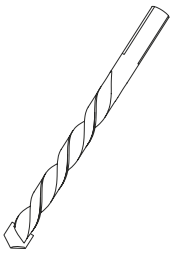


⅜" Concrete Wedge Anchors (4) per post

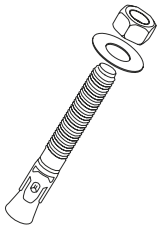


Hammer / Mallet

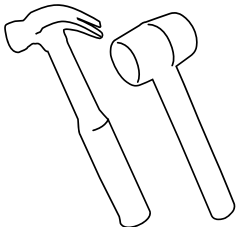


9⁄16" Wrench

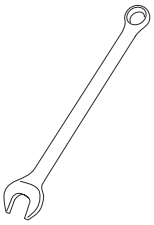

Measuring Tape

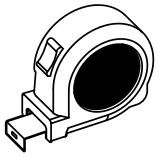

Pencil

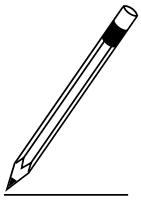


Safety Glasses




Required Tools And Hardware - Deck Mount (NOT INCLUDED)


Power Drill

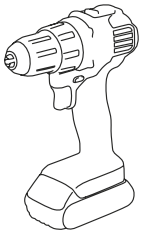


¼" Wood Drill Bit

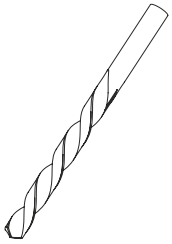


⅜" Lag Bolts 3" Length (4) per post

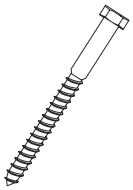


9⁄16" Hex Head Driver Bit

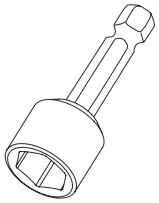


⅜" Washers (4) per post



Measuring Tape

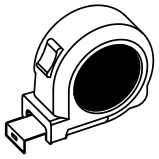

Pencil

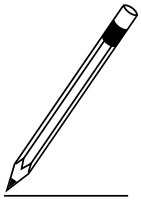


Safety Glasses




Measuring Guide

Without installing any screws, use your fence panel's rail and rail brackets to set the distance between posts.

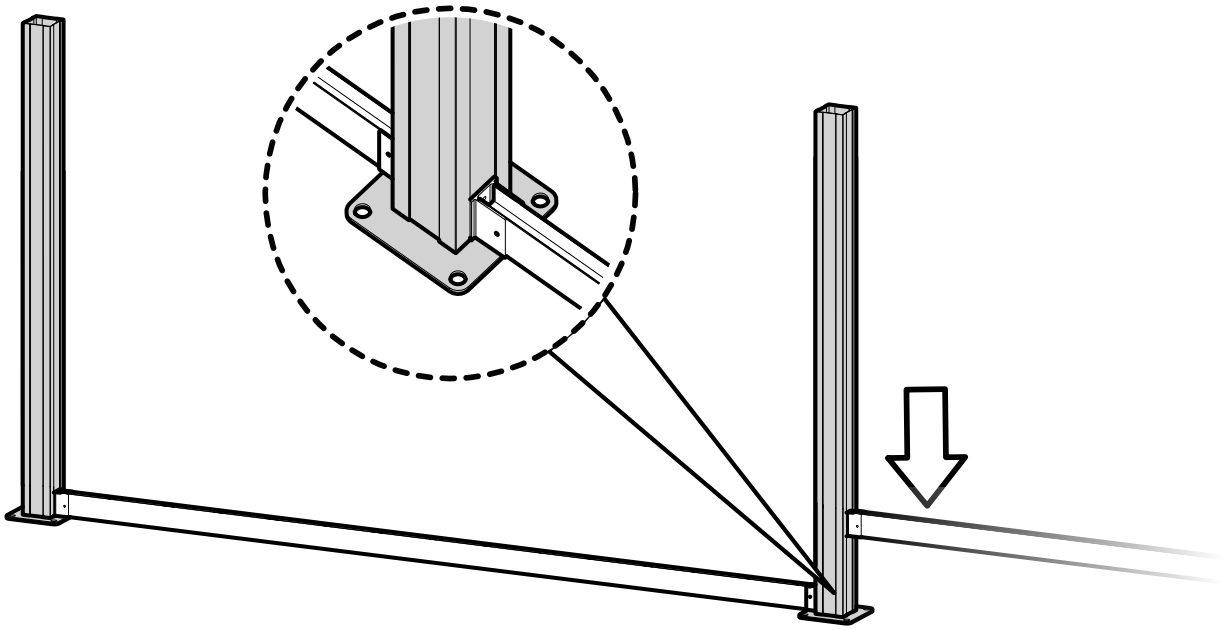

Note: Build one full panel **FIRST**- there is a learning curve. After one panel is installed, it is most efficient to install all posts, then build panels onto the posts.

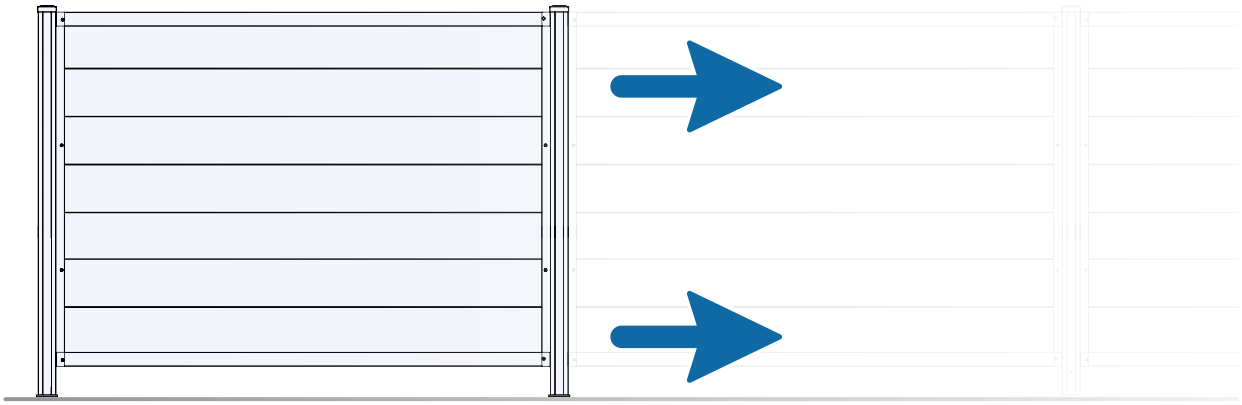


(Concrete Mount) Step 1

Parts Required


A x1

Determine post position and mark hole locations. Make sure your post is at least 3" from the edge of the concrete slab to prevent cracking.

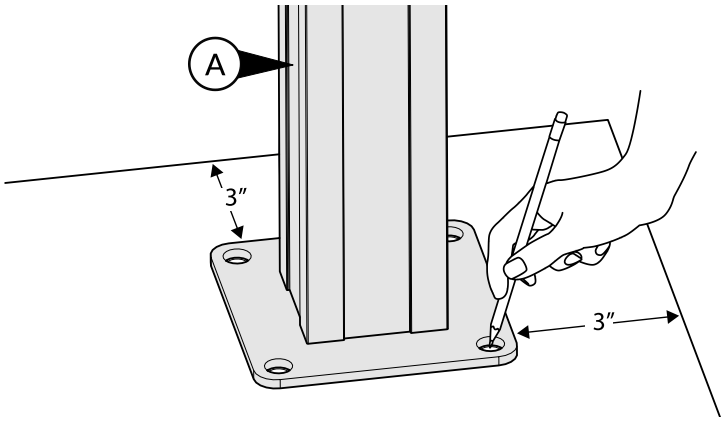


(Concrete Mount) Step 2

Remove post and drill according to your mounting hardware instructions.

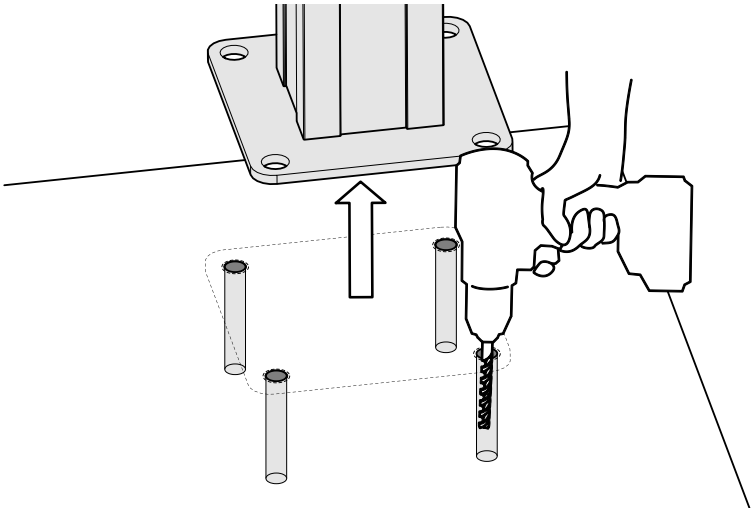


(Concrete Mount) Step 3

Lightly tap in (4) ⅜" concrete anchors a quarter of the way in using a rubber mallet.

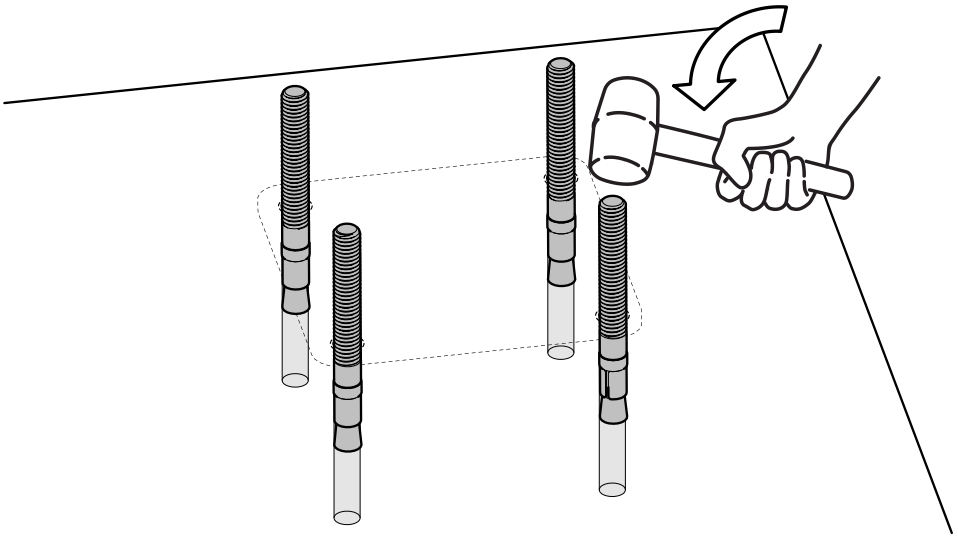


(Concrete Mount) Step 4

Place your post over the anchors and install the anchor washers.

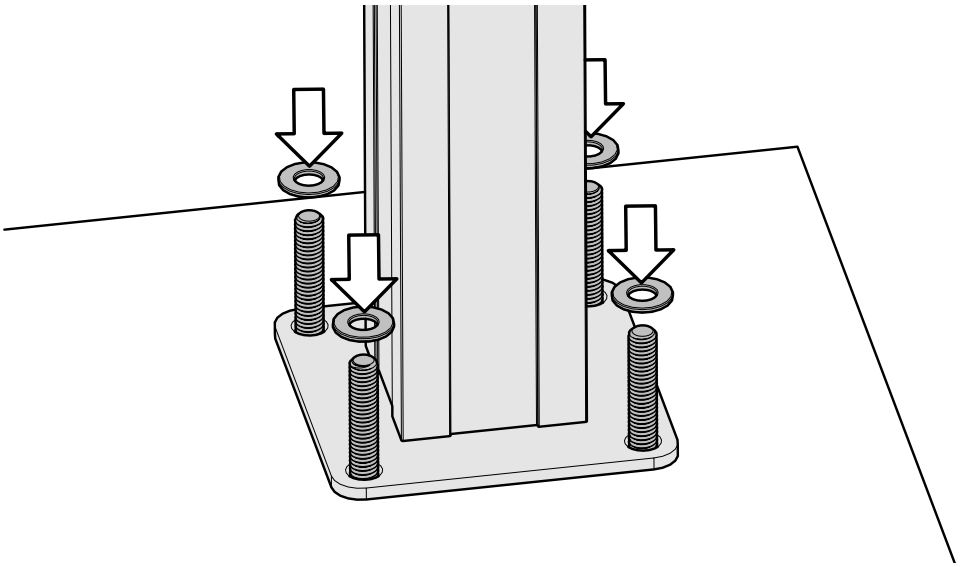


(Concrete Mount) Step 5

Install the anchor hex nuts at the top of each anchor to protect the threads, and hammer them in according to your mounting hardware instructions.

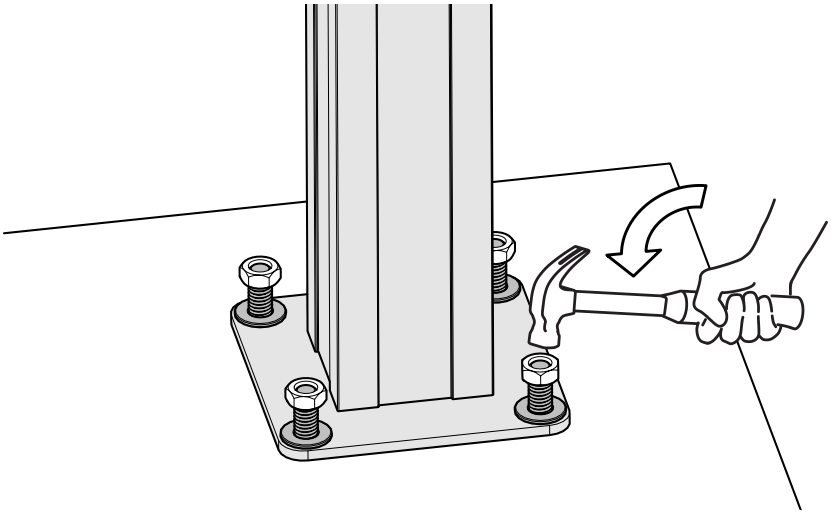


(Concrete Mount) Step 6

Tighten the hex nuts according to your mounting hardware instructions.

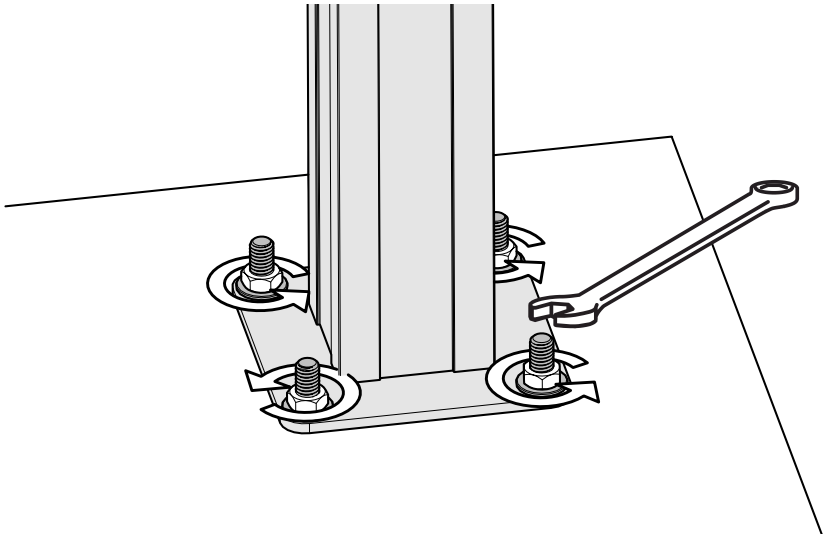

(Deck Mount) Step 1

Install a supporting wood block if mounting into deck boards only. Refer to mounting hardware instructions to ensure proper installation.

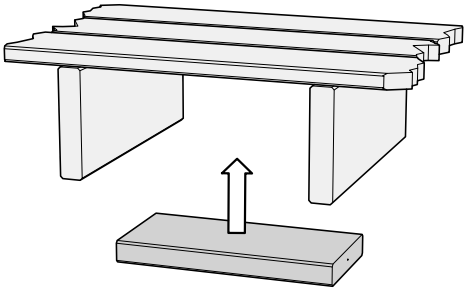




(Deck Mount) Step 2

Parts Required


A x1

Determine post position and mark hole locations.

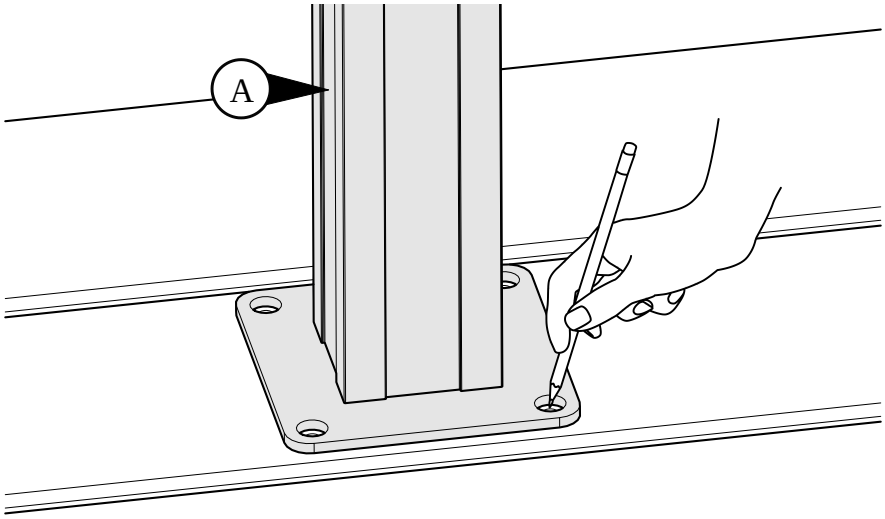


(Deck Mount) Step 3

Remove post and drill according to your mounting hardware instructions.

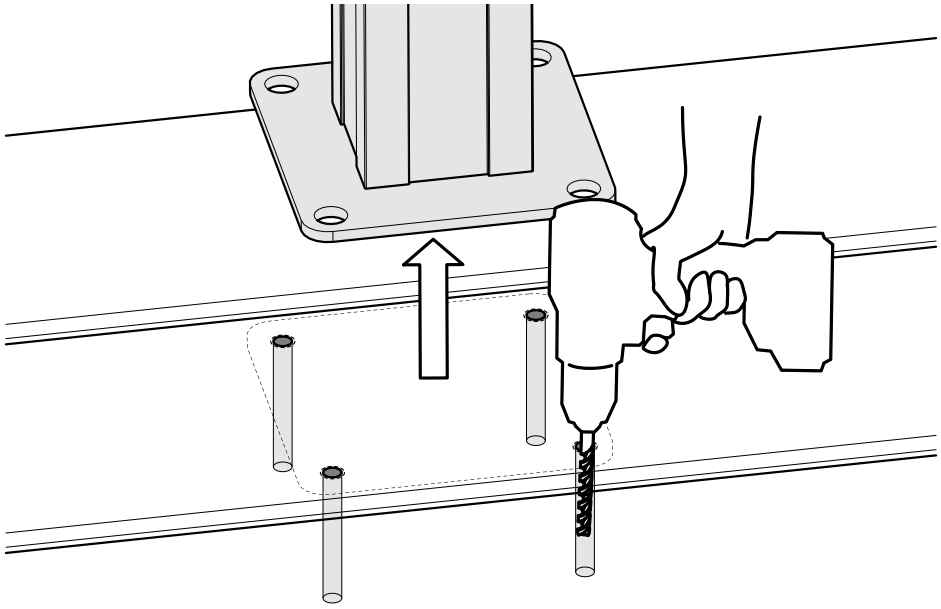

(Deck Mount) Step 4

Install (4) ⅜" lag bolts with washers according to your mounting hardware instructions.

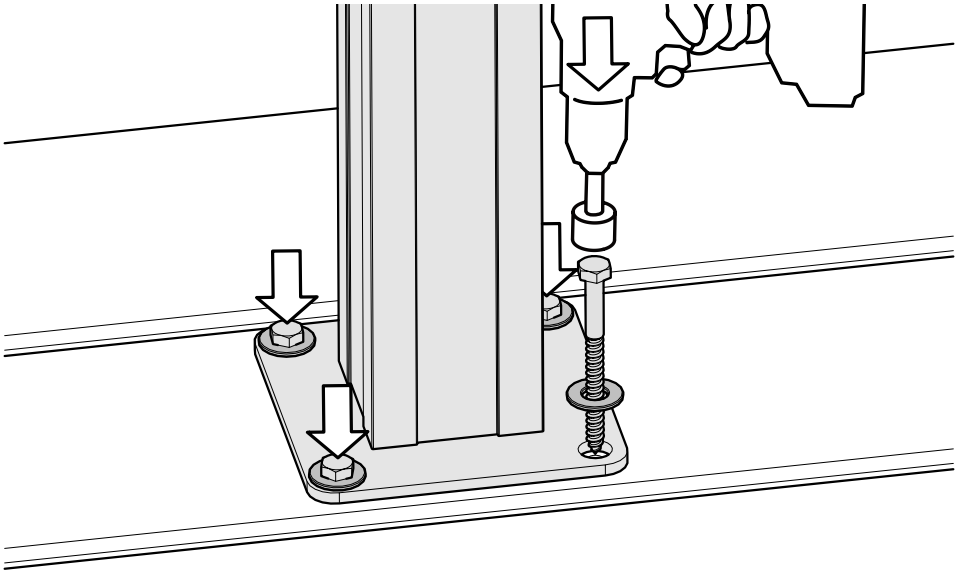

Install Fence Panel

Proceed from **Step 7b** in your fence panel installation guide.

