




1.Put the TV cabinet upside down or on its side, place the cabinet feet on the corresponding position of the bottom frame of the TV cabinet, align the holes, put in the hexagonal machine wire and tighten it with a wrench.

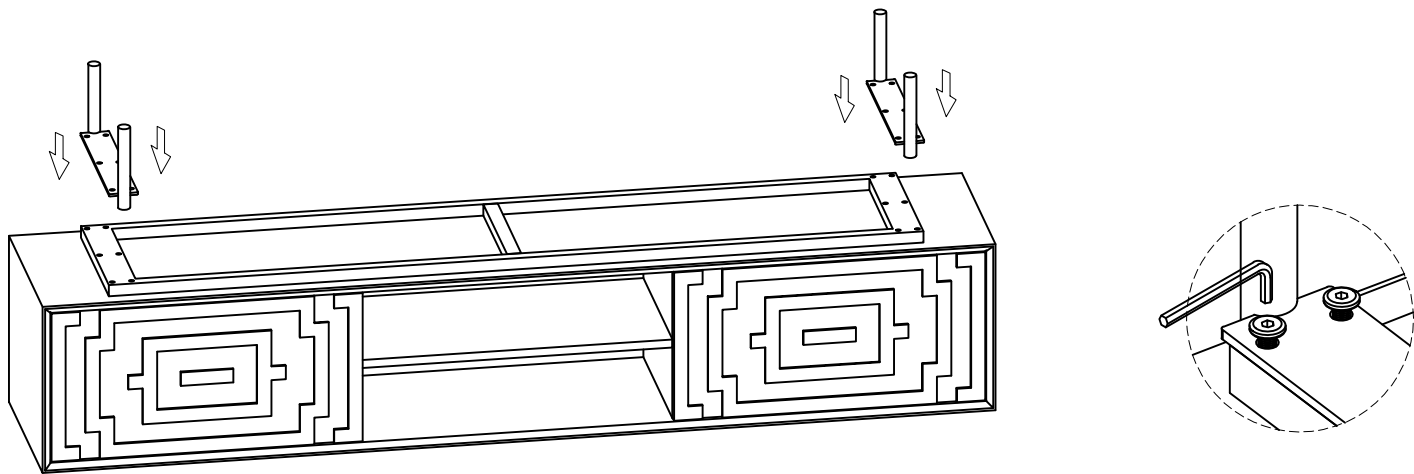

2.The installation is complete

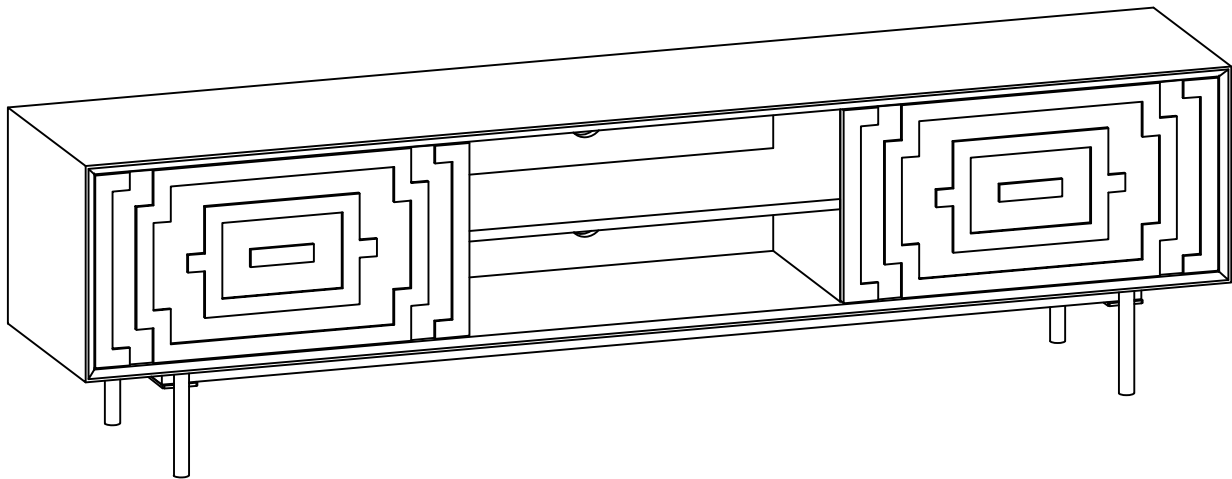

Installation instruction

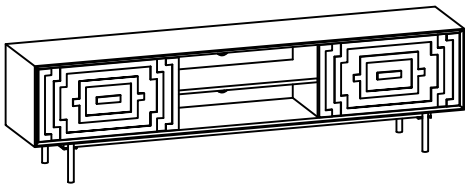

TS8082ADW200 Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

Parts list		On a red ribbon are furniture installation accessories		
Serial number	Shape	Name	Quantity required for installation	Spare quantity
A		Hexagon socket machine screws (M6*15mm)	12	2
B		wrench	1	0
C				
D				
E				
F				
G				