

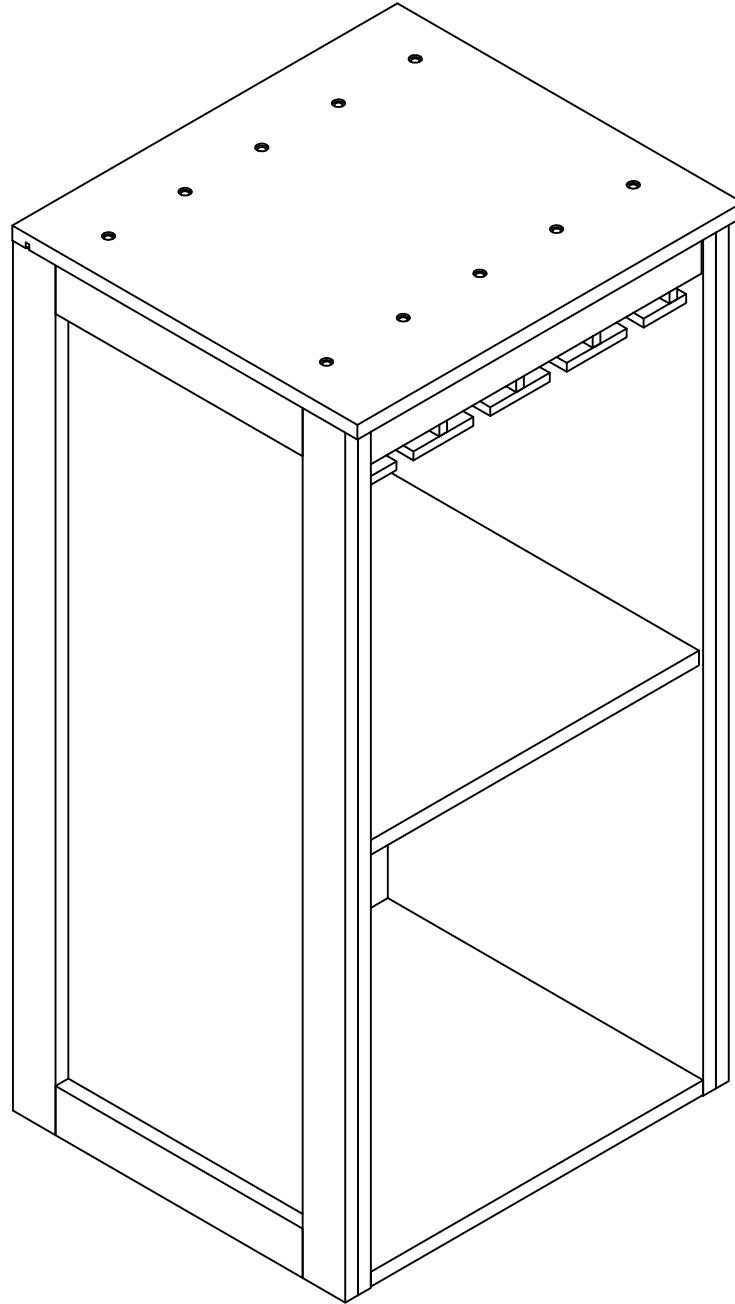
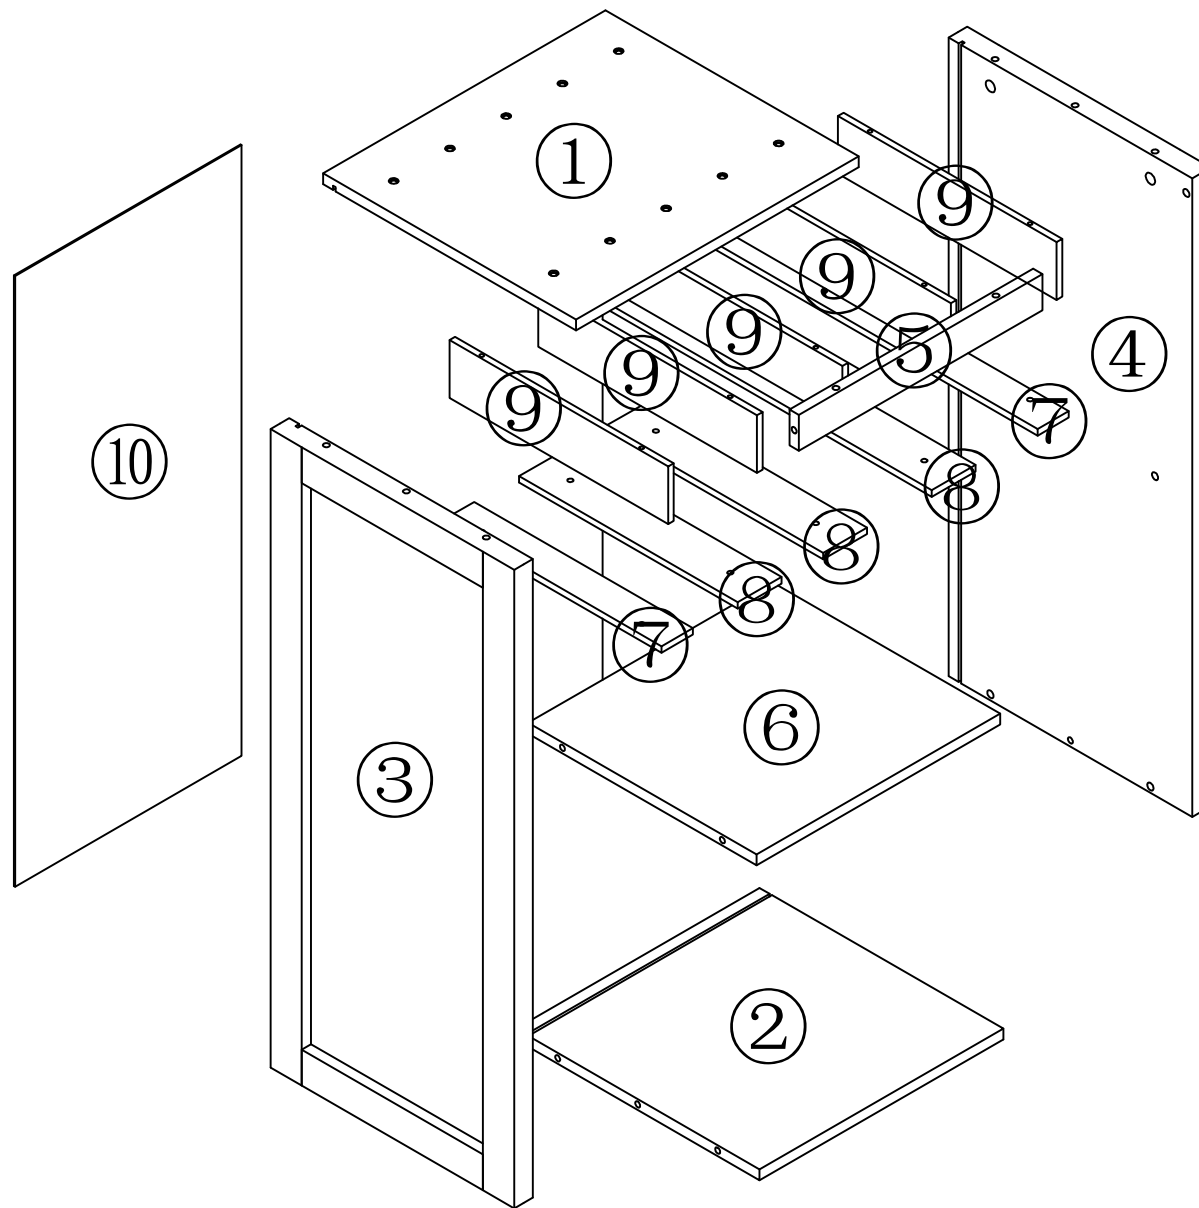



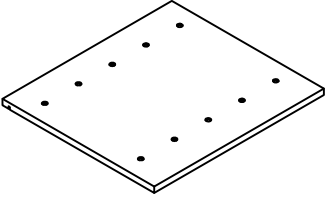
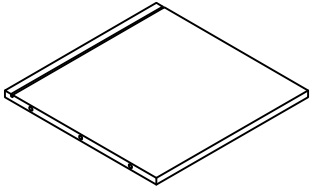

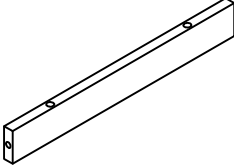
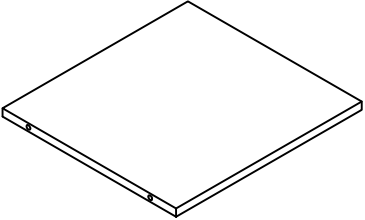
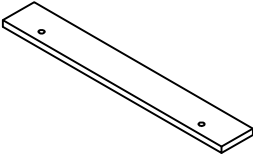



INSTALLATION & ASSEMBLY

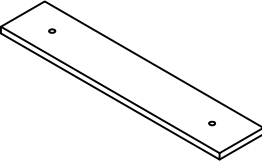

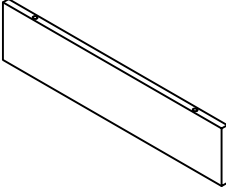

A  16PCS	B  16PCS	C 8*40  4PCS	D 3*25  20PCS	E 3*12  4PCS	F  4PCS	G  2PCS
---	---	--	---	---	--	--

1  452*405 1PCS	2  390*390 1PCS	3  885*390 1PCS	4  885*390 1PCS	5  390*50 1PCS
6  390*365 1PCS	7  350*50 2PCS	8  350*70 3PCS	9  350*80 5PCS	10  879*400 1PCS







Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

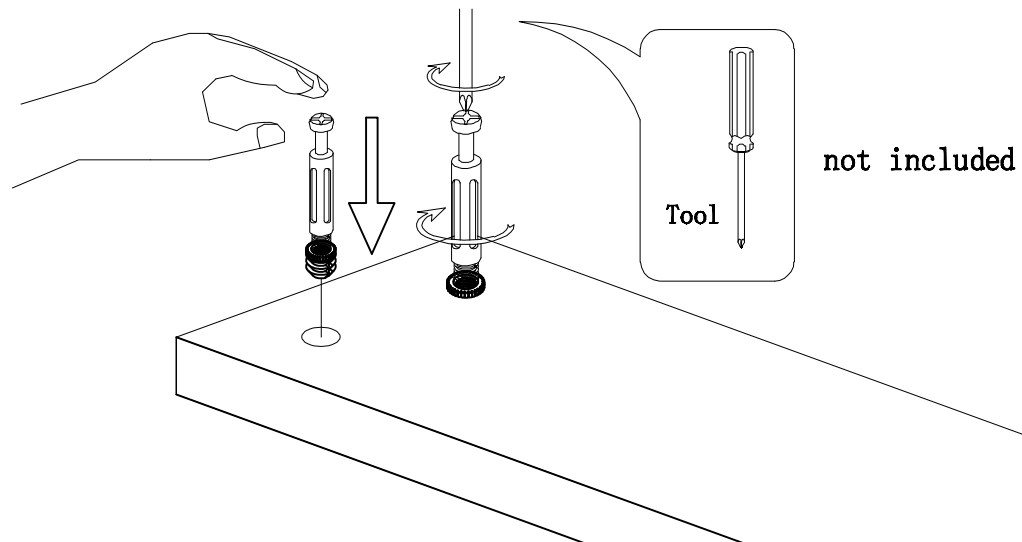




II

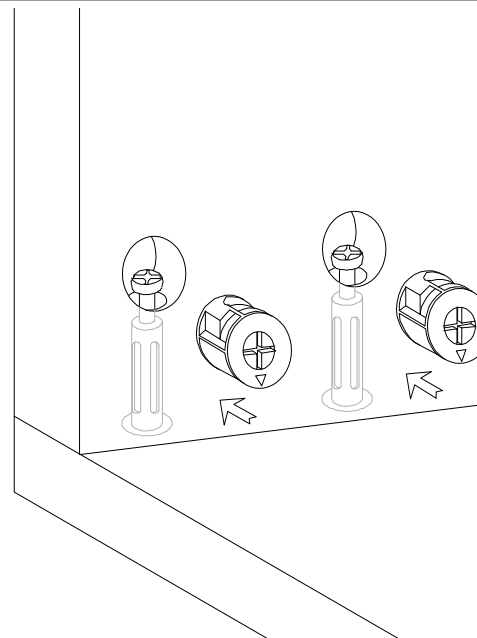

III

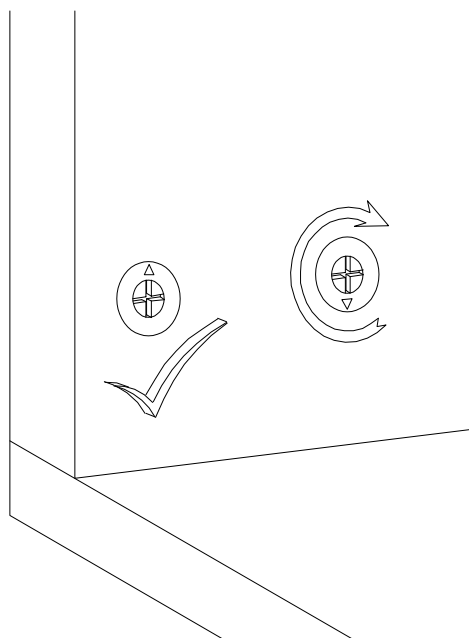

①

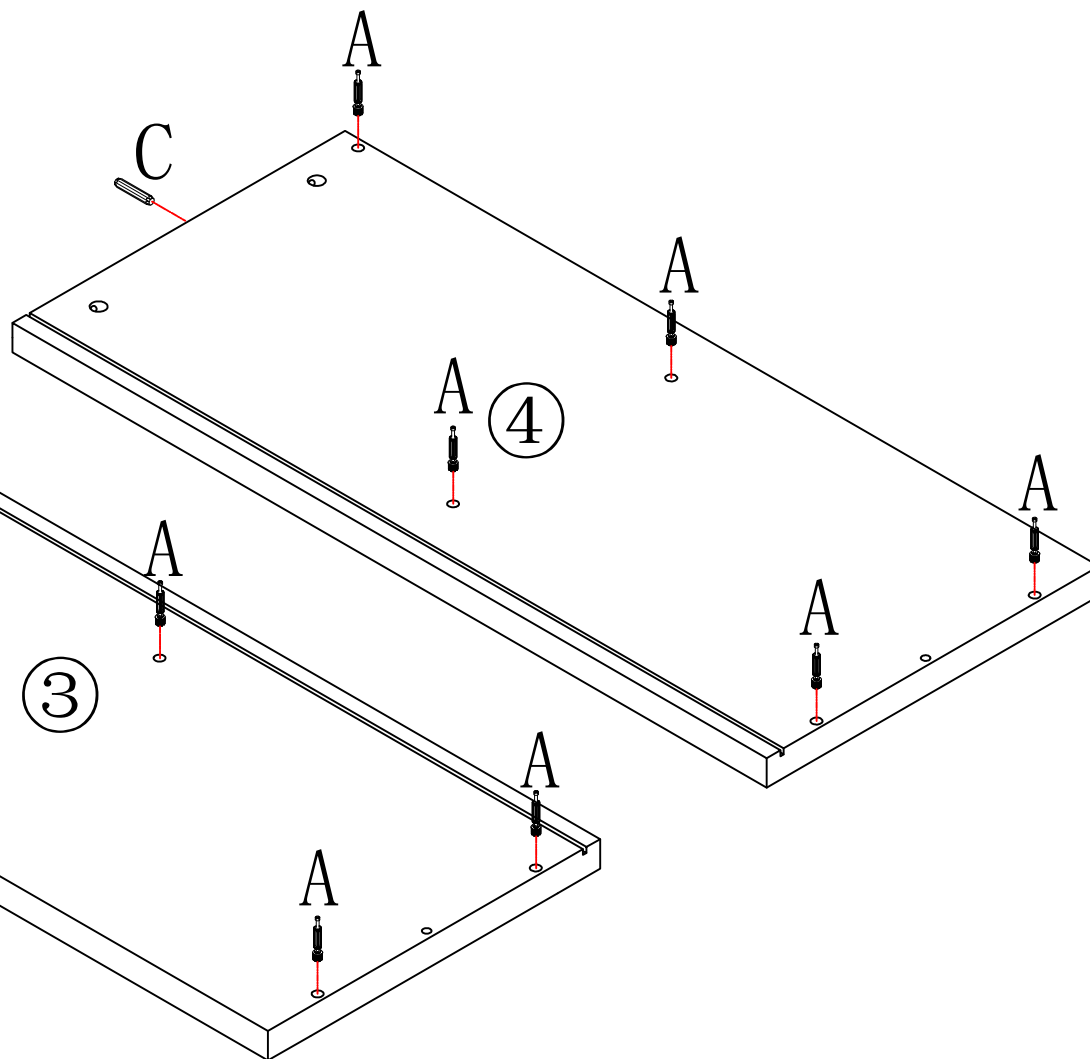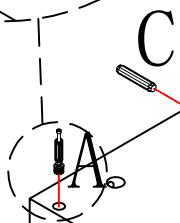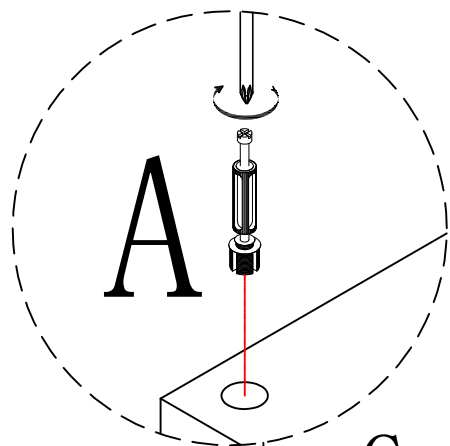


④

③

	A*10
	C*2

put A on board ③ ④
put C on board ③ ④

②

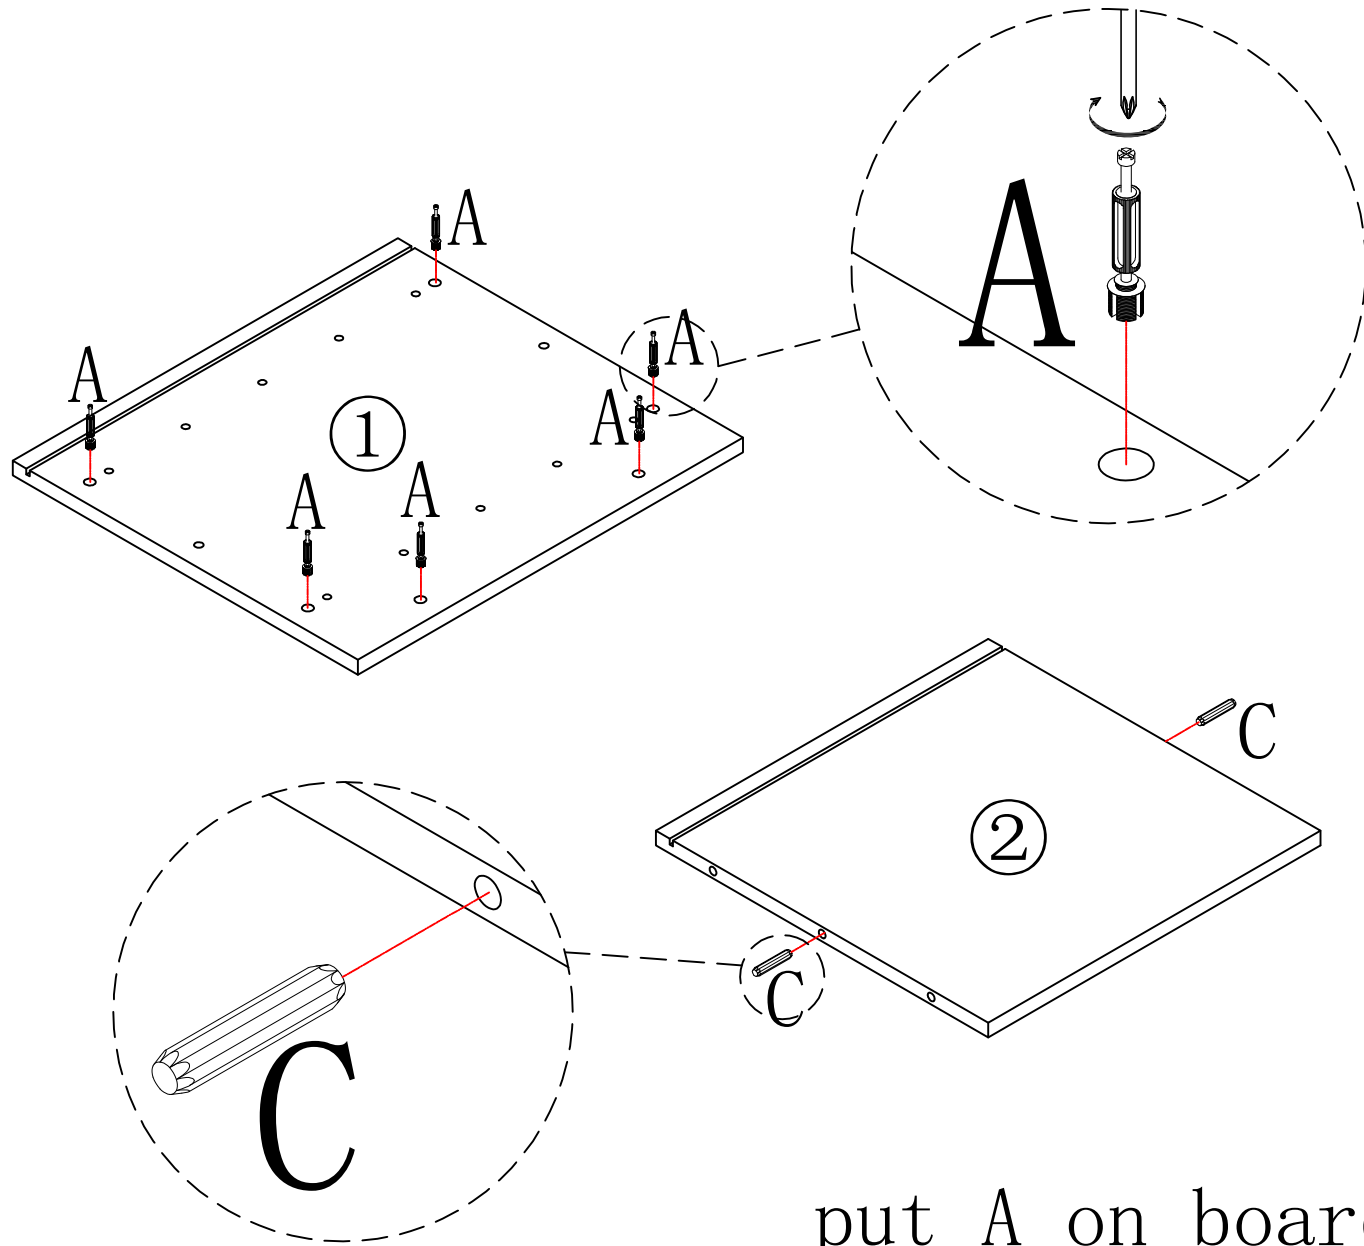

put A on board ①

put C on board ②




A*6



C*2

③

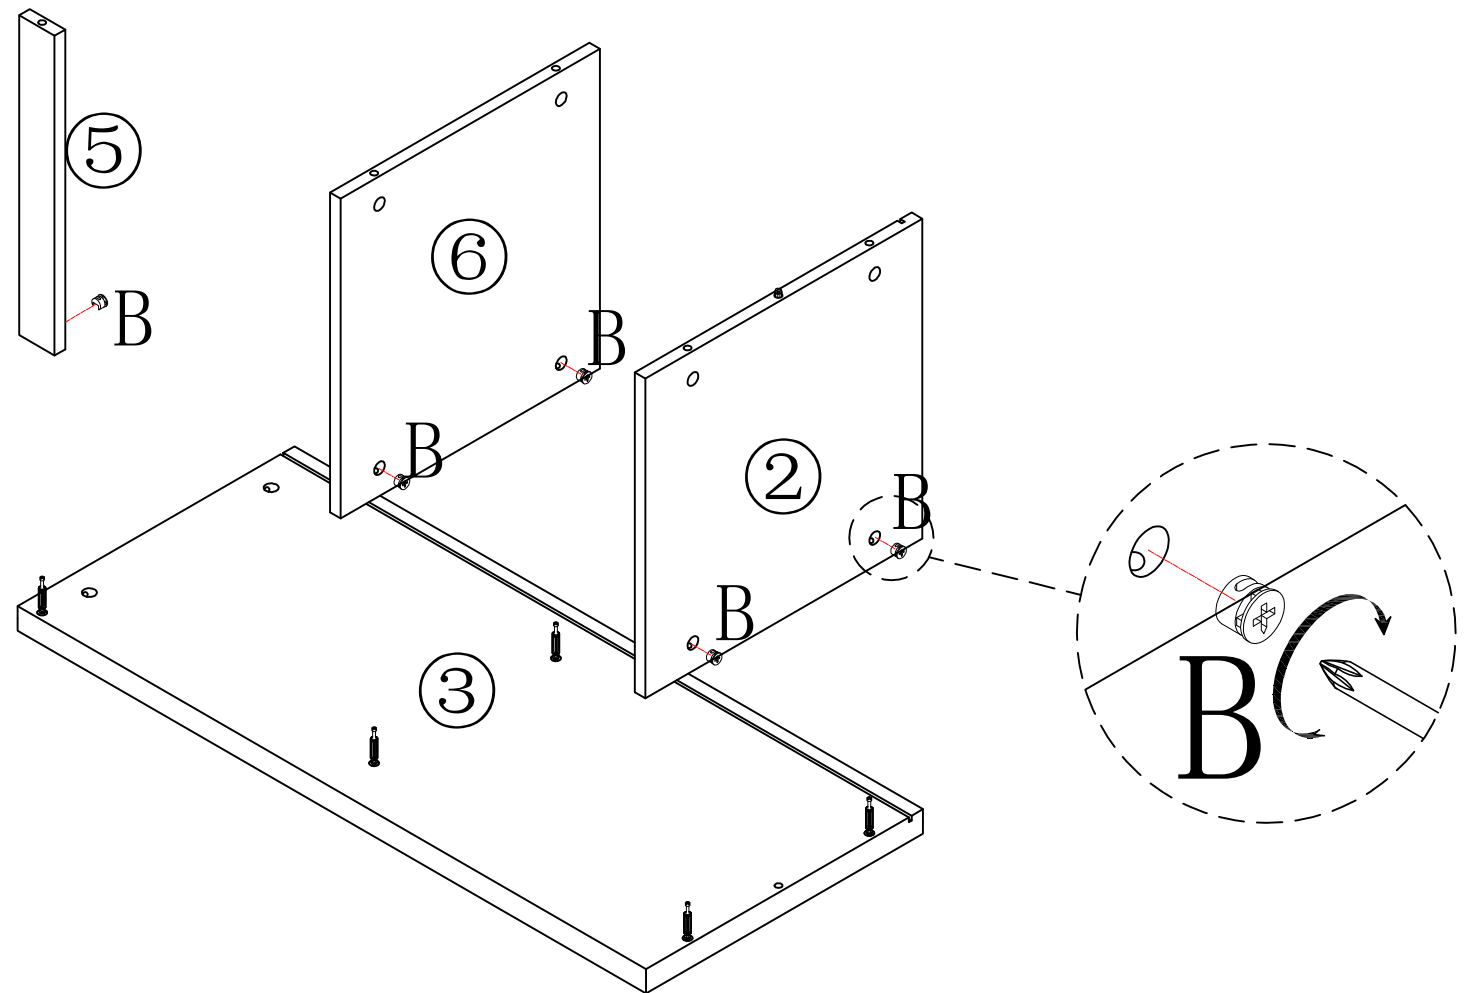


Make sure the arrow on the screw align to the hole on the side.

put B on board ② ⑤ ⑥



B*5

4

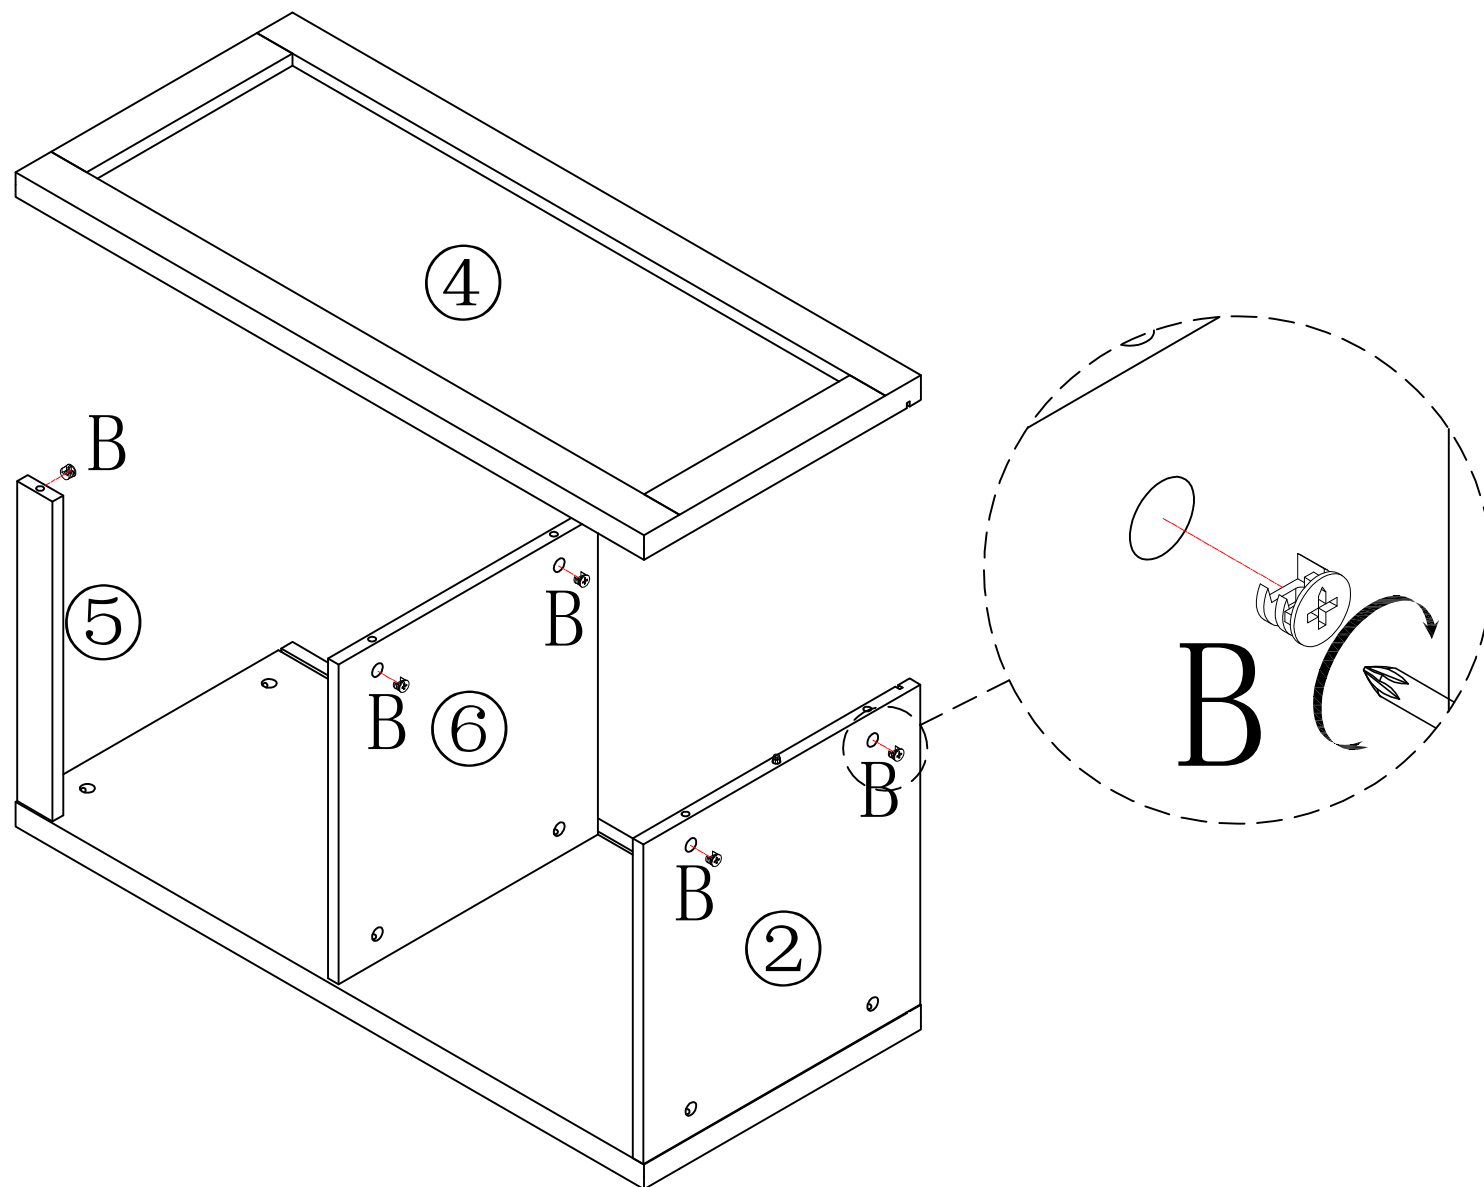


B*5

put B on board ② ⑤ ⑥

⑤



put B on board ③ ④ ⑤

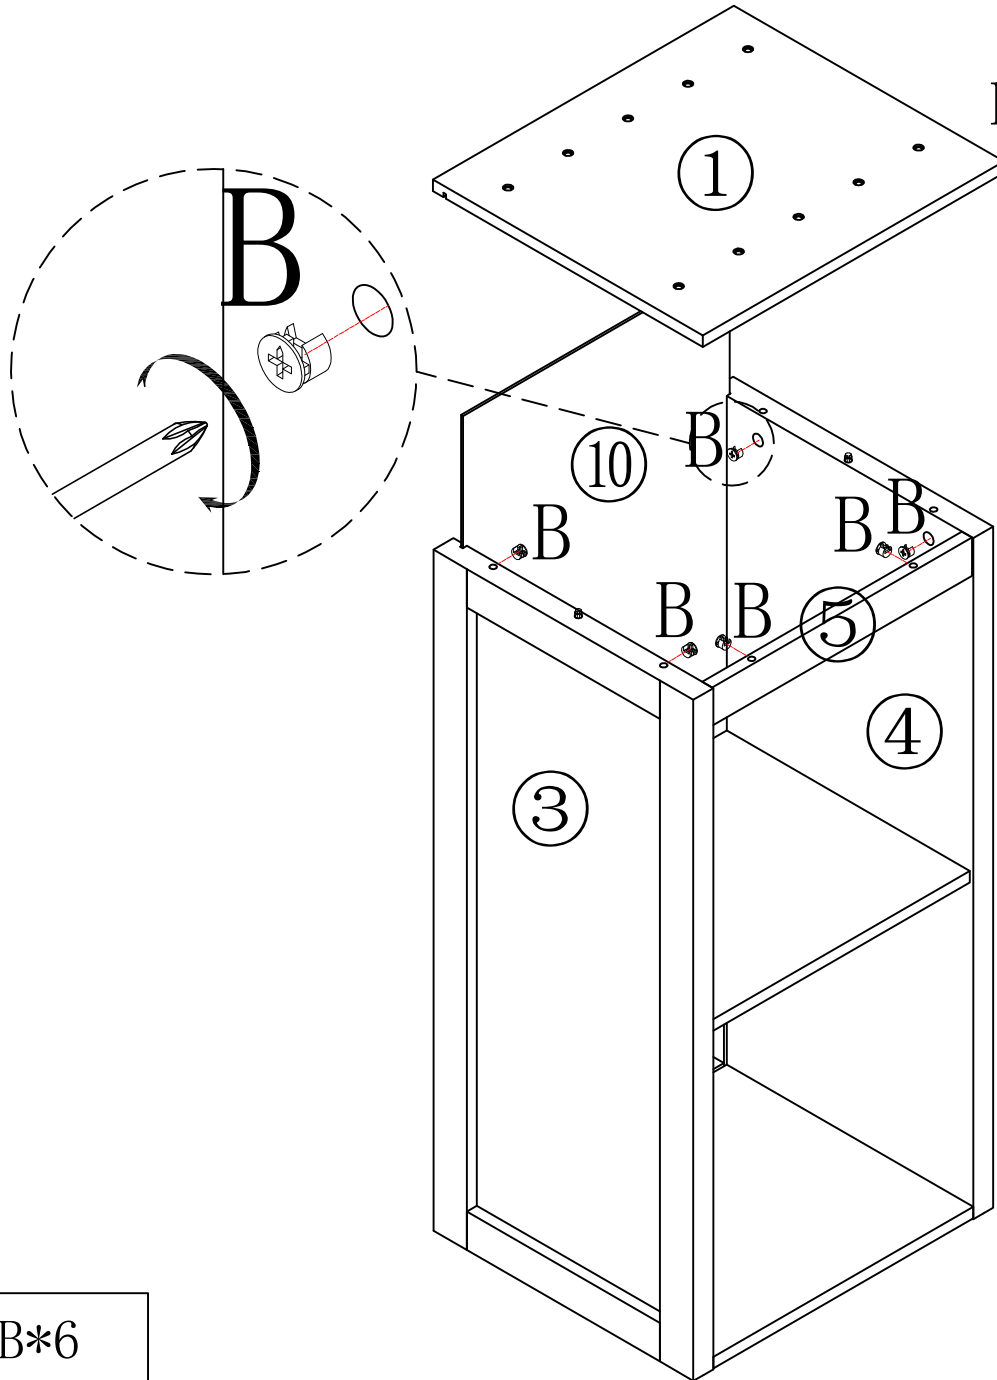

B*6

⑥



X2

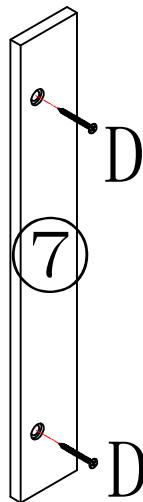

D


D

X3




D

D

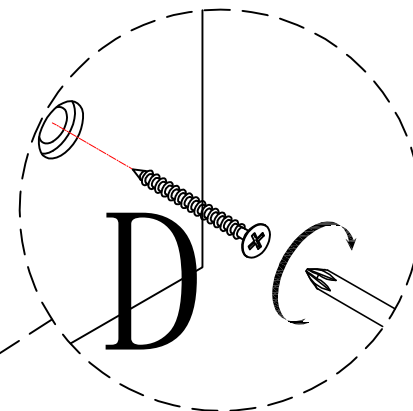



D*10

7

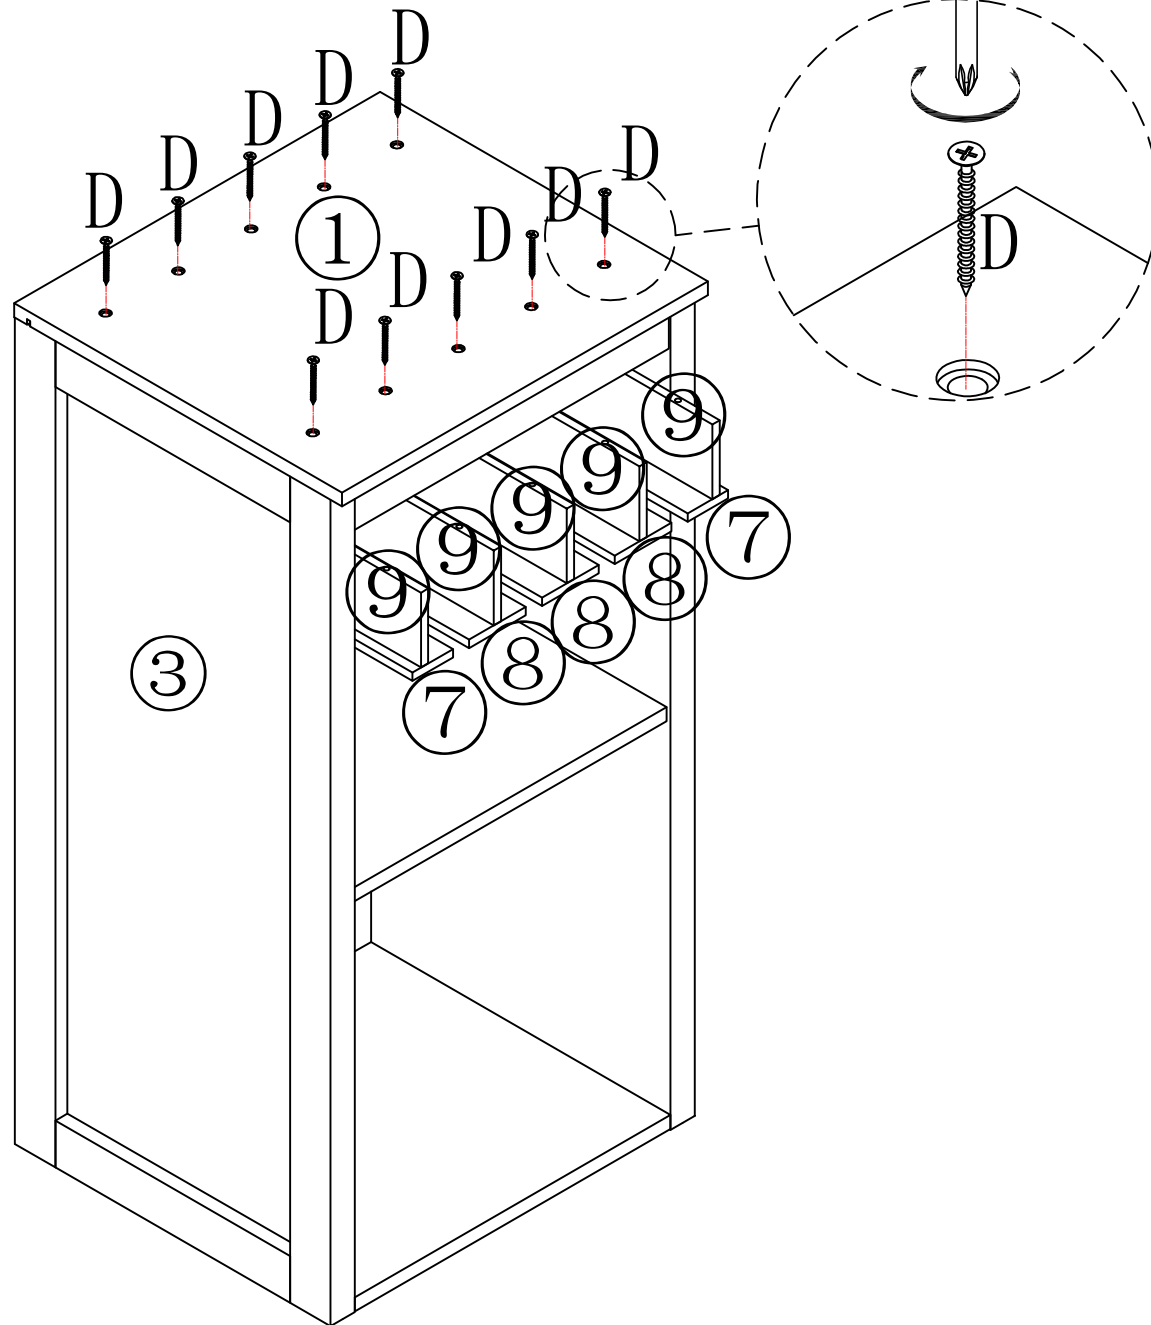

D*10

8




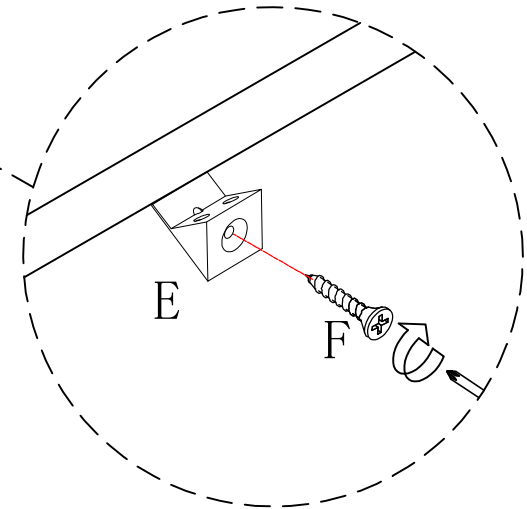
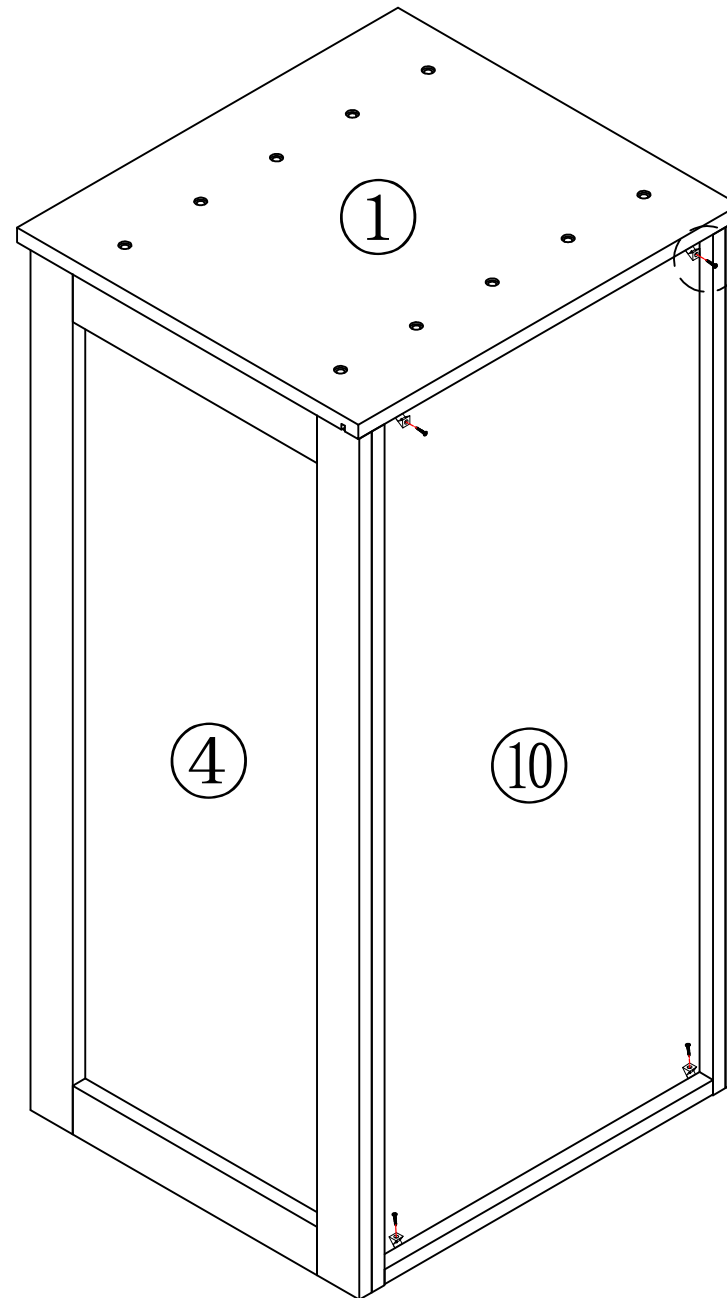


E*4



F*4


9

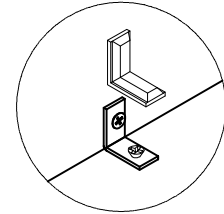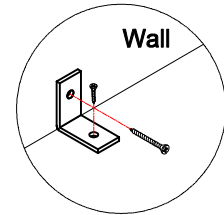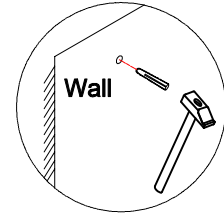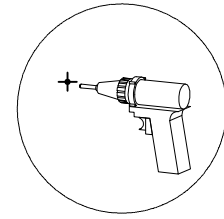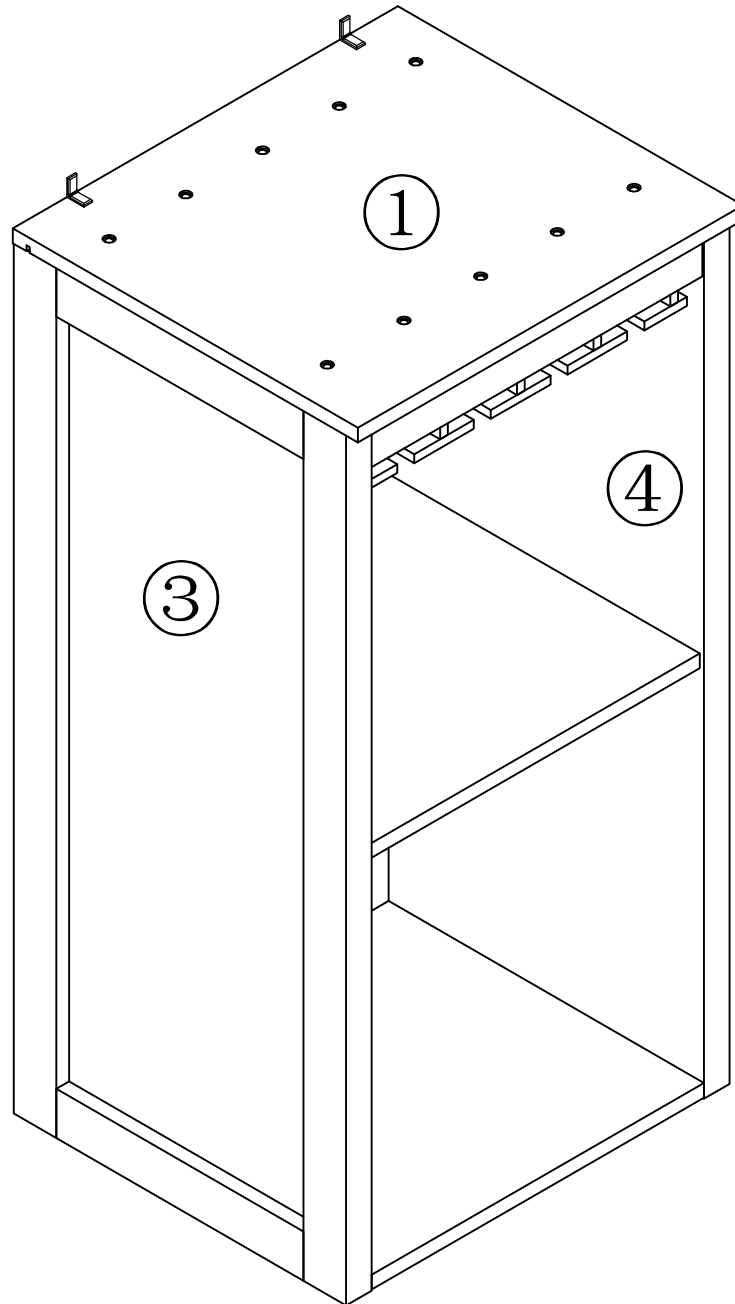

Please install tip-proof fitting.



G*2

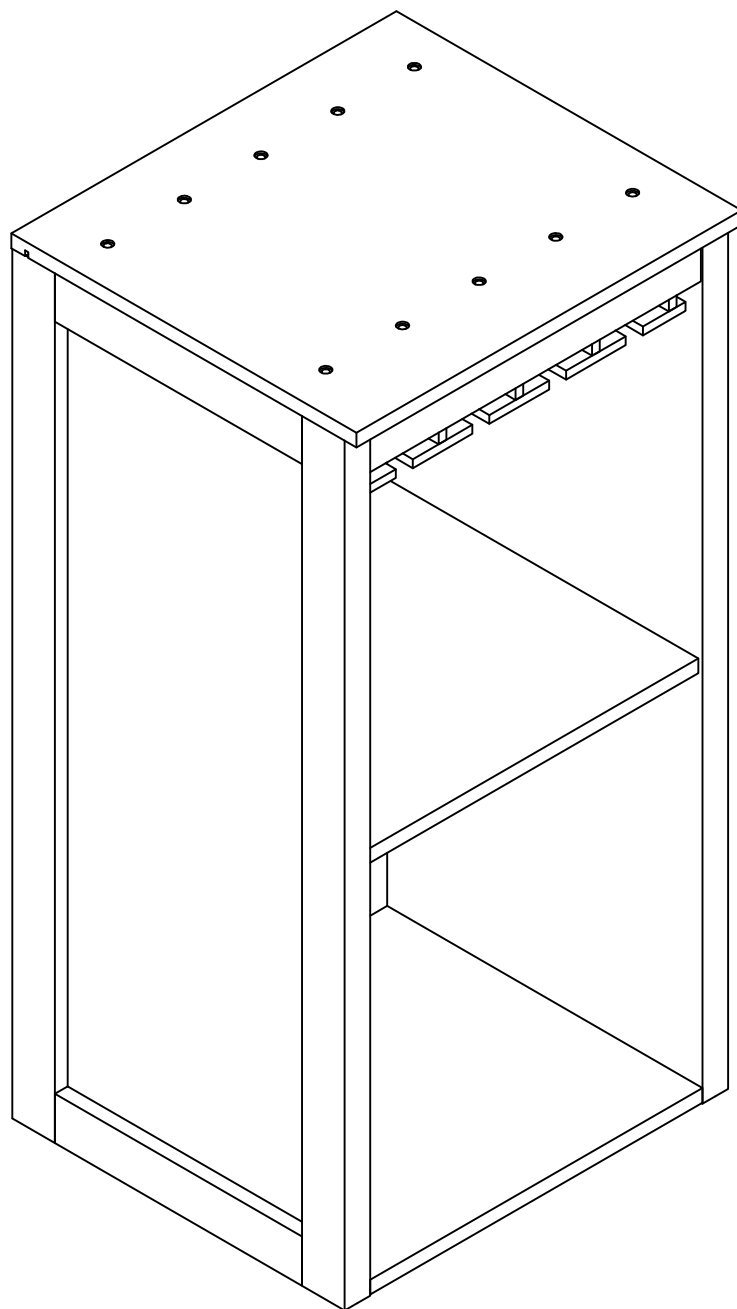

END