


ASSEMBLY INSTRUCTIONS

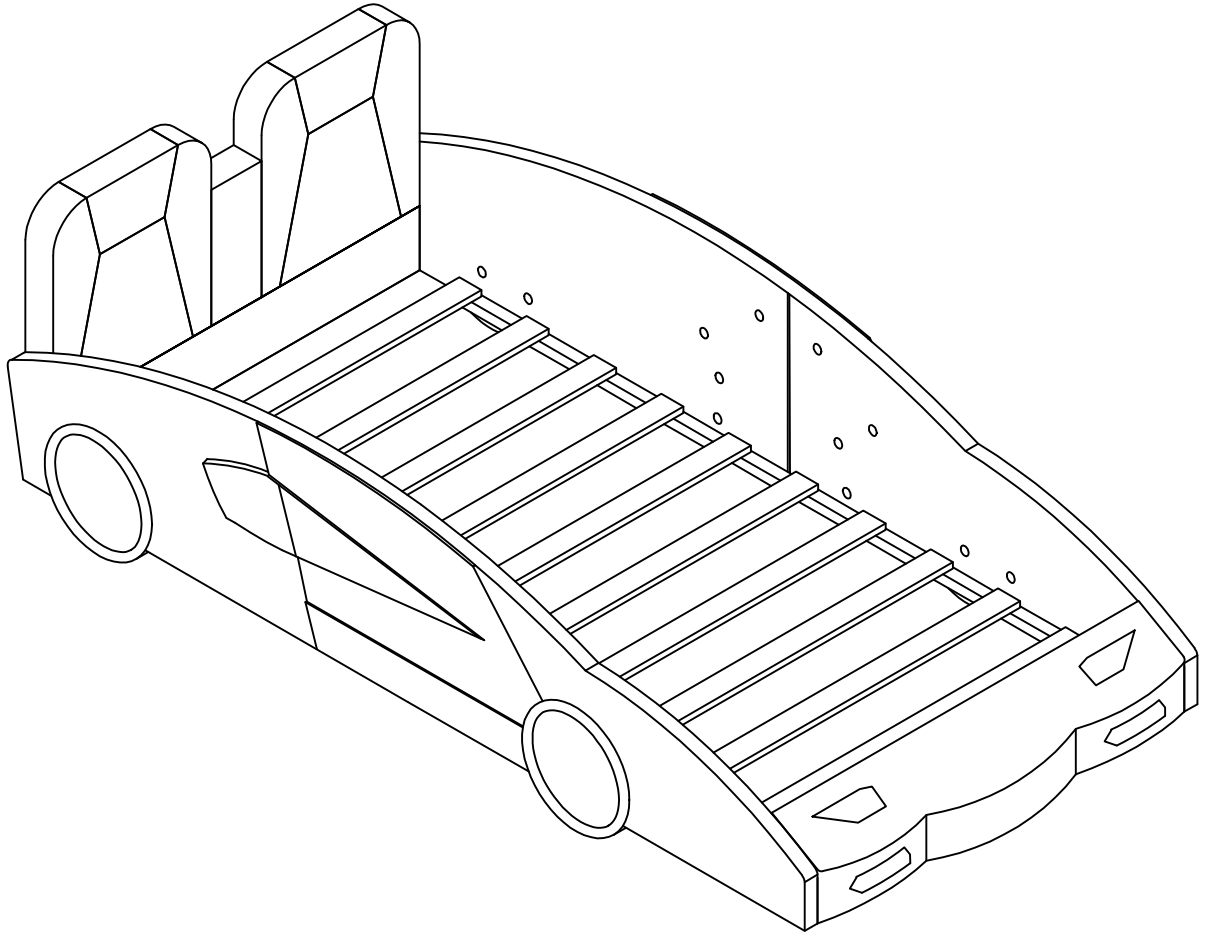

IMPORTANT NOTE

****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**









**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

ASSEMBLY INSTRUCTIONS


<p>Headboard Panel (1 pc)</p>	<p>Headboard Connector (1 pc)</p>	<p>Leg (4 pcs)</p>
<p>Footboard Top Panel (1 pc)</p>	<p>Footboard Bottom Panel (1 pc)</p>	<p>Side Rail Front Panel (2 pcs)</p>
<p>Side Rail Back Panel (2 pcs)</p>	<p>Side Rail Big Support (2 pcs)</p>	<p>Side Rail Small Support (2 pcs)</p>
<p>Side Rail Long Support (2 pcs)</p>	<p>Side Rail Short Support (2 pcs)</p>	<p>Roll Slat (10 pcs)</p>





ASSEMBLY INSTRUCTIONS

<div data-bbox="39 250 81 293">A</div> <div data-bbox="233 405 368 456"></div> <div data-bbox="199 573 399 618"><p>Short Bolt (24pcs) (Ø 5/16 "X25mm)</p></div>	<div data-bbox="544 250 585 293">B</div> <div data-bbox="743 405 855 456"></div> <div data-bbox="703 573 887 618"><p>Short Bolt (8pcs) (Ø 5/16 "X20mm)</p></div>	<div data-bbox="1048 250 1090 293">C</div> <div data-bbox="1241 383 1382 434"></div> <div data-bbox="1209 573 1396 618"><p>Long Bolt (5 pcs) (Ø 5/16 "X32mm)</p></div>
<div data-bbox="39 618 81 660">D</div> <div data-bbox="189 748 421 815"></div> <div data-bbox="225 936 418 985"><p>Long Bolt (16pcs) (Ø 5/16 "X45mm)</p></div>	<div data-bbox="544 618 585 660">E</div> <div data-bbox="732 730 898 815"></div> <div data-bbox="684 927 911 985"><p>Flat Washer (53 pcs) (Ø 5/16 "-RBW)</p></div>	<div data-bbox="1048 618 1090 660">F</div> <div data-bbox="1267 748 1422 824"></div> <div data-bbox="1203 936 1417 985"><p>Allen Wrench (1 pc) (M4x75mm x32mm)</p></div>
<div data-bbox="39 985 81 1028">G</div> <div data-bbox="194 1120 395 1169"></div> <div data-bbox="158 1301 432 1352"><p>Flat Head Screw (20 pcs) (m4x30mm-RBW)</p></div>	<div data-bbox="544 985 585 1028">H</div> <div data-bbox="711 1104 898 1169"></div> <div data-bbox="660 1301 925 1352"><p>Flat Head Screw (6 pcs) (m4x15mm-RBW)</p></div>	


ASSEMBLY INSTRUCTIONS

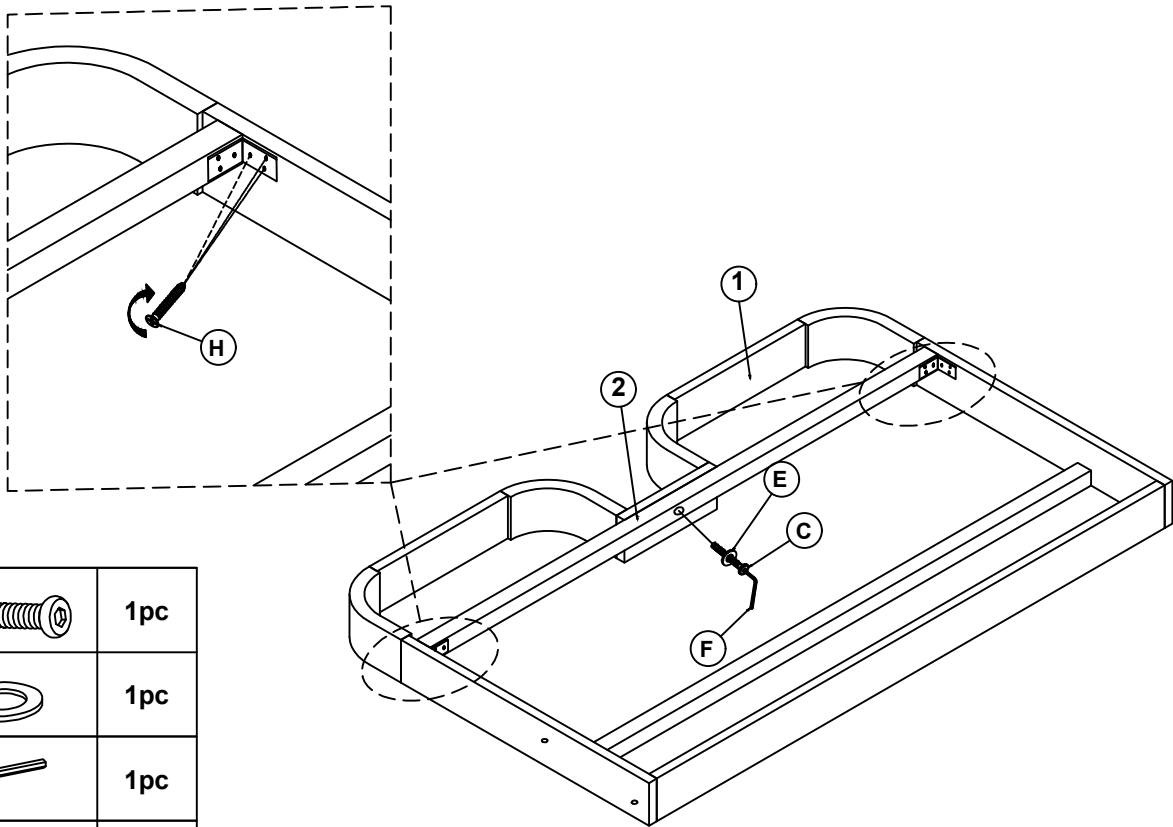


STEP 1



C	Bolt (Ø 5/16 "X32mm)		1pc
E	Flat Washer (Ø 5/16 "-RBW)		1pc
F	Allen Wrench (M4x75mm x32mm)		1pc
H	Flat Head Screw (m4x15mm-RBW)		6pcs

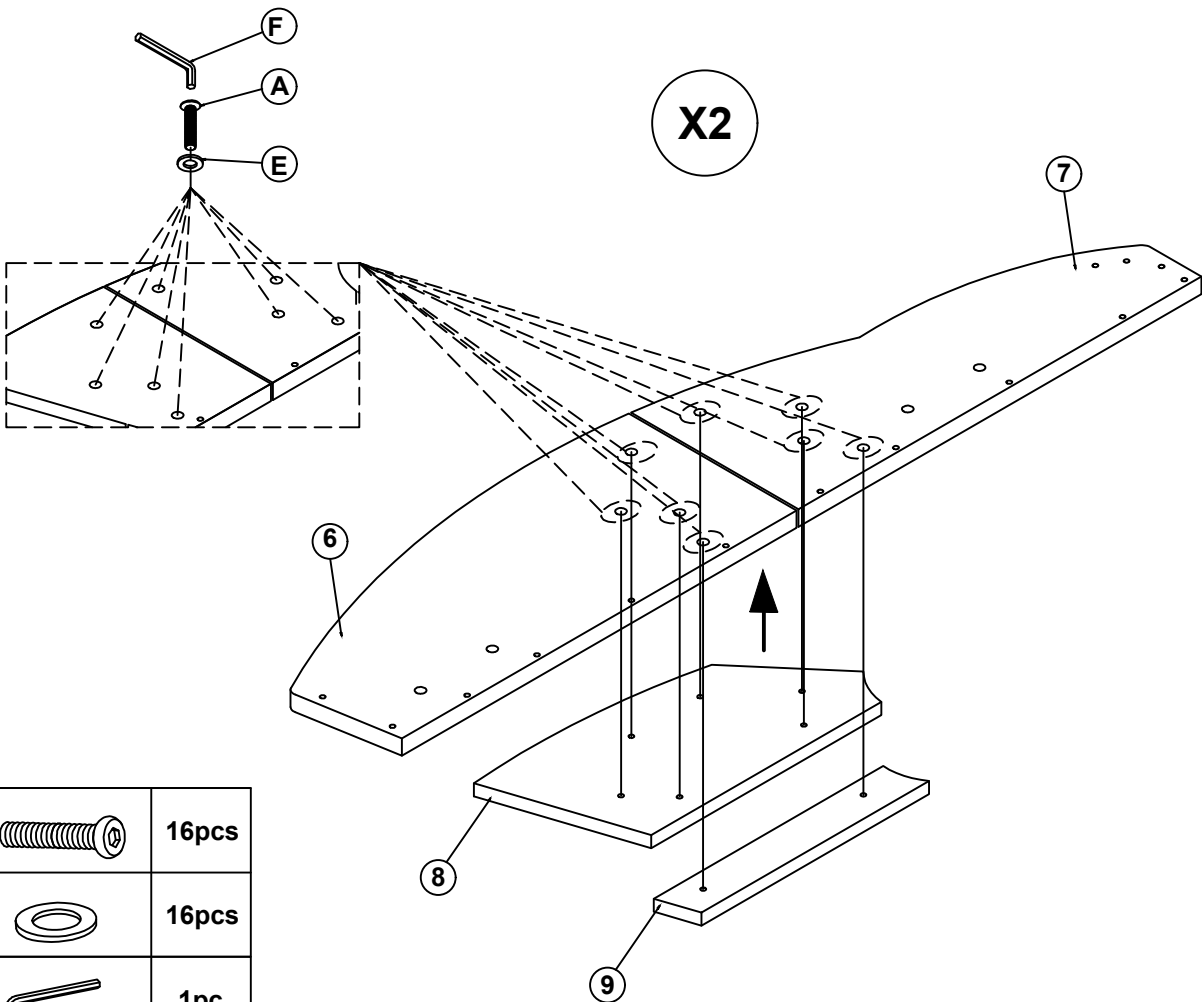
STEP 2




A	Bolt (Ø 5/16 "X25mm)		16pcs
E	Flat Washer (Ø 5/16 "-RBW)		16pcs
F	Allen Wrench (M4x75mm x32mm)		1pc

ASSEMBLY INSTRUCTIONS

STEP 3

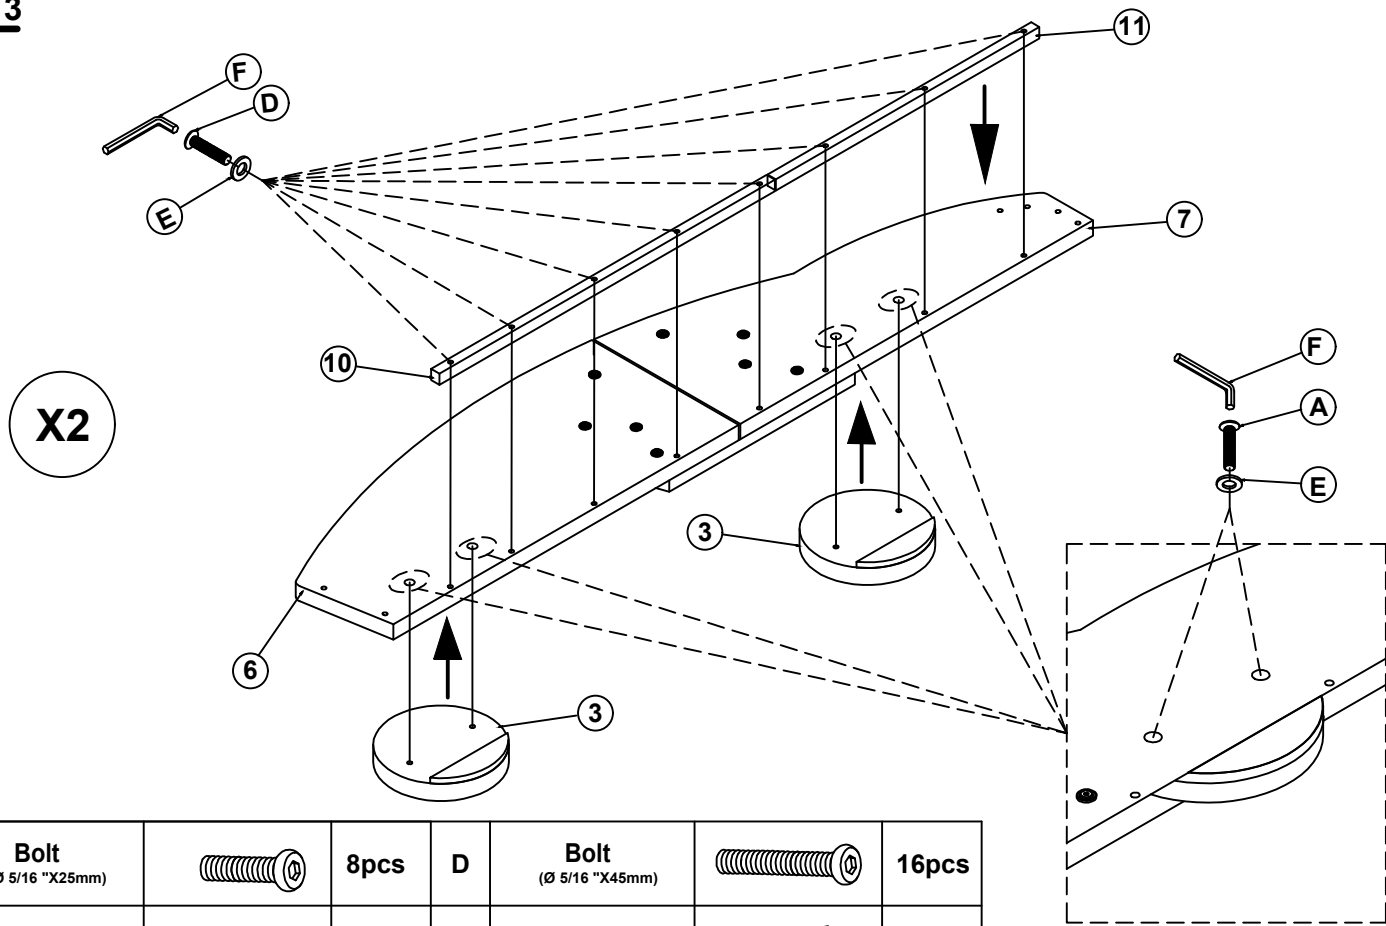


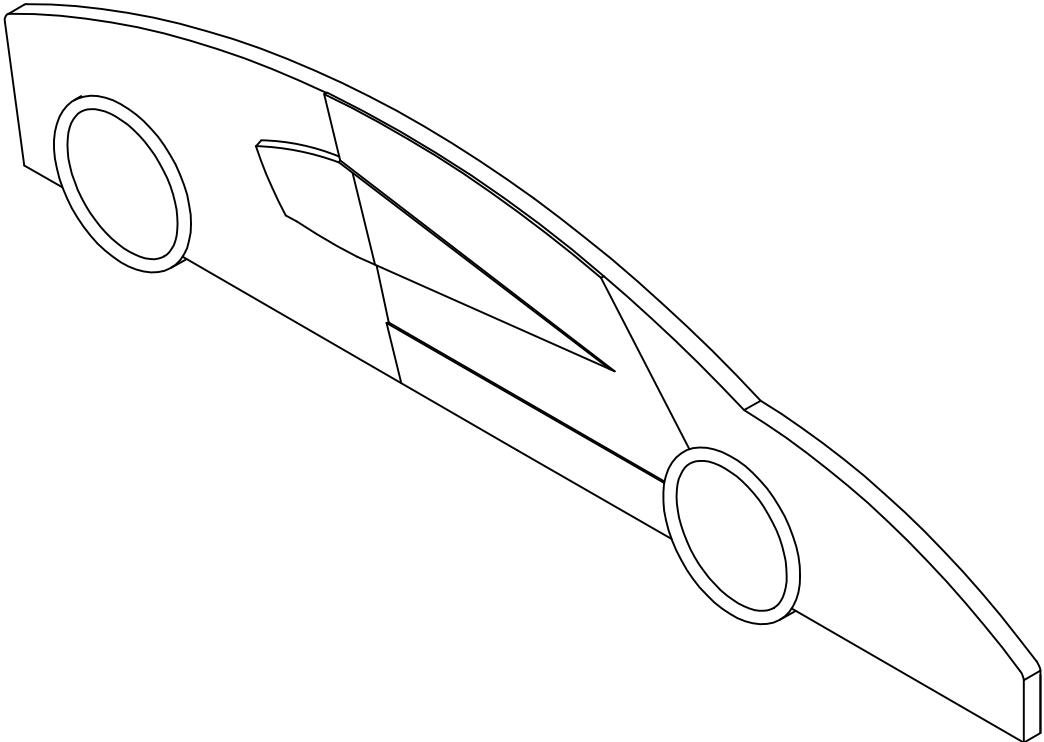



STEP 4



ASSEMBLY INSTRUCTIONS

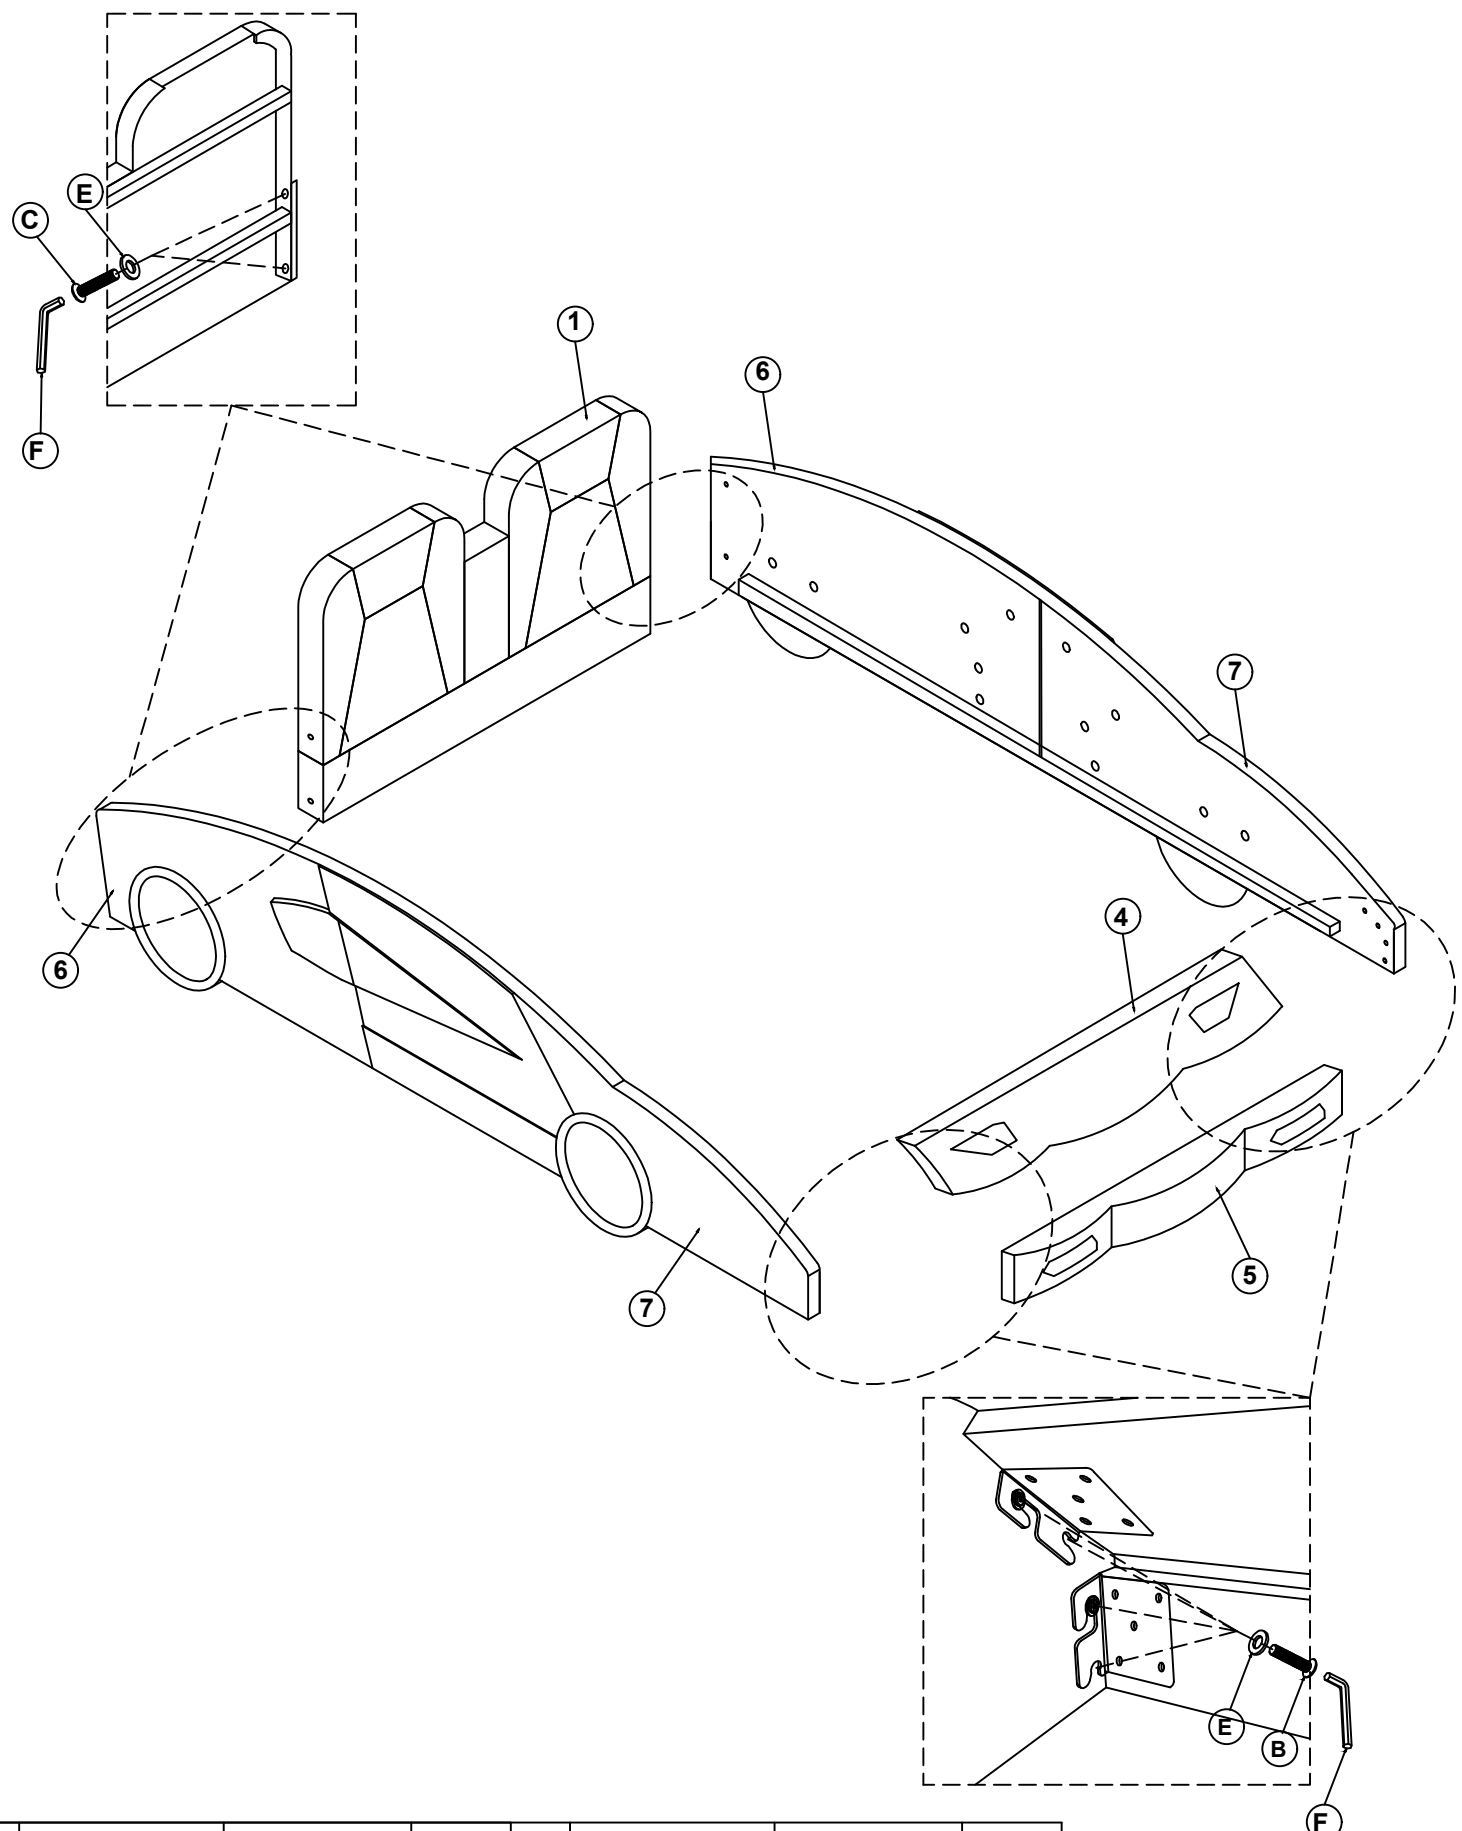
STEP 5




B	Bolt (Ø 5/16 "X20mm)		8pcs	C	Bolt (Ø 5/16 "X32mm)		4pcs
E	Flat Washer (Ø 5/16 "RBW)		12pcs	F	Allen Wrench (M4x75mm x32mm)		1pc

ASSEMBLY INSTRUCTIONS

STEP 6

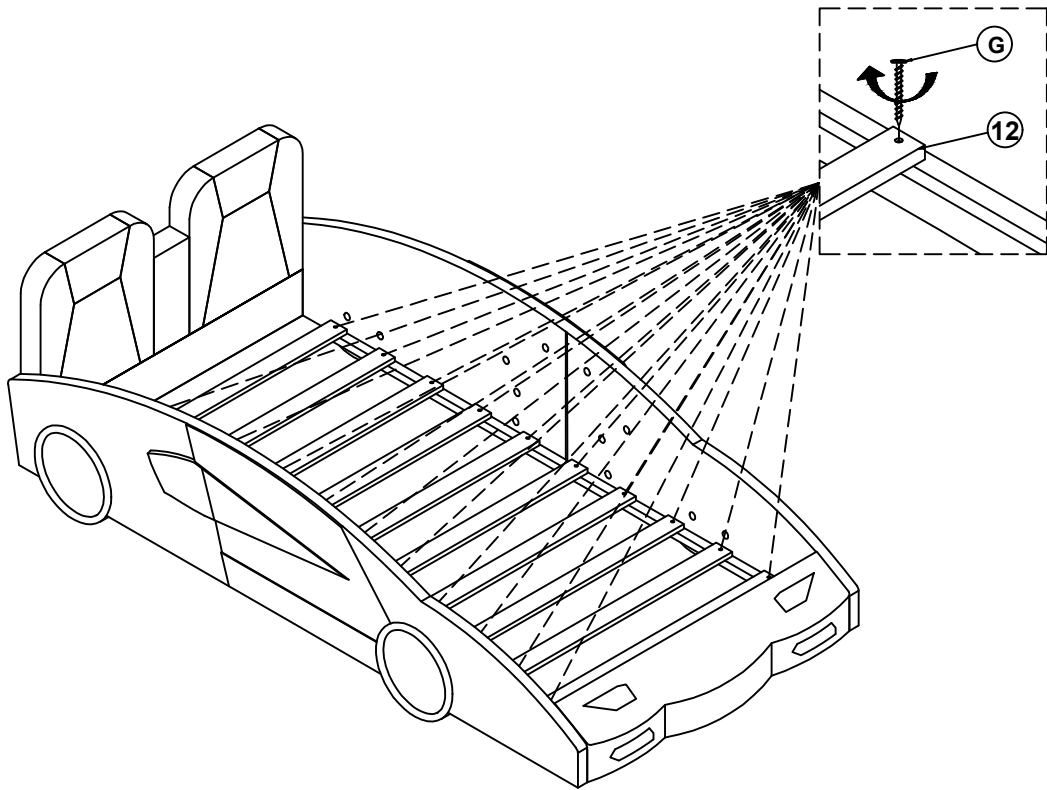

G	Flat Head Screw (m4x30mm-RBW)		20pcs
---	-----------------------------------	---	-------

STEP 7 COMPLETE

