

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finished goods during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email us.

## PREPARATION



- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key.

## CARE AND MAINTENANCE

**WOOD CARE:** Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

# Owner Manual

Product Dimensions: 47"W x 47"D x 30"H

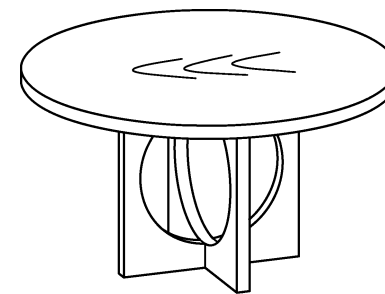





## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
A	Table Top		1x	1of2
B	Left Leg		2x	2of2
C	Right Leg		2x	2of2
D	Mounting Plate		4x	1of2

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
HW1	Dowel	$\varnothing 10 \times 40\text{mm}$	10x	2of2
HW2	Hex Socket Bolt	$5/16''-18 \times 0.625''$	16x	2of2
HW3	Hex Socket Bolt	$5/16''-18 \times 1.25''$	12x	2of2
HW4	Crisscross metal plate	$160^*160\text{mm}$	2x	2of2
HW5	Allen Key	4mm	1x	2of2

## PREPARATION


- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email us.
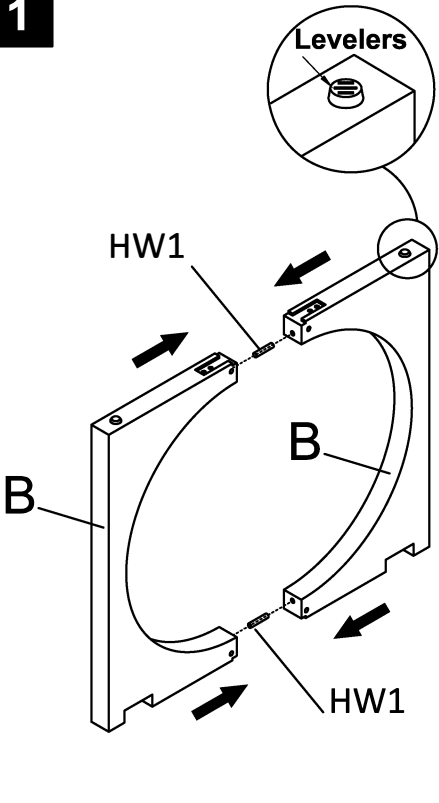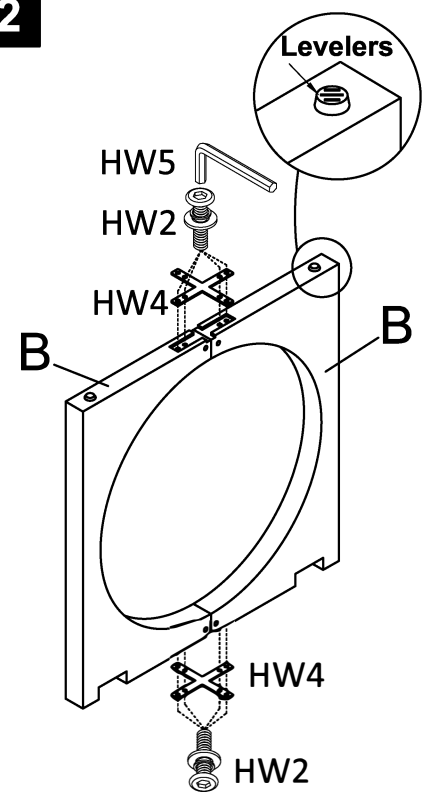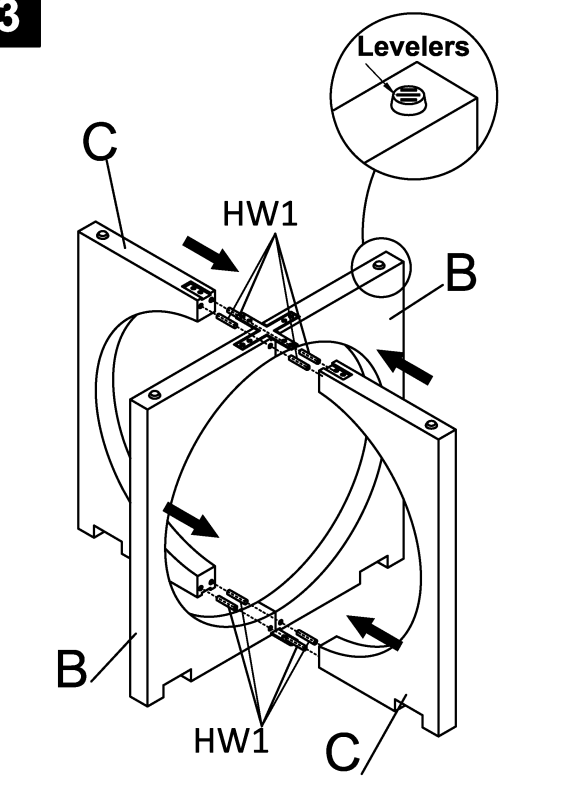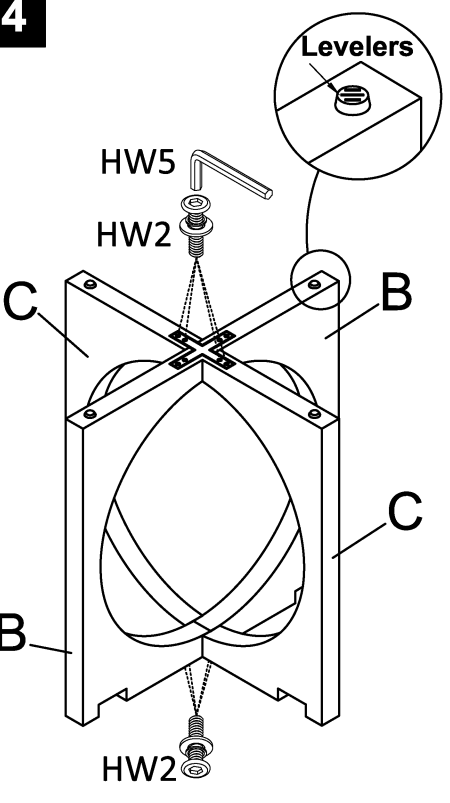
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 	<p><b>4</b></p> 
<p><b>Step 1</b> Insert 2 Dowel (HW1) into the top and bottom of the Left Leg (B) respectively, and connect the two left leg together, as shown in the figure above.</p>	<p><b>Step 2</b> Put the Crisscross metal plate (HW4) into the top and bottom of the Left Leg (B) respectively, Using Allen key (HW5) to lock with 8*Hex Socket Bolt (HW2).</p>	<p><b>Step 3</b> Insert 4 Dowel (HW1) into the top and bottom of the Right Leg (C) respectively. ***Repeat same way on the other right leg. And put the 2 Right Legs close to the center place of the assembled 2 Left Leg (the dowel is inserted into the holes of the left leg) to connect the 4 legs together, as shown in the figure.</p>	<p><b>Step 4</b> Using Allen key (HW5) to lock with 8*Hex Socket Bolt (HW2) to the top/bottom 2 Crisscross metal plate (HW4).</p>

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 30 minutes.
- \* Tools Required for Assembly (included): Allen Key.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email us.


5

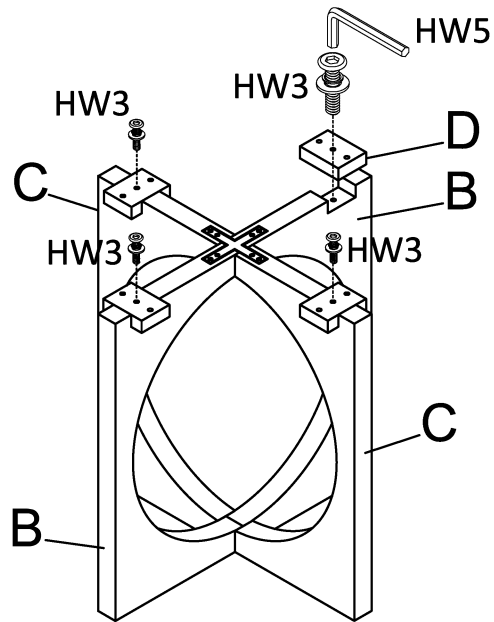

### Step 5

Put 4 Mounting Plate (D) on the topside of each legs (center hole on mounting plate aligns with screw hole on leg), Using Allen key (HW5) to lock with 4\*Hex Socket Bolt (HW3).


6

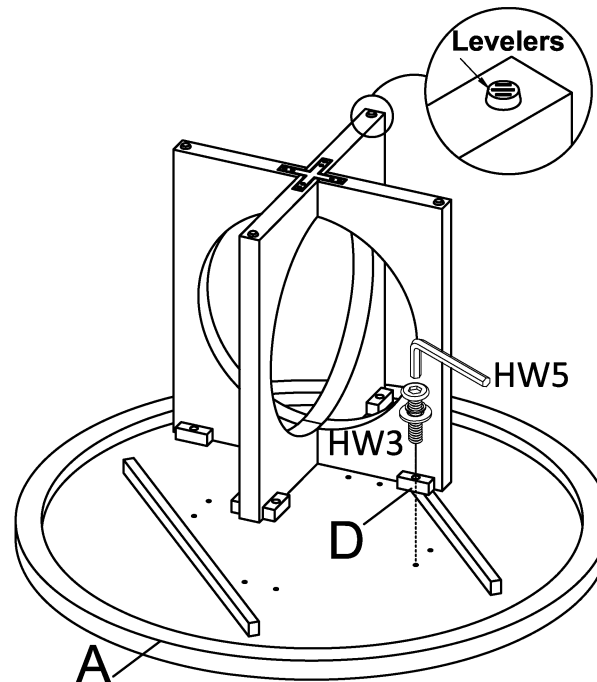

### Step 6

Align the holes of the mounting plate with the screw holes on the back of the table top, Using Allen key (HW5) to lock with 8\*Hex Socket Bolt (HW3).

7

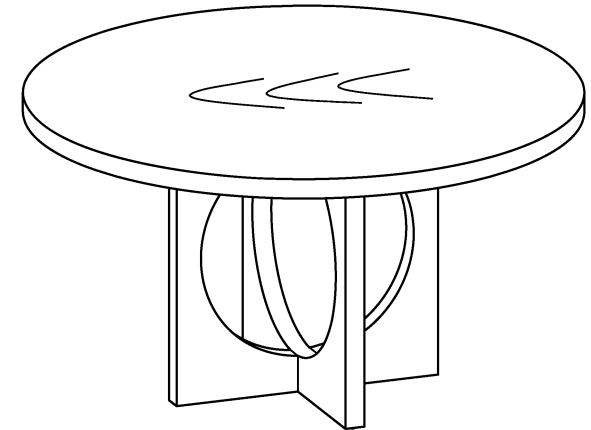

**After properly adjusting the levelers, make sure all bolts are fully tightened**

### Step 7

Turn the assembled product upright, Use the levelers to adjust the product if needed. Assembly is now complete.