



Program A

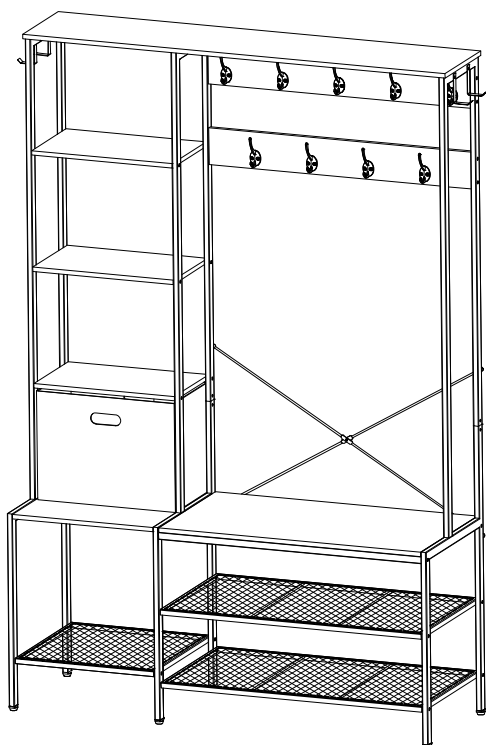

Program B

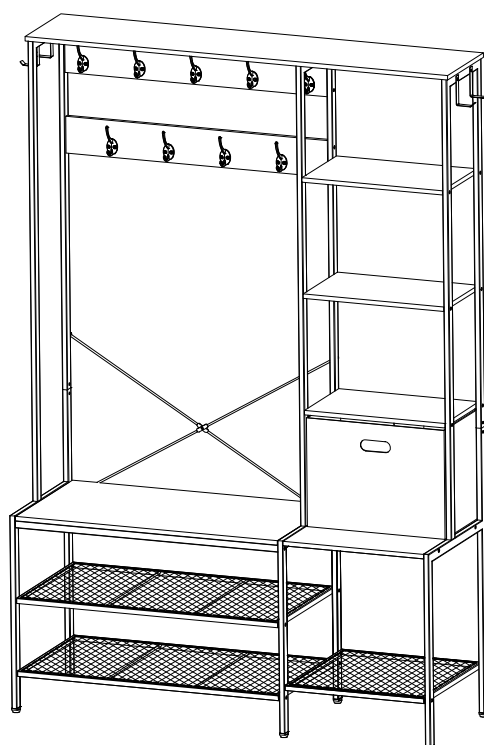

Thank you for purchasing our products.


As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.


































If you find any damage, missing parts or dissatisfaction after receiving the product, pls feel free to contact us at the first time, we will provide you with 100% satisfactory solution.

Thanks again for your order. And pls feel free to contact us in case of any problem regarding assembling or product itself. We will do everything we can to resolve it.

TIPS:


- 1.Two people are recommended to install,which will greatly improve your installation efficiency.
- 2.Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing.

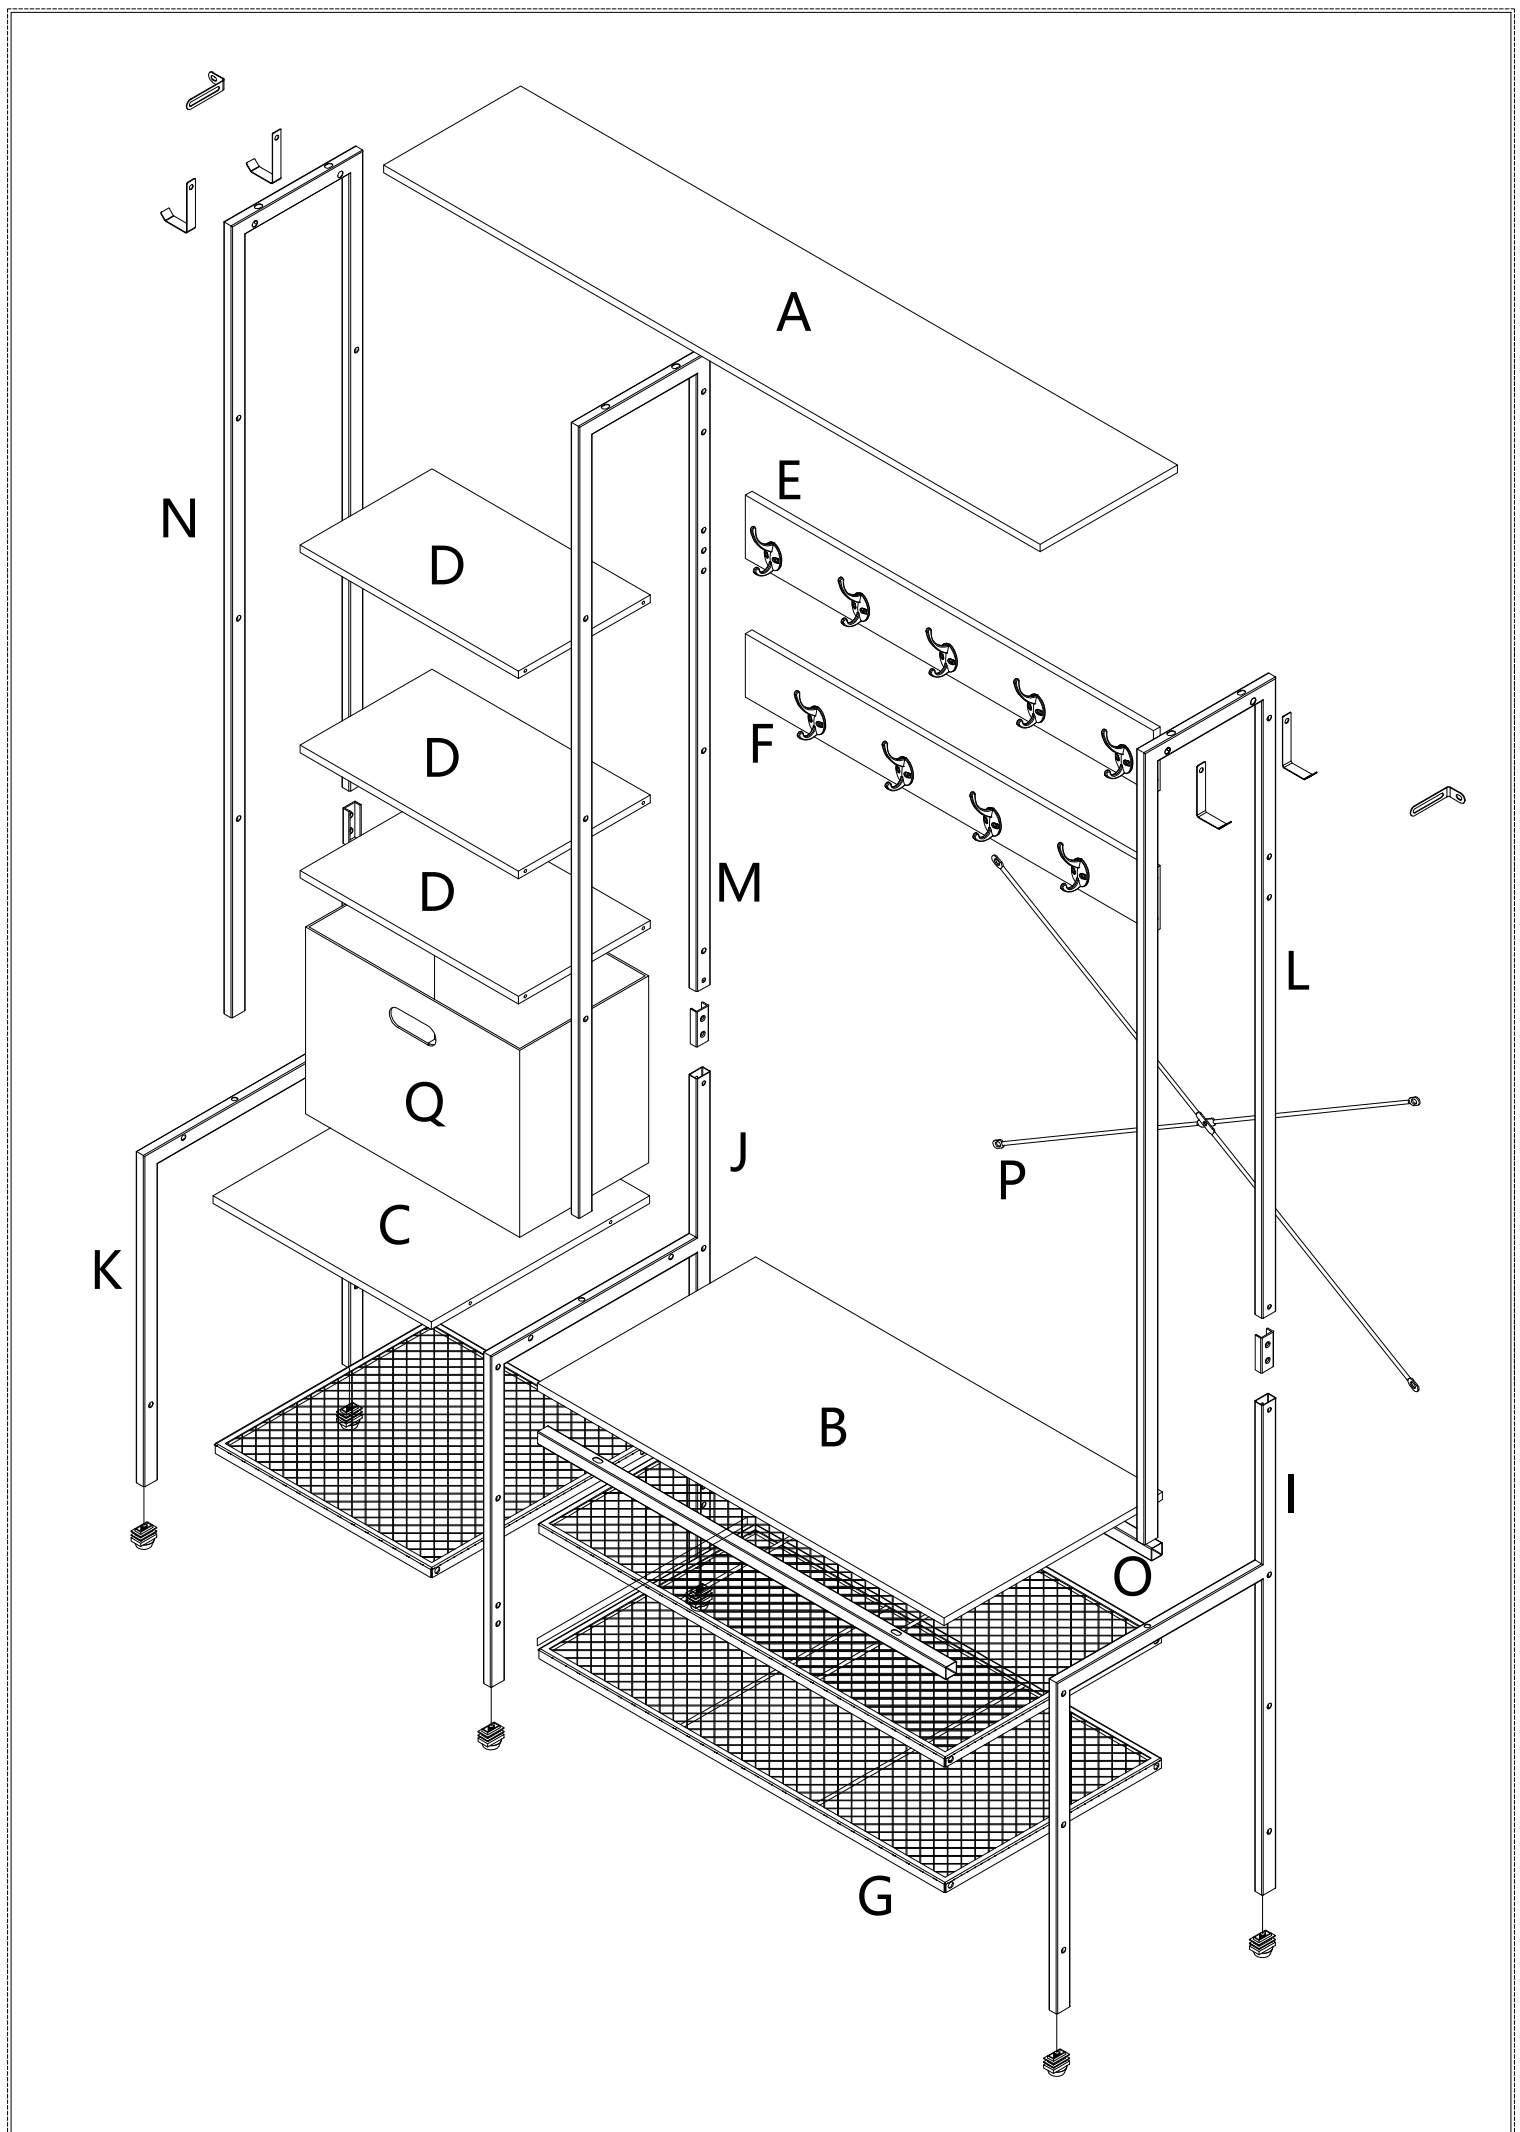

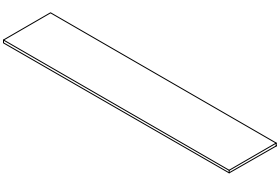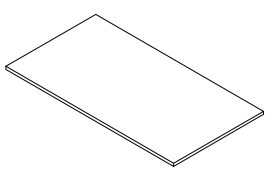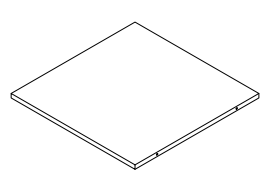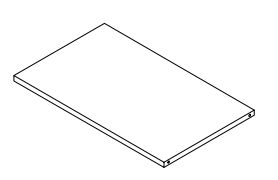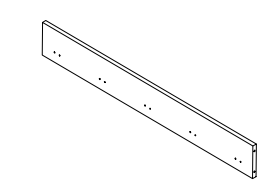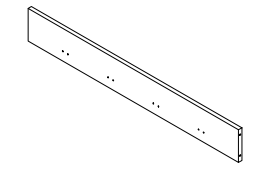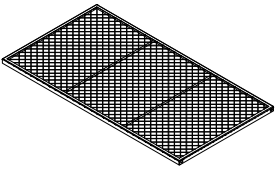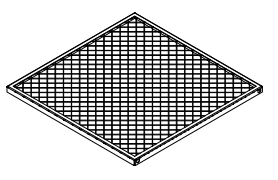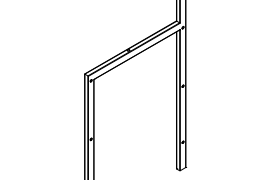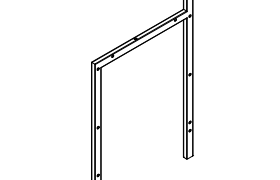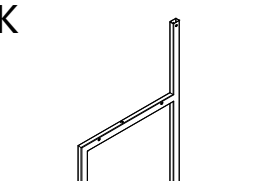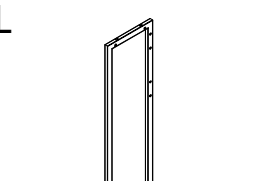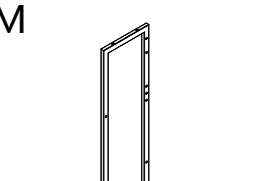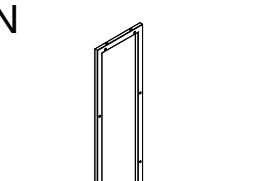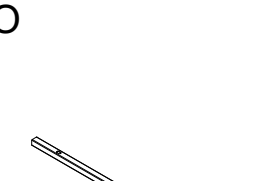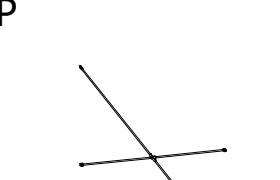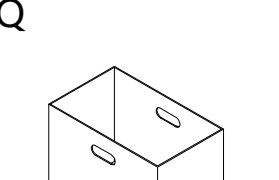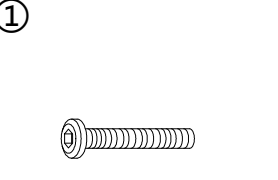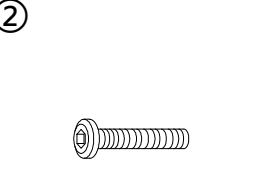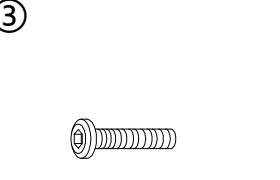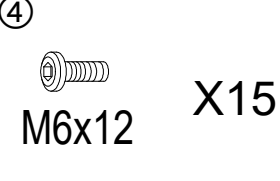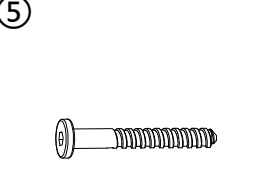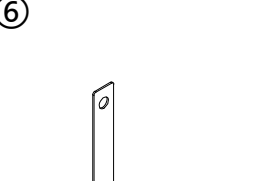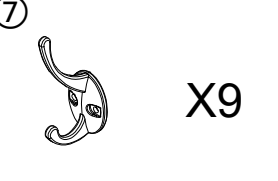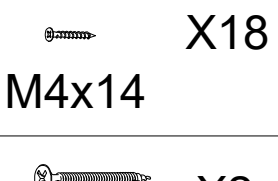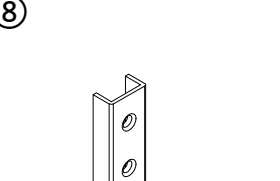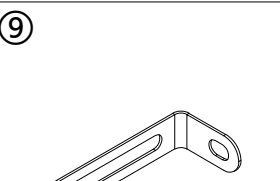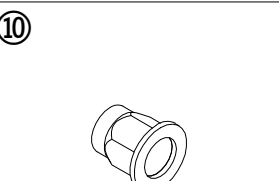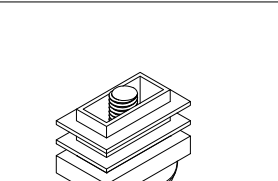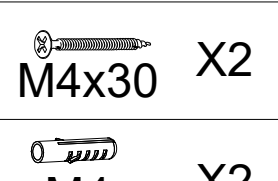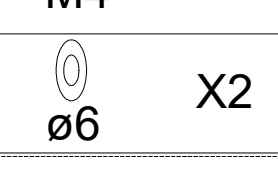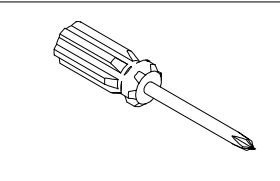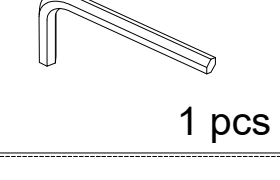A  1 pcs	B  1 pcs	C  1 pcs	D  3 pcs	E  1 pcs
F  1 pcs	G  2 pcs	H  1 pcs	I  1 pcs	J  1 pcs
K  1 pcs	L  1 pcs	M  1 pcs	N  1 pcs	O  2 pcs
P  ø5x880 2 pcs	Q  1 pcs	①  M6x40 3 pcs	②  M6x32 10 pcs	③  M6x27 16 pcs
④  M6x12 X15  M6 X1	⑤  M6x40 24 pcs	⑥  4 pcs	⑦  X9  M4x14 X18	⑧  15x25 3 pcs
⑨  2 pcs	⑩  M6 4 pcs	15x25xM6  6 pcs	M4x30 X2  M4 X2  ø6 X2	  1 pcs


Program A

Install the shelves
on the left

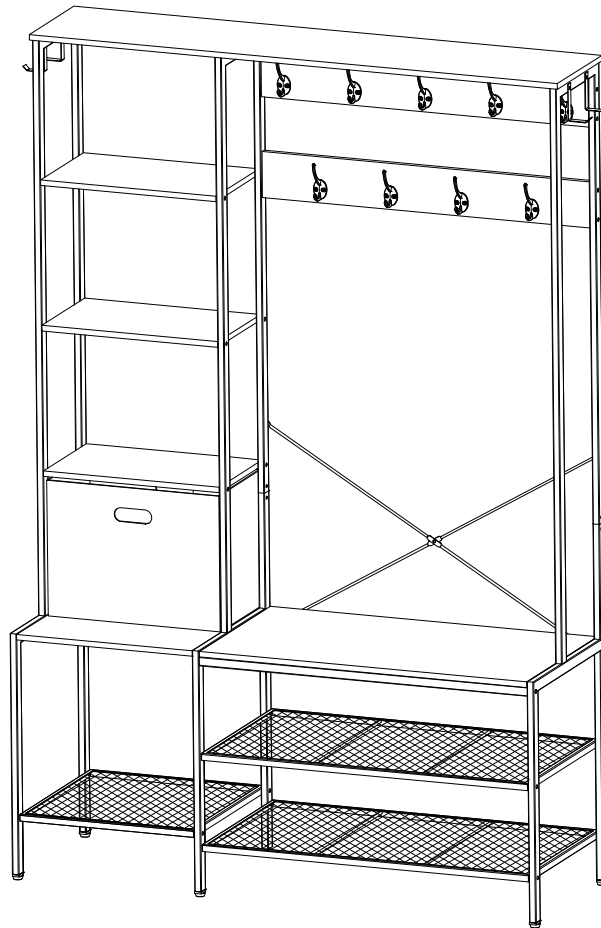

Program B


Install the shelves
on the right

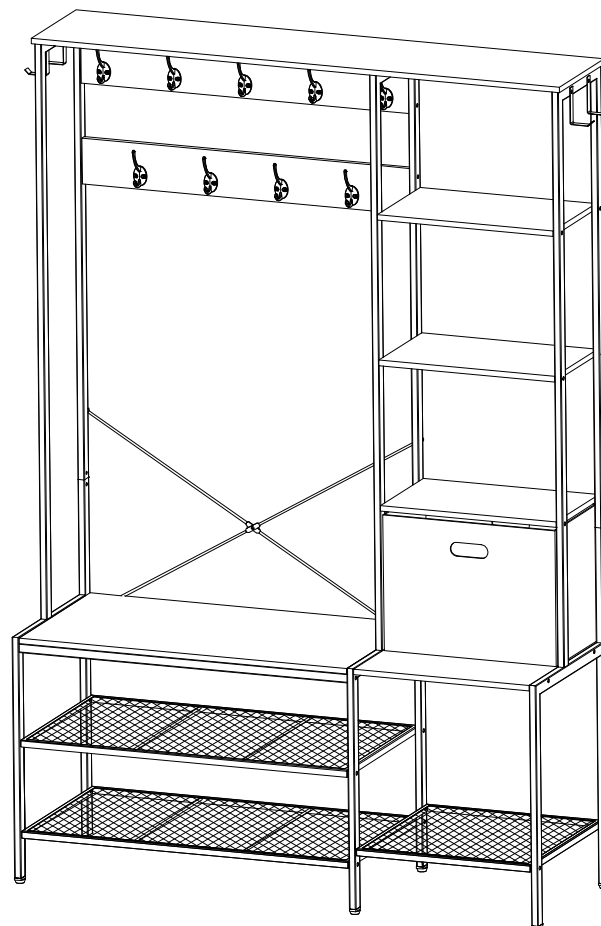


Program A

Installation tips:


- 1.Align the fittings and accessories when installing the frame, then tighten the screws. Assemble the shelf on the left.
- 2.When installing the board, first screw all screws into holes loosely then tighten them.

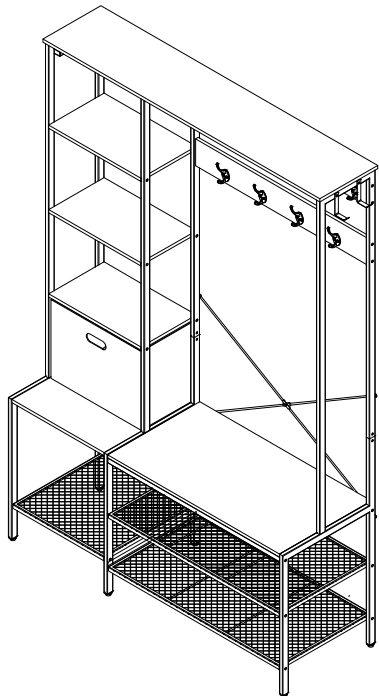


Step(1)

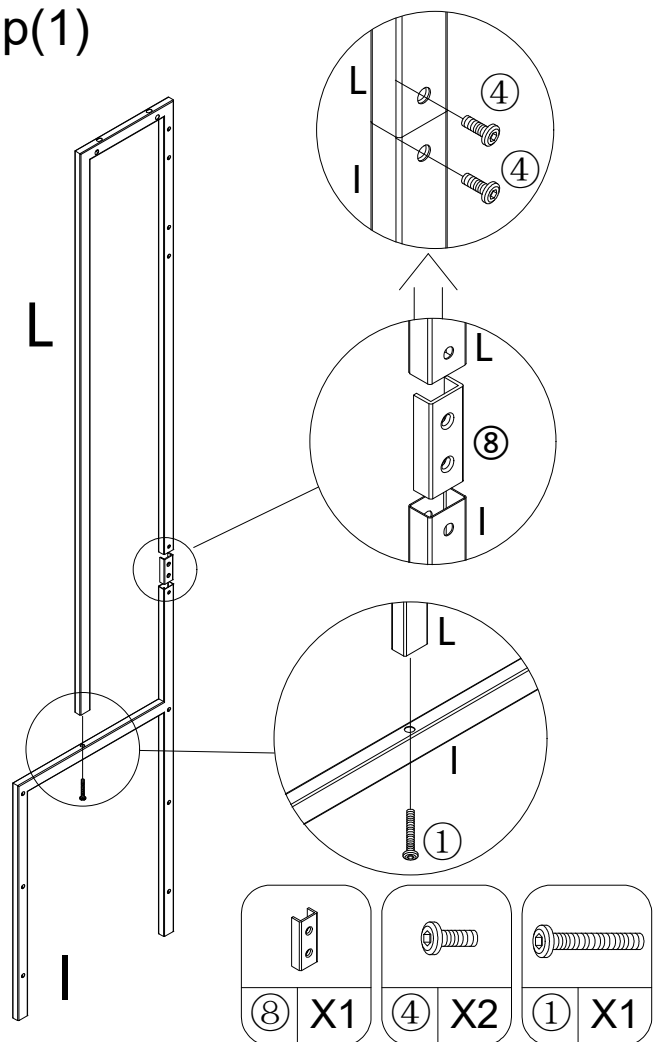



Step(2)

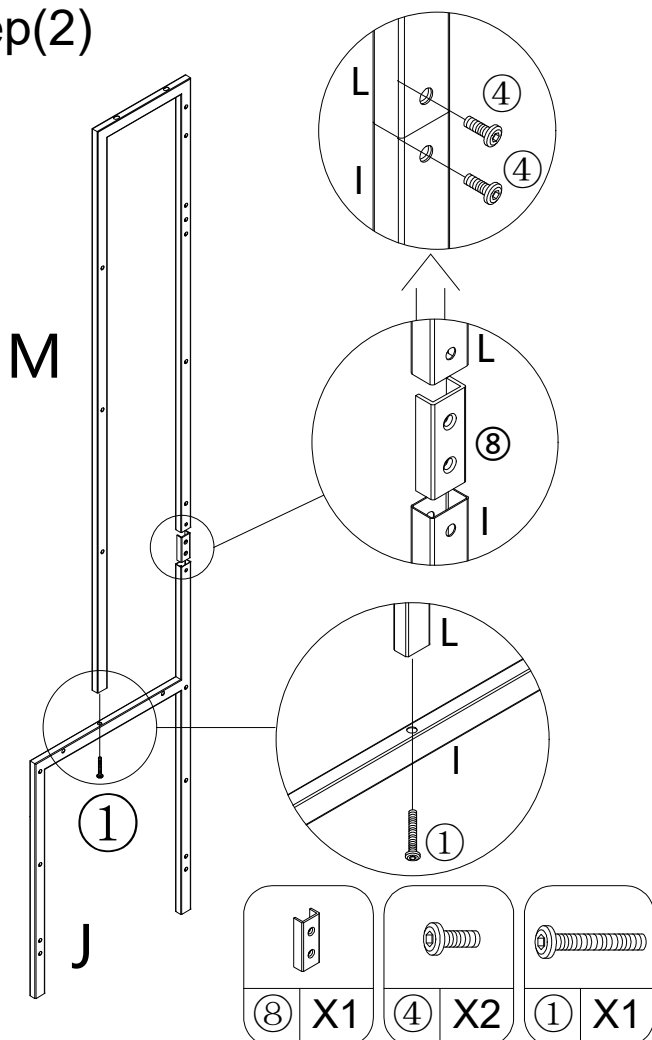




Step(3)

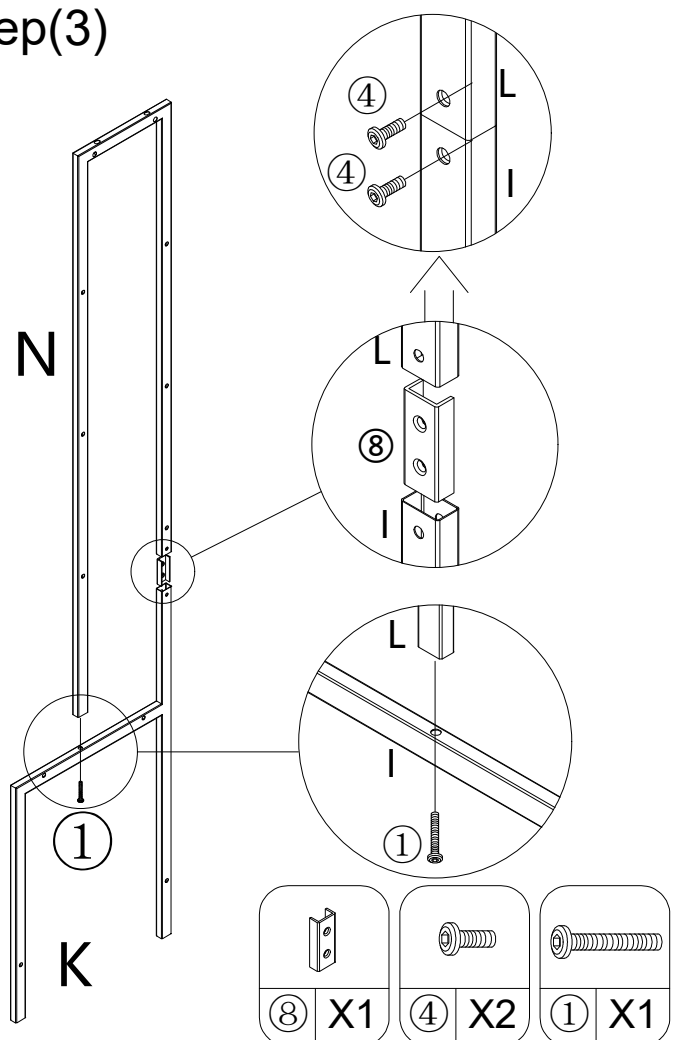




Step(4)

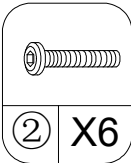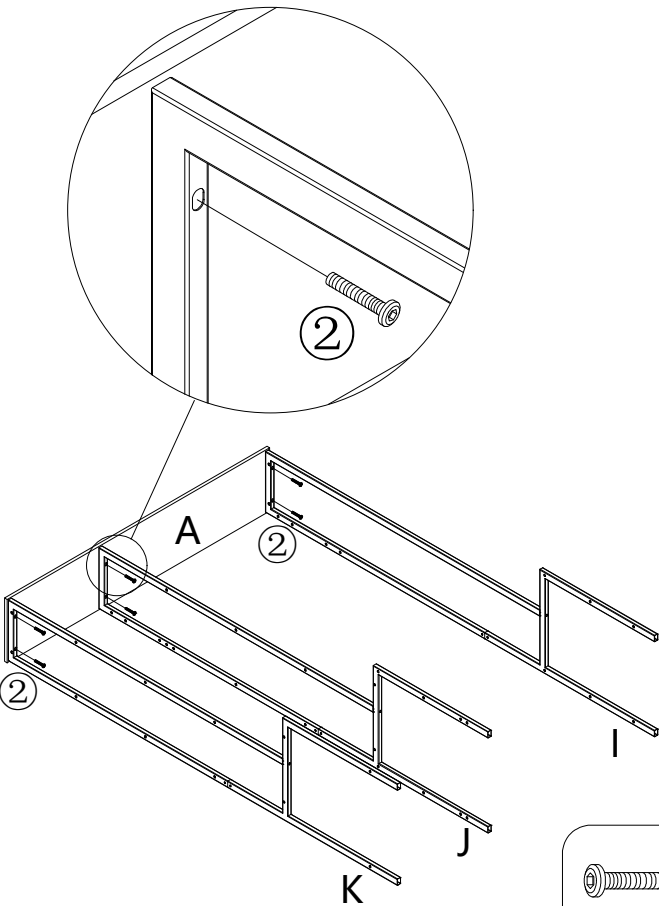




Step(5)

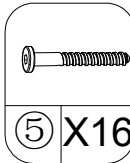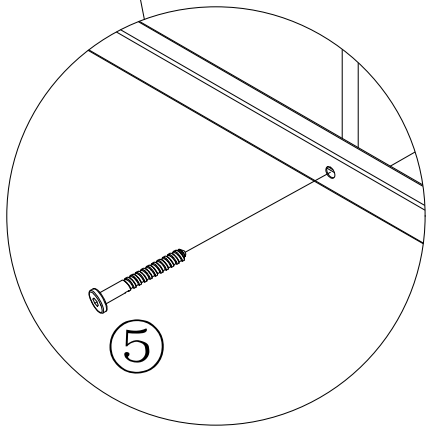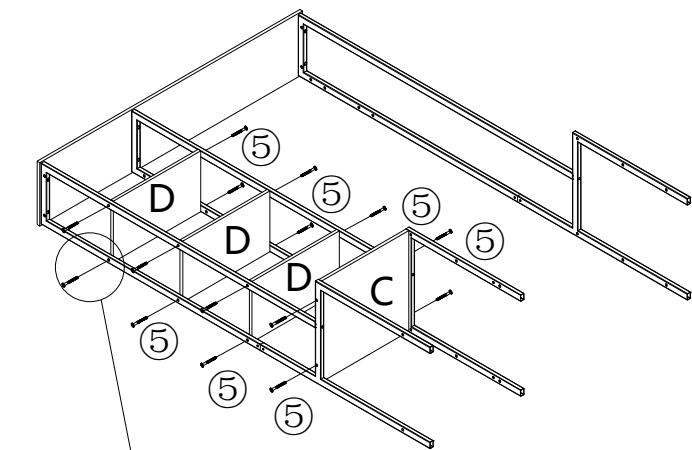



Step(6)

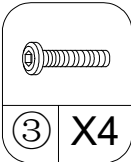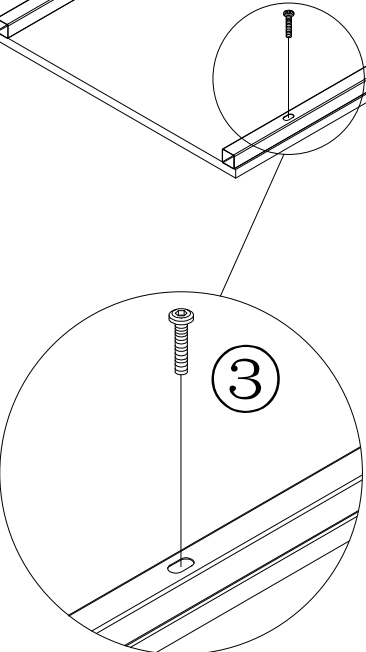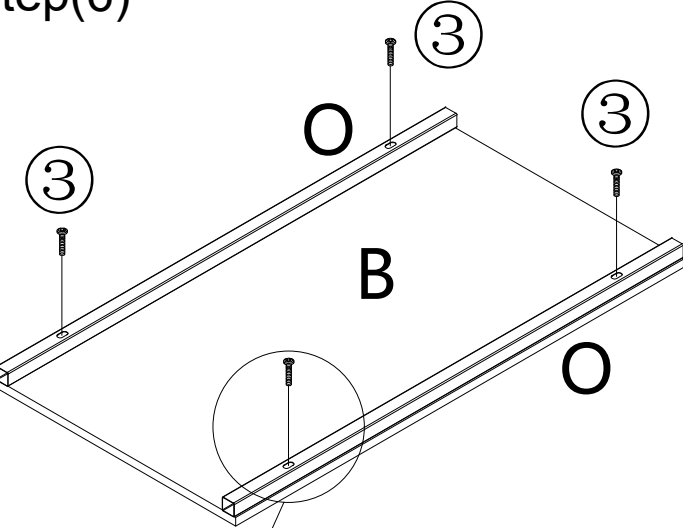



Step(7)

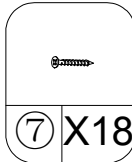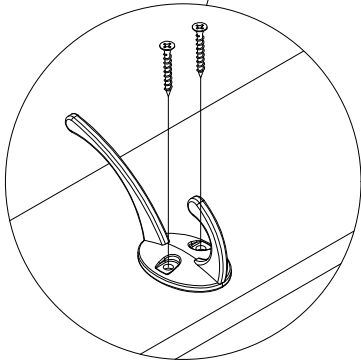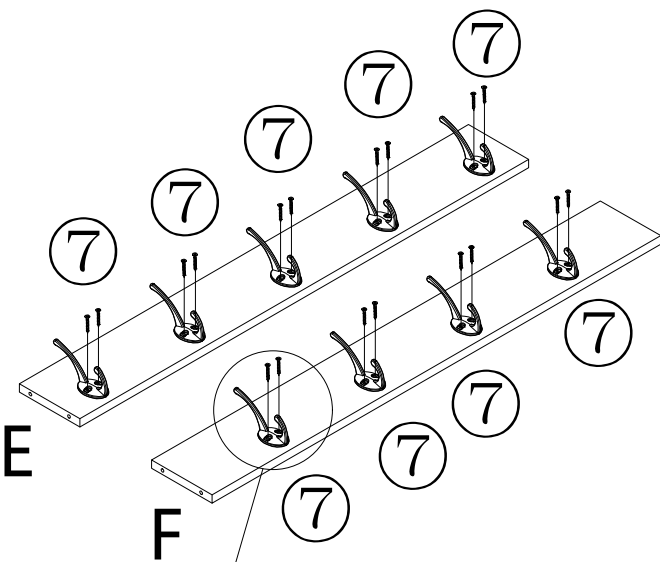

Step(8)

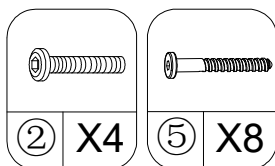
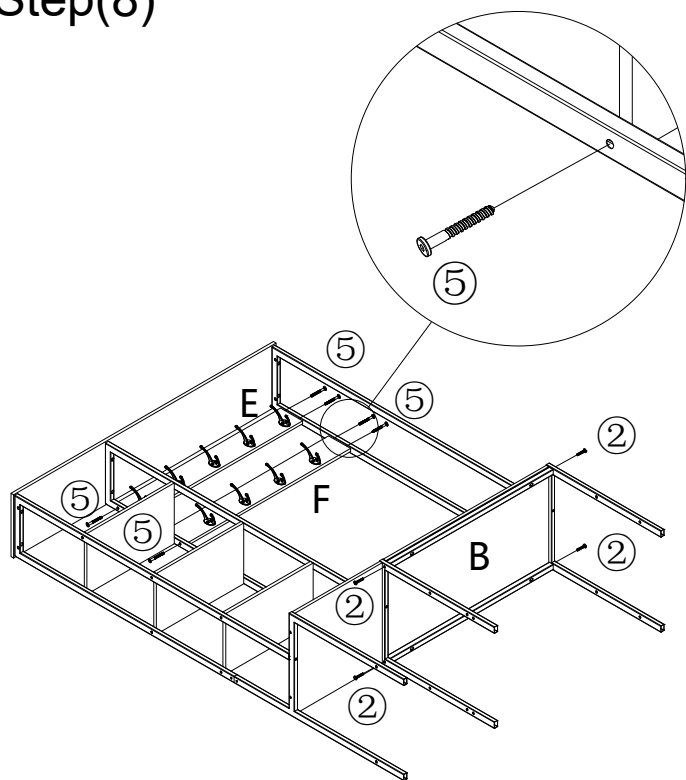


Step(9)

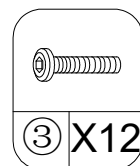
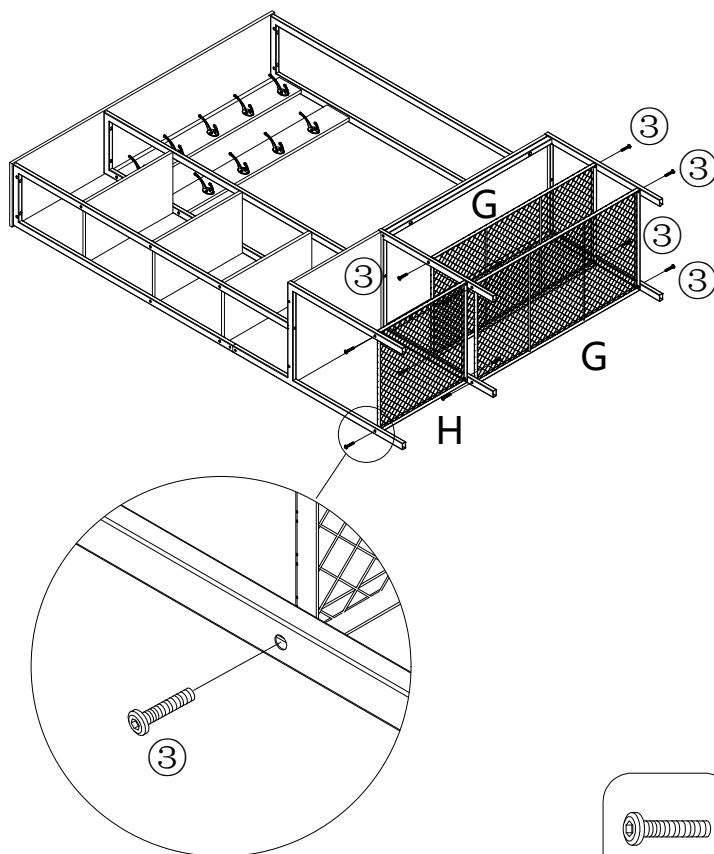




Step(10)

Anti-toppling Accessories

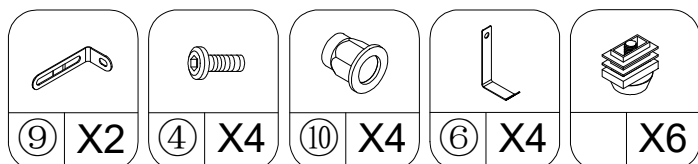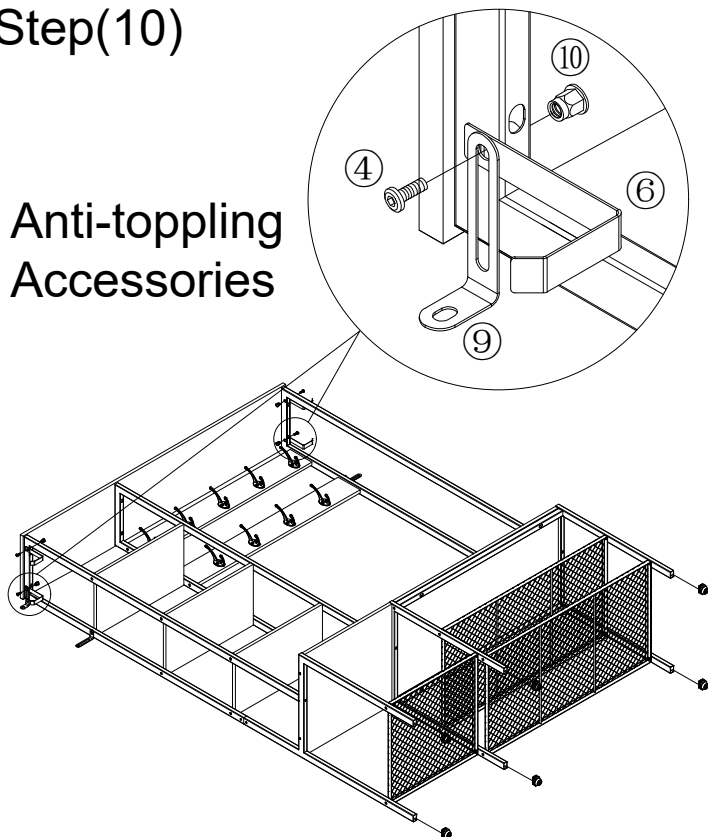

Step(11)

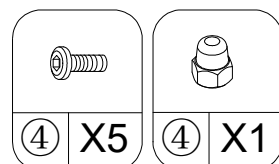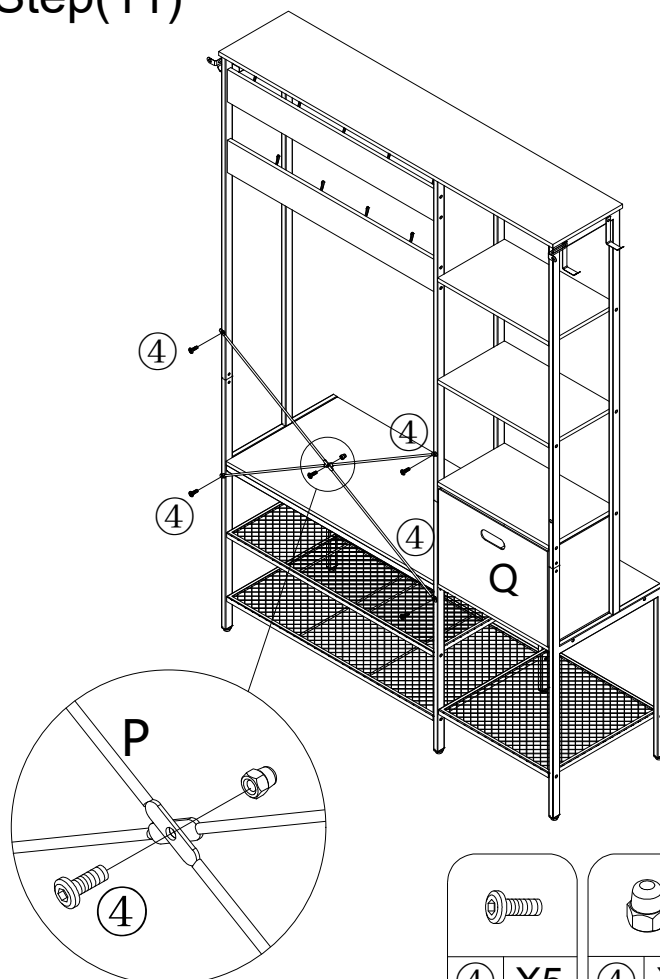

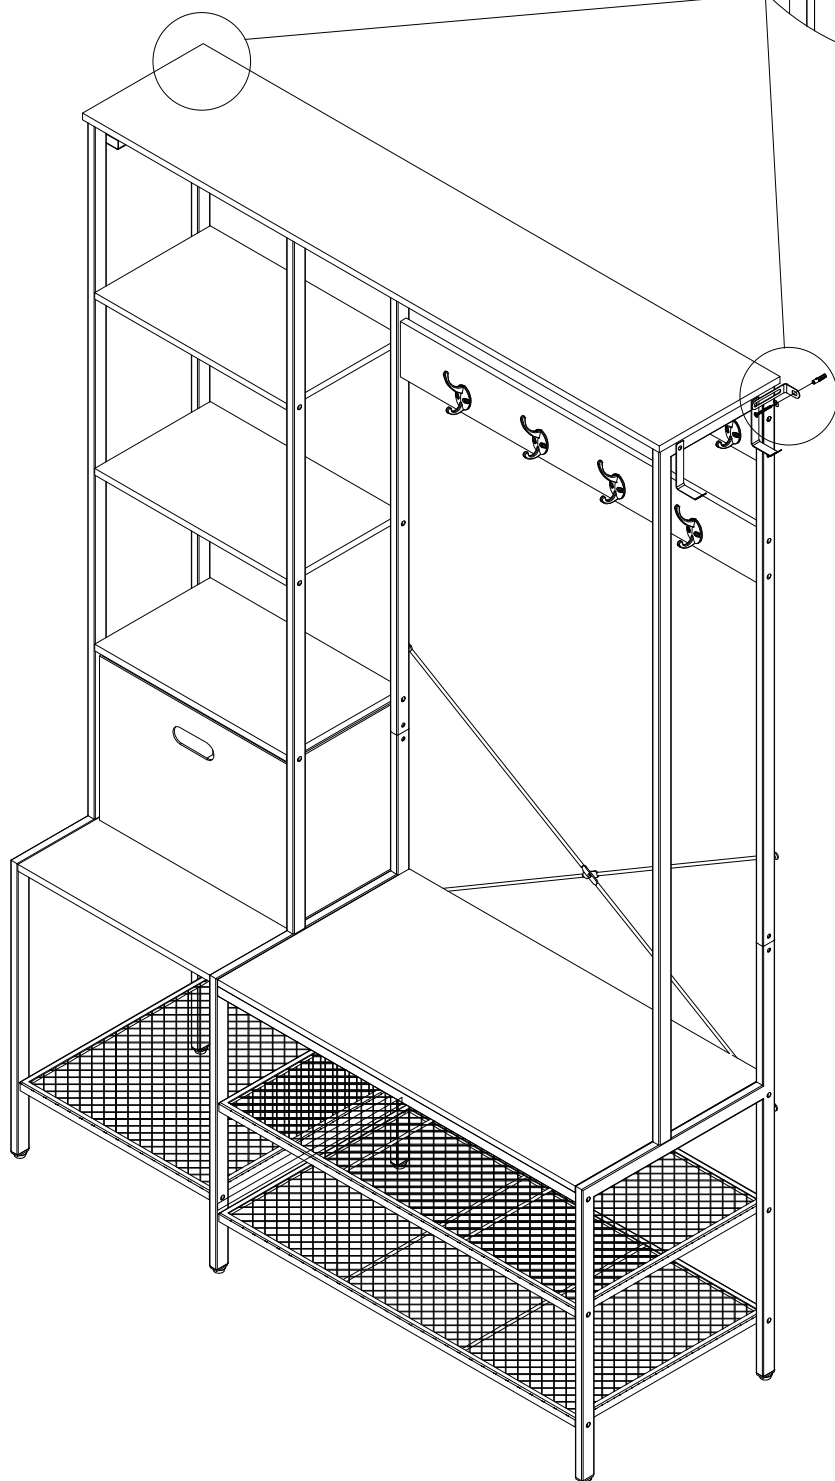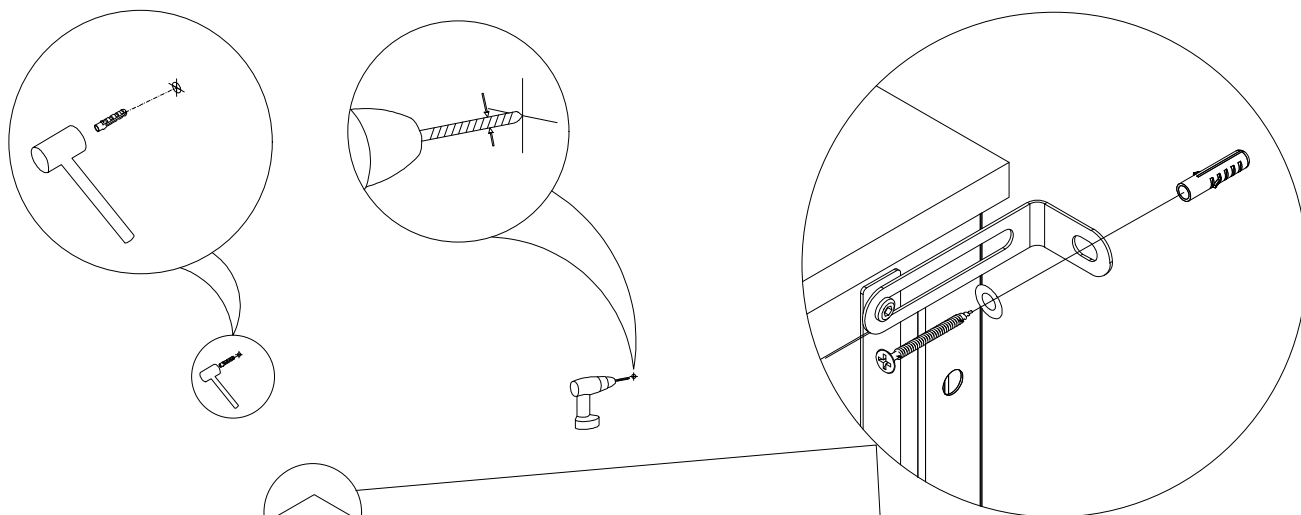


		
X2	X2	X2


Program B

Installation tips:


- 1.Align the fittings and accessories when installing the frame, then tighten the screws. Assemble the shelf on the right.
- 2.When installing the board, first screw all screws into holes loosely then tighten them.

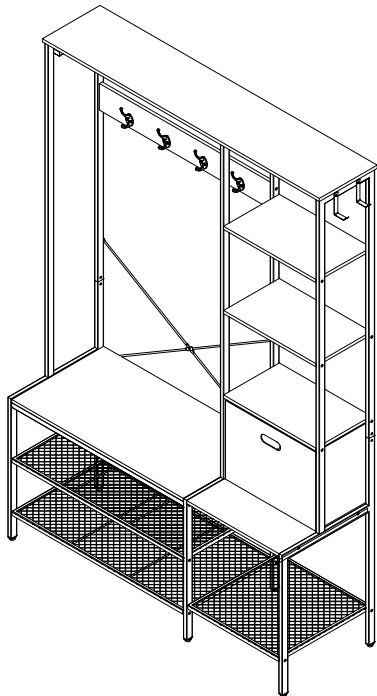


Step(1)

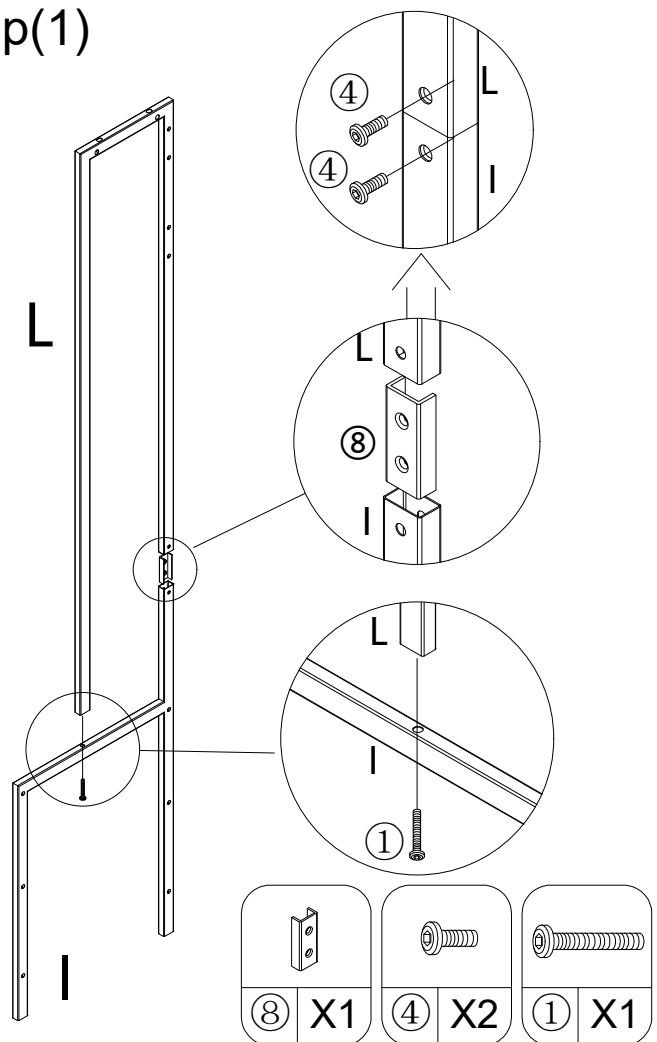


Step(2)

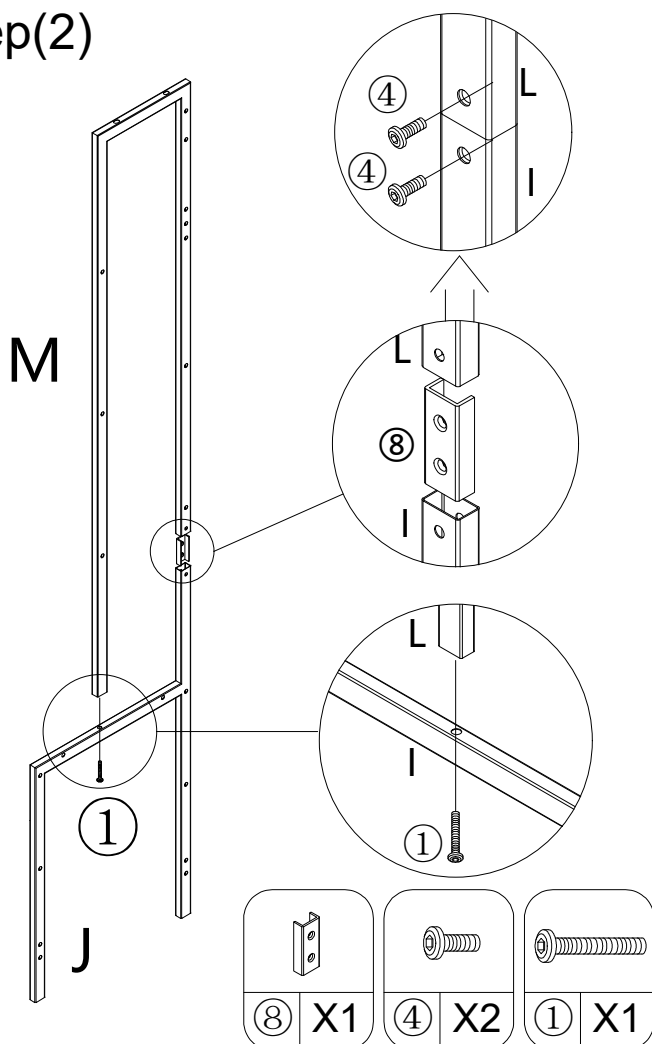


Step(3)

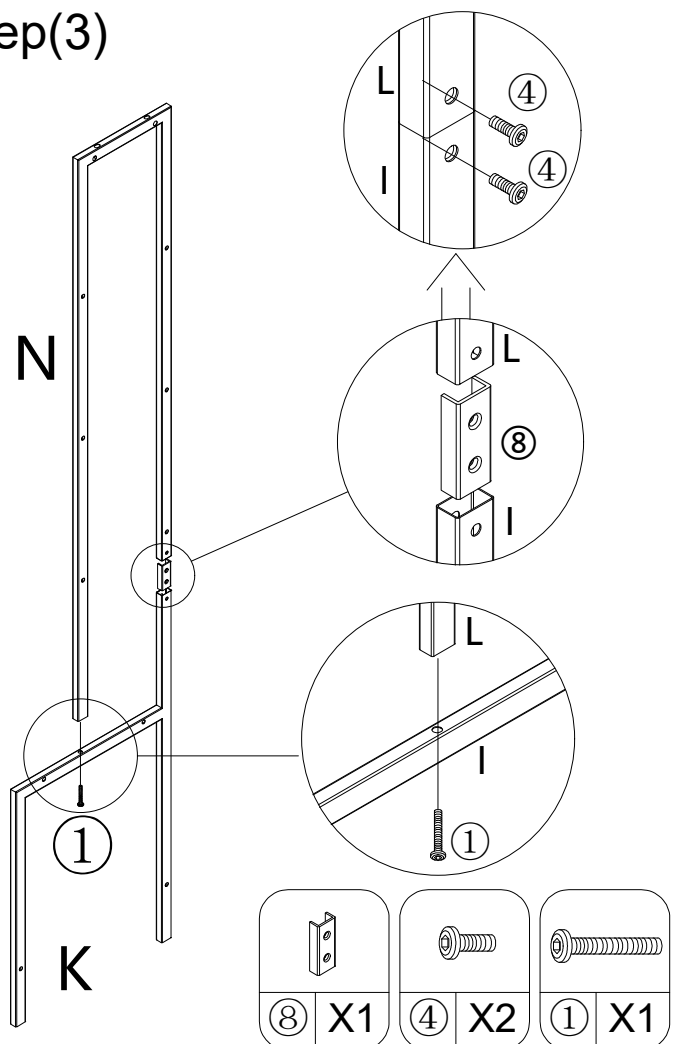


Step(4)

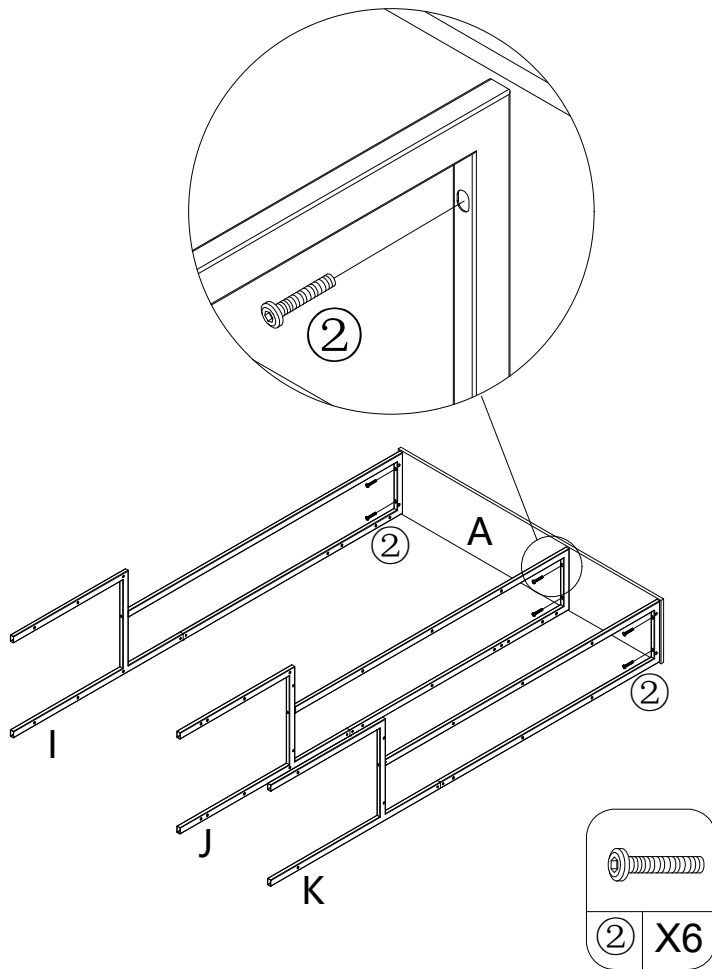


Step(5)

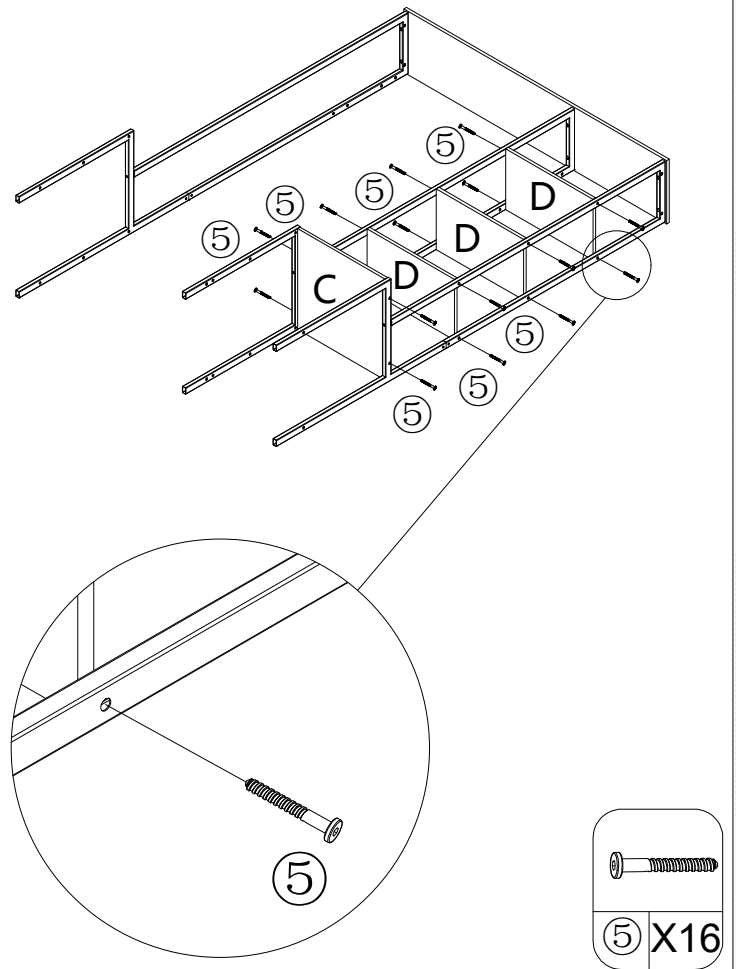


Step(6)

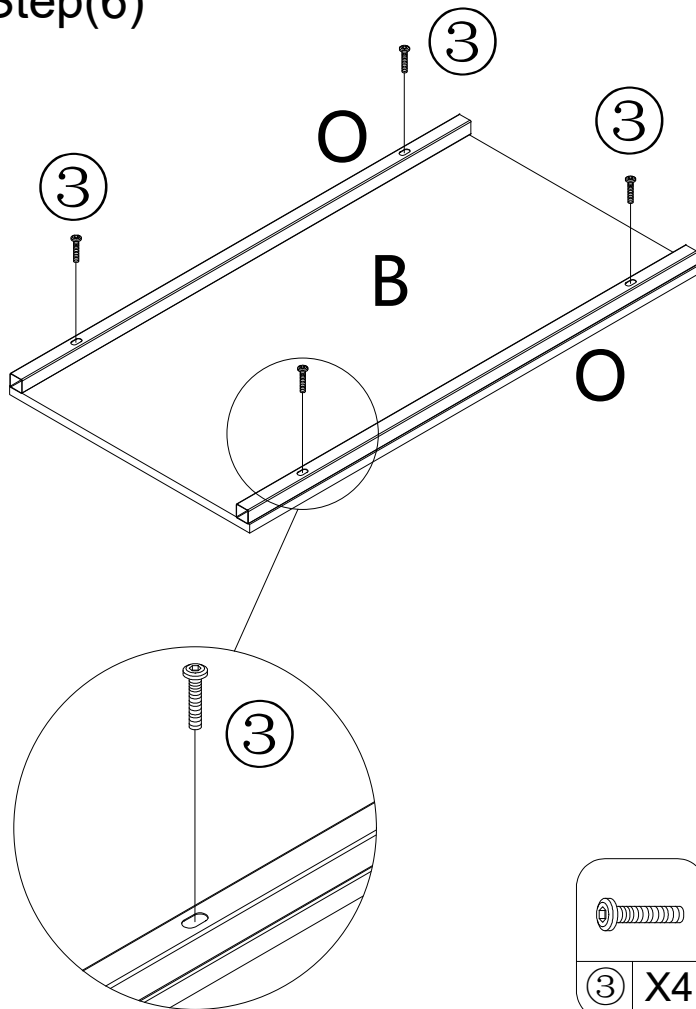


Step(7)

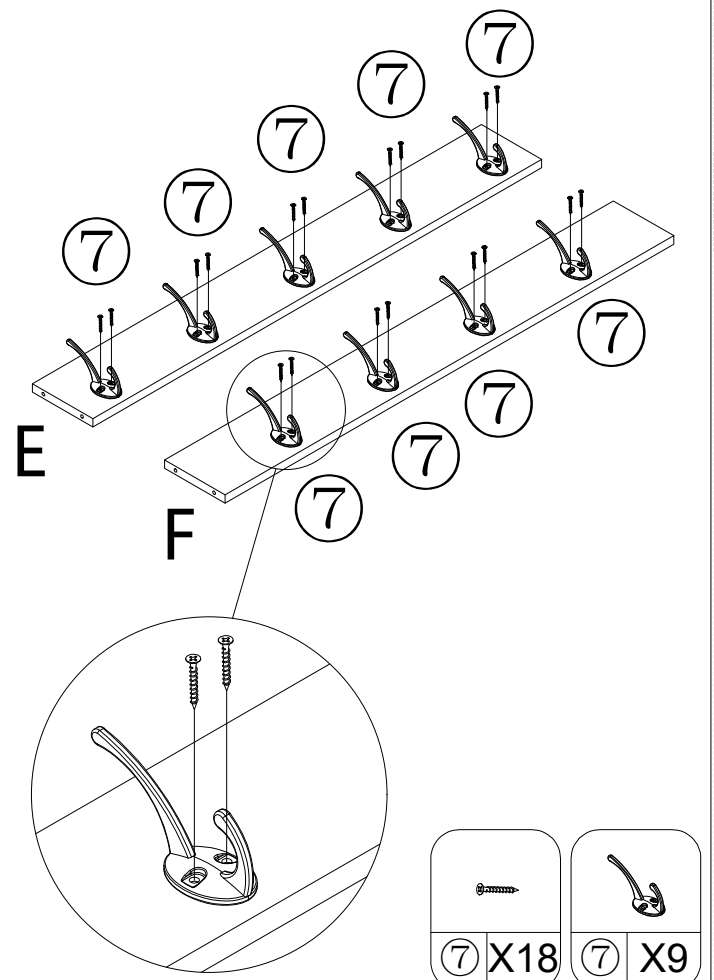


Step(8)

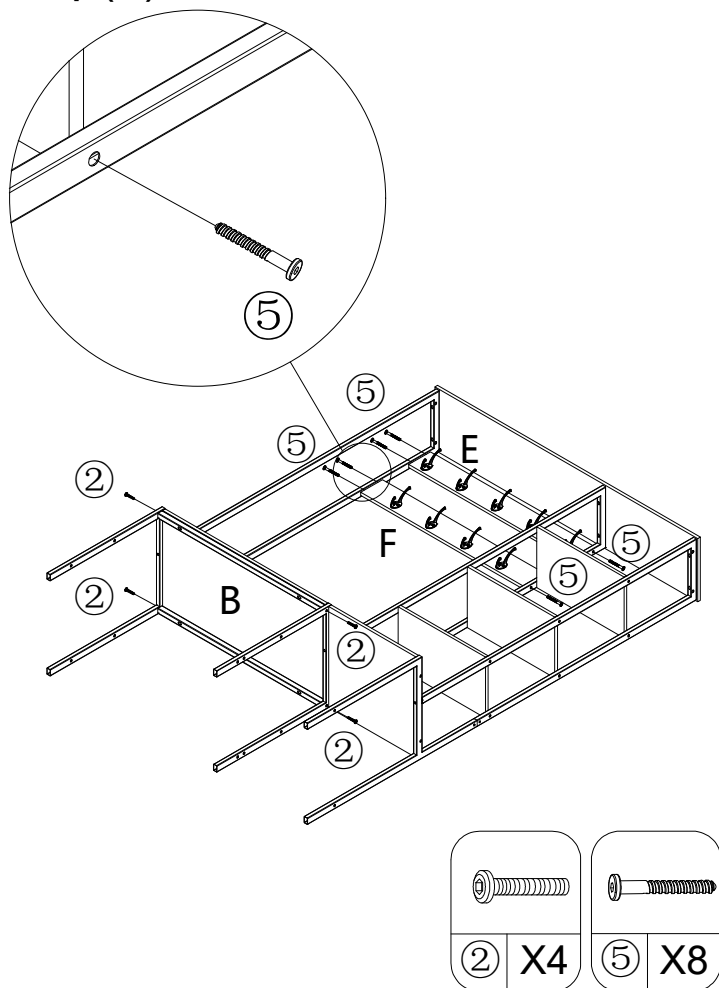

Step(9)

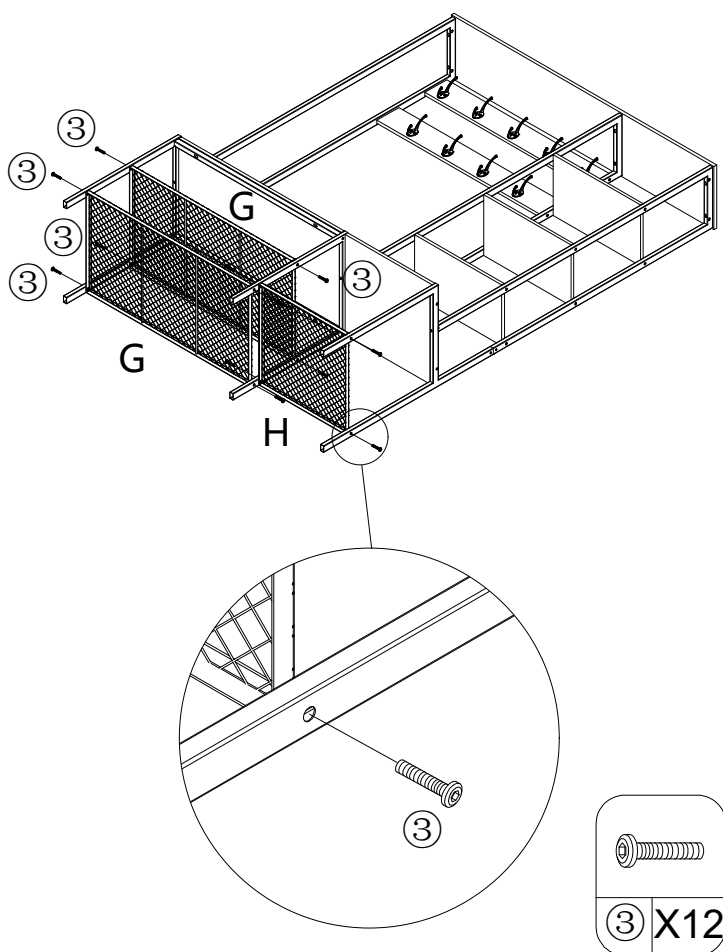

Step(10)

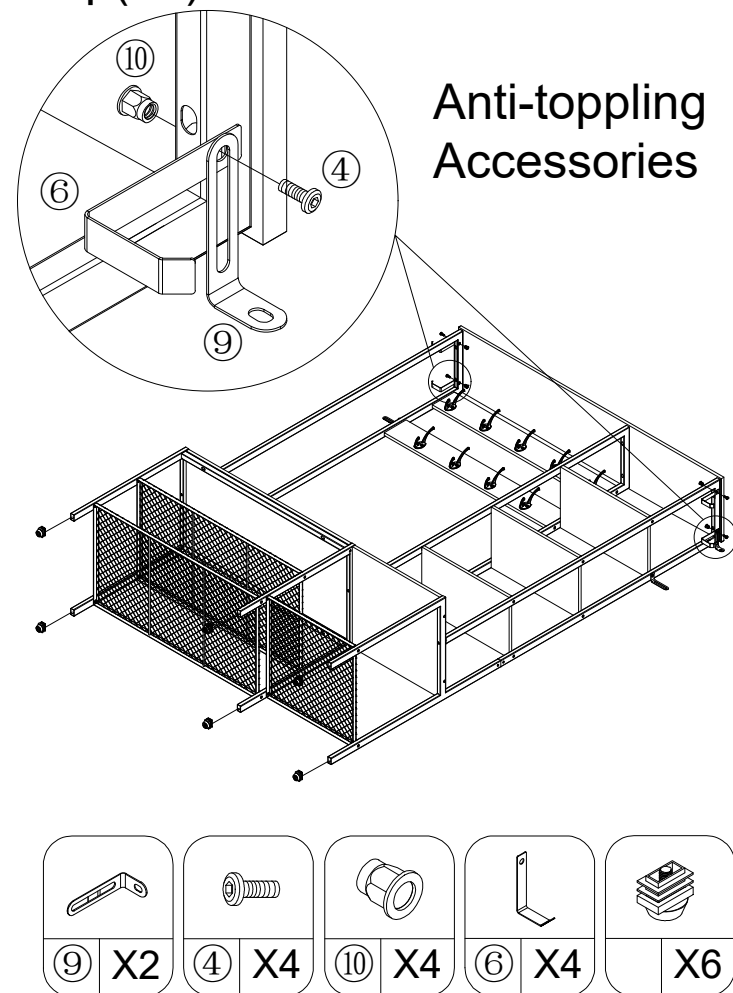

Step(11)

