









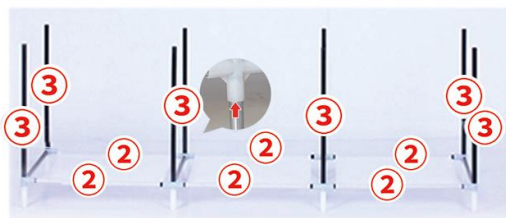


# 130


Name	Quantity	Examples
Tee	8	
Stone	8	
High foot tee	4	
High foot cross	4	
Straight Tee	8	
hook up	6	
Cloth cover	1	
Interlayer cloth	2+6	
39 cm	34	
52 cm	24	



## Installation Notes




1. Take a small compartment cloth, high-foot tee, High foot cross, 10 short tubes, 8 long tubes, and assemble into the structure in the picture

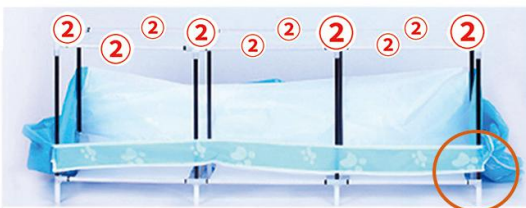


2. Put on the cloth cover, the bottom of the cloth cover is on the white interlayer cloth, as shown in the figure:

## Straight tees

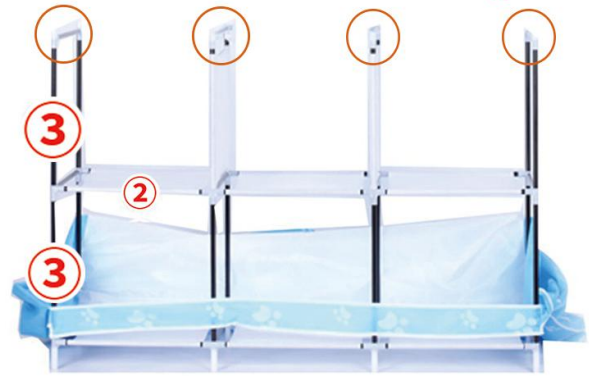

3. Use long tubes on both sides and connect with straight tees.

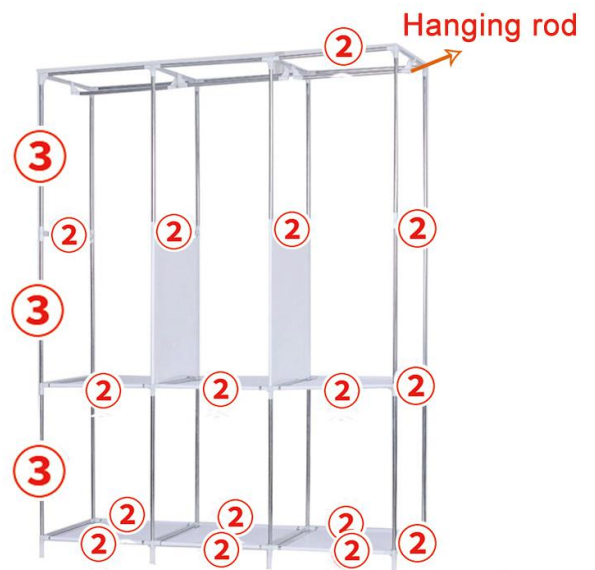

4. Continue to complete the frame installation as shown in the figure. The hanging rod uses three slightly thicker short tubes, and the hooks at both ends are assembled.



5. The black lanyard is used to hang the curtain. Finally, the cover is lifted up and over the top of the frame. Congratulations on your installation.