



Metal Platform Bed Frame

Instruction Manual

TWIN

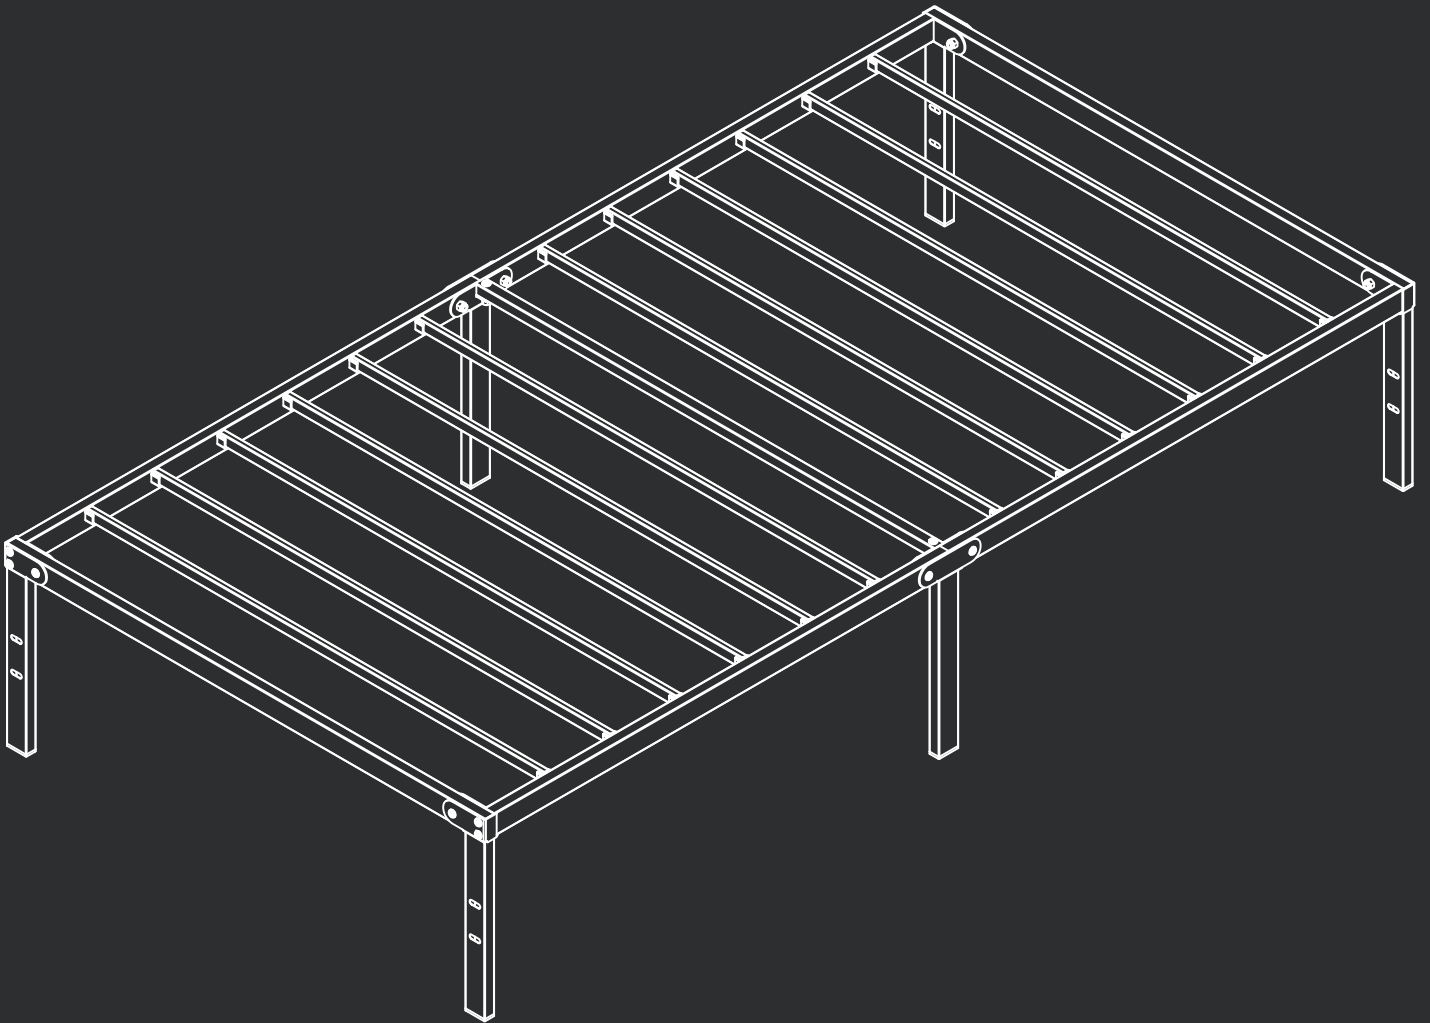


1 Component List

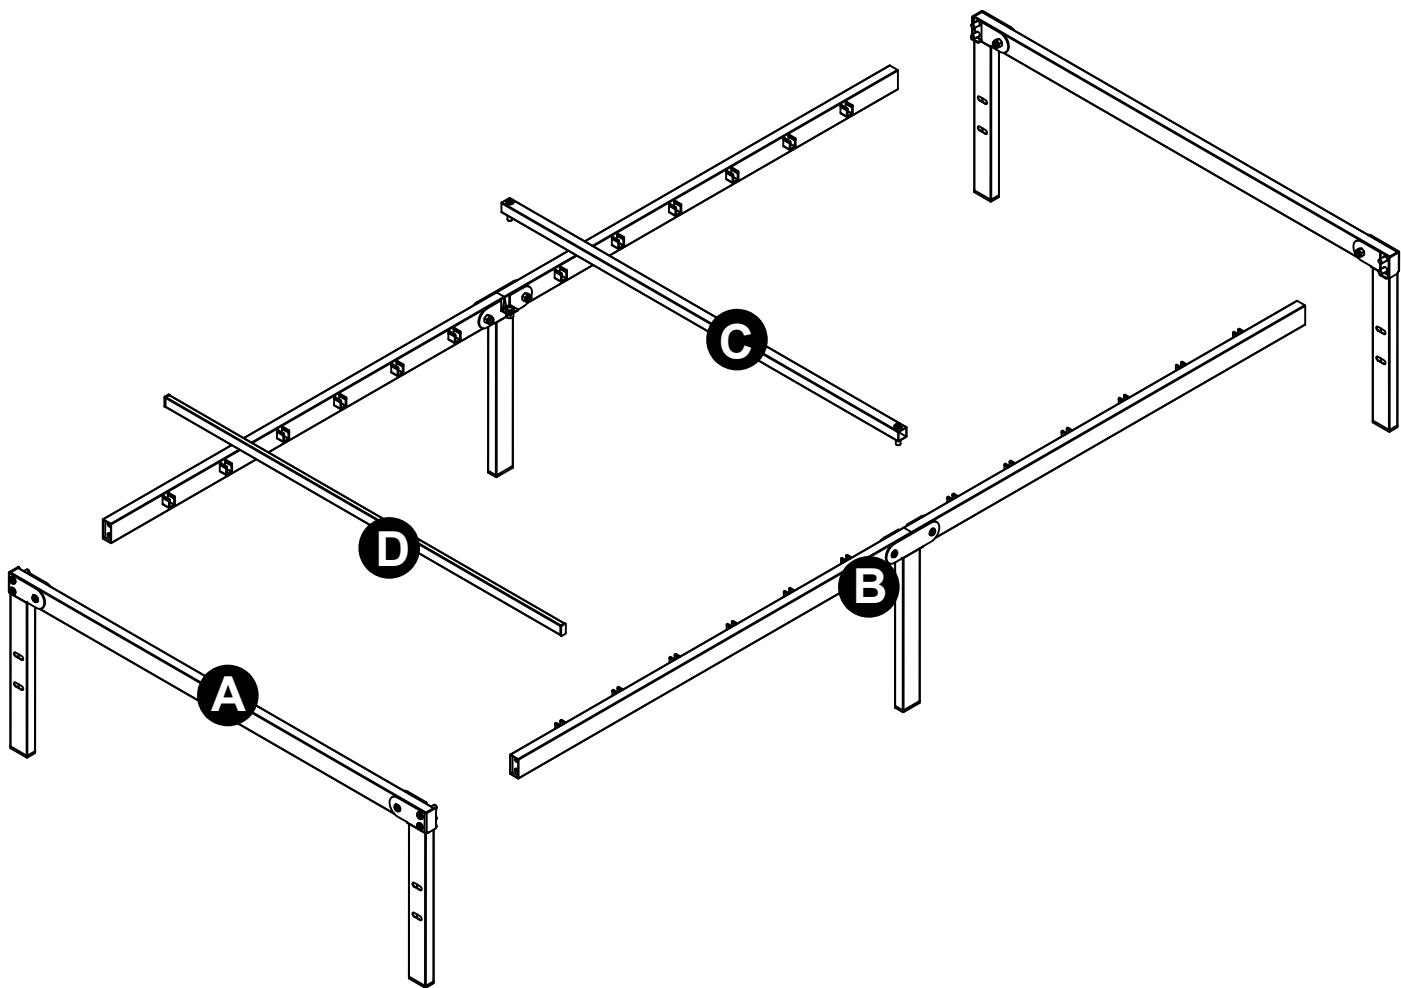


2 Package List

A

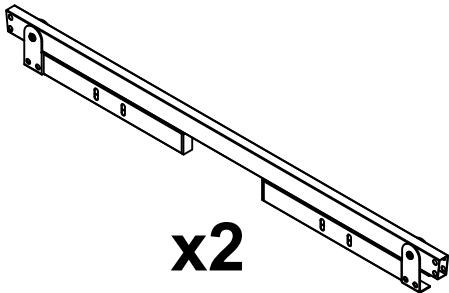


x2
Frame

B

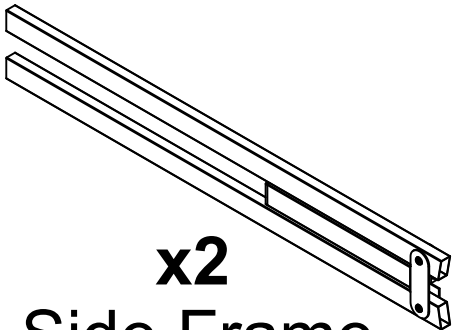


x2
Side Frame

C

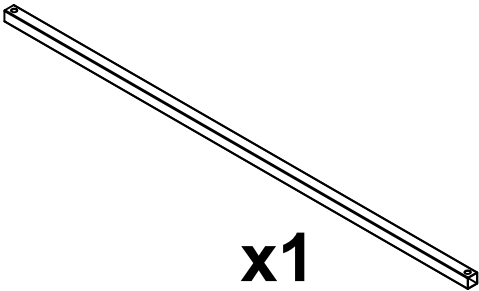


x1
Center Slat

D

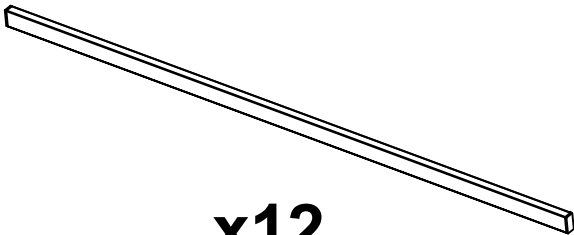

x12
Slats

E

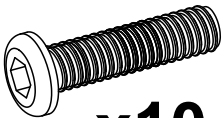


x10
Screws
M8 x 40mm

F




x1
Wrench

Step 1

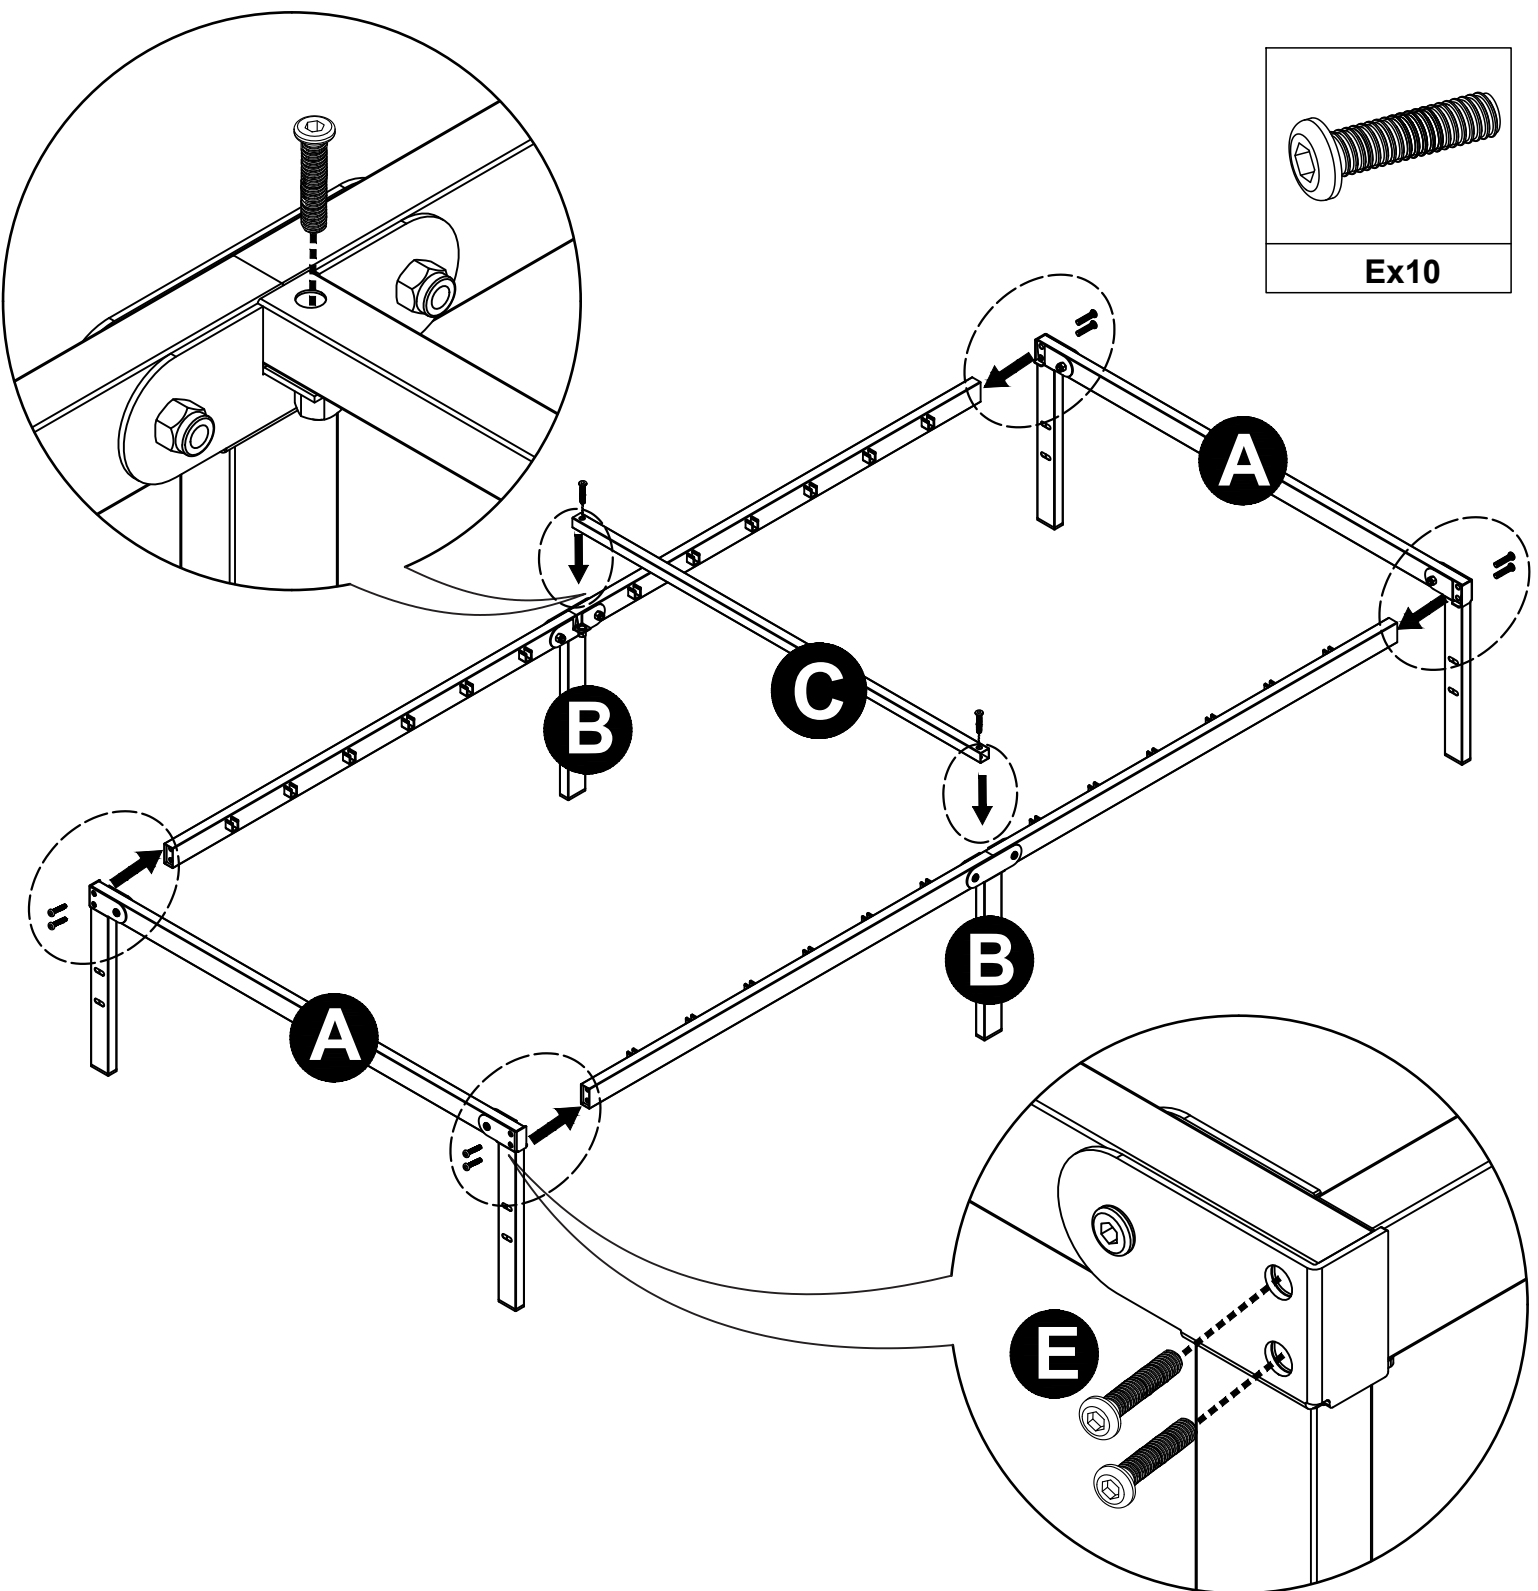


Attach Side Frame **(B)*2** to the four corners of the Frame **(A)*2** and Insert Center Slat **(C)*1** onto the **groove** in the middle of the Side Frame **(B)*2** lightly tighten with the Screws **(E)*10**

Step 2

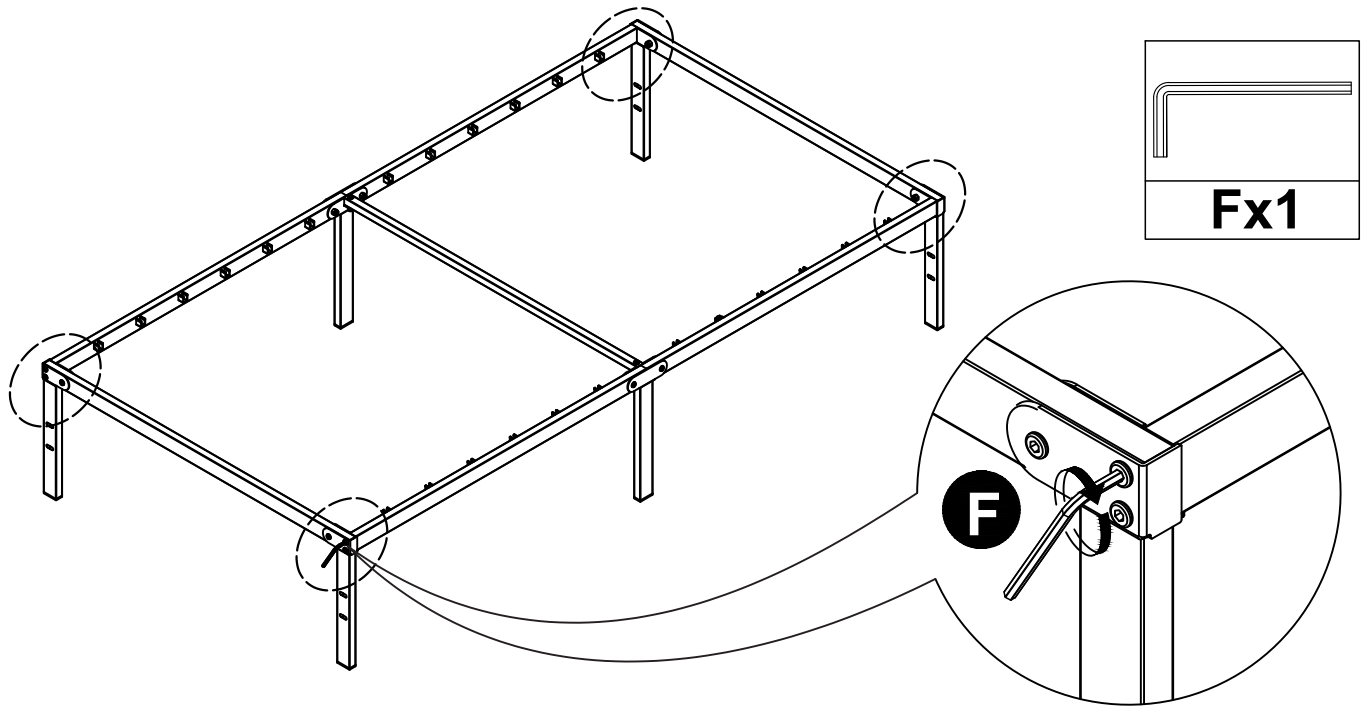

Tighten the screws at 4 corners of the bed with Wrench(**F**)

Step 3

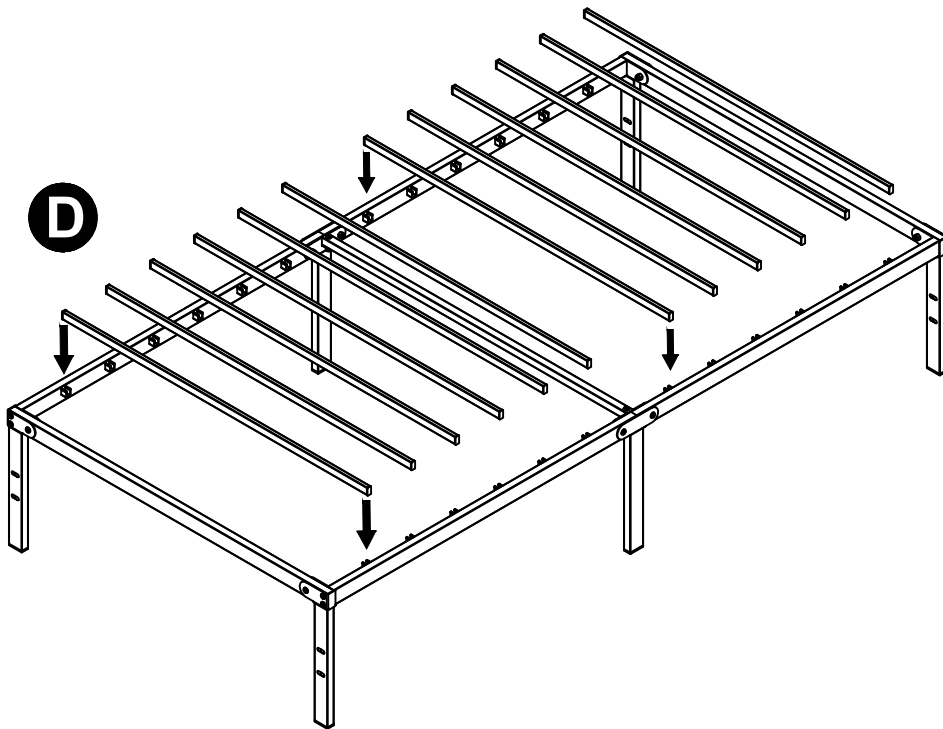

Insert Slats (**D**)*12 evenly onto **each groove** of the Side Frame (**B**)*2.

