




Glass Wind Shield Assembly Instruction


STEP 1

Connect two pieces glasses together with provided clip.

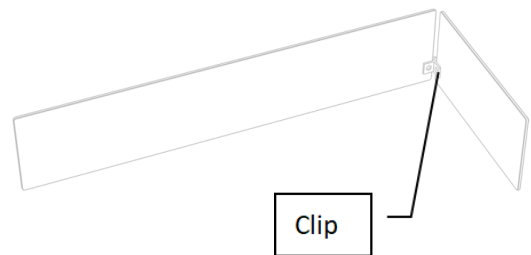


STEP 2

Put the plastic glide into a clip and install the clip to the bottom of the two glasses as shown. Secure the clip position with the screws.

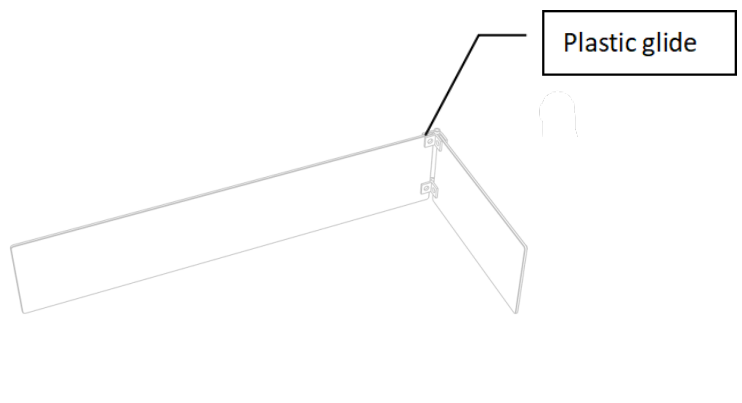

STEP 3


Follow Step 1 and 2 to install the third piece of glass. Secure the position with the screws but do NOT tighten the screws.

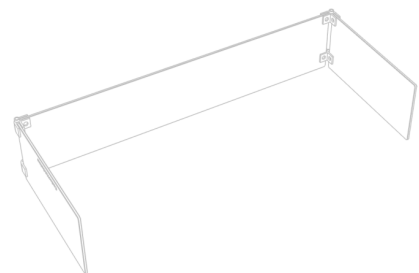




STEP 4:

Follow Step 1 and 2 to install the fourth piece of glass. Secure the position with the screws but do NOT tighten the screws.

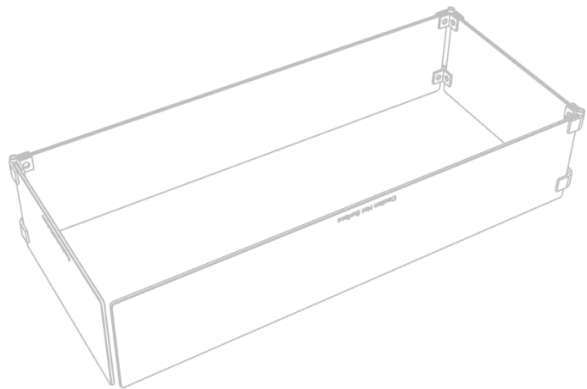

STEP 5:

Install the final two pieces of clips and plastic glides. Secure the position with the screws but do NOT tighten the screws.

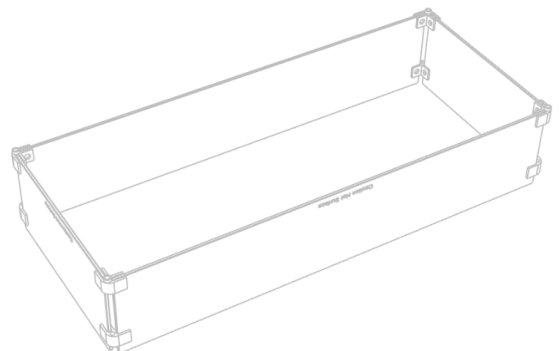

STEP 6:

Adjust the glasses positions. Tighten all the screws and put the glass windshield upside-down, so the plastic glides are at the bottom. The glass windshield is now ready to use.

