



# ASSEMBLY INSTRUCTIONS

## PARTS PER UNIT (2 UNITS INCLUDED):

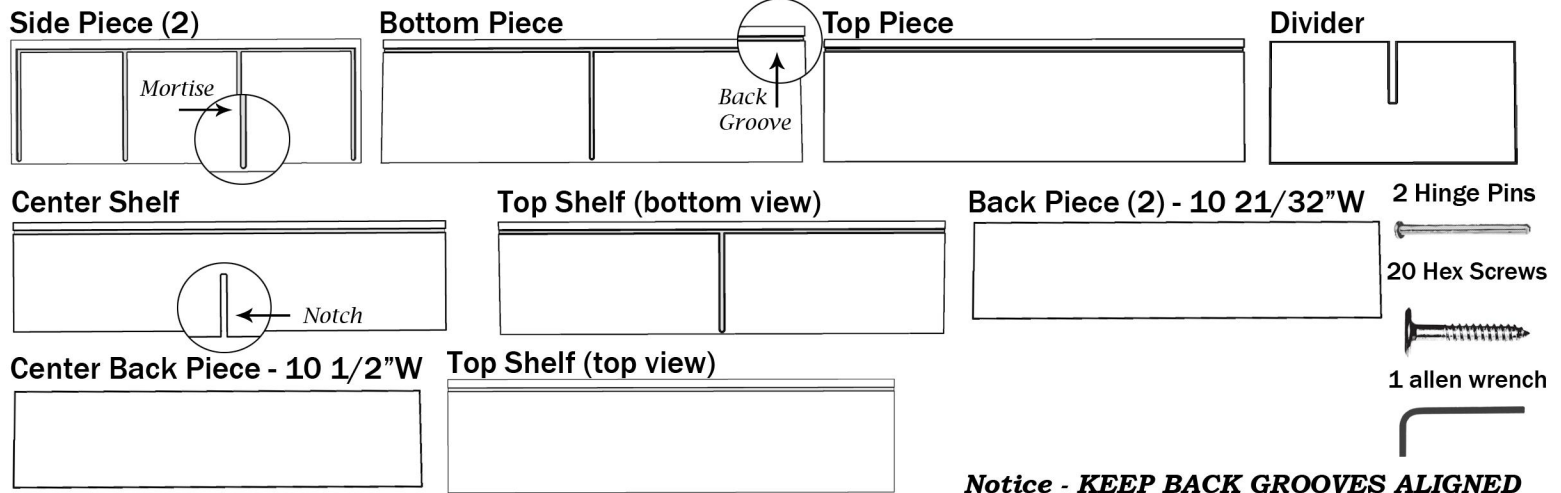


**Step 1:** Insert edge of **bottom** piece into mortise of **side** piece, making sure to align back grooves of both pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

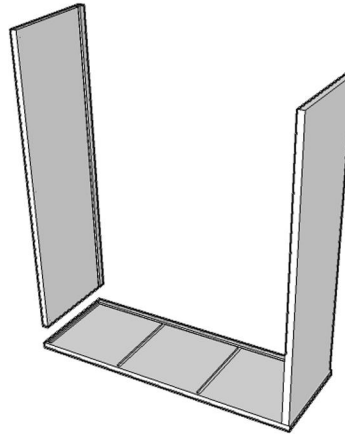


**Step 2:** Insert edge of **top** piece into mortise of **side** piece, making sure to align back grooves on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.


**Step 3:** Insert edge of **top shelf** piece into mortise of **side** piece closest to **top** piece. Make sure that mortise in center of **top shelf** is facing **bottom** piece. Keep back grooves aligned on all pieces. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

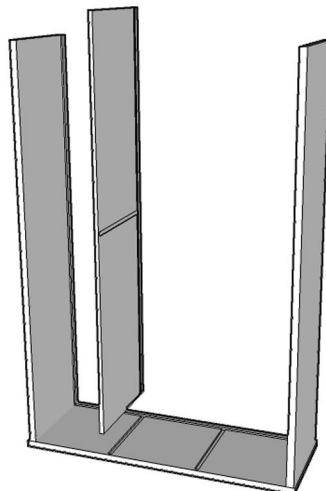


**Step 4:** Insert **center shelf** into remaining mortise of **side** piece, making sure notch faces back grooves of assembled pieces. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

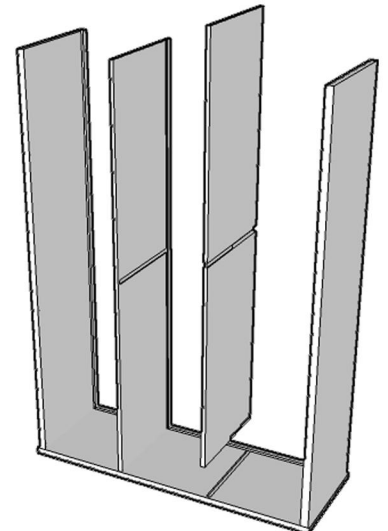

# ASSEMBLY INSTRUCTIONS

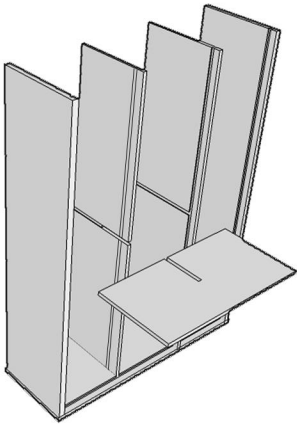


**Step 5:** Insert edges of **divider** into center mortises of **bottom** piece and **top shelf**. Make sure the notch of **divider** intersects with notch of **center shelf**.


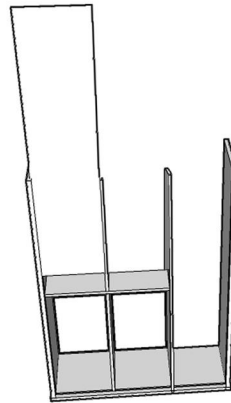


**Step 6:** Insert sides of **back** piece into back grooves of **bottom** piece and **top shelf**. Slide into place until edge of **large back** piece rests in back groove of **side** piece.


**Step 7:** Repeat **step 6** with **center back** piece and remaining **back** piece.

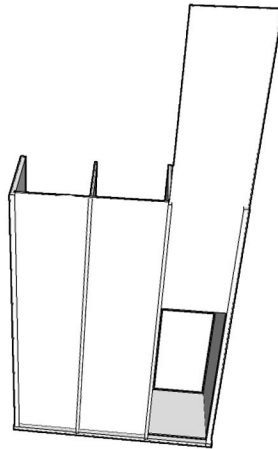

**Step 8:** Place remaining **side** piece over edges of assembled pieces. Insert edges of **bottom**, **top**, **center shelf**, and **top shelf** pieces into mortises of **side** piece. Make sure edges of back pieces rest firmly in back grooves of **side** piece. Insert hex screws into each of (8) pre-drilled holes on **side** piece and tighten down halfway.

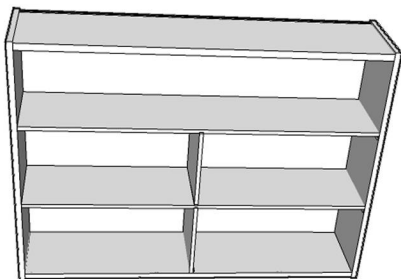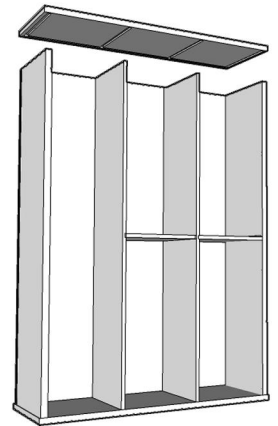


**Step 9:** Tighten down all screws until snug. DO NOT OVER TIGHTEN. DO NOT DRILL. rotate unit until it rests on **bottom** piece and edges of **side** piece. Assembly of first unit is now complete.

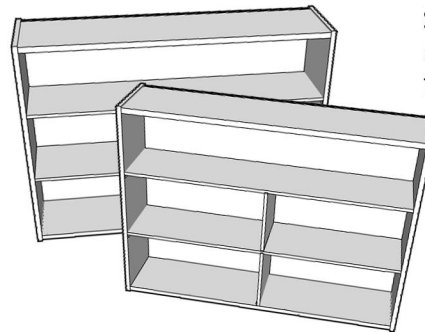

**Step 10:** Repeat assembly instructions for second unit.

**Step 11:** Line up two units so that the hinges on each one meet. Place hinge pin into holes of each hinge as shown to hinge units together.

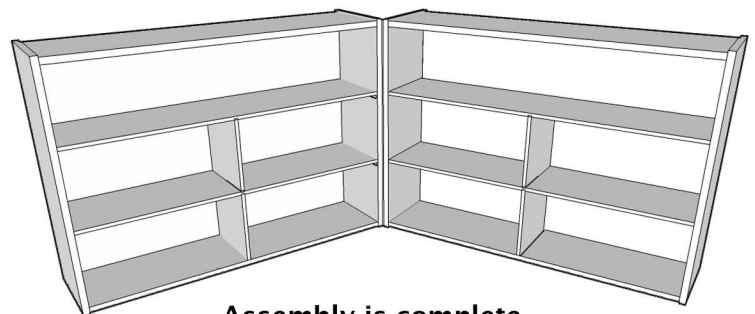

**Assembly is complete.**