




Please note: Items cannot be returned once assembled




OSD

HLG106


Version: 1.0

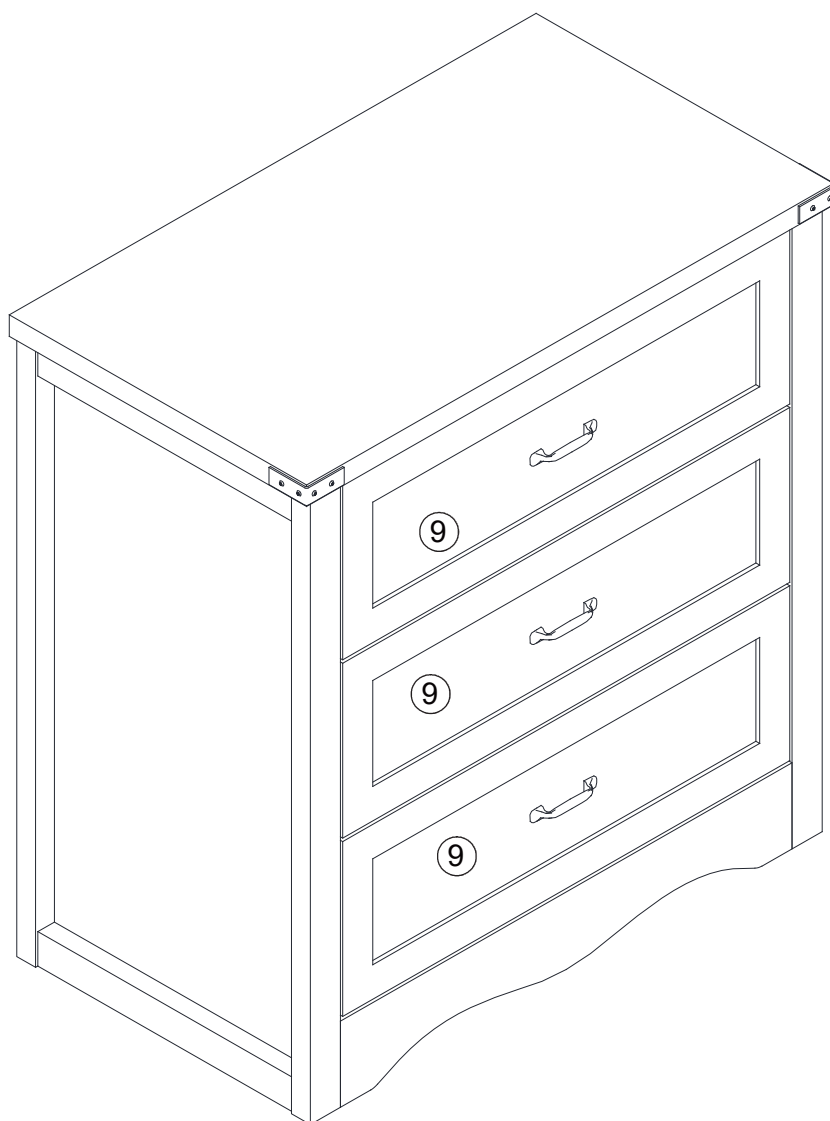


IT IS RECOMMENDED
TO USE POWER TOOLS

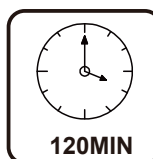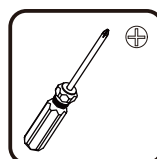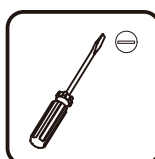


120MIN

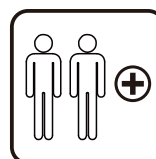


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

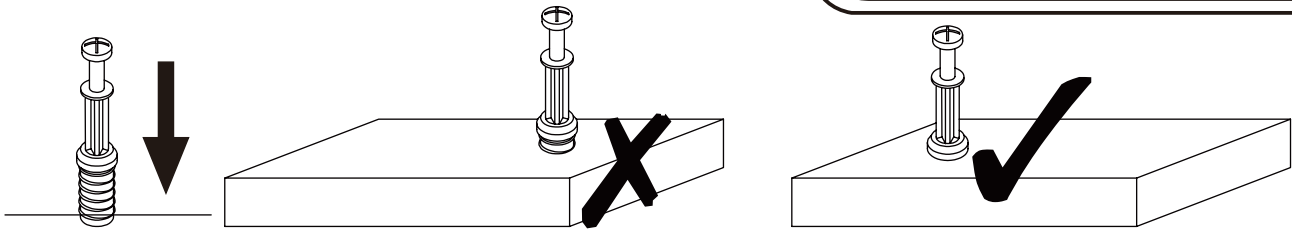


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

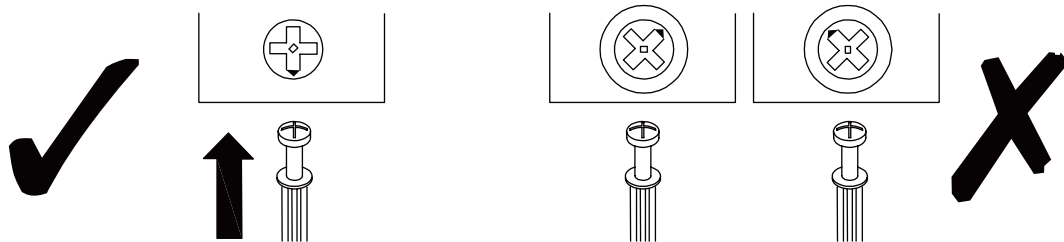











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

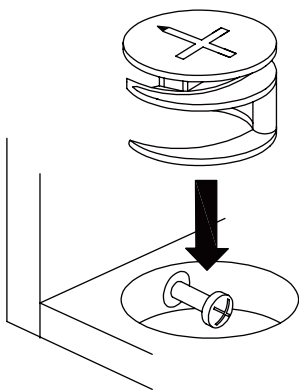



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

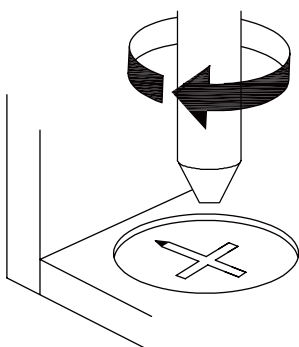


EN_Turn cam lock clockwise to tighten.

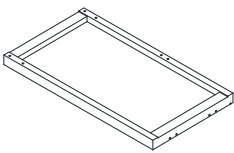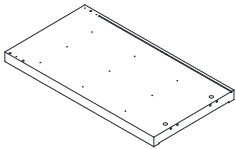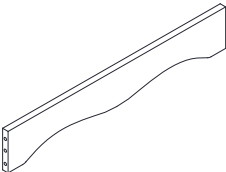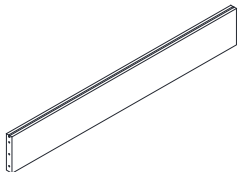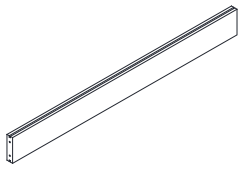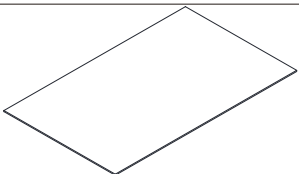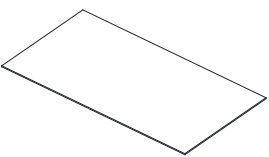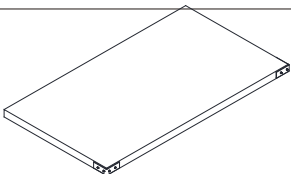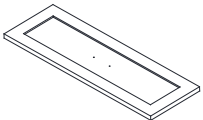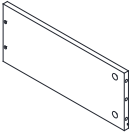NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x3	
⑦		x2	
⑧		x1	
⑨		x3	
⑩		x3	

[illegible]

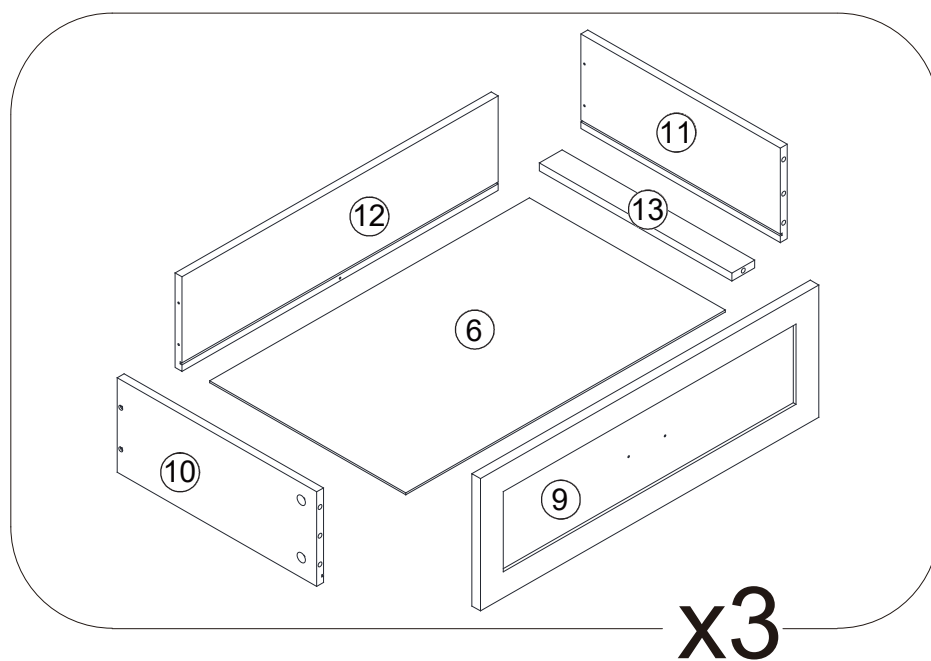
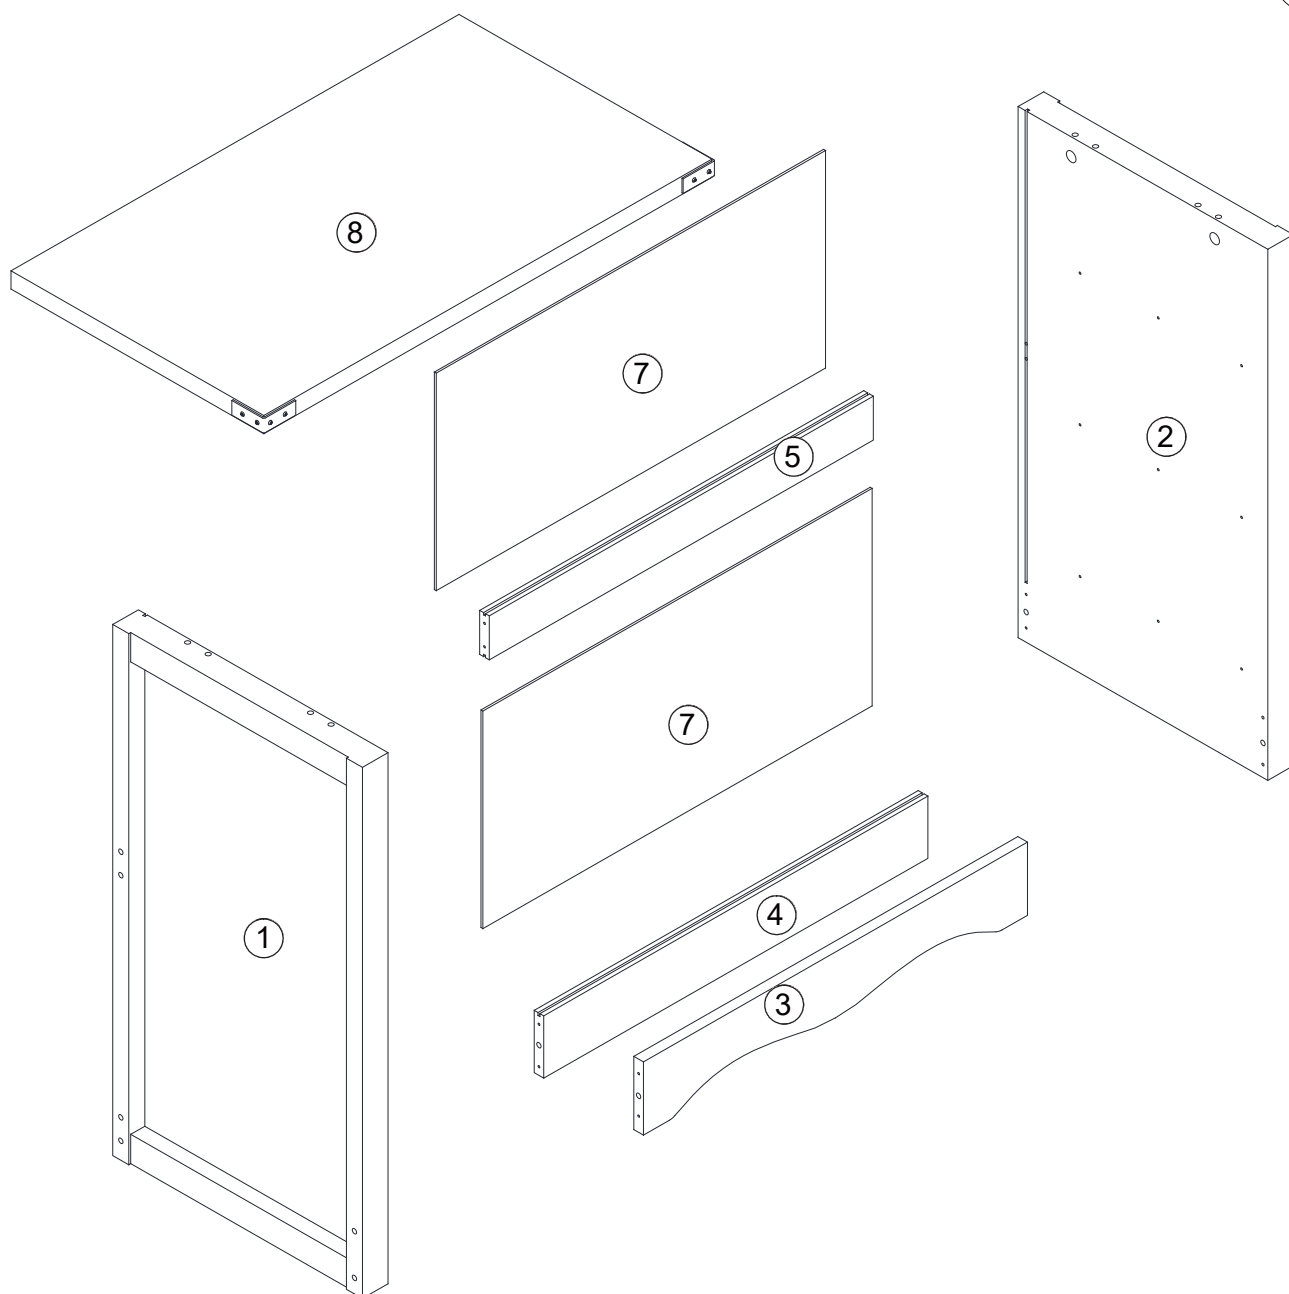


 A x19 Ø6x35mm +2(spare)	 B x19 Ø15x10mm +2(spare)	 C x14 Ø6x30mm	 D x17 Ø4x35mm +2(spare)	 E x36 Ø3.5x12mm +3(spare)	 F x3
 G x8 +1(spare)	 H x12 Ø5x50mm	 I x12	 J x2 Ø4x14mm	 K x2	 L x2 Ø6x30mm
 CL x3 L350mm	 CR x3 L350mm	 DL x3 L350mm	 DR x3 L350mm		

01

E x9


CL x3

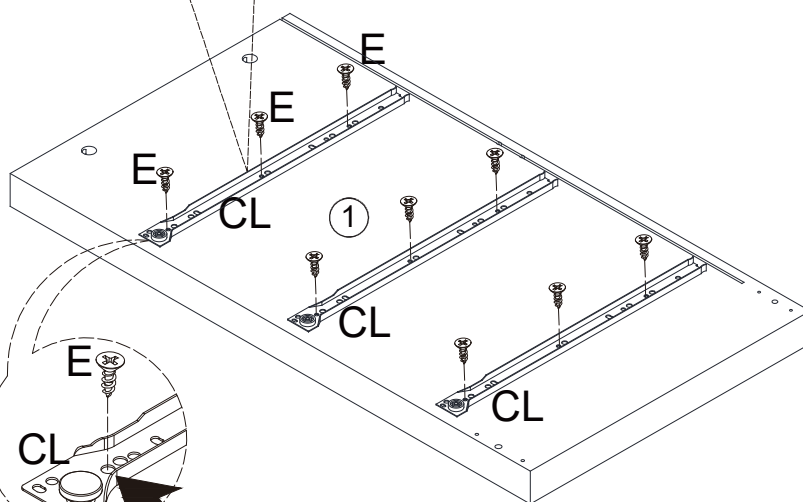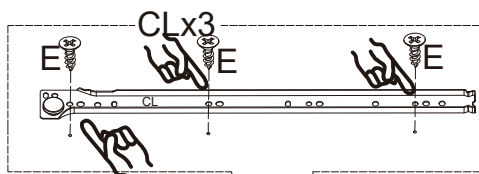

**Attention,
first hole**



E x9





CR x3


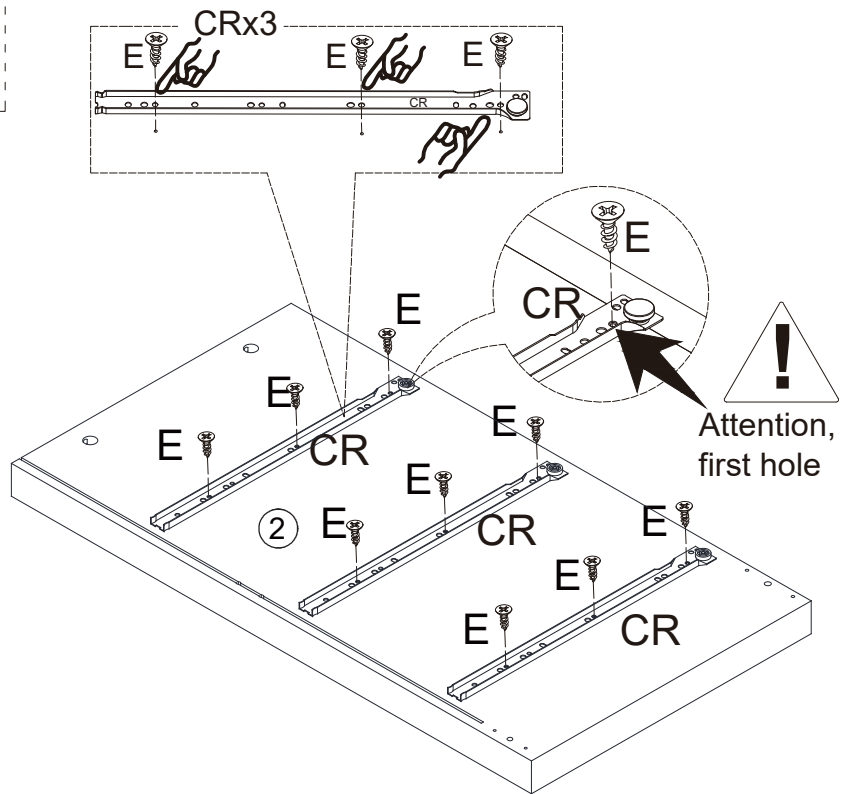


H x6




C x2

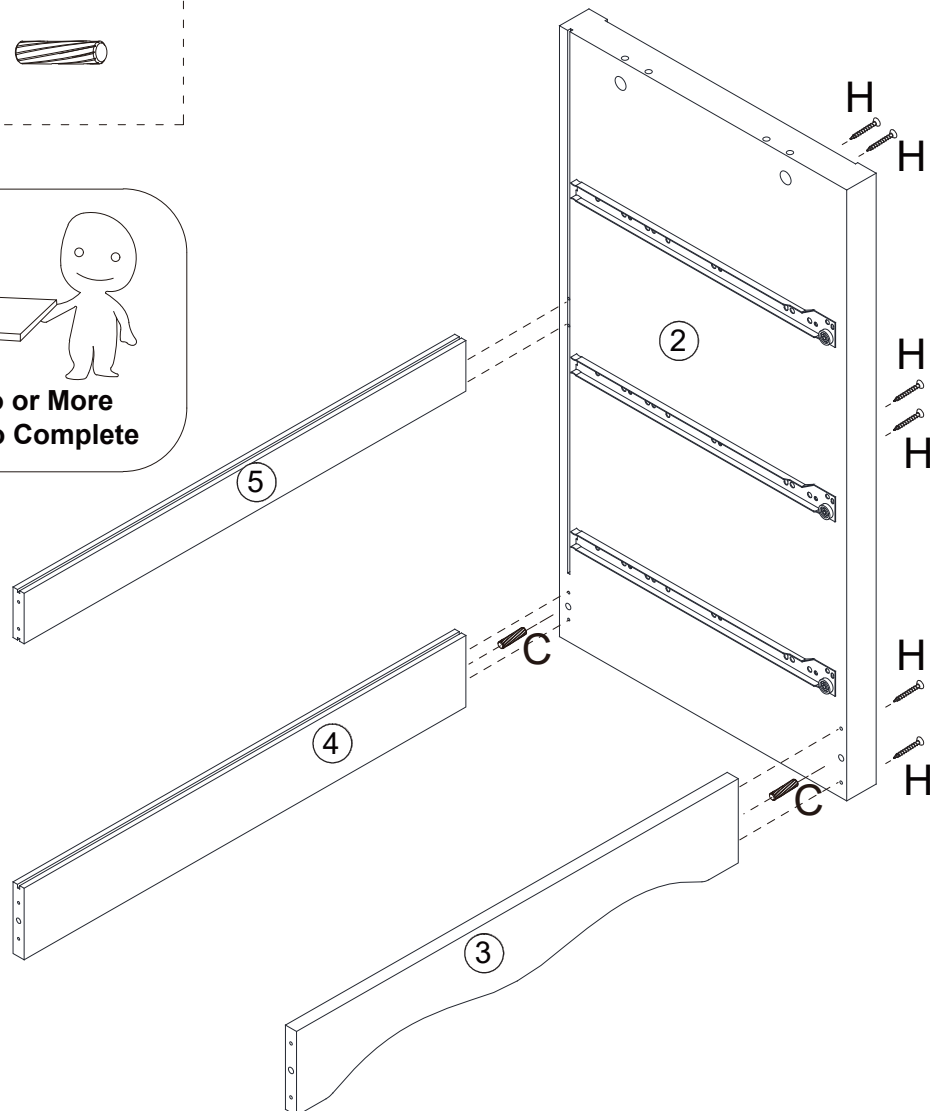
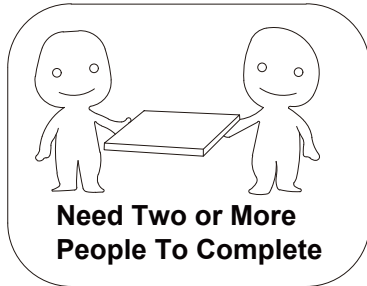


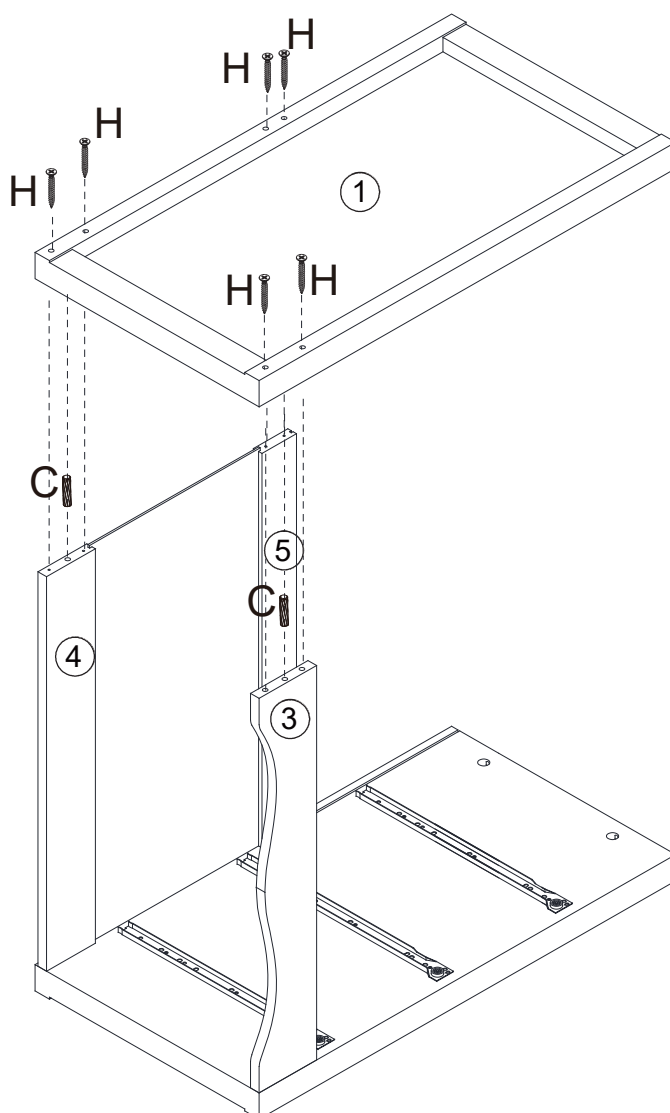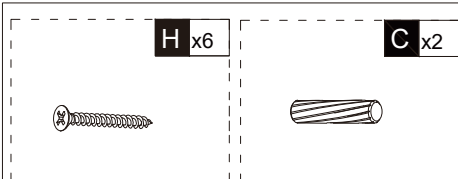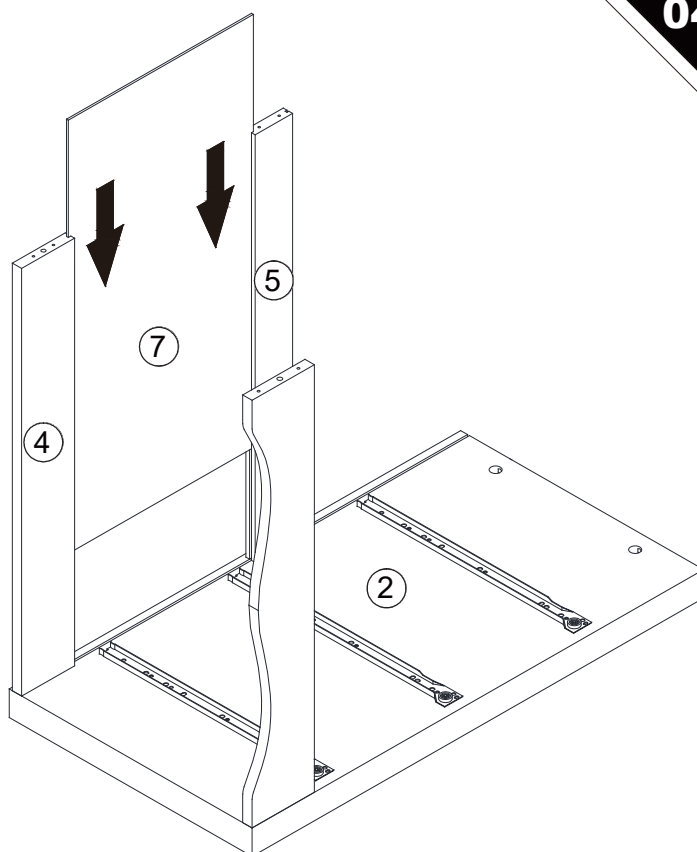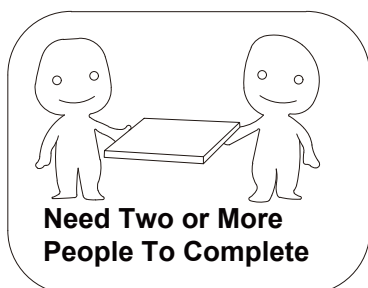

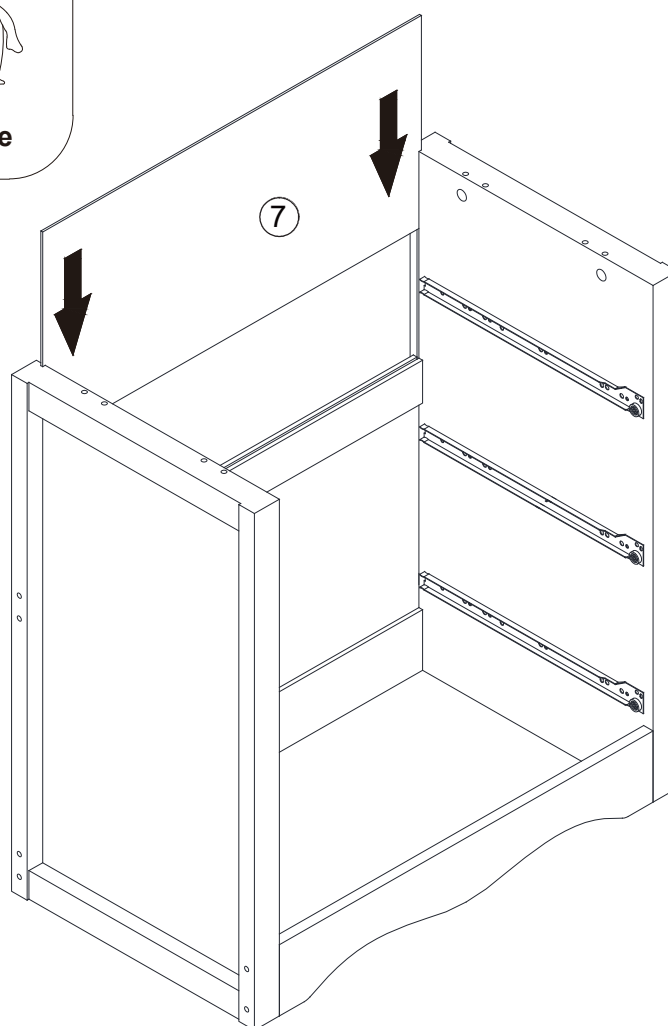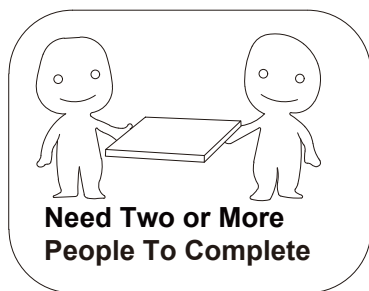

A x4

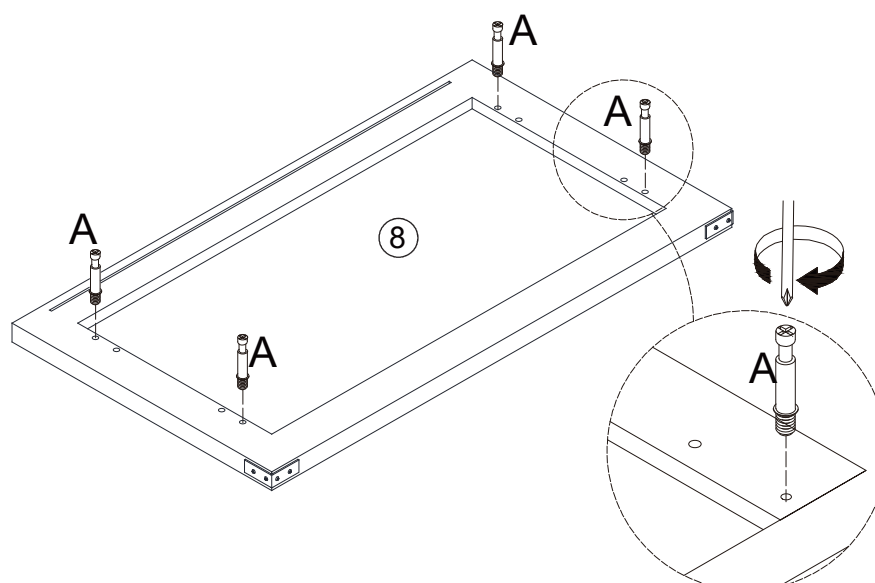
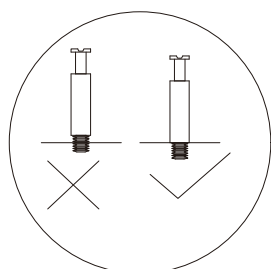



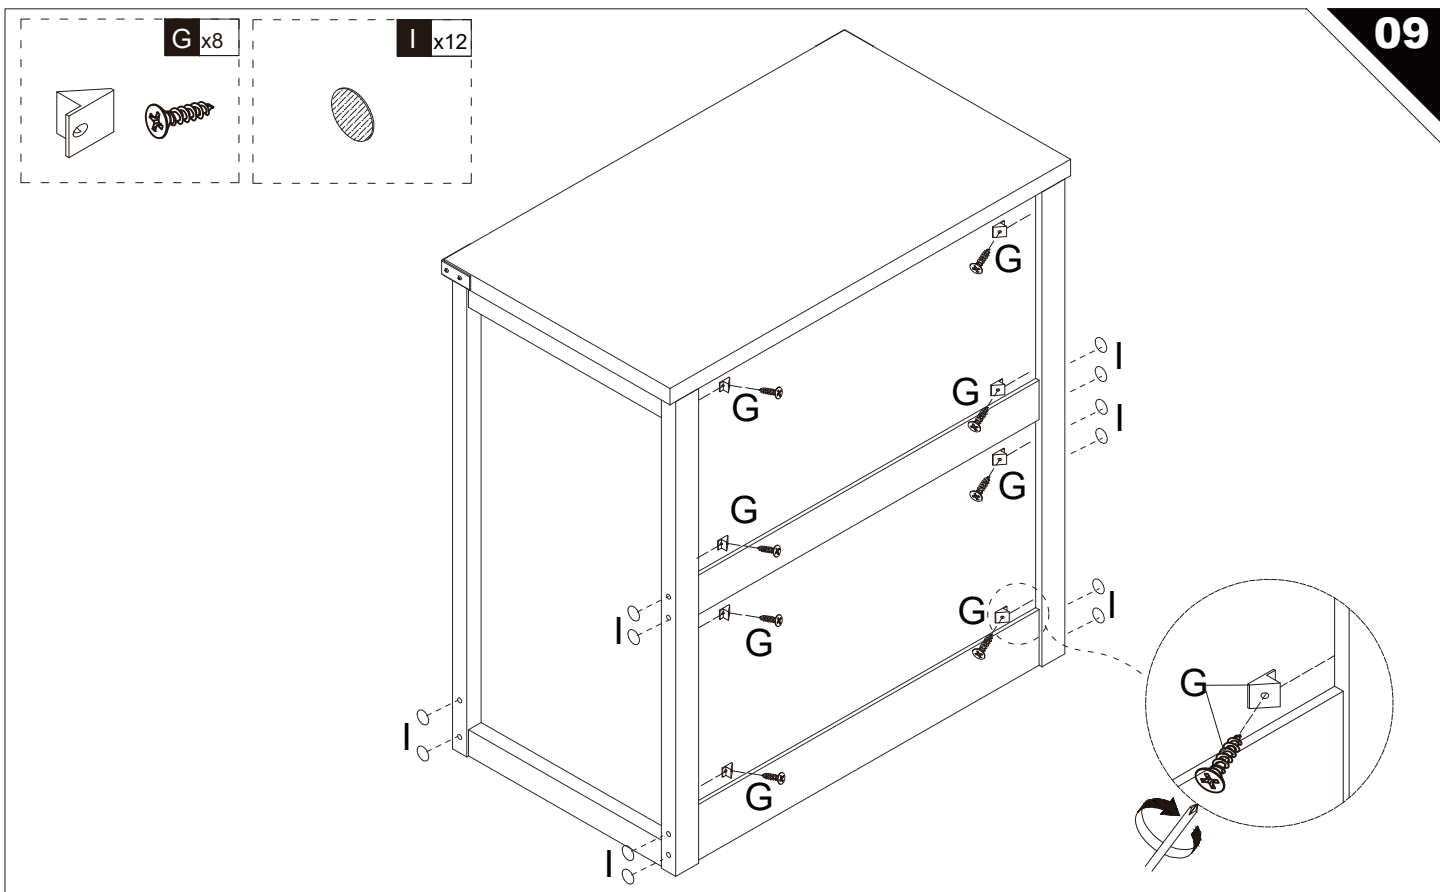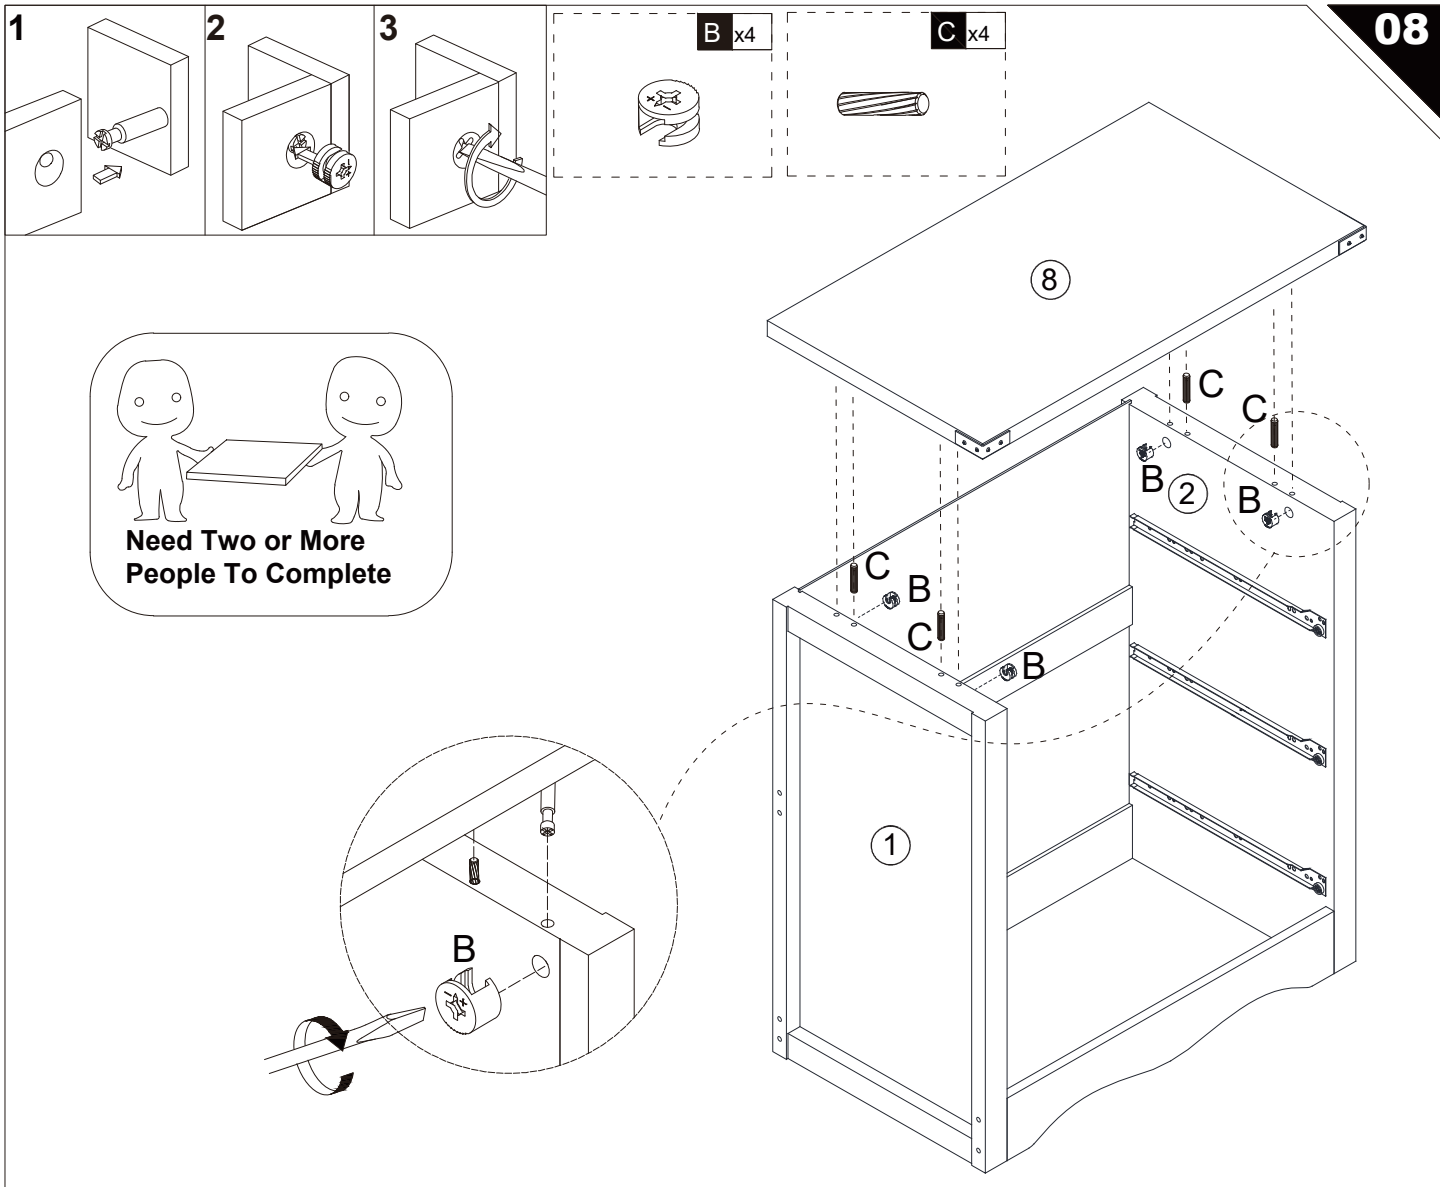

D x15


A x15

x3

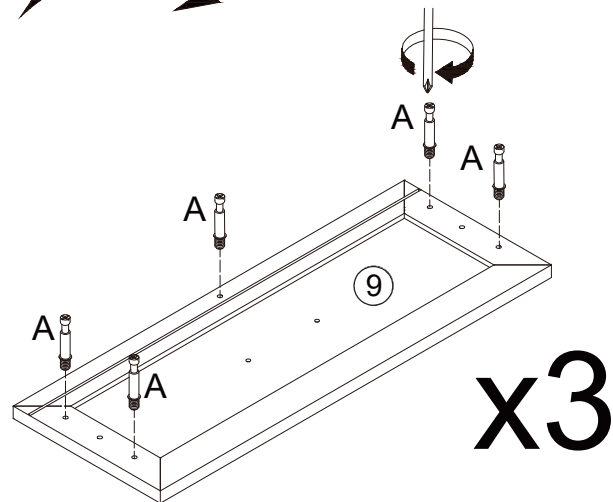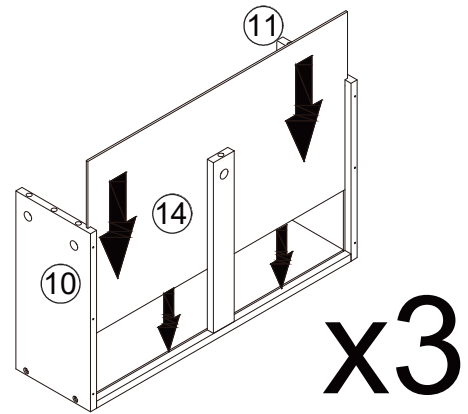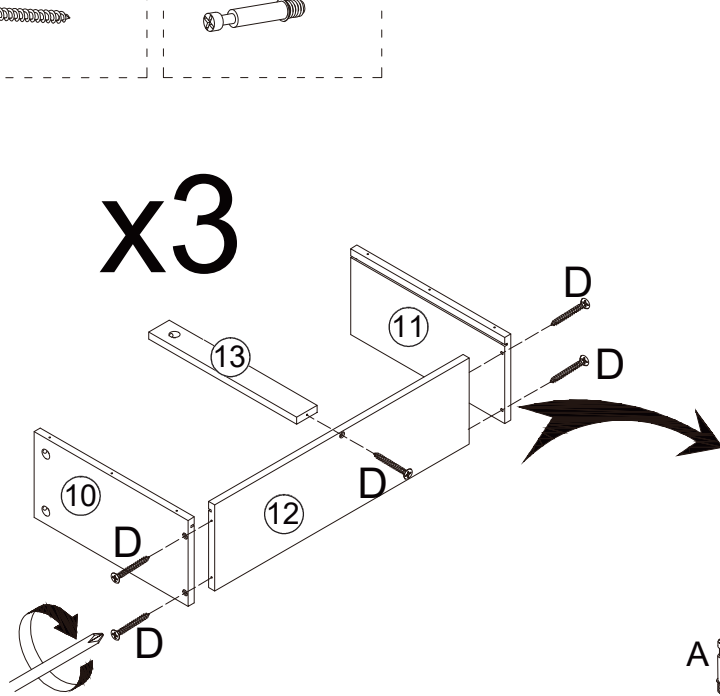


x3


1

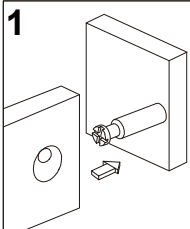

2


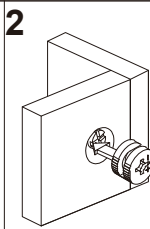


3

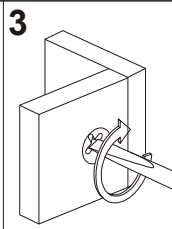




B x15

C x6

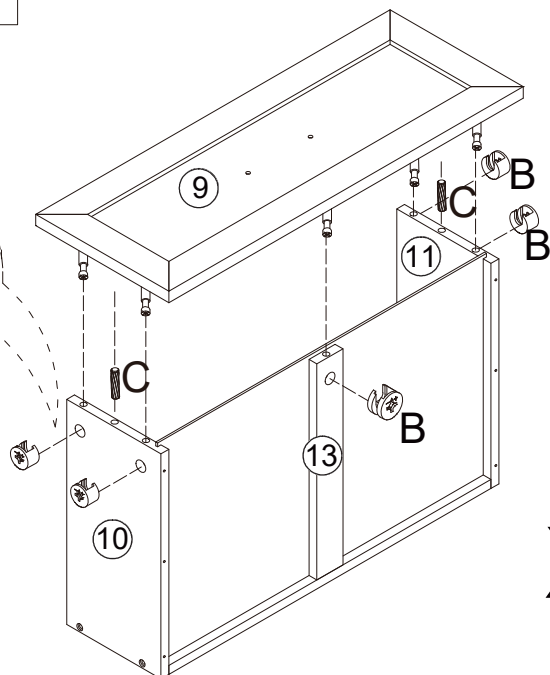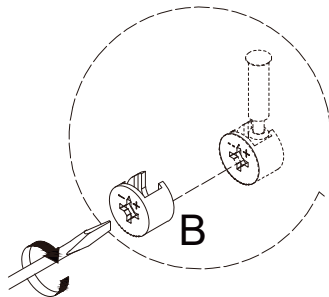

x3

F x3

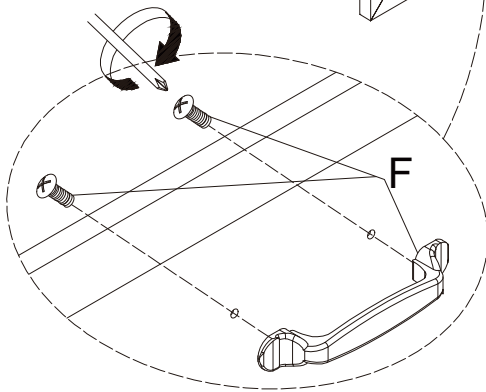
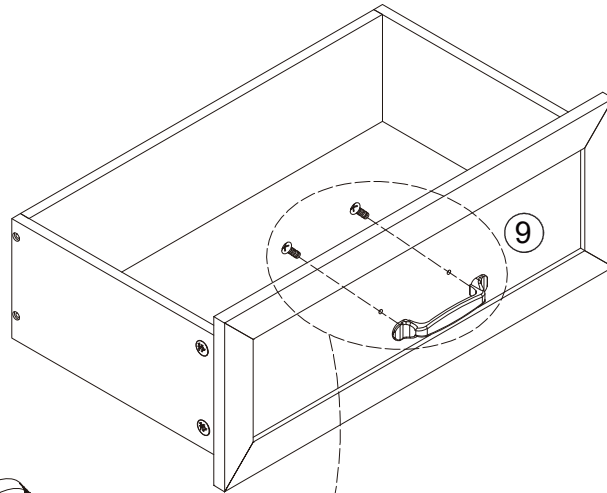



x3



E x18

DL x3

DR x3

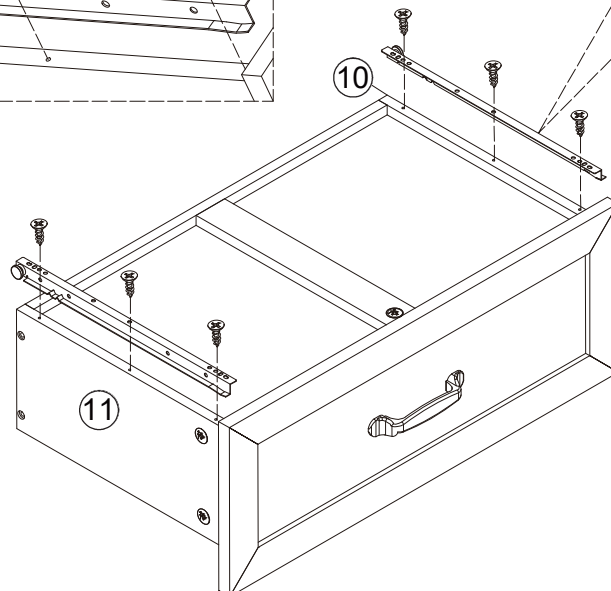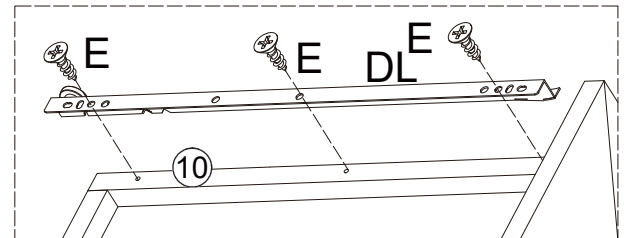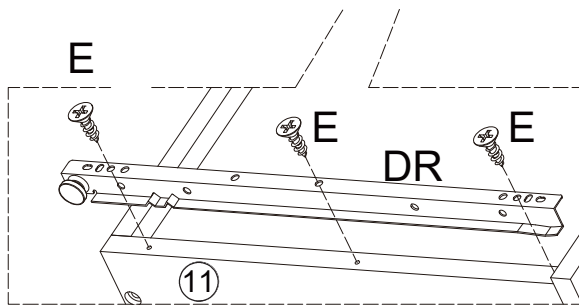

x3

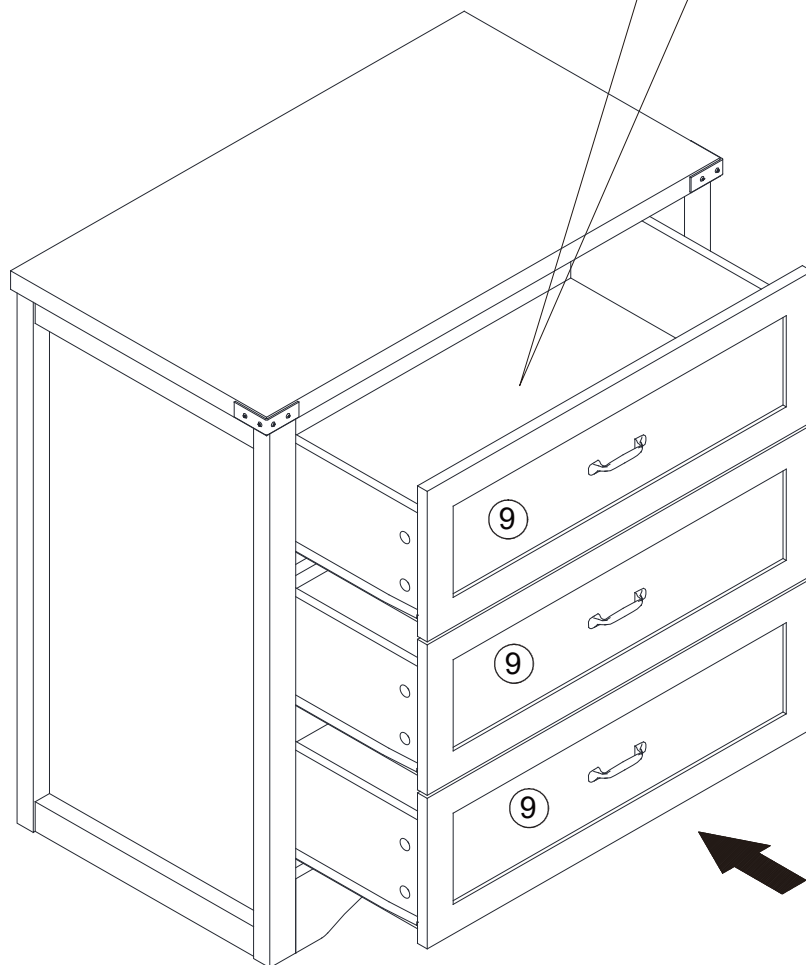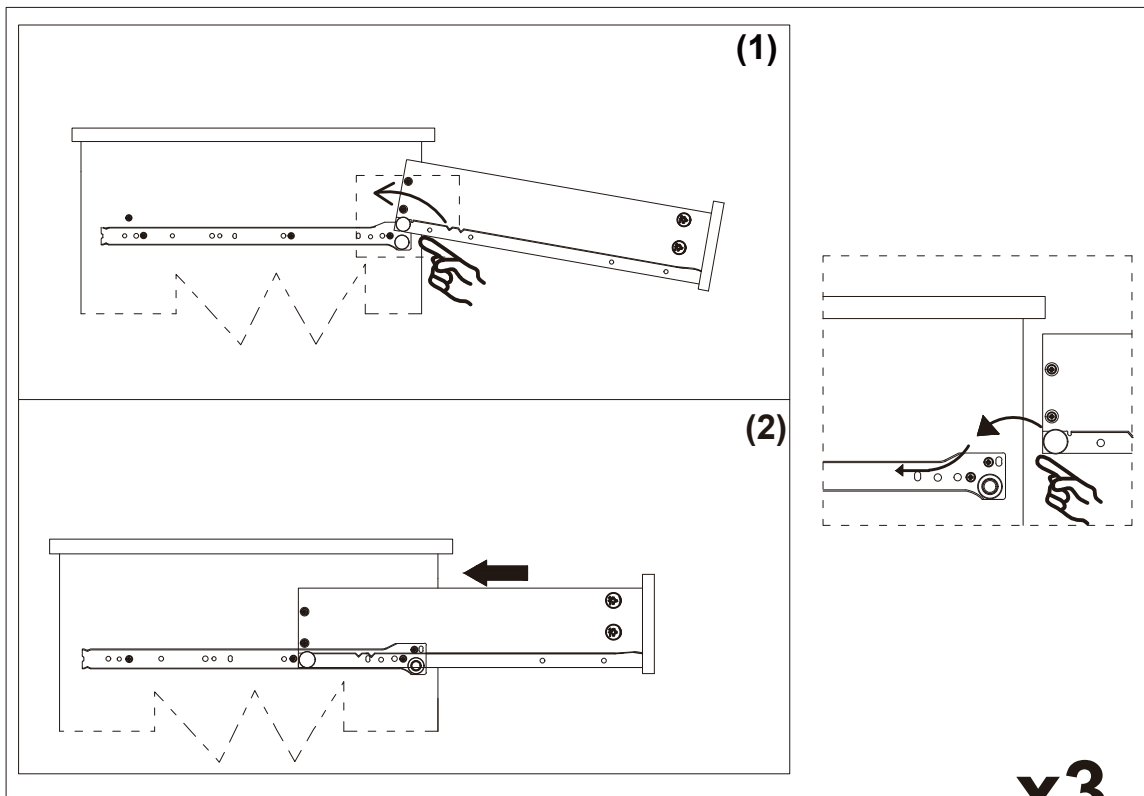

D x2




L x2




J x2




K x2

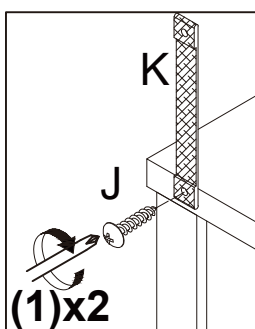


First fix the anti-rewind screw in the reserved hole of the product.

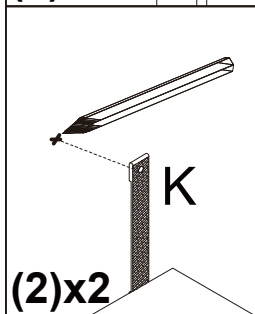


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

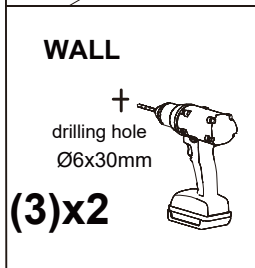

Then use a tape drill to make holes in the wall that are suitable for the product screws.

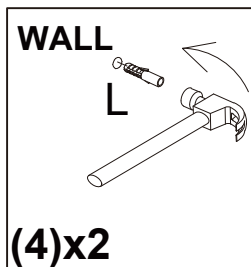

Then, put the expansion bolt into the hole

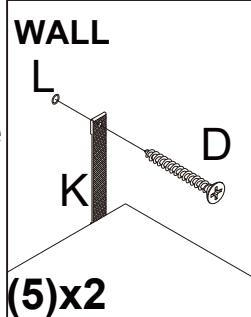

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

