






## Assembly Instructions

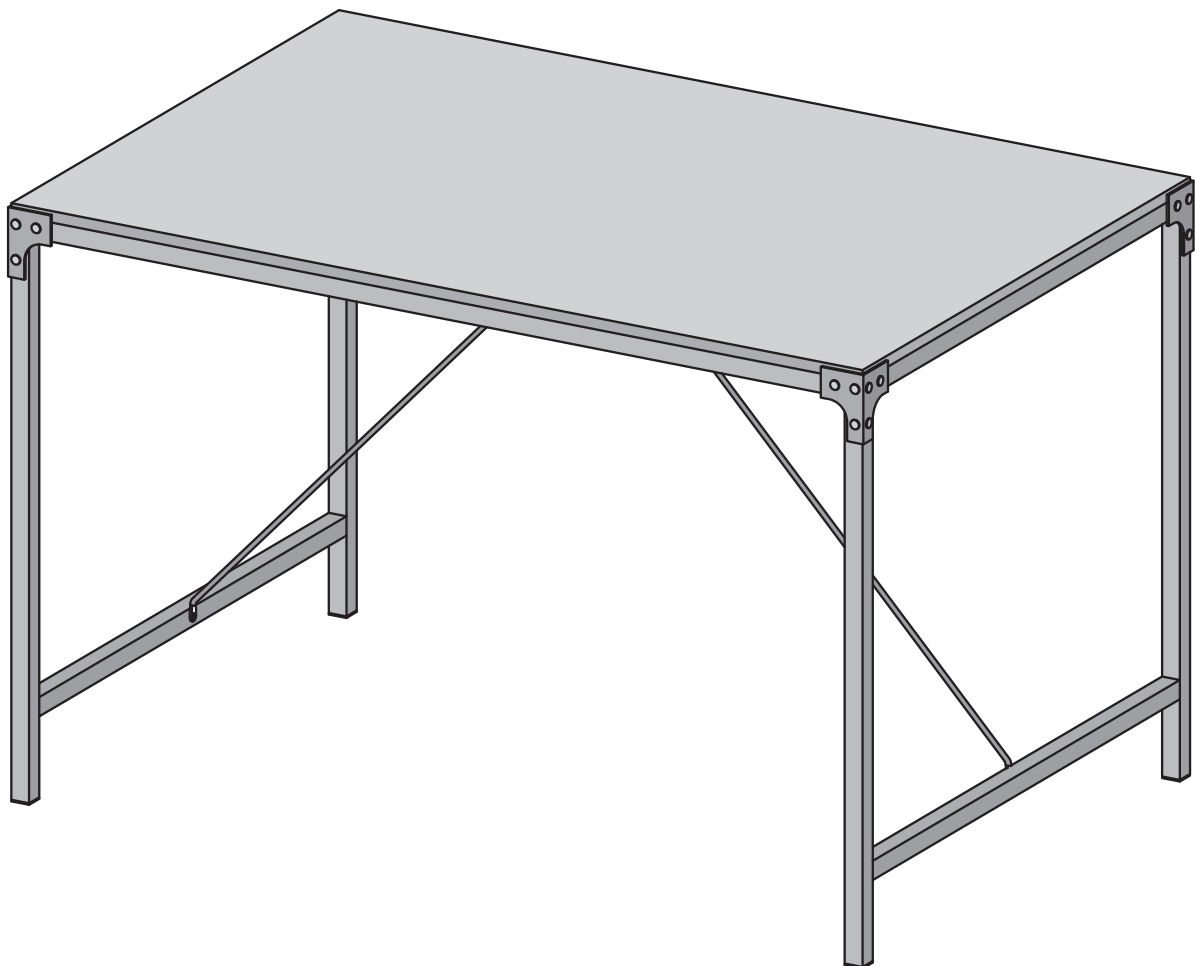

# Parts List

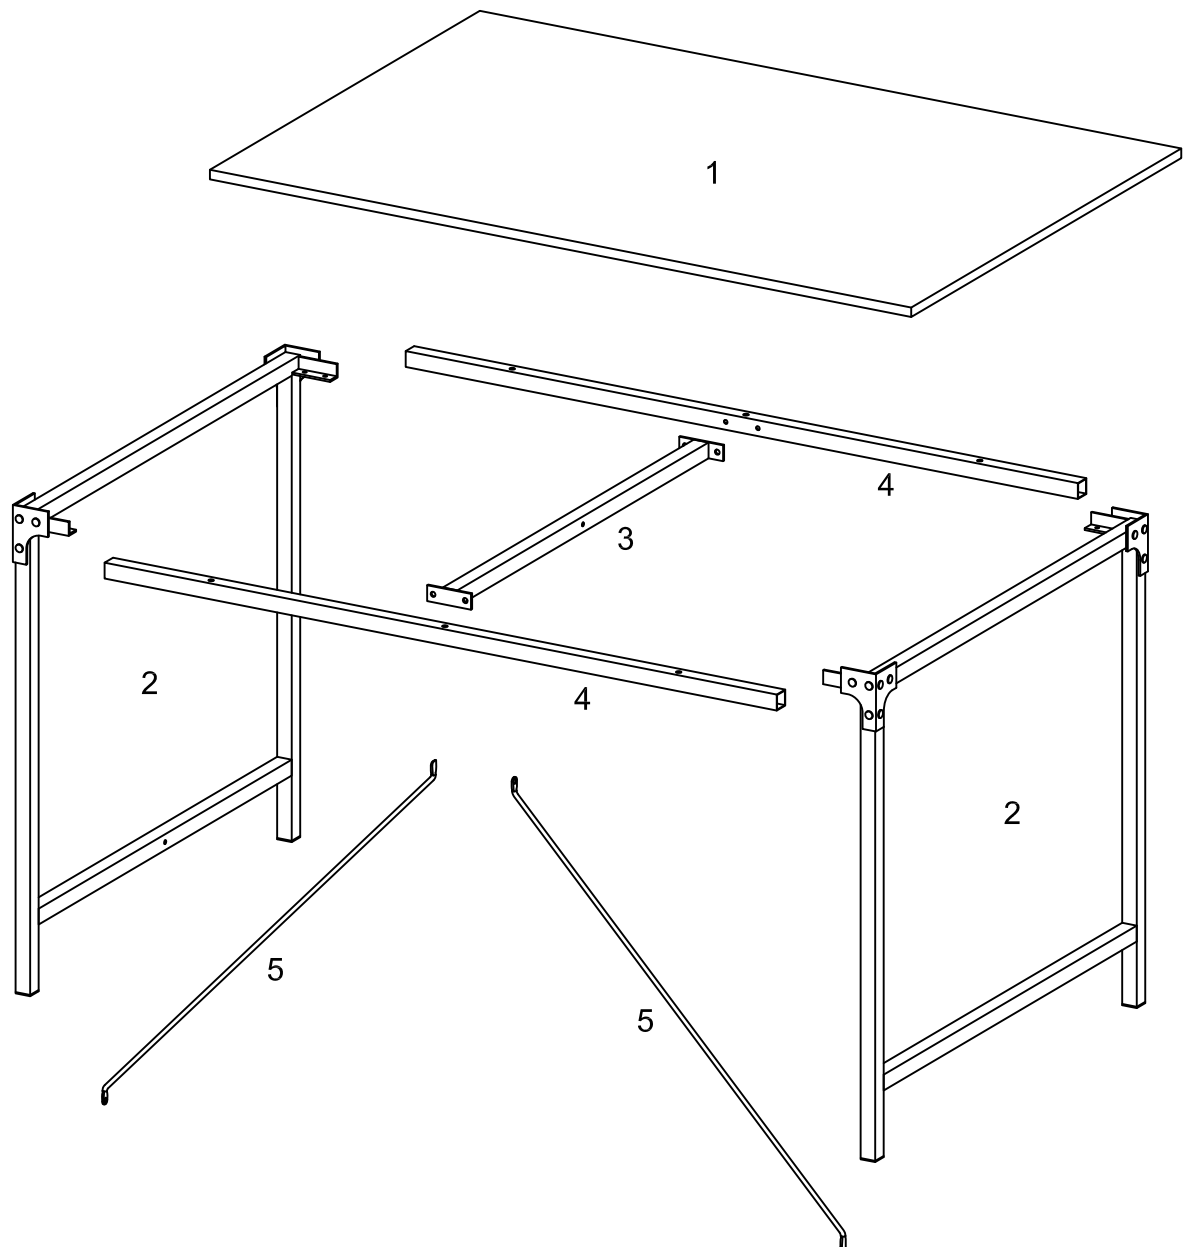


# Hardware List

A		Ø1/4"*35mm	Bolt	6 pcs
B		Ø1/4"*12mm	Bolt	16 pcs
C		M4*55mm	Wrench	1 pc


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

## Step 1

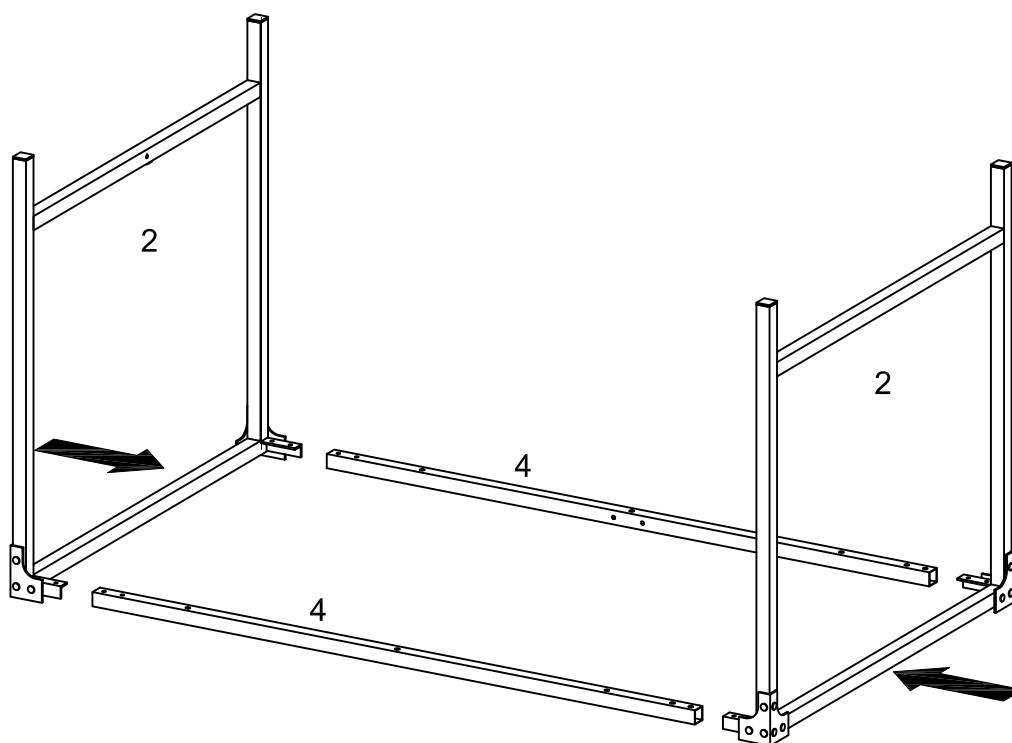


Insert the Side Frame (2) to the Support Bar (4).

## Step 2

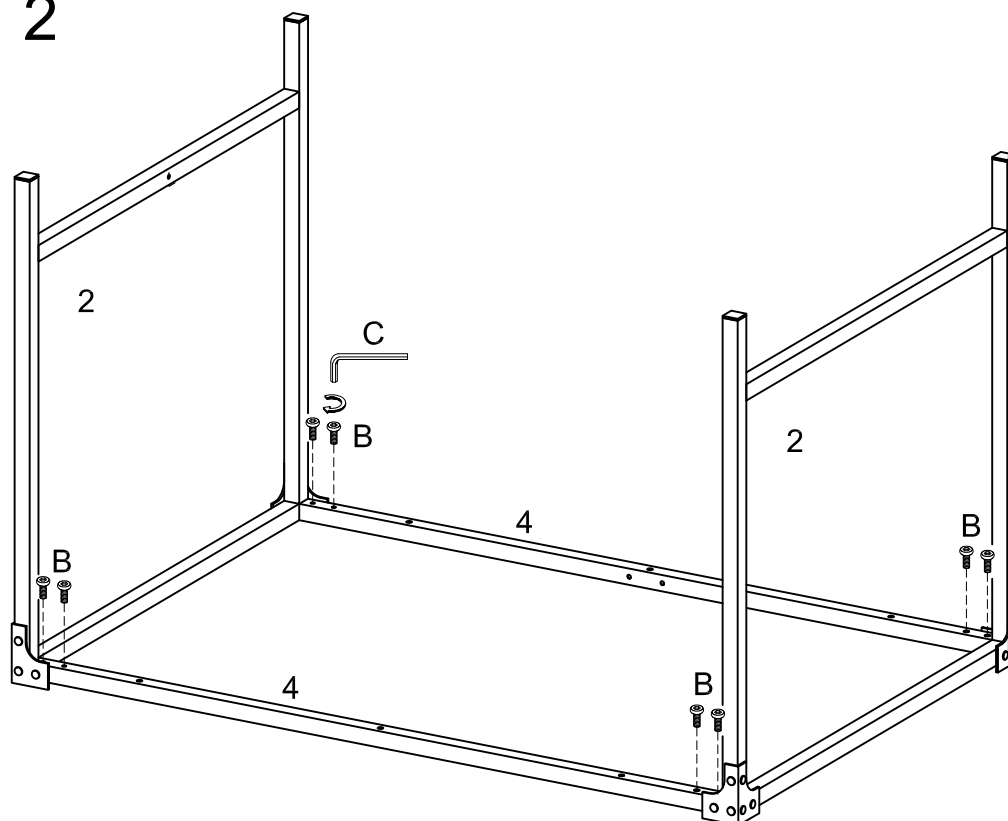


Use Wrench (C), Bolt (B) to secure the side frame (2) to the Support Bar (4).

## Step 3

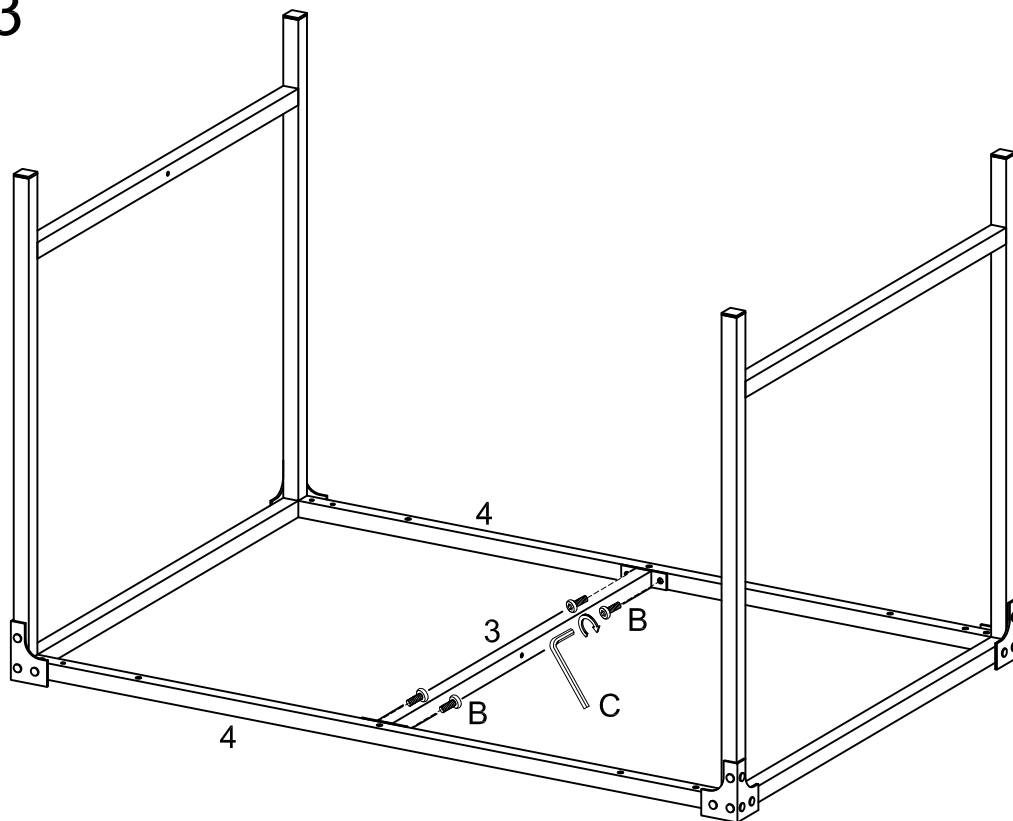


Use Wrench (C), Bolt (B) to secure the Cross Bar (3) to the Support Bar (4).

## Step 4

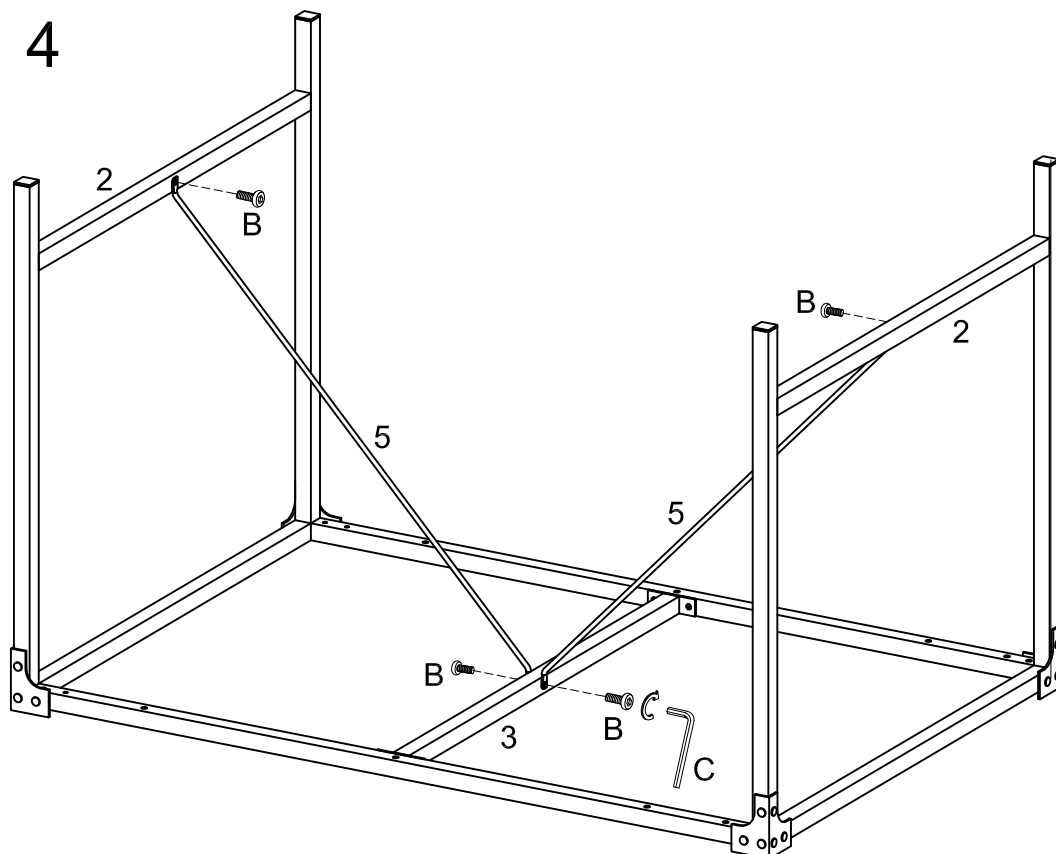


Use Wrench (C), Bolt (B) to secure the Wire Support (5) to the Side Frame (2) and Cross Bar (3).

## Step 5

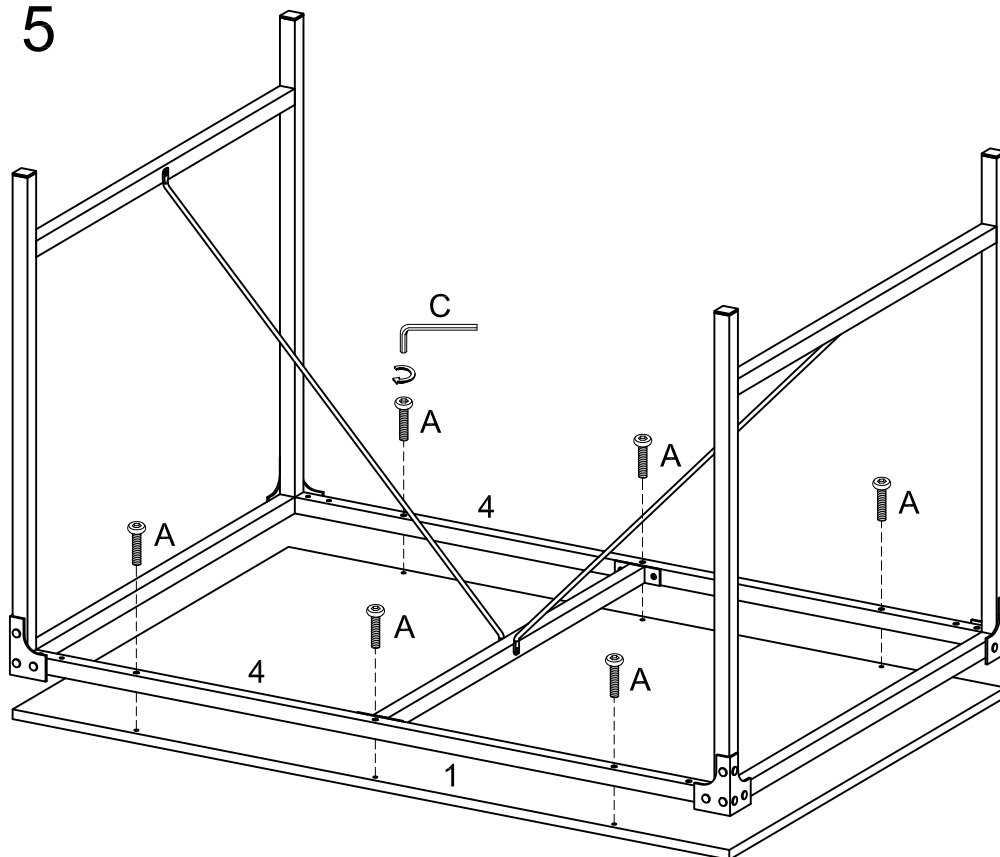

Use Wrench (C), Bolt (A) to secure the Support Bar (4) to the Top Panel (1).

## Step 6

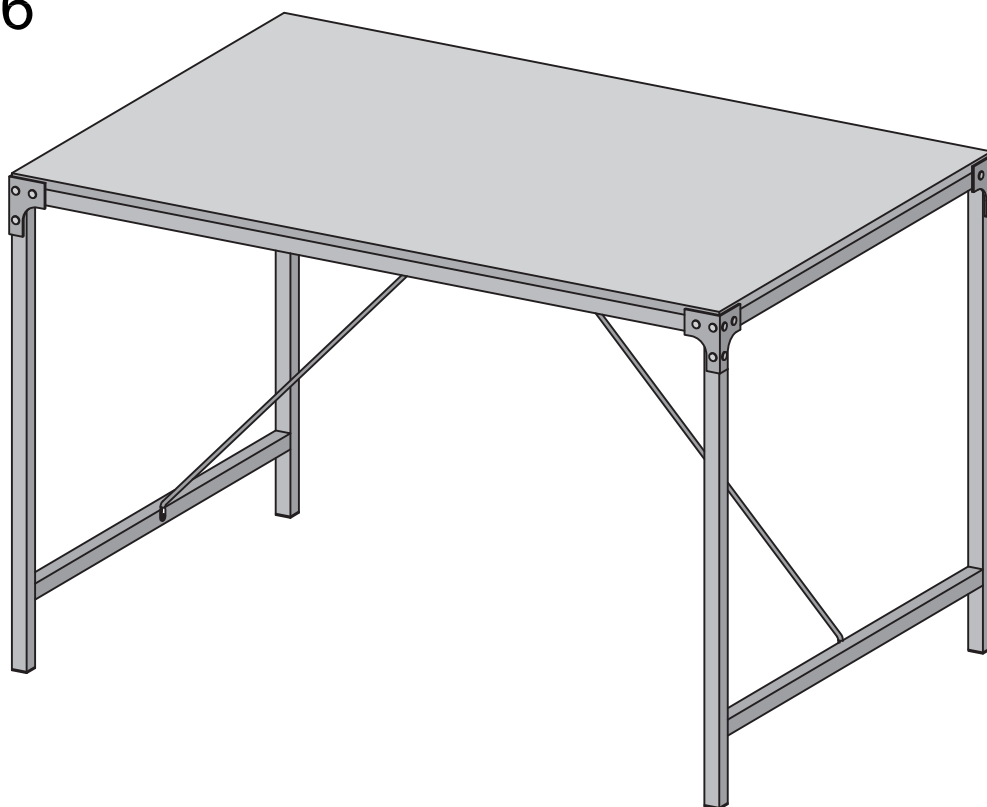

Final Assembly