


ASSEMBLY INSTRUCTIONS

CAREFULLY PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP PER THE SKETCH BELOW.

1. SCREW THE TUBE (B) TO THE BASE (A).
2. SCREW THE TUBE (C) TO THE TUBE (B).
3. SCREW THE TUBE (D) TO THE TUBE (C).
4. SCREW THE TUBE (E) TO THE TUBE (D).
5. INSERT THE HARPS(I) INTO SADDLE(F).
6. PUT THE SHADE(J) ONTO THE HARPS(I) AND TIGHTEN WITH THE FINIAL(K).
7. INSTALL RECOMMENDED BULB(H) INTO SOCKET(G), BULB NOT INCLUDED IN THIS PACKAGE.
8. INSERT THE PLUG INTO AN OUTLET.

ENJOY YOUR LAMP!!

**Use Max 3-WAY 150W type
A bulb(Not Included)**

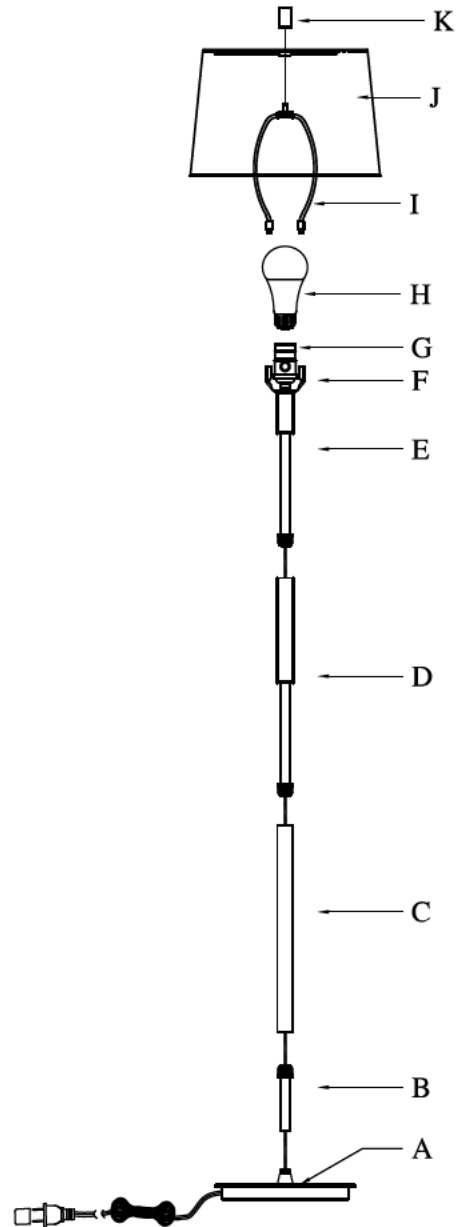

** TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.*

** THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.*

** THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.*

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE