

CABINET

ASSEMBLY INSTRUCTION



Assembly Instruction

ASSEMBLY TIPS:


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !





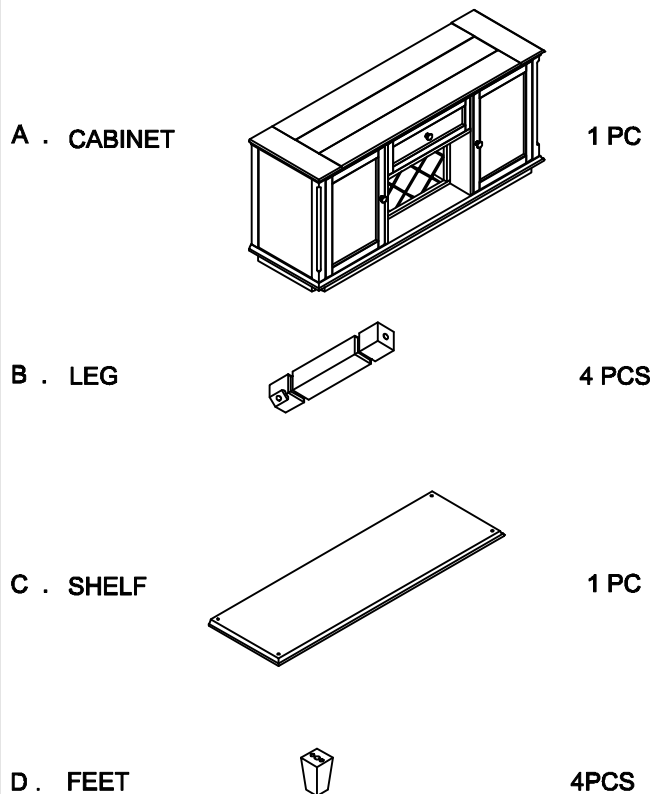

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION:



Z

HARDWARE PACKAGE:


NO	DESCRIPTION	FIGURE	QTY
1	WOODEN DOWEL Ø8X30mm		8 PCS
2	BOLT-LARGE Ø5/16"X4 -1/4"		4 PCS
3	BOLT-MIDDEL Ø5/16"X2"		4 PCS
4	LOCK WASHER Ø5/16"		8 PCS
5	FLAT WASHER Ø5/16"X19mm		8 PCS
6	ALLEN WRENCH 5mm		1 PC

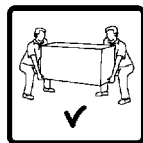


ASSEMBLY ITEM PER UNIT : 25 MINUTES

Assembly Instruction

STEP 1

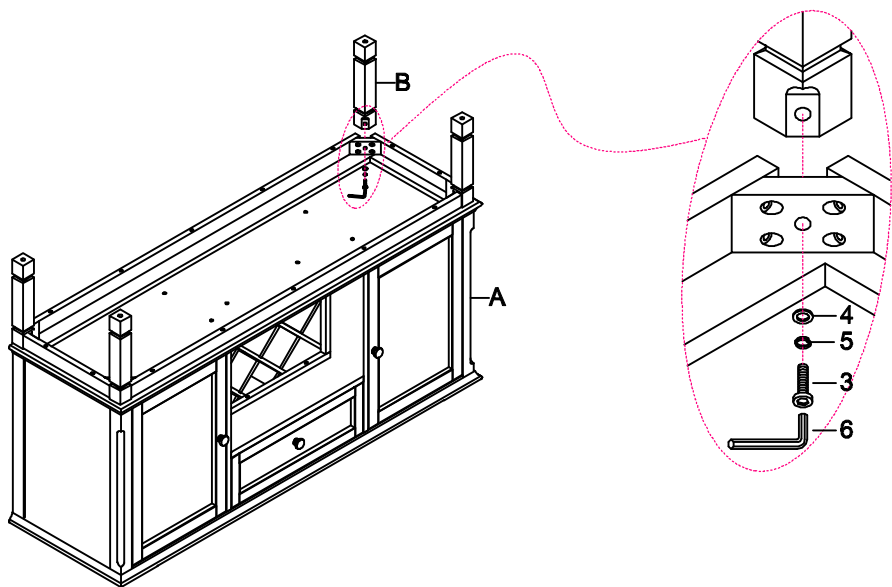

STEP 2

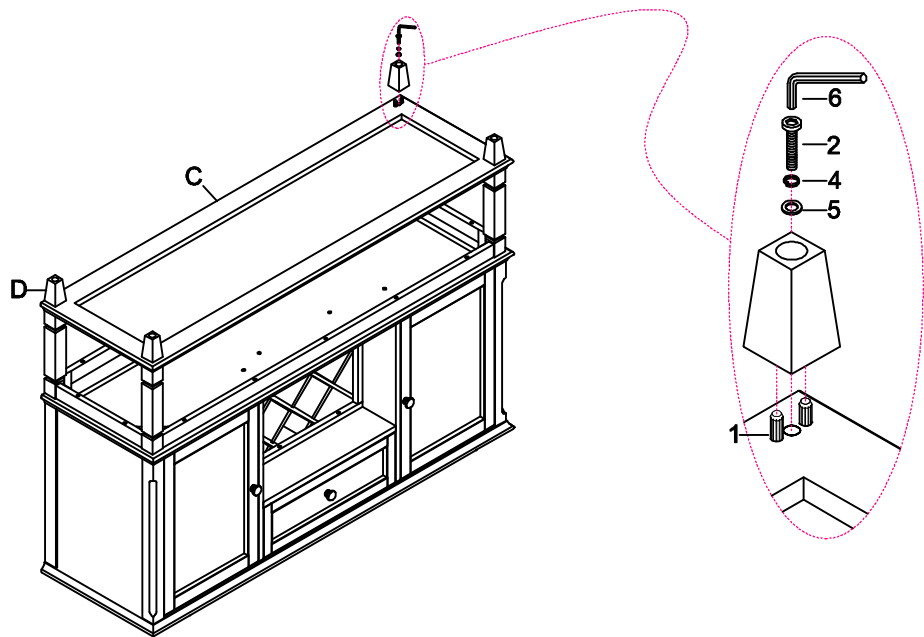

Assembly Instruction

STEP 3

