




1. Put the legs of the dining chair on the bottom of the dining chair seat, align the connecting holes and put in the hexagon socket head machine screws and washers, and tighten them with a wrench.

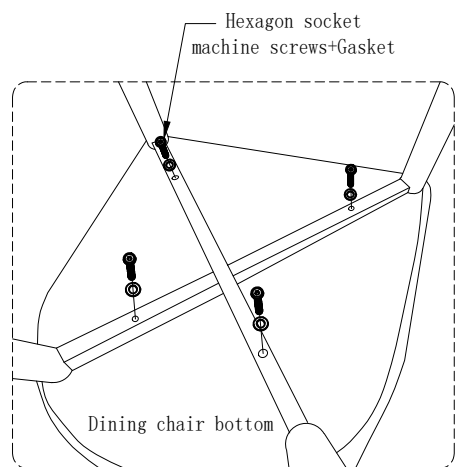

2. The installation is complete

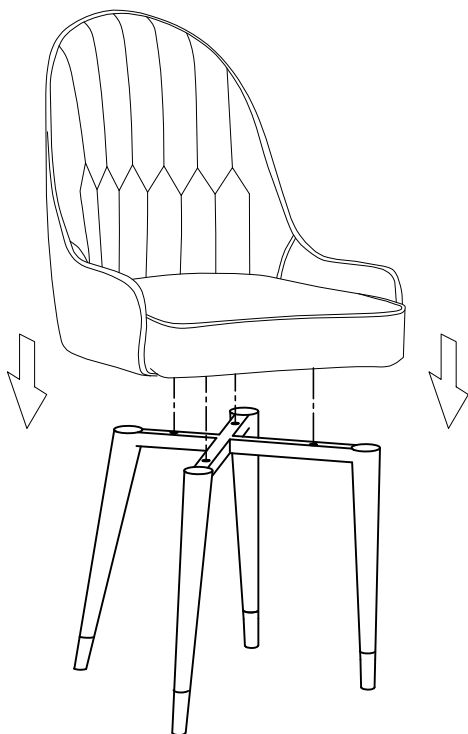

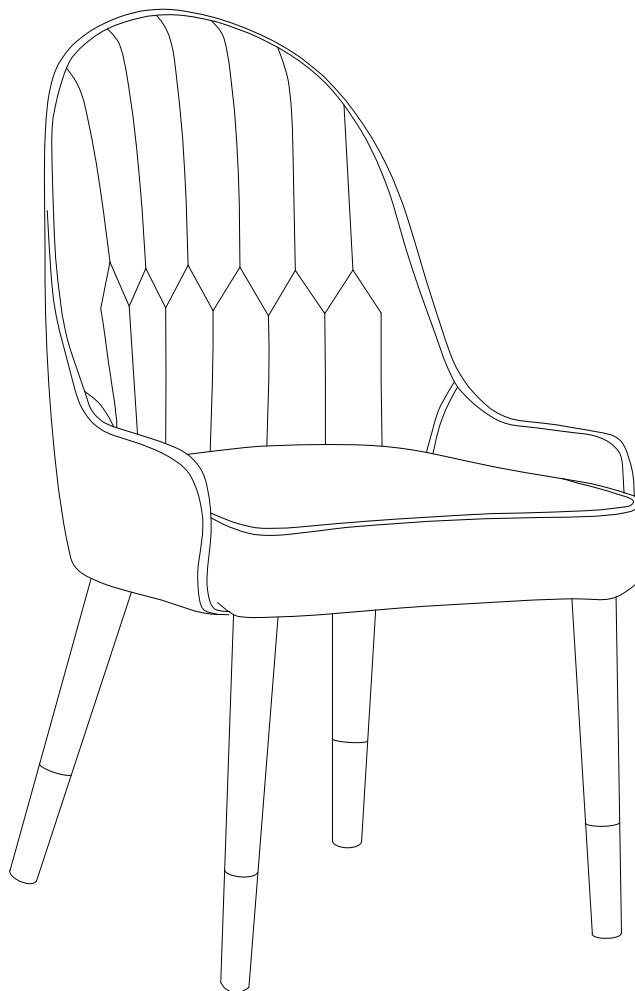


Installation instruction



CRO101E Installation

The number of people needed for installation: 2

- ① Please read the manual carefully before installing this product. And strictly follow the installation process
- ② Please take good care of this manual for your next installation
- ③ Note: Before installation, screw all the screws to 1/2 of the length of the installation. After all screws are half screwed in, tighten them all together.

| Parts list | | On a red ribbon are furniture installation accessories | | |
|---------------|---|--|------------------------------------|----------------|
| Serial number | Shape | Name | Quantity required for installation | Spare quantity |
| A |  | Hexagon socket machine screws (M6*70mm) | 8 | 1 |
| B |  | Gasket (M6) | 8 | 1 |
| C |  | Allen wrench | 1 | 0 |
| D | | | | |
| E | | | | |
| F | | | | |
| G | | | | |