
ASSEMBLY INSTRUCTIONS


V-WD26-1408

PF035

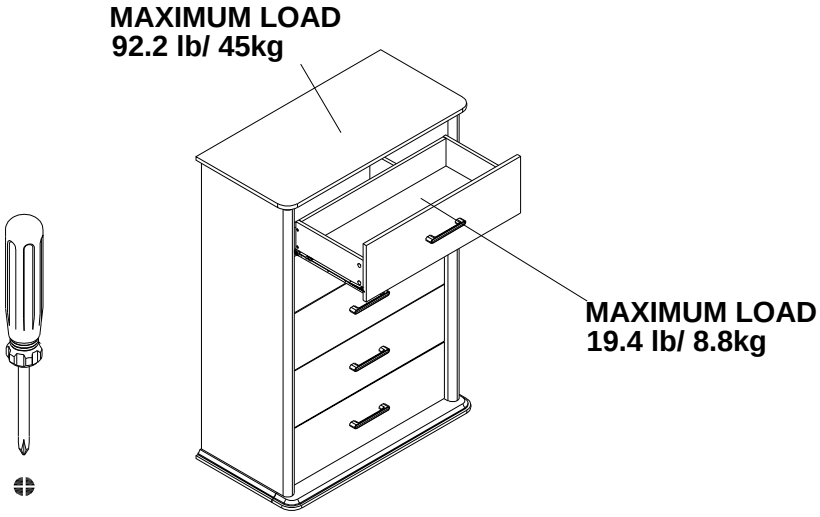


WARNING !



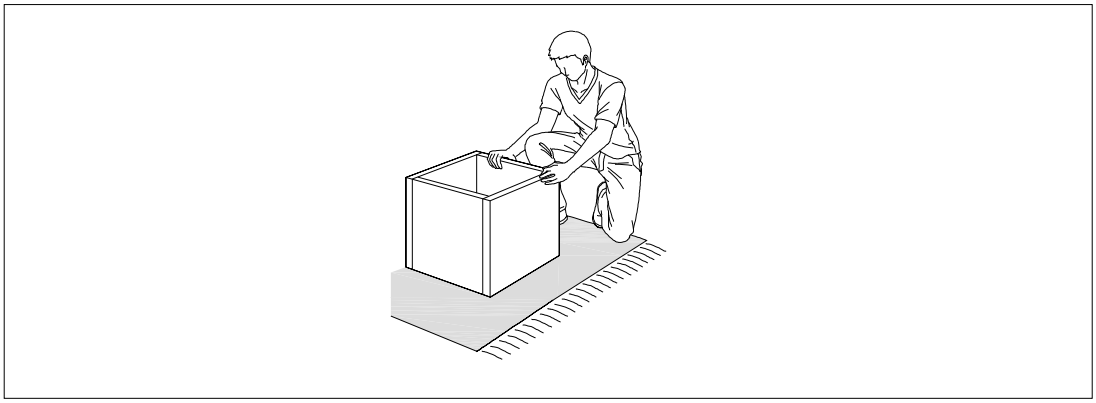

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

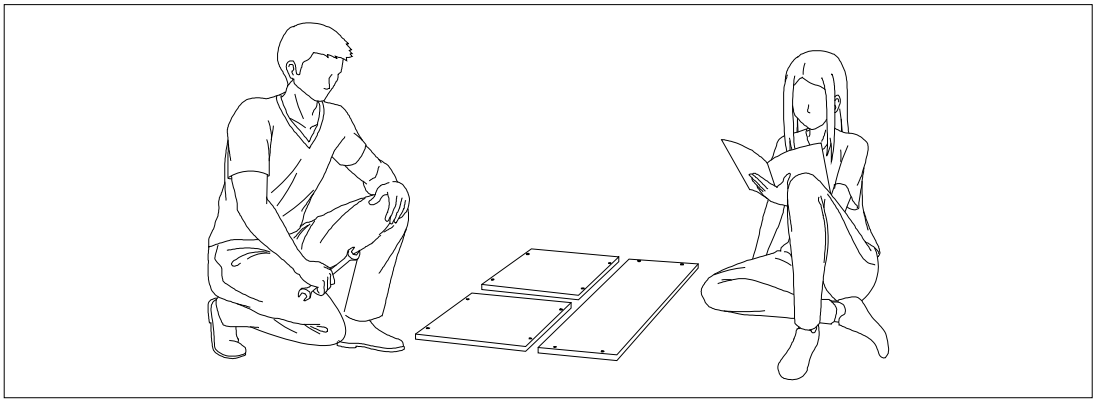


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT


Board Identification

Not actual size

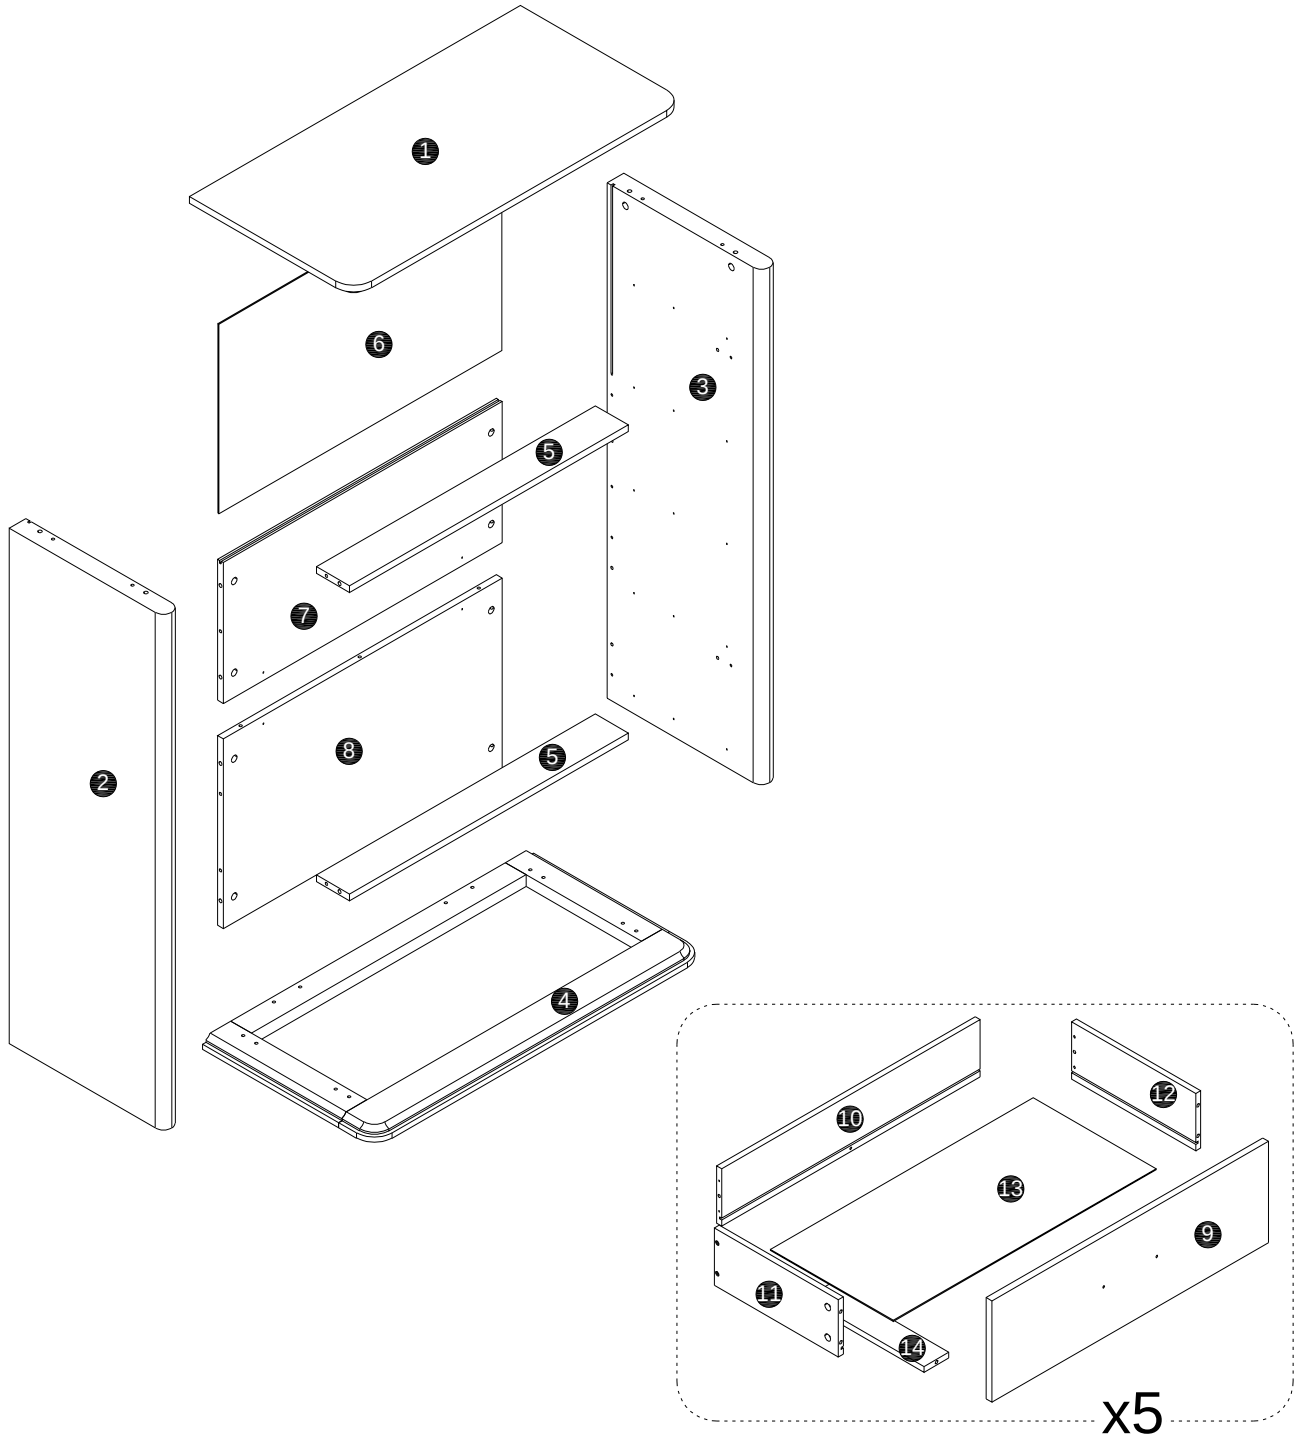


BOARD IDENTIFICATION


Not actual size

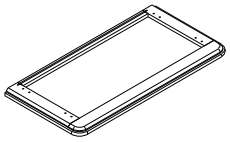


① x 1

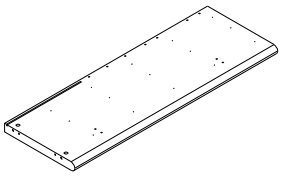


② x 1

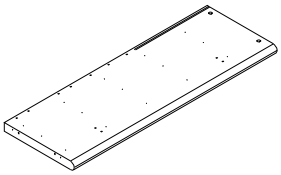


③ x 1

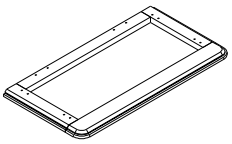


④ x 1

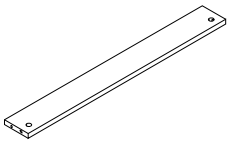


⑤ x 2

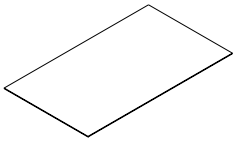


⑥ x 1

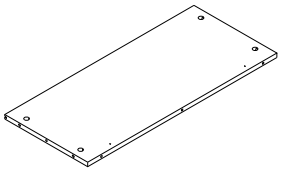


⑦ x 1

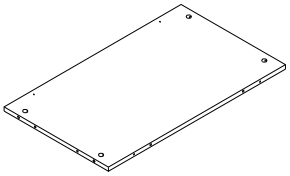


⑧ x 1

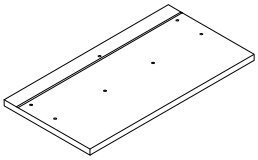


⑨ x 5

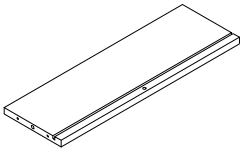


⑩ x 5

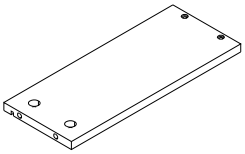


⑪ x 5

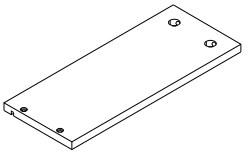

⑫ x 5












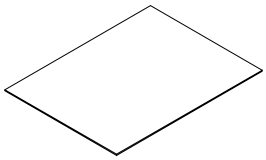


⑬ x 5



⑭ x 5


HARDWARE LIST

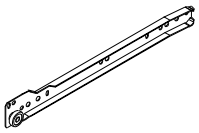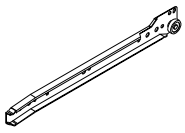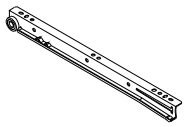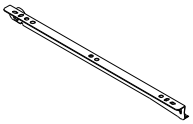 Ø6x33.5mm A x41+4	 Ø15x9.5mm B x41+4	 Ø6x30mm C x33+3	 Ø5x50mm D x 6+1
 Ø3.5x12mm E x64+6	 Ø3x15mm F x 4+1	 Ø4x38mm G x25+2	 H x 5
 M4x20mm I x 10	J1x2 J2x4 J3x2    Ø16xØ6.5x1mm Ø4x16mm J X 1SET	K1x2 K2x2   Ø6x30mm Ø4x35mm K 1SET	
 L x 1	 M x 4	 N x 2	
 CL x 5	 CR x 5	 DR x 5	 DL x 5


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

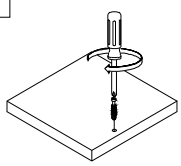

2

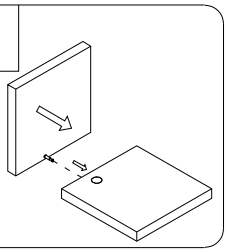


3

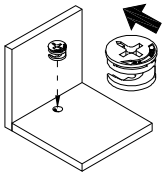


The opening must point toward the edge of the board


4

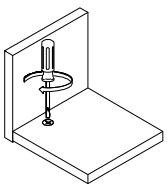

STEP 1

PF035

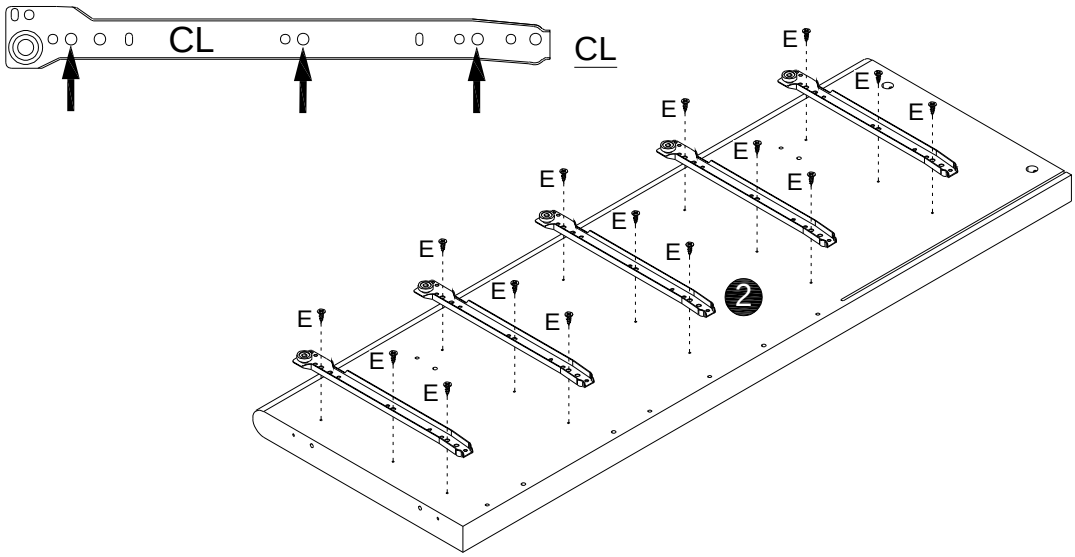




CL	x 5




Ø3.5X12mm

E	x 15

STEP 2

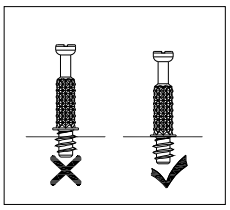

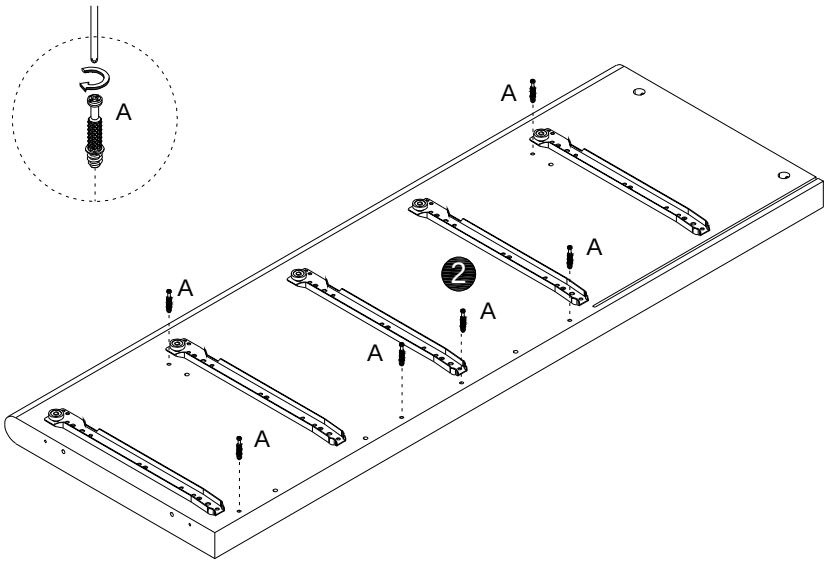





Ø6X33.5mm

A	x 6

STEP 3

PF035

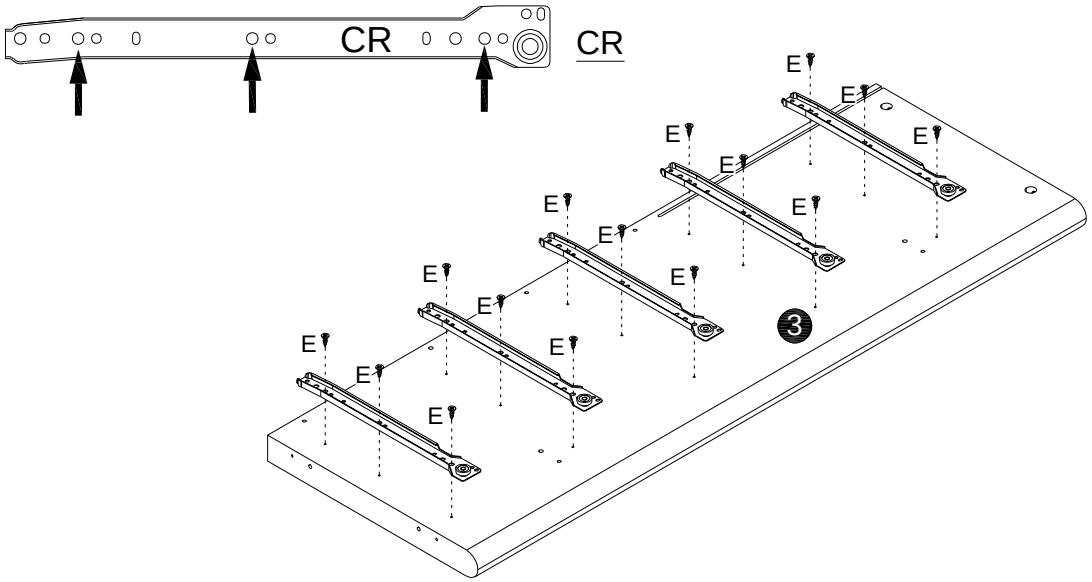




CR	X 5



Ø3.5X12mm

E	X 15

STEP 4

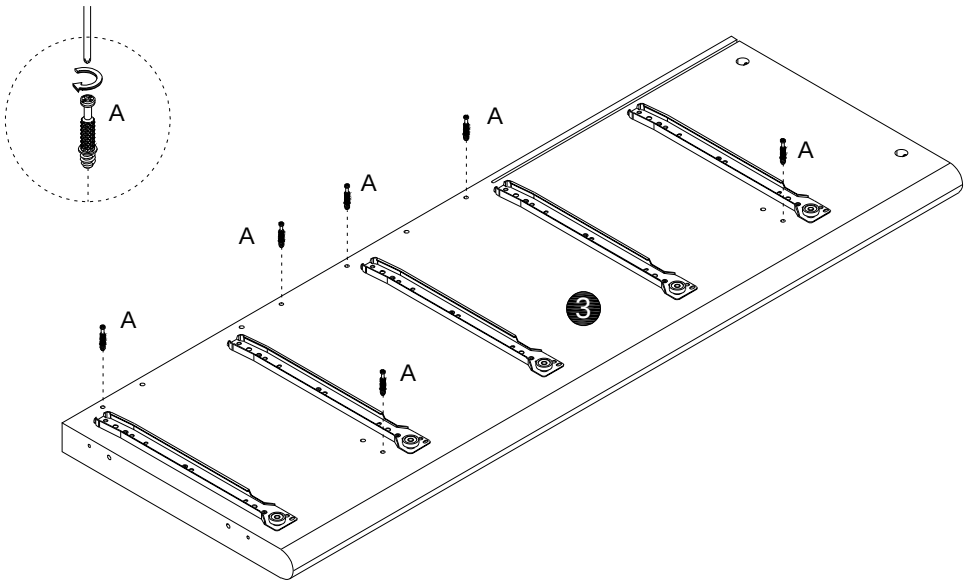





Ø6X33.5mm

A	X 6


STEP 5


PF035

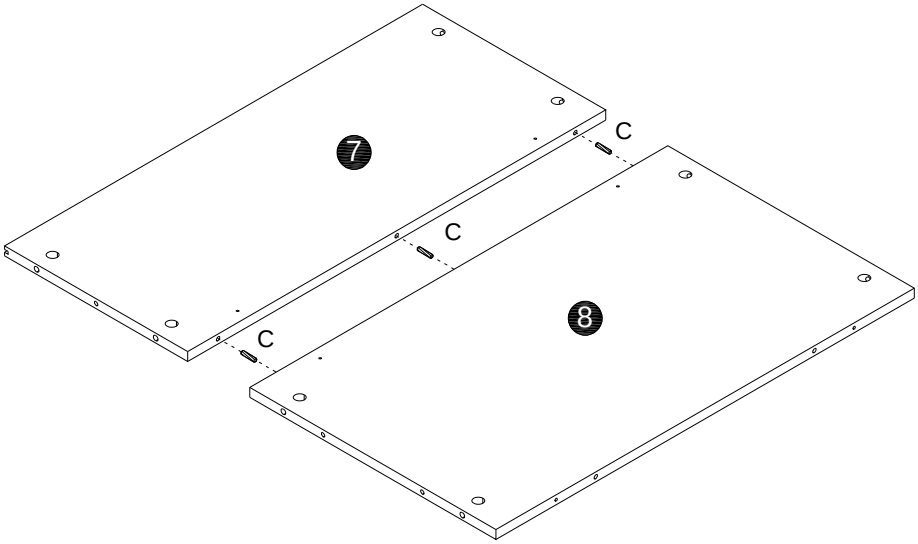


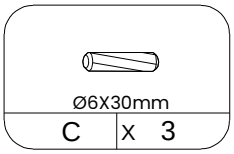

STEP 6

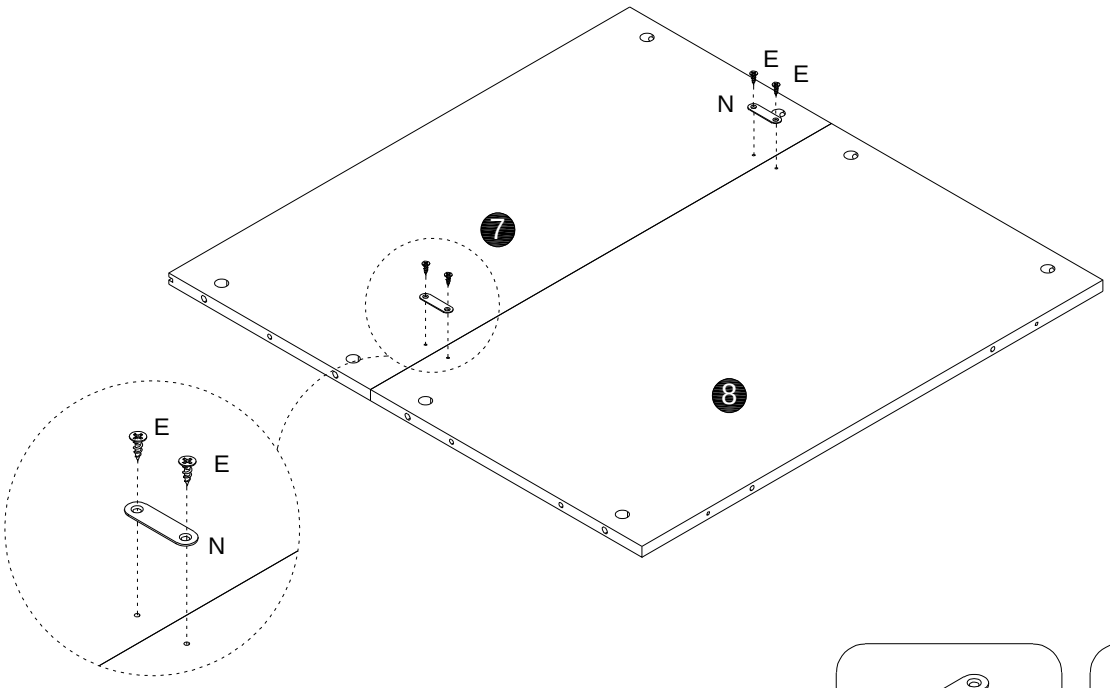


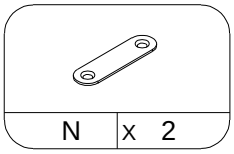


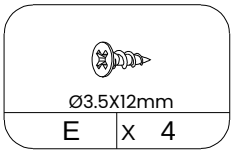


STEP 7

PF035

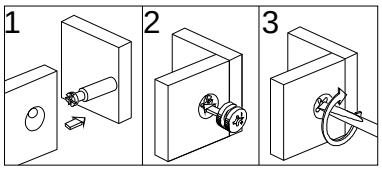

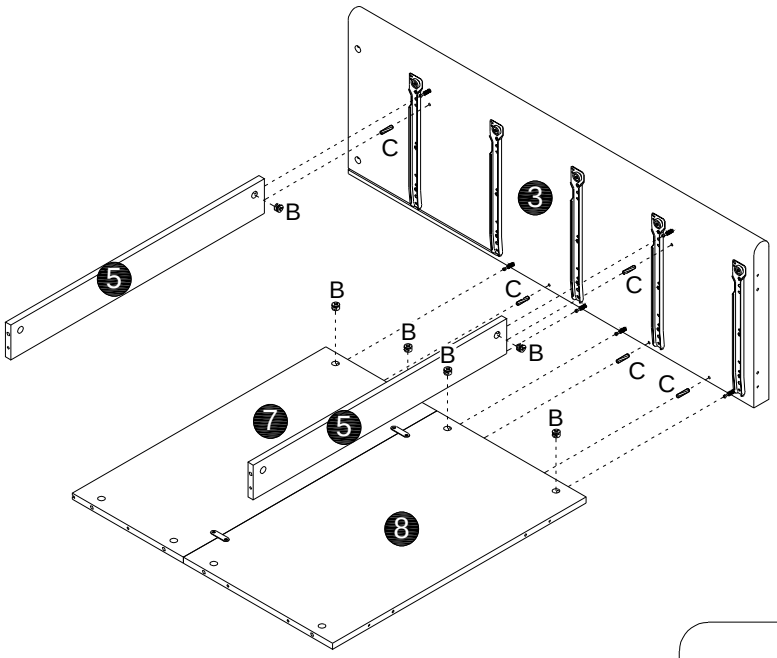



Ø6X30mm


C x 5




Ø15X9.5mm

B x 6

STEP 8

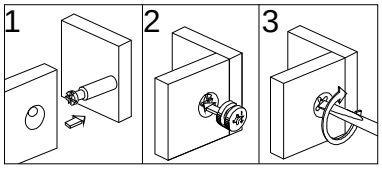

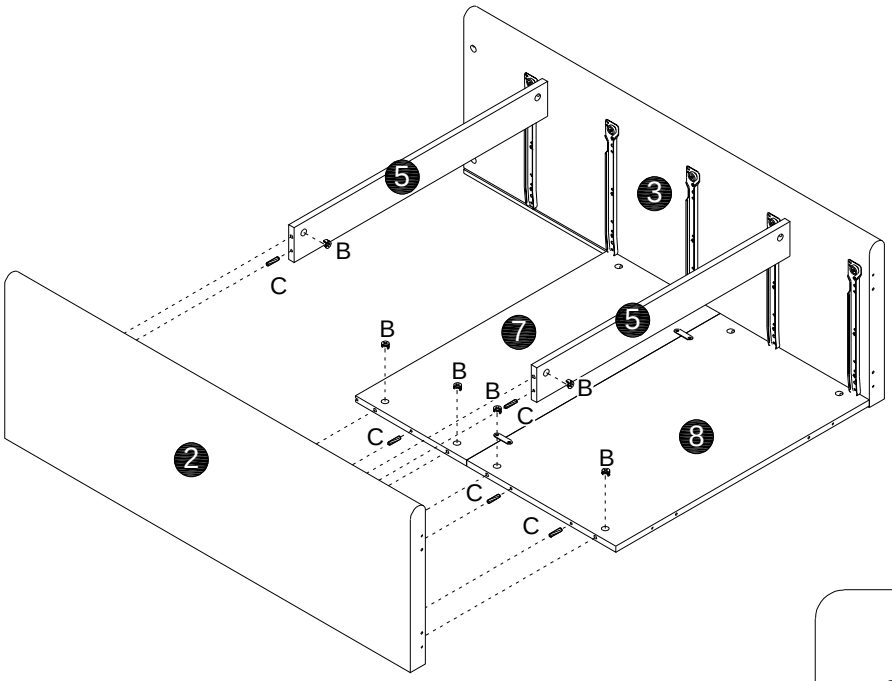



Ø6X30mm

C x 5





Ø15X9.5mm

B x 6

STEP 9


PF035

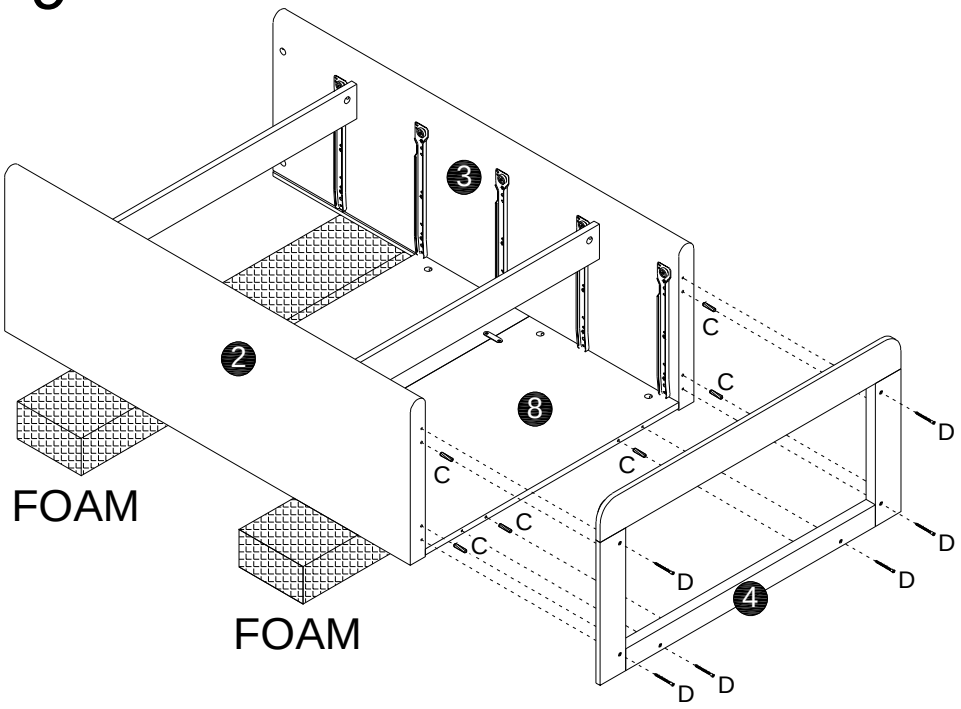



Ø5X50mm


D x 6



Ø6X30mm

C x 6

STEP 10

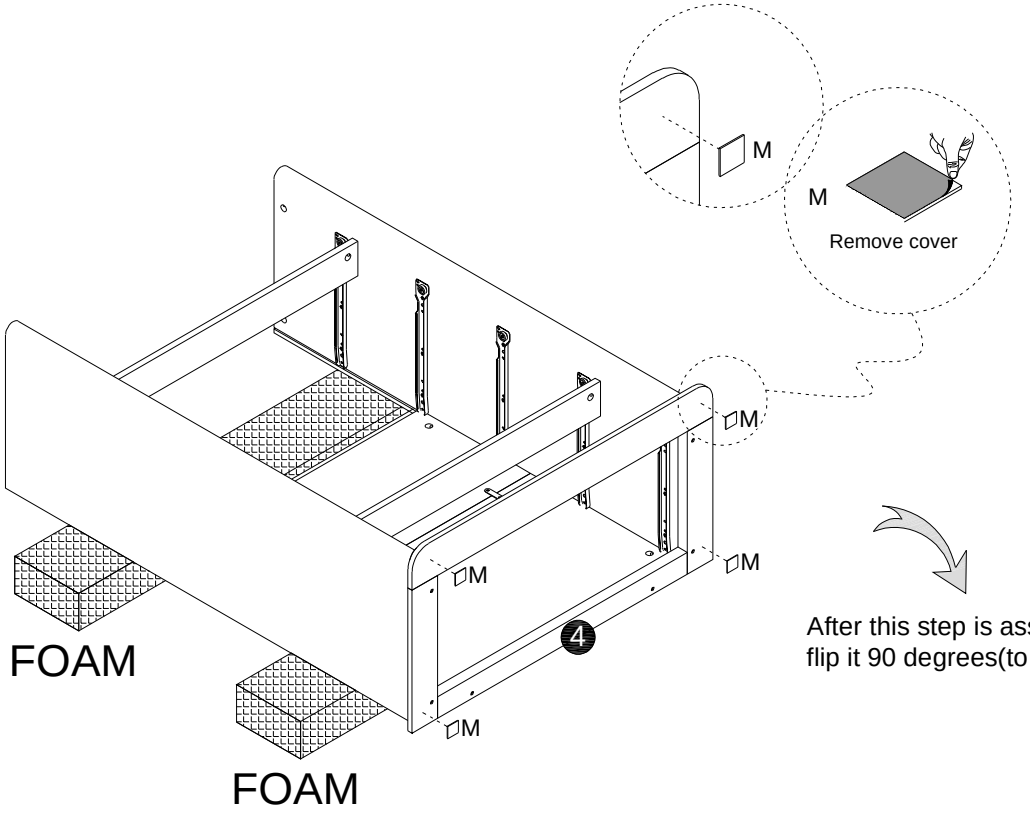


After this step is assembled,
flip it 90 degrees(to next step)




M x 4


STEP 11


PF035

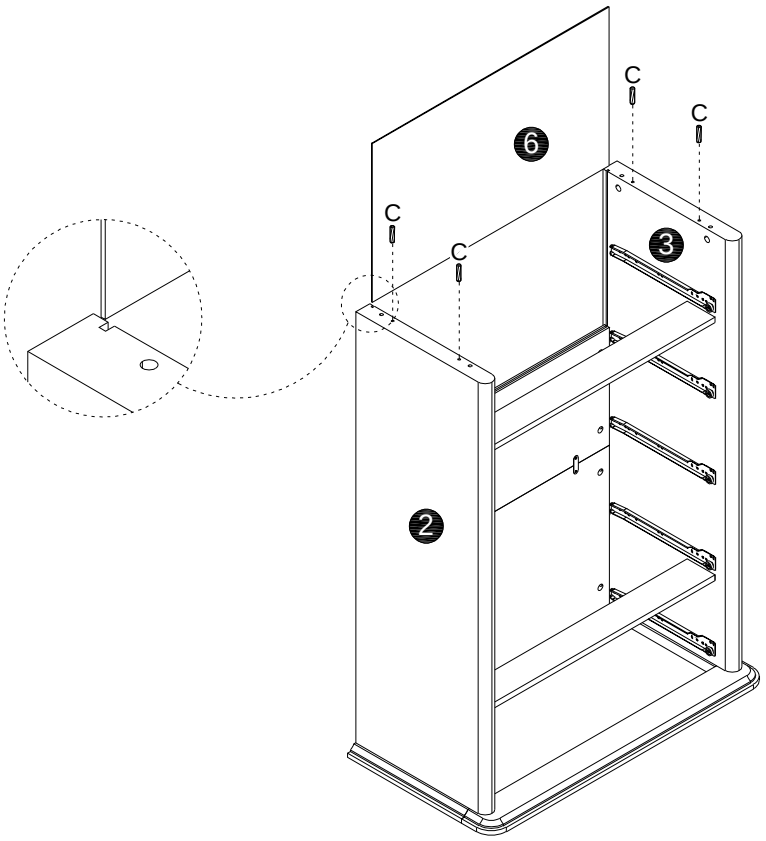

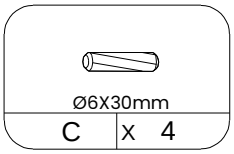


STEP 12

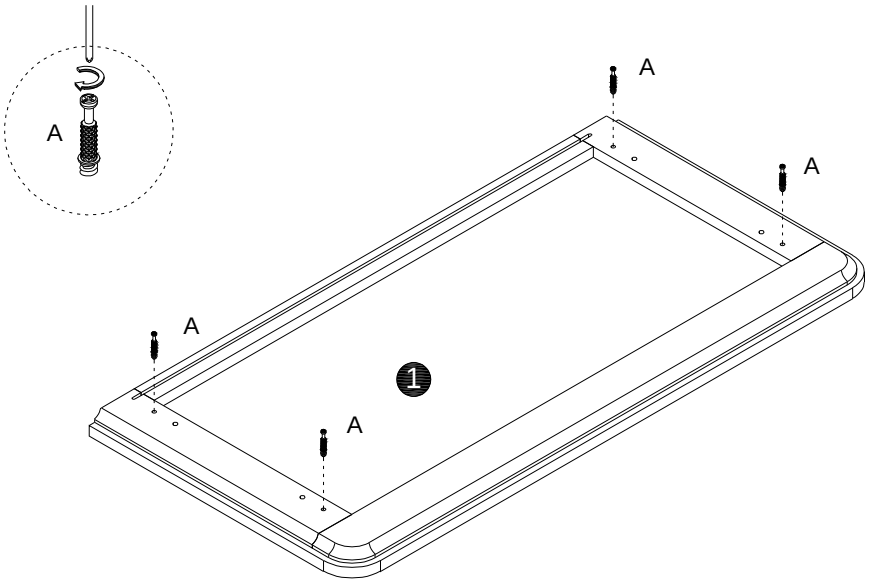


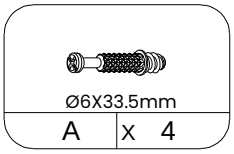


STEP 13


PF035

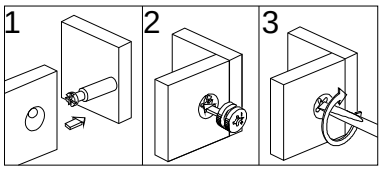


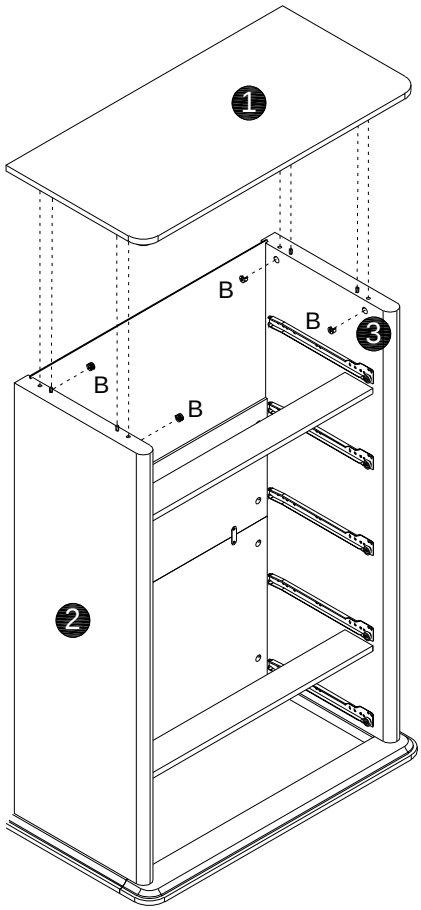

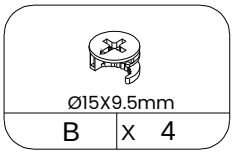


STEP 14

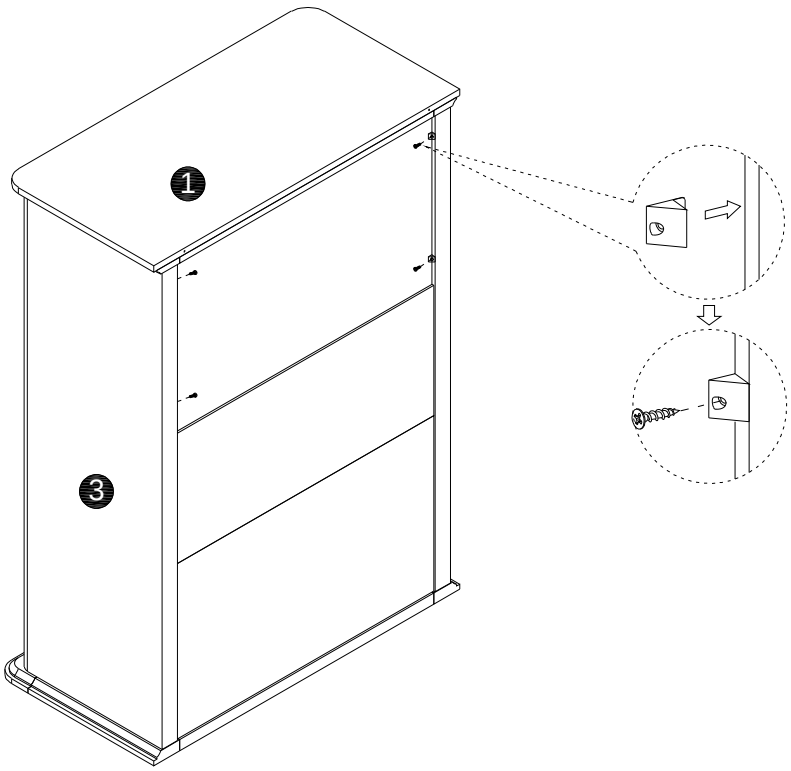


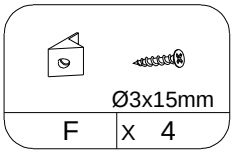


STEP 15


PF035

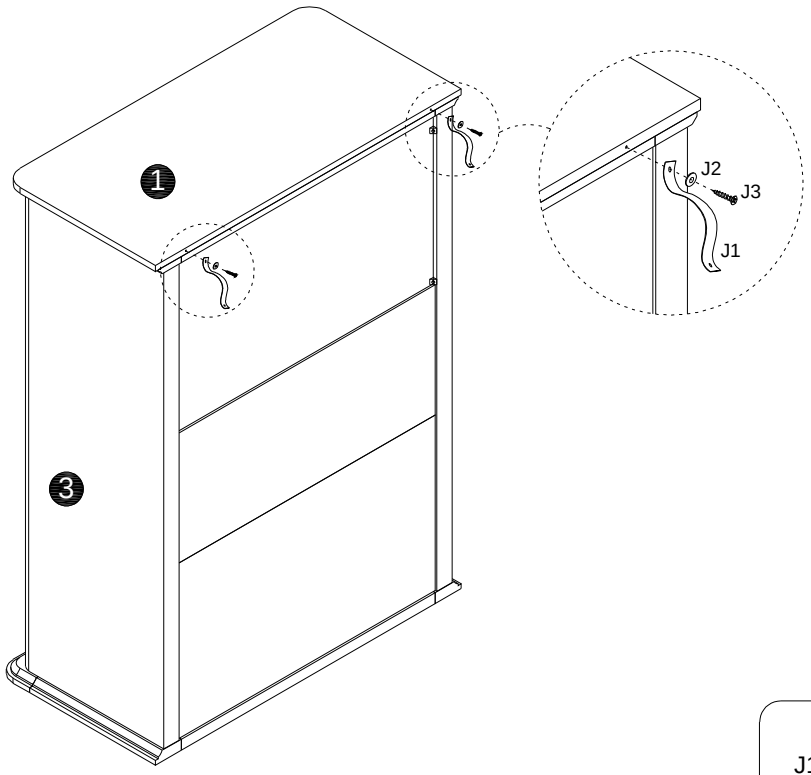




STEP 16

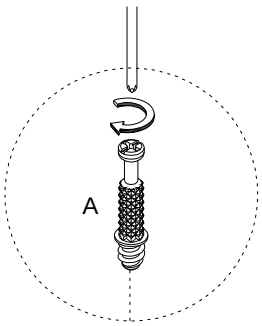


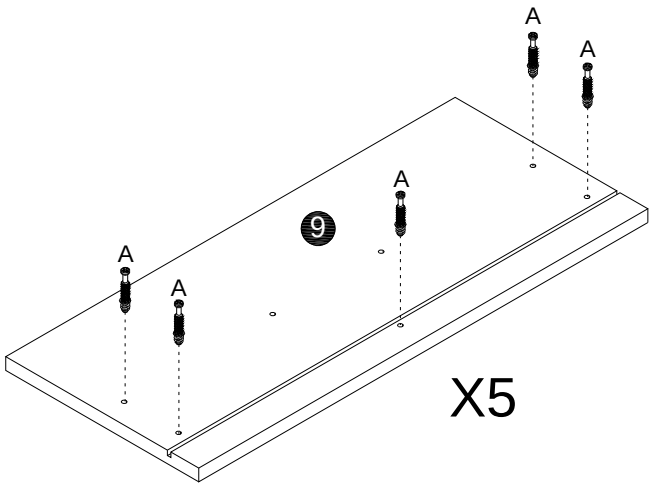


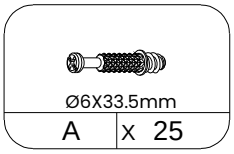


STEP 17


PF035

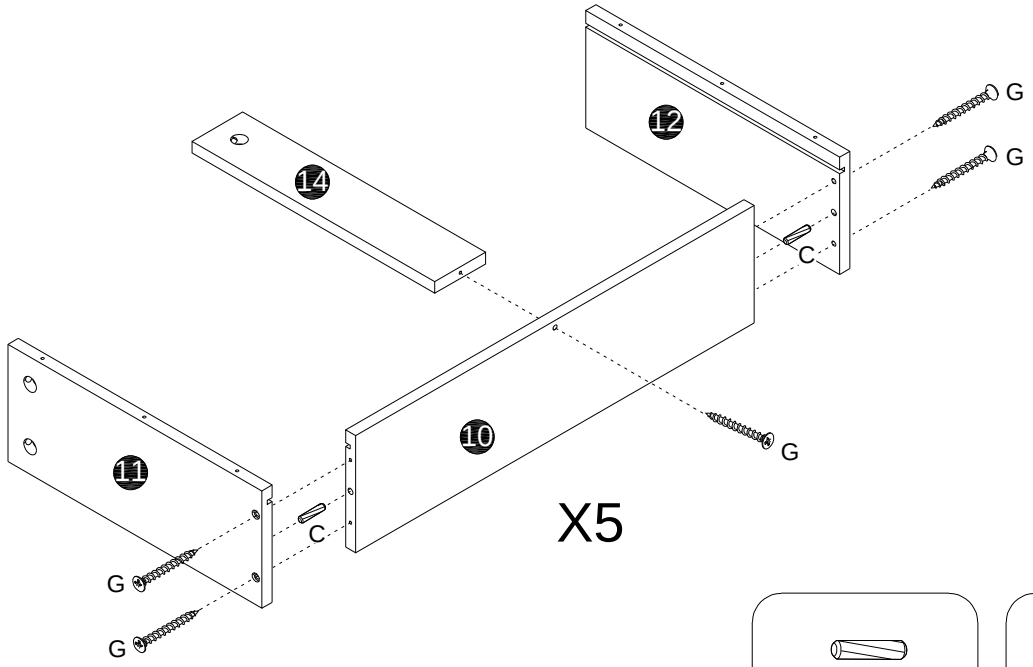

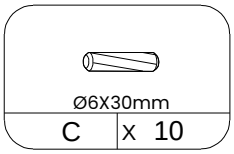

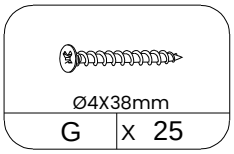



STEP 18

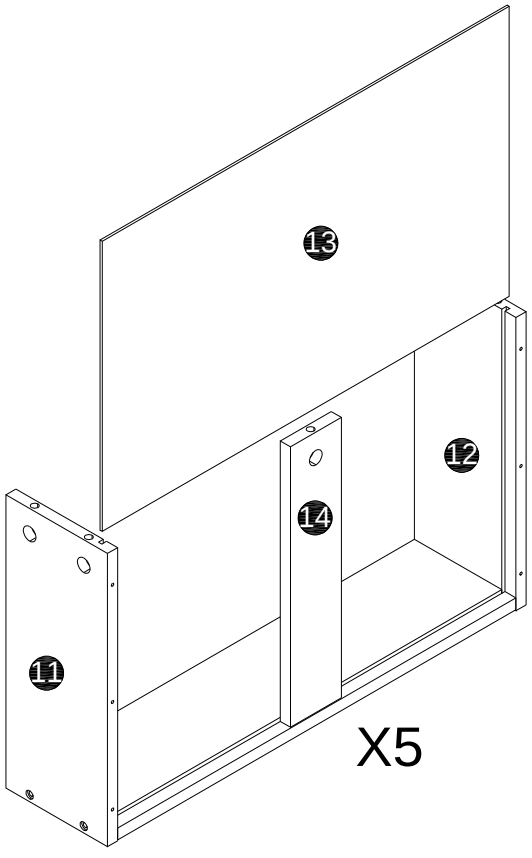


STEP 19

PF035

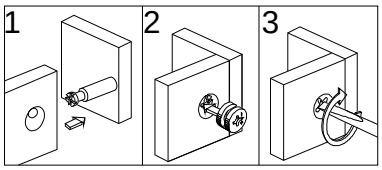


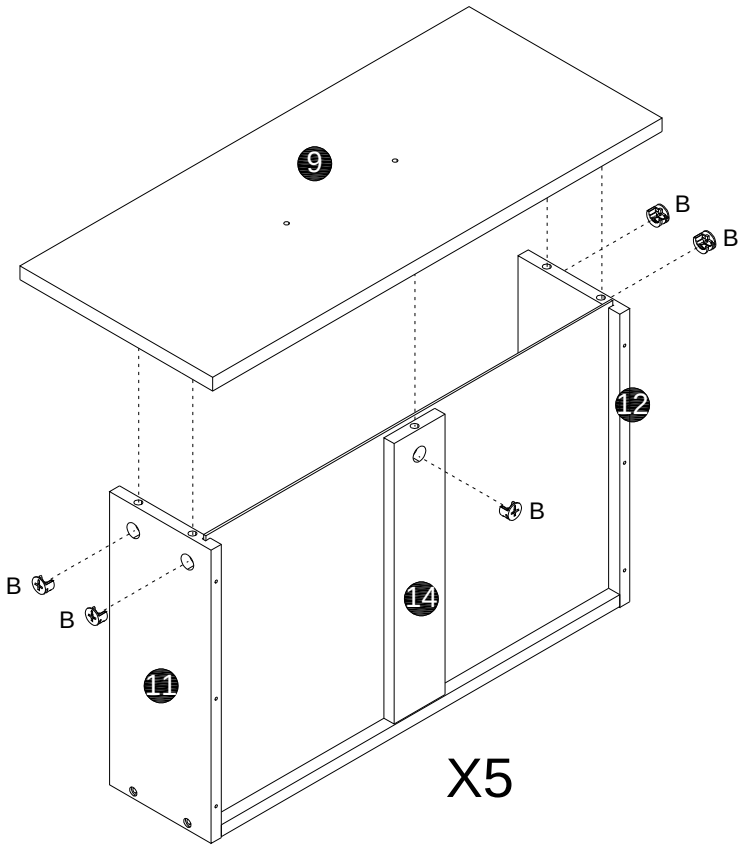


X5

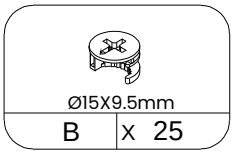


STEP 20

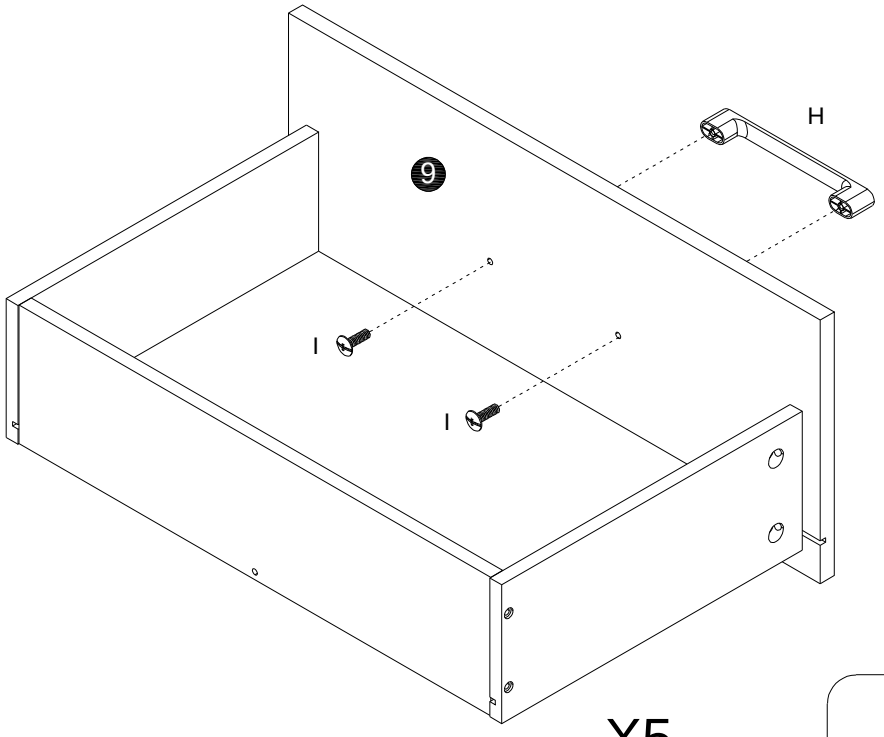


X5

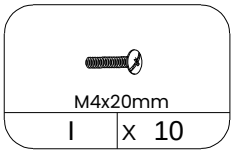

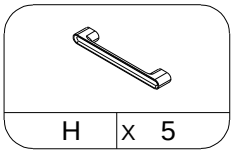

STEP 21

PF035

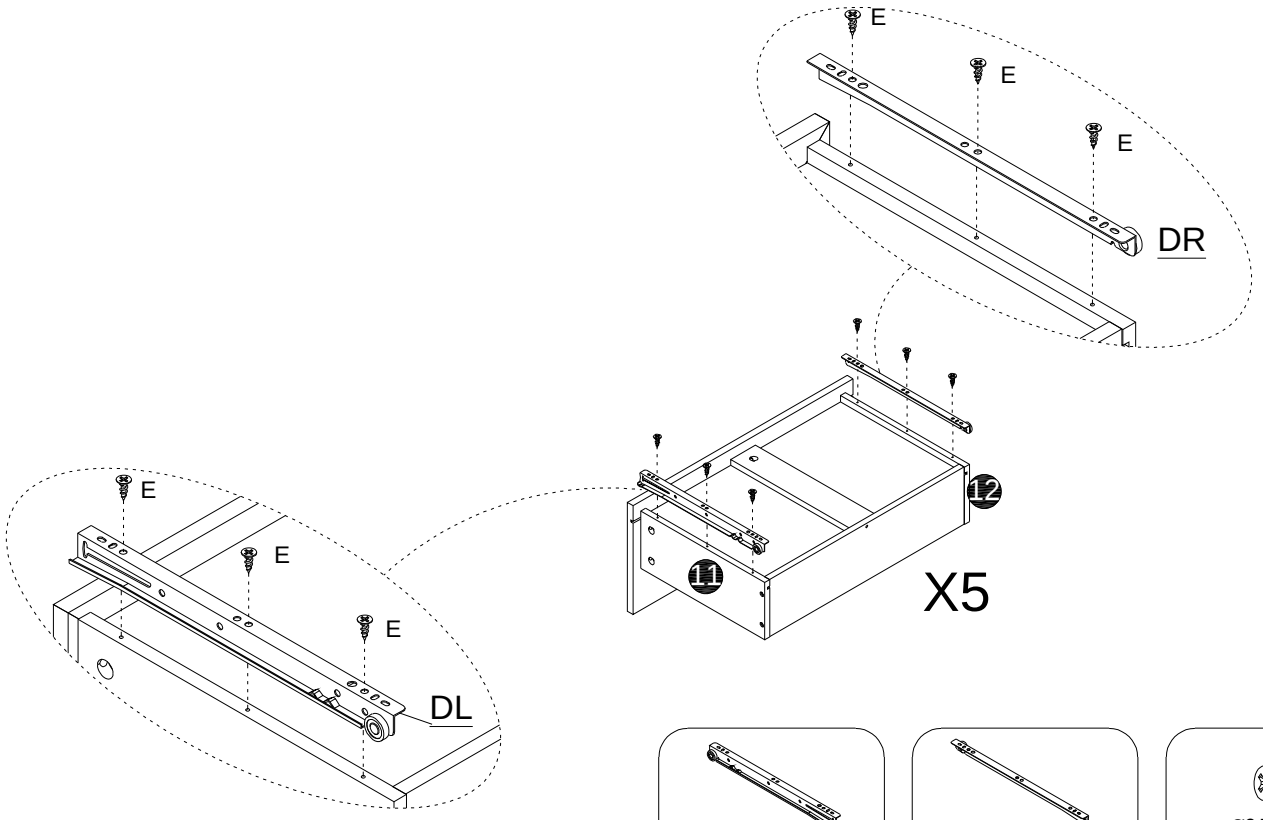


DR	x 5

DL	x 5

Ø3.5X12mm


E	x 30


STEP 22

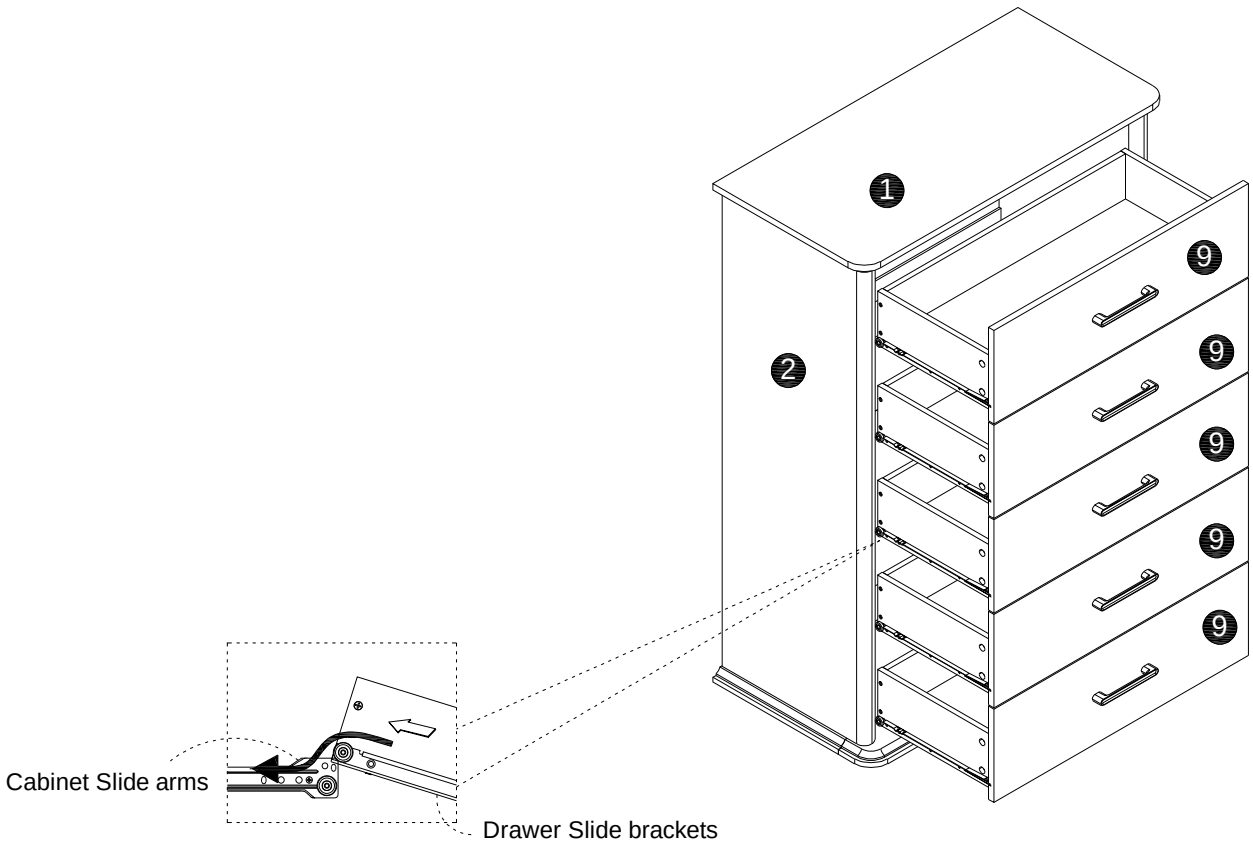

STEP 23


PF035

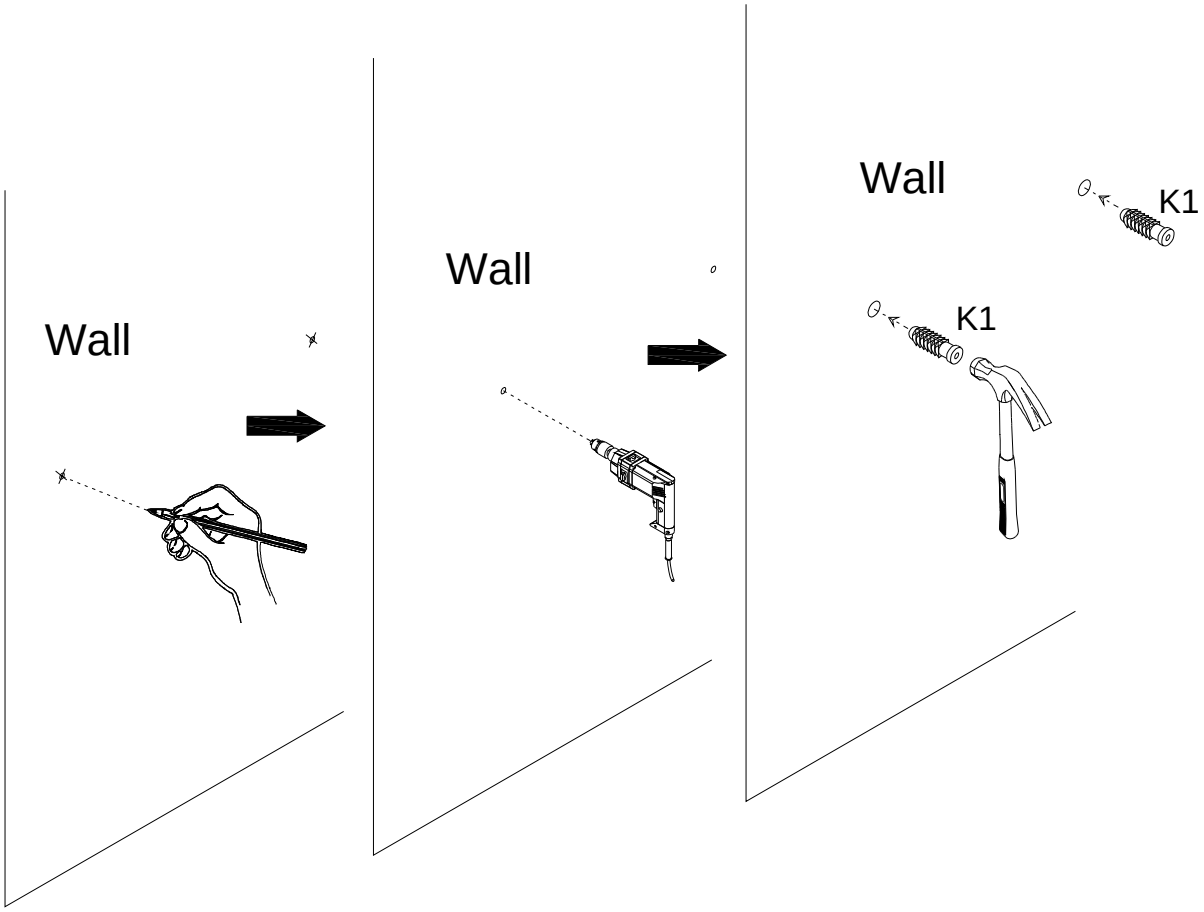




STEP 24

PF035

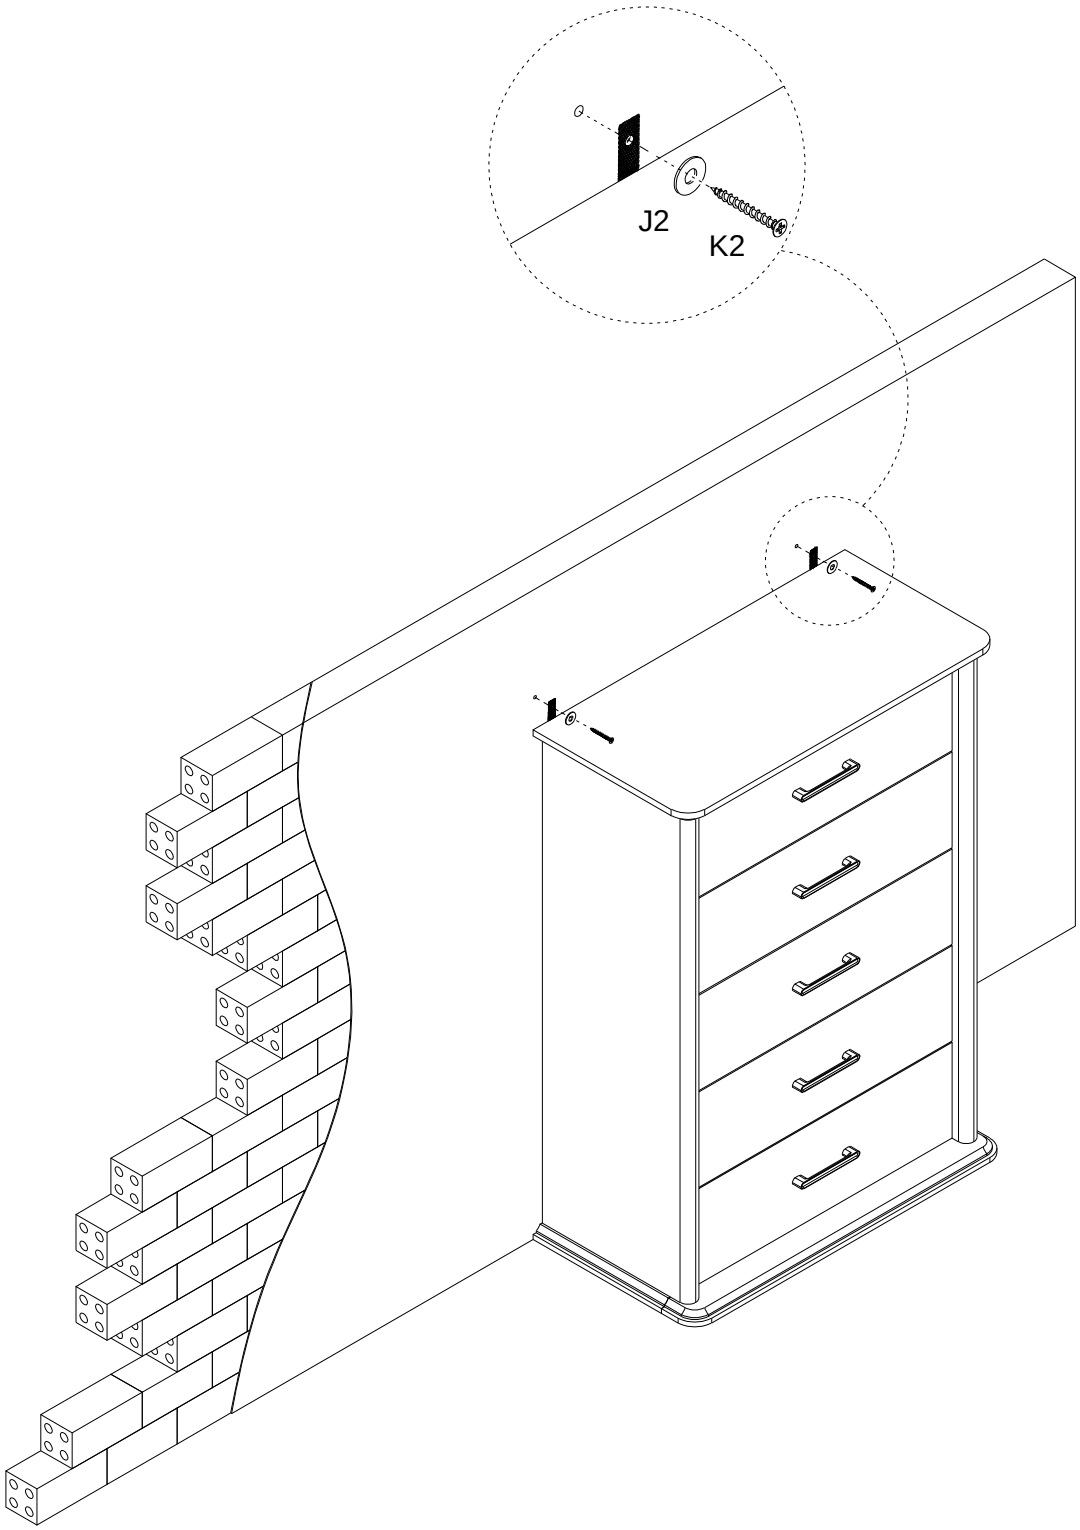



FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning