

# PRIVACY SCREENS

Outdoor Living  
Outdoor Dining  
Outdoor Seating  
Outdoor Lighting  
Outdoor Decor  
Outdoor Furniture  
Outdoor Plants  
Outdoor Pavers  
Outdoor Rugs  
Outdoor Umbrellas  
Outdoor Tables  
Outdoor Benches  
Outdoor Bar Stools  
Outdoor Chairs  
Outdoor Sofas  
Outdoor Cushions  
Outdoor Pillows  
Outdoor Storage  
Outdoor Storage Benches  
Outdoor Storage Cabinets  
Outdoor Storage Sheds  
Outdoor Storage Units  
Outdoor Storage Containers  
Outdoor Storage Bins  
Outdoor Storage Baskets  
Outdoor Storage Boxes  
Outdoor Storage Bags  
Outdoor Storage Containers  
Outdoor Storage Units  
Outdoor Storage Containers  
Outdoor Storage Units  
Outdoor Storage Containers  
Outdoor Storage Units



Scan to play Setup Video

English

# INTRODUCTION

Introducing the Highlander Home Inc. Screen assembly manual. In this manual, we will show you how to assemble your own Privacy Screen. Before beginning the assembly, make sure that there is ample room for installing and assembling your product. The amount of Base Shelf Trays with your assembly may also vary.



## WARNING

There is a maximum available weight of 10 KG per large basket, and 5 KG per small pole. Some steps might require the assistance of two people.

# PARTS & TOOLS CHECK LIST

Ensure that the following parts are included with your Privacy Screen. These are crucial components that will be the mainframe of your entire assembly.



Privacy Screen x1



Poles x2



Anchor Bolt x4



Bolt and Nut Assembly  
x10-12



Tek Screw  
x 10



Wood Screw  
x10



Lag Screw  
x10



Mallet Rubber Hammer  
x1



Phillips Screwdriver  
x1



Square Screwdriver  
x1



Hand Level  
x1



Power Drill with Phillips  
Head Drill Bit  
x1



Tape Measure  
x1




Adjustable Wrench  
x1

# PRIVACY SCREEN VARIANTS


There are unique patterns and variations for you to choose from for your ideal assembly of **the Privacy Screen**. Below are the available options that HighLander offers that suit your **desired** pattern and variation.



**Leaves**

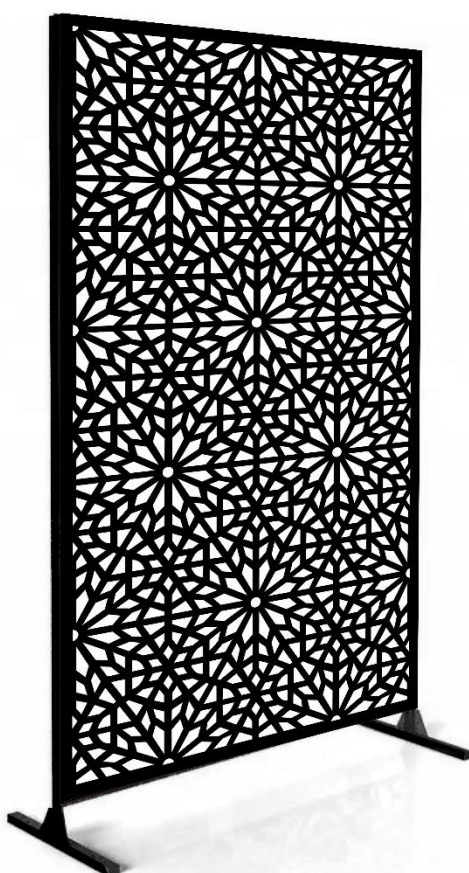

**Diamonds**

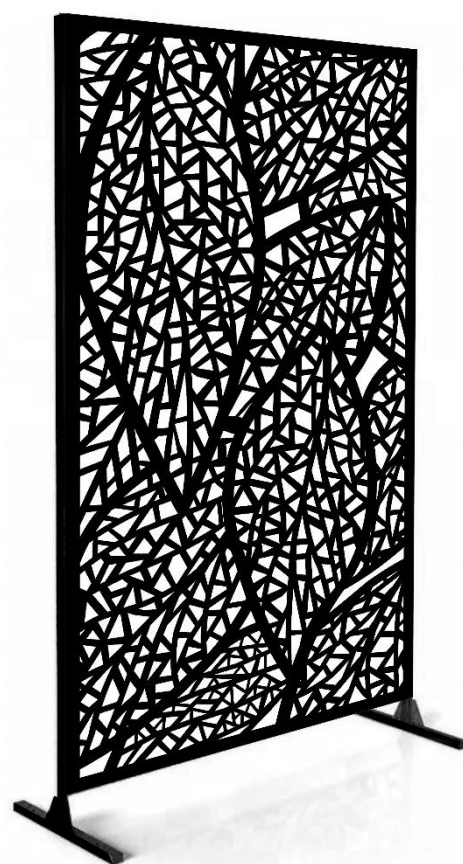


**Abstract**

# PARTS

Below is a breakdown of how the parts will come together for your final product, as detailed in a simplified exploded view below

**Poles**  
A total of two Poles will keep your screen secured to the ground.

**Privacy Screen**  
Your screen will be secured with two posts and Screw assemblies.

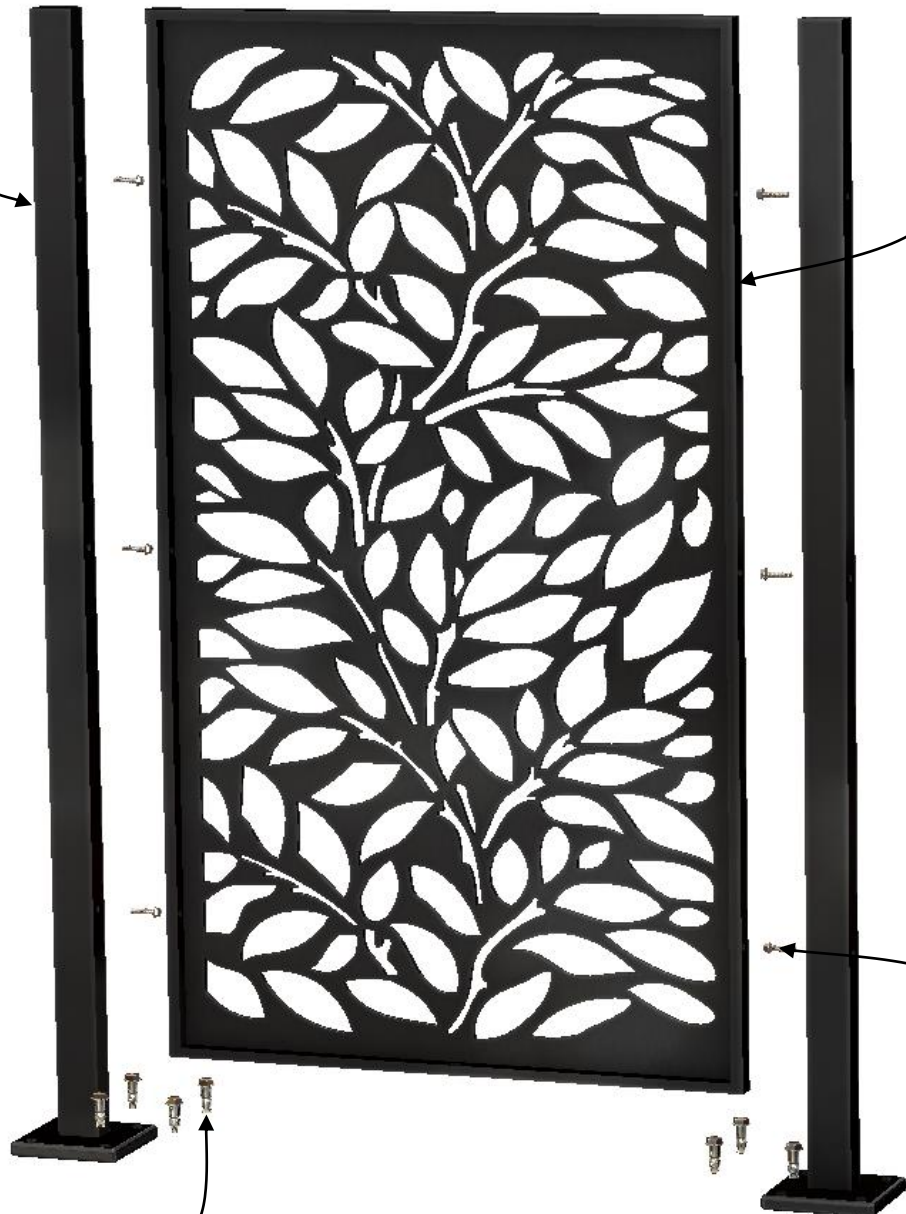

**Anchor Bolts (Optional)**  
4 anchor bolts per post to stationize your privacy screen

**Bolt and Nut Assembly**  
Dimensions of your door panel may vary, but should match with the general height of your cabinet. Please refer to pages 10 and 11 for further information

# OPTION 1

Not all installs require posts. Highlander Privacy Screens are designed to also be mounted to custom pillars, framed in wood, or other surfaces. It's as easy as just face mounting them or building a frame for them to sit in.

## HORIZONTAL 3 STACK MODULE



- The following pages will show how to install the privacy screen in Horizontal stack mode. If you wish to install the screen 2pc brackets, please refer to page 9.

Scan to play installation  
Video for Horizontal  
stack module




# INSTRUCTIONS

## Step 1 - Choose a desired location and measure




### 1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.

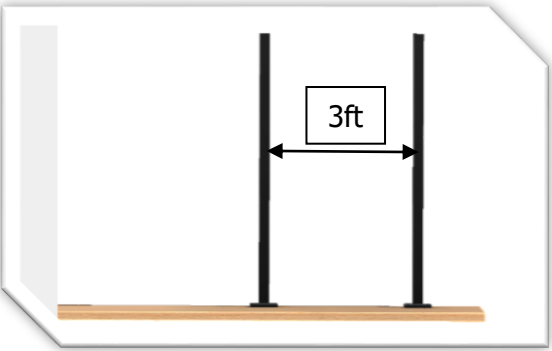

### 2. Install the posts and secure them 3 feet apart from inside

Once your desired location has been determined, mount the posts to the location and measure them 3 feet apart from each other from the inside, as shown.

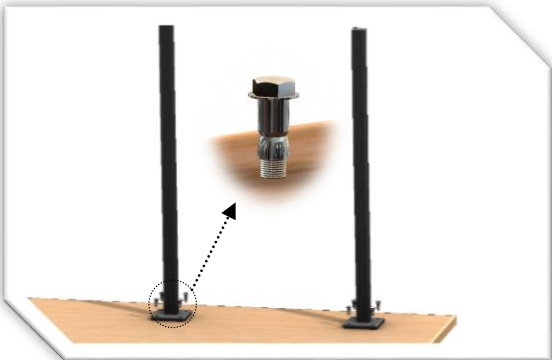

### 3. Secure the posts

Verify that the measurements are exact and adequate. **Once the measurements have been verified, secure both posts** using a total of four bolts, two on each corner of the post, as shown. Use a square screwdriver to secure these bolts. Take care not to over tighten the bolts.


# INSTRUCTIONS

## Step 2 - Install the privacy screen



### 1. Locate the poles and line up into place

Begin Step Two by locating the privacy screen to the inner sections of the post and line up the poles to the holes, as shown. Have another person assist you and keep the screen intact.

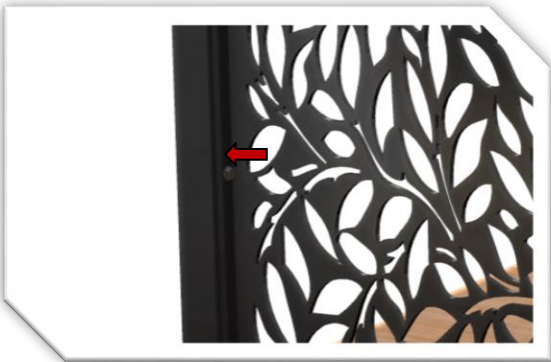

### 2. Secure the privacy screen using screws

Secure the privacy screen using a total of six screws, **three for each side**. **Tighten the screws using a square screwdriver.**



### 3. Repeat these steps for the remaining hardware and opposite side.

**Next, secure the Sheet to the pole using a total of six screws on the other side too.** Tighten the screws using a square screwdriver. Repeat these steps for the remaining screws and sheets.




### 4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient.**

# OPTION 2

Not all installs require posts. Highlander Privacy Screens are designed to also be mounted to custom pillars, framed in wood, or other surfaces. It's as easy as just face mounting them or building a frame for them to sit in.

## 3pcs Vertical Installation

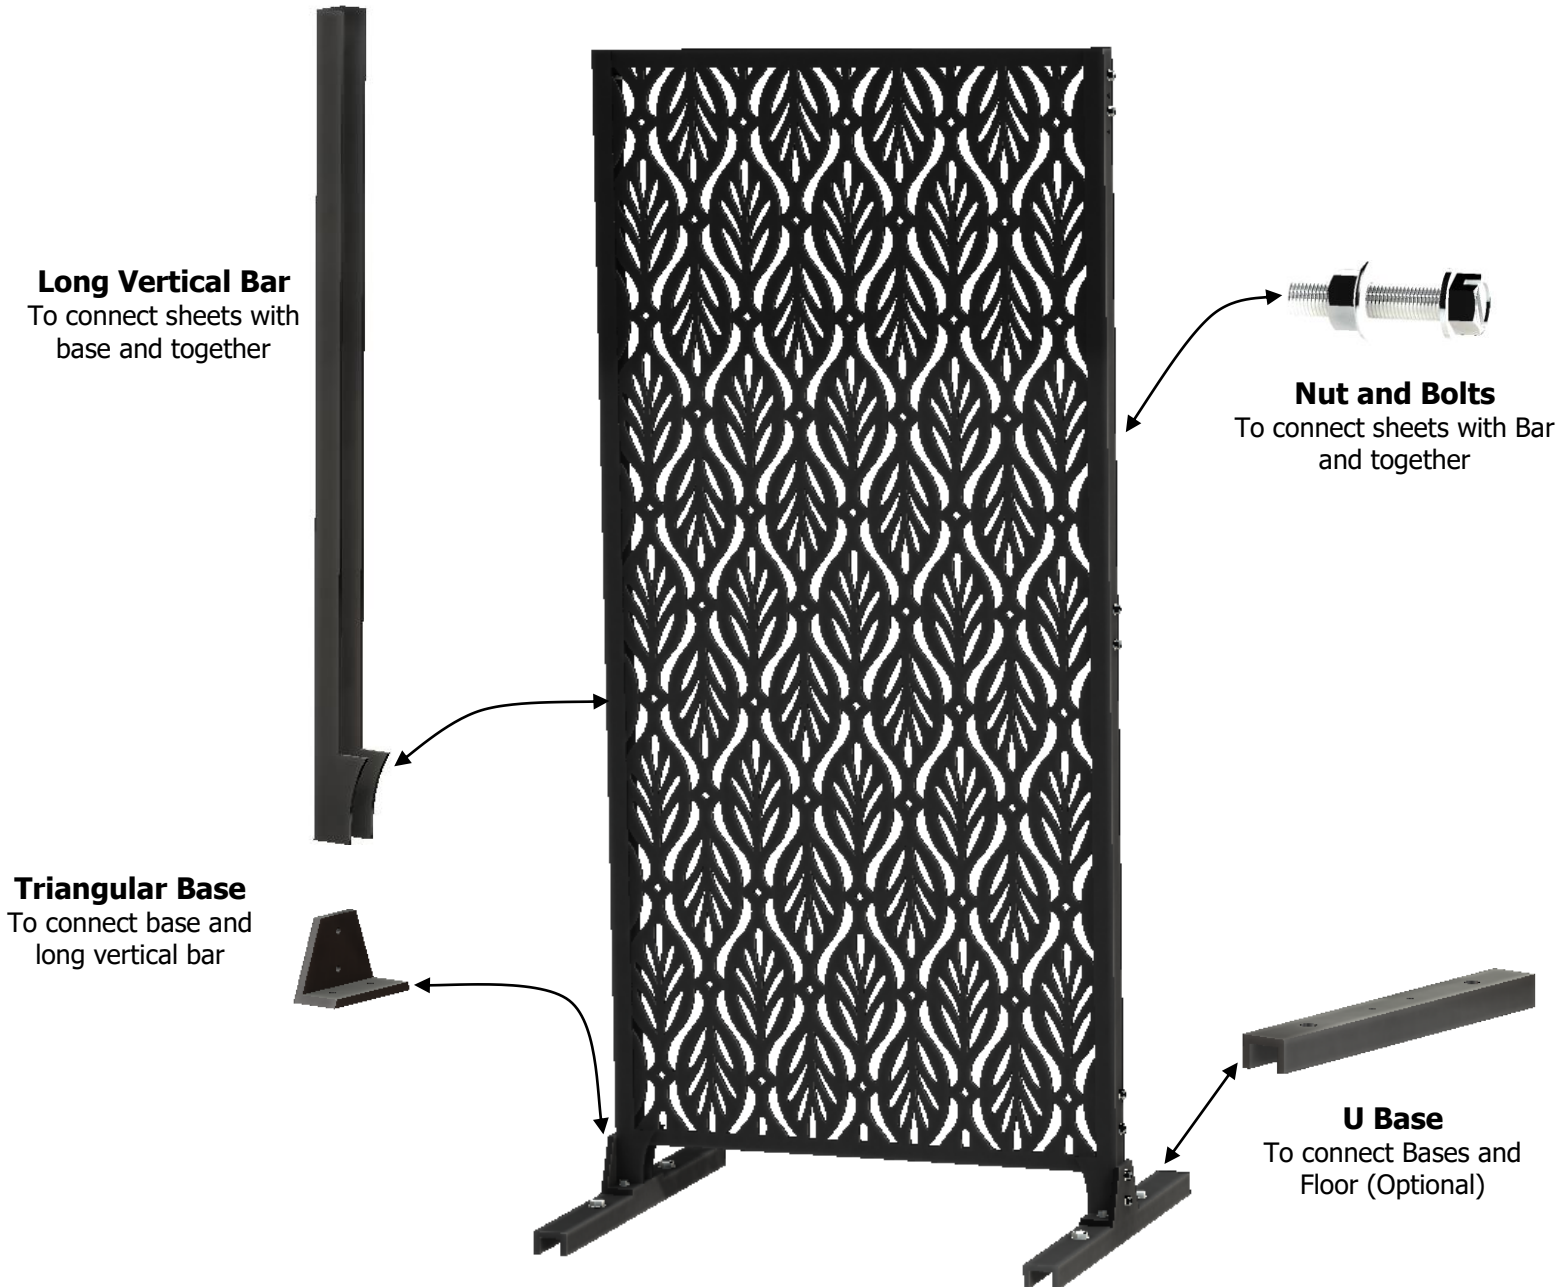

- The following pages will show how to install the privacy screen in 3pc module. If you wish to install the screen with the provided single brackets, please refer to page 5

Scan to play installation  
Video for 3pc module




# INSTRUCTIONS

## Step 1 - Choose a desired location and measure




### 1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.

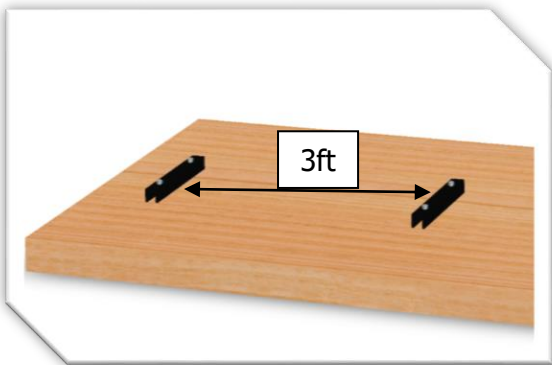

### 2. Install the posts Base and secure them (OPTIONAL) 3 feet apart from inside

Once your desired location has been determined, mount the posts to the location and measure them 3 feet apart from each other from the inside, as shown.

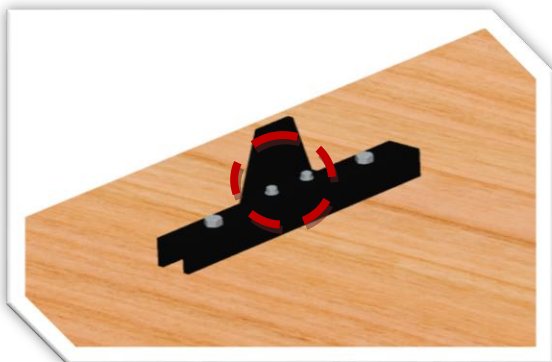

### 3. Secure the Base with triangular Part

Verify that the measurements are exact and adequate. **Once the measurements have been verified, secure both posts** using a total of four bolts, two on each corner of the post Bases, as shown. Use a square screwdriver to secure these bolts. Take care not to over tighten the bolts.




### 4. Install the Vertical Pole and secure it.

Locate the pole and align it to the top of the triangular part. Secure the pole to the posts base by Screws.


# INSTRUCTIONS

## Step 2 - Install the privacy screen

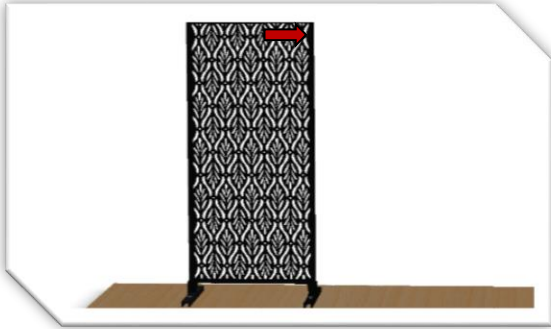


### 1. Locate the poles and line up into place

Begin Step Two by locating the privacy screen to the inner sections of the post and line up the sheet to the holes, as shown. Have another person assist you and keep the screen intact.

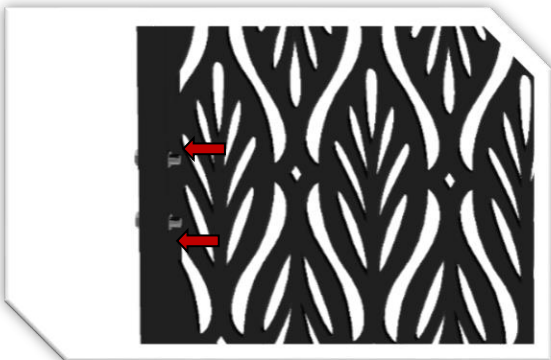

### 2. Secure the privacy screen using screws

Secure the privacy screen using a total of twelve screws, **Six for each side. Tighten the screws using a square screwdriver.**

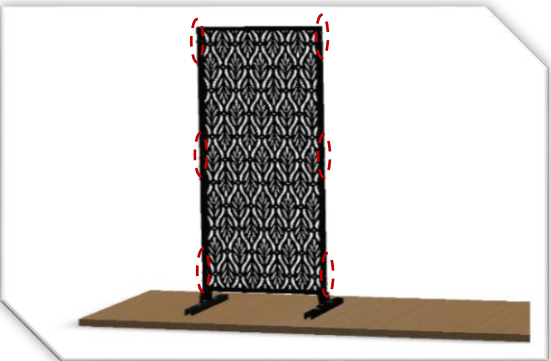

### 3. Repeat these steps for the remaining hardware.

**Next, secure the sheet to the bar using screws with Vertical Bar from other side too.**



### 4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient.**

# Technical support

Get in touch with us and we'd love to answer all your questions or comments. We have our team ready to help with anything you need.



**123.456.78900**



**info@youshouldhaveit.com**