




① Step one: Align the Velcro strips.

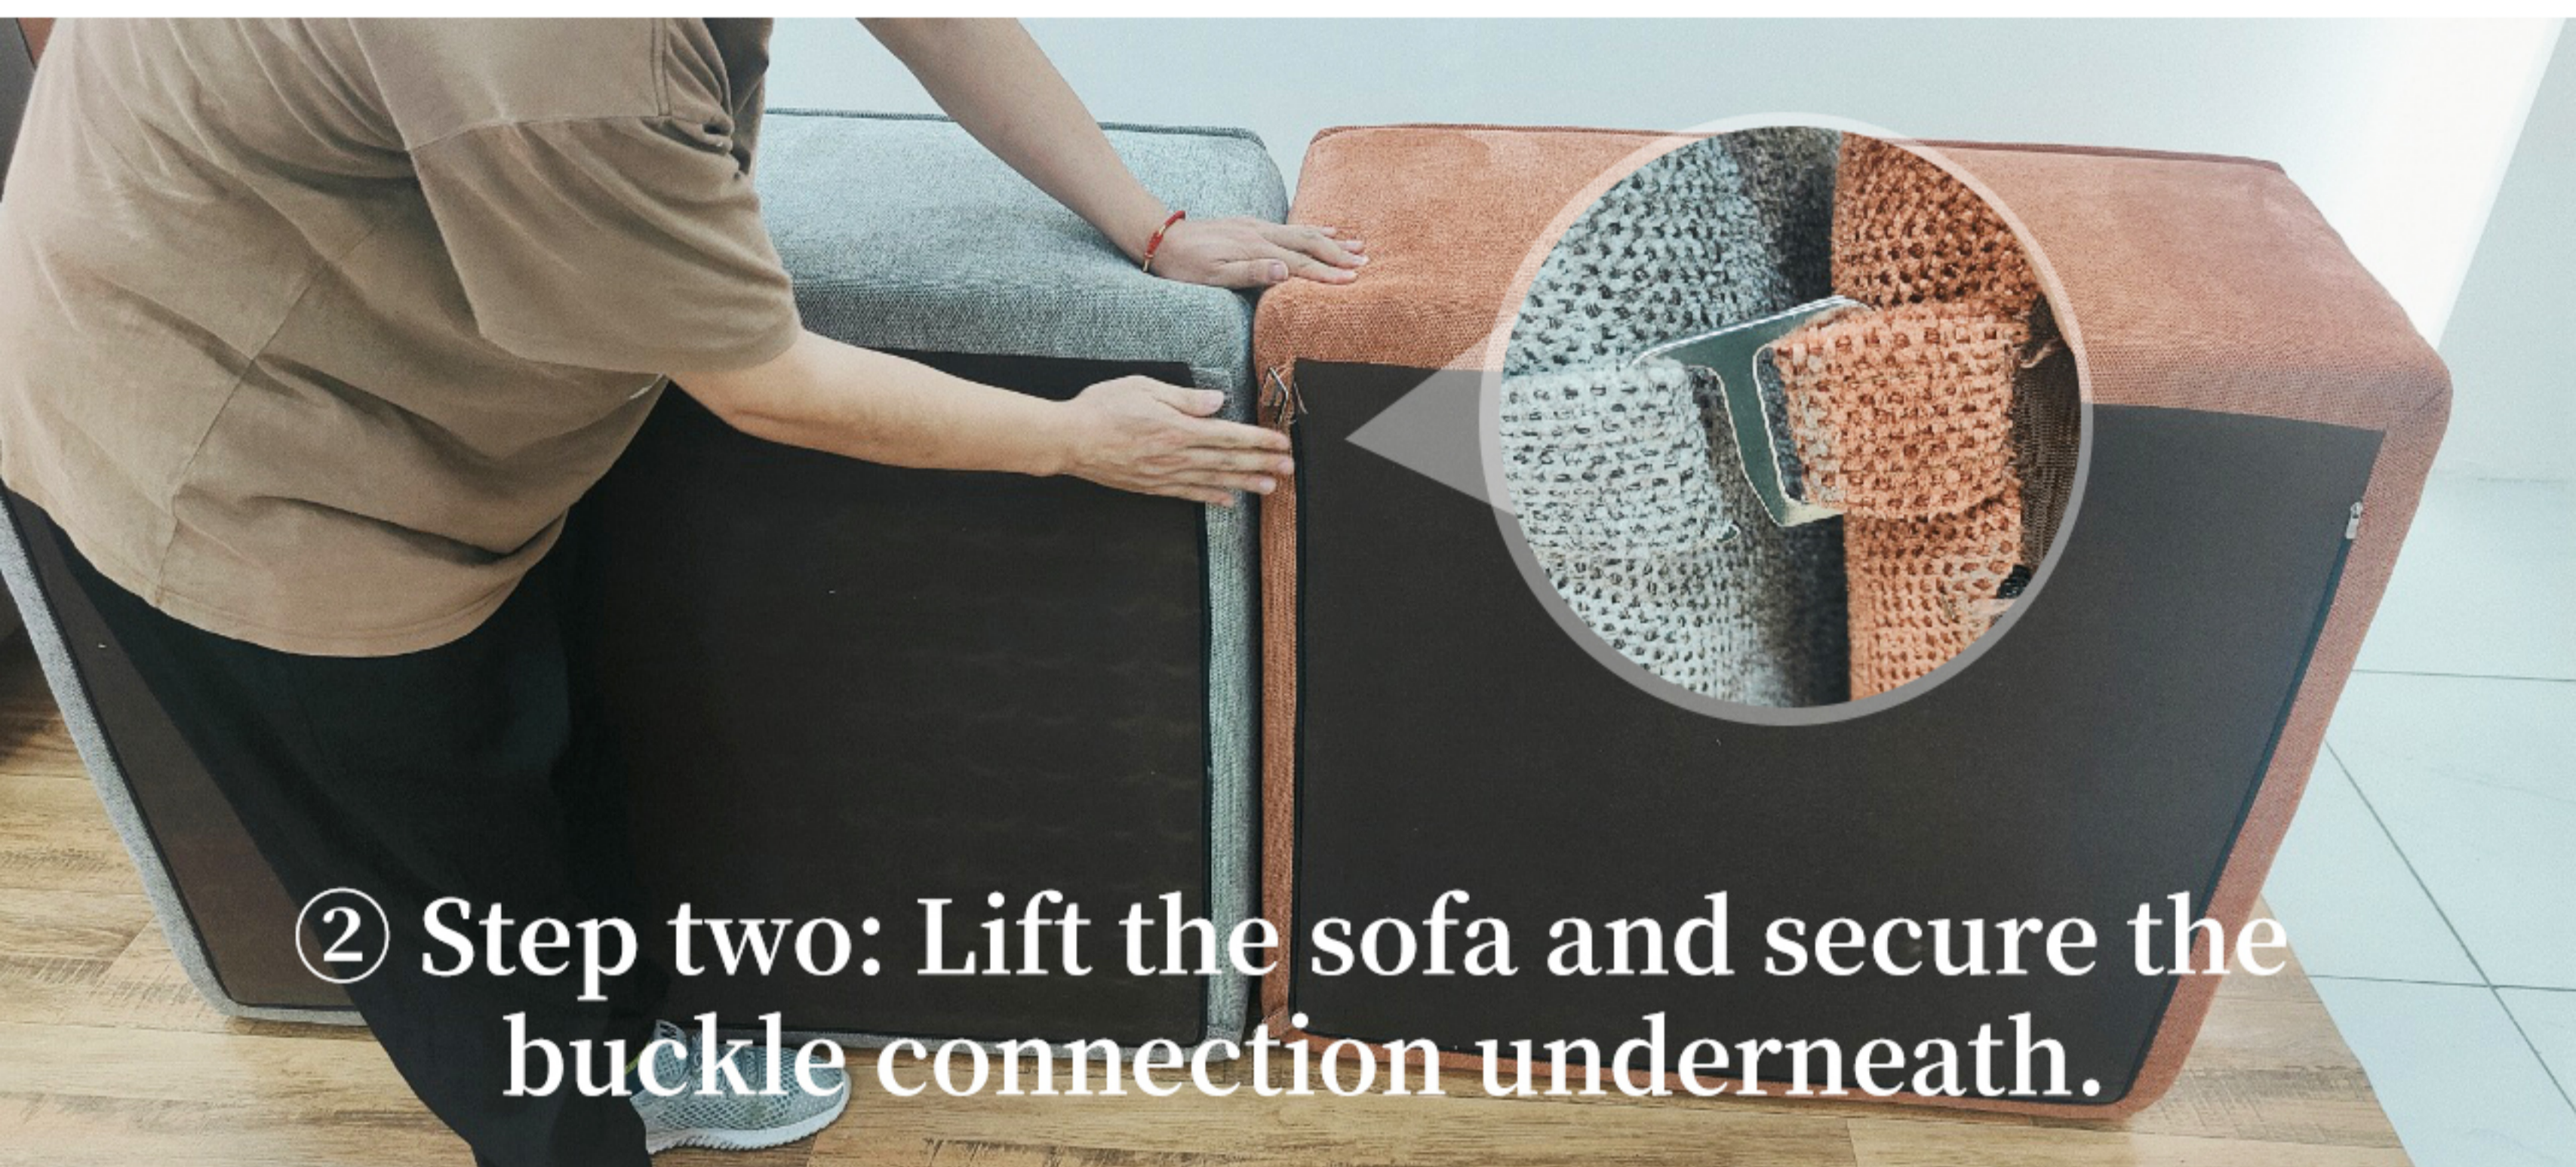

② Step two: Lift the sofa and secure the buckle connection underneath.



③ Step three: Attach the grey seat cushion and orange back cushion using the Velcro, then fasten the buckle.



④ Connect the white back cushion to the two seat cushions with the Velcro and fasten the buckle.



⑤ Final step: Position the grey armrest freely — installation complete.