


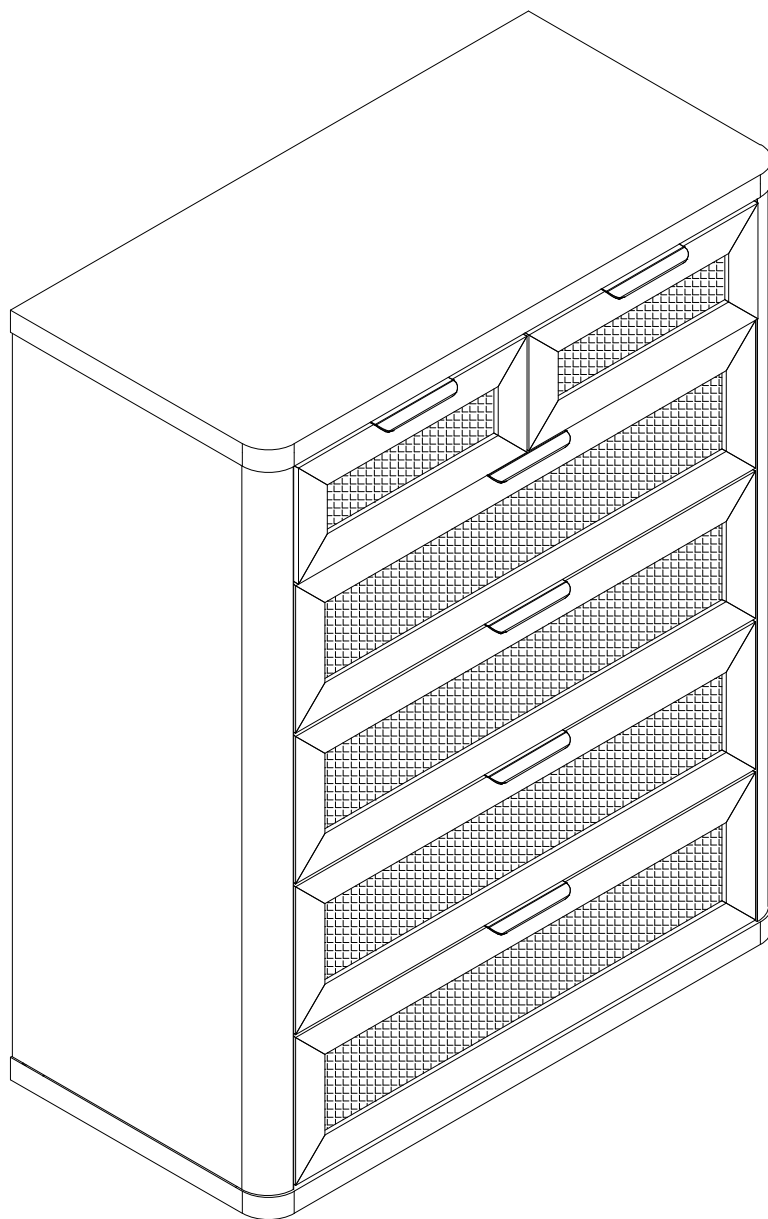

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product


- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

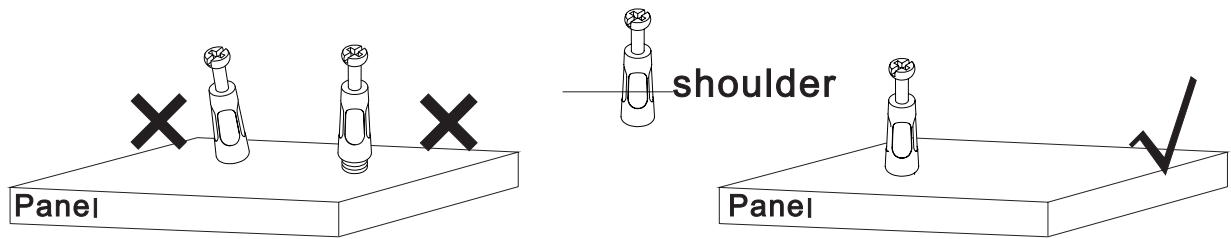


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

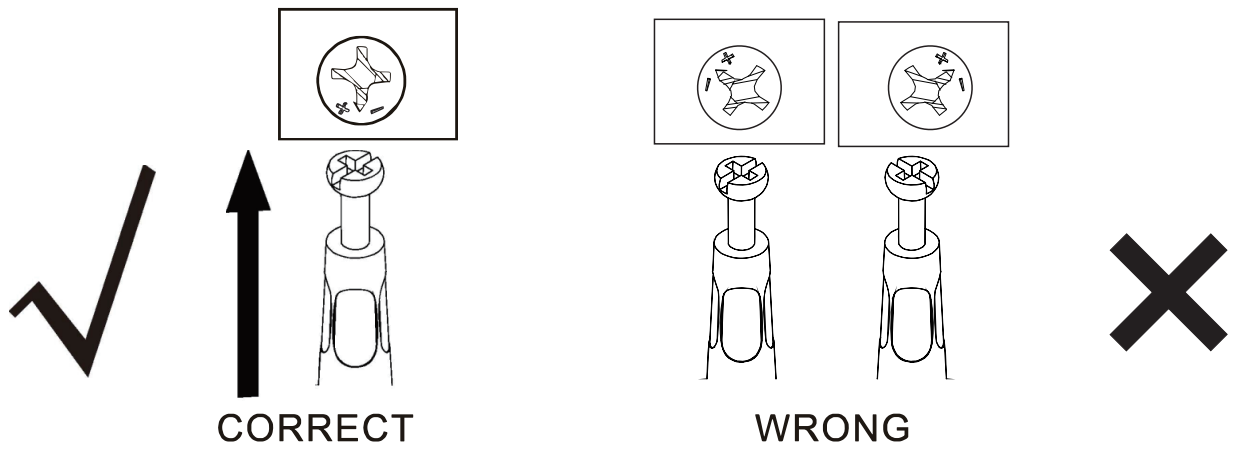

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.


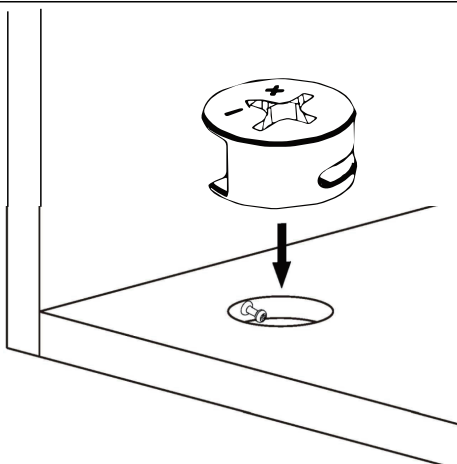


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

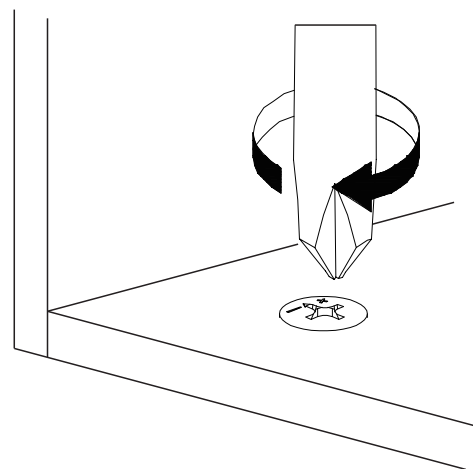



















Turn cam lock clockwise to tighten.

PART LIST





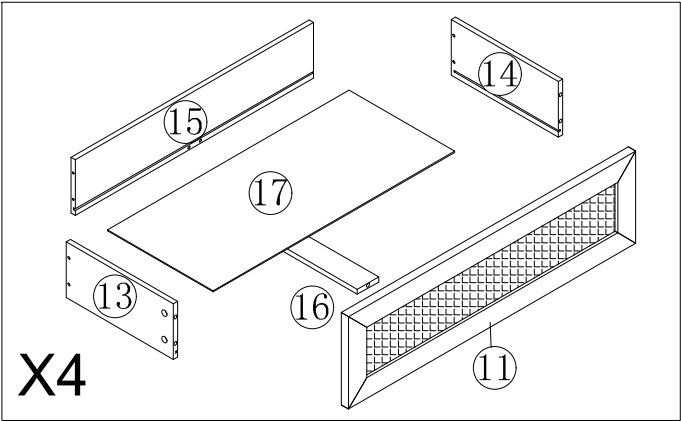
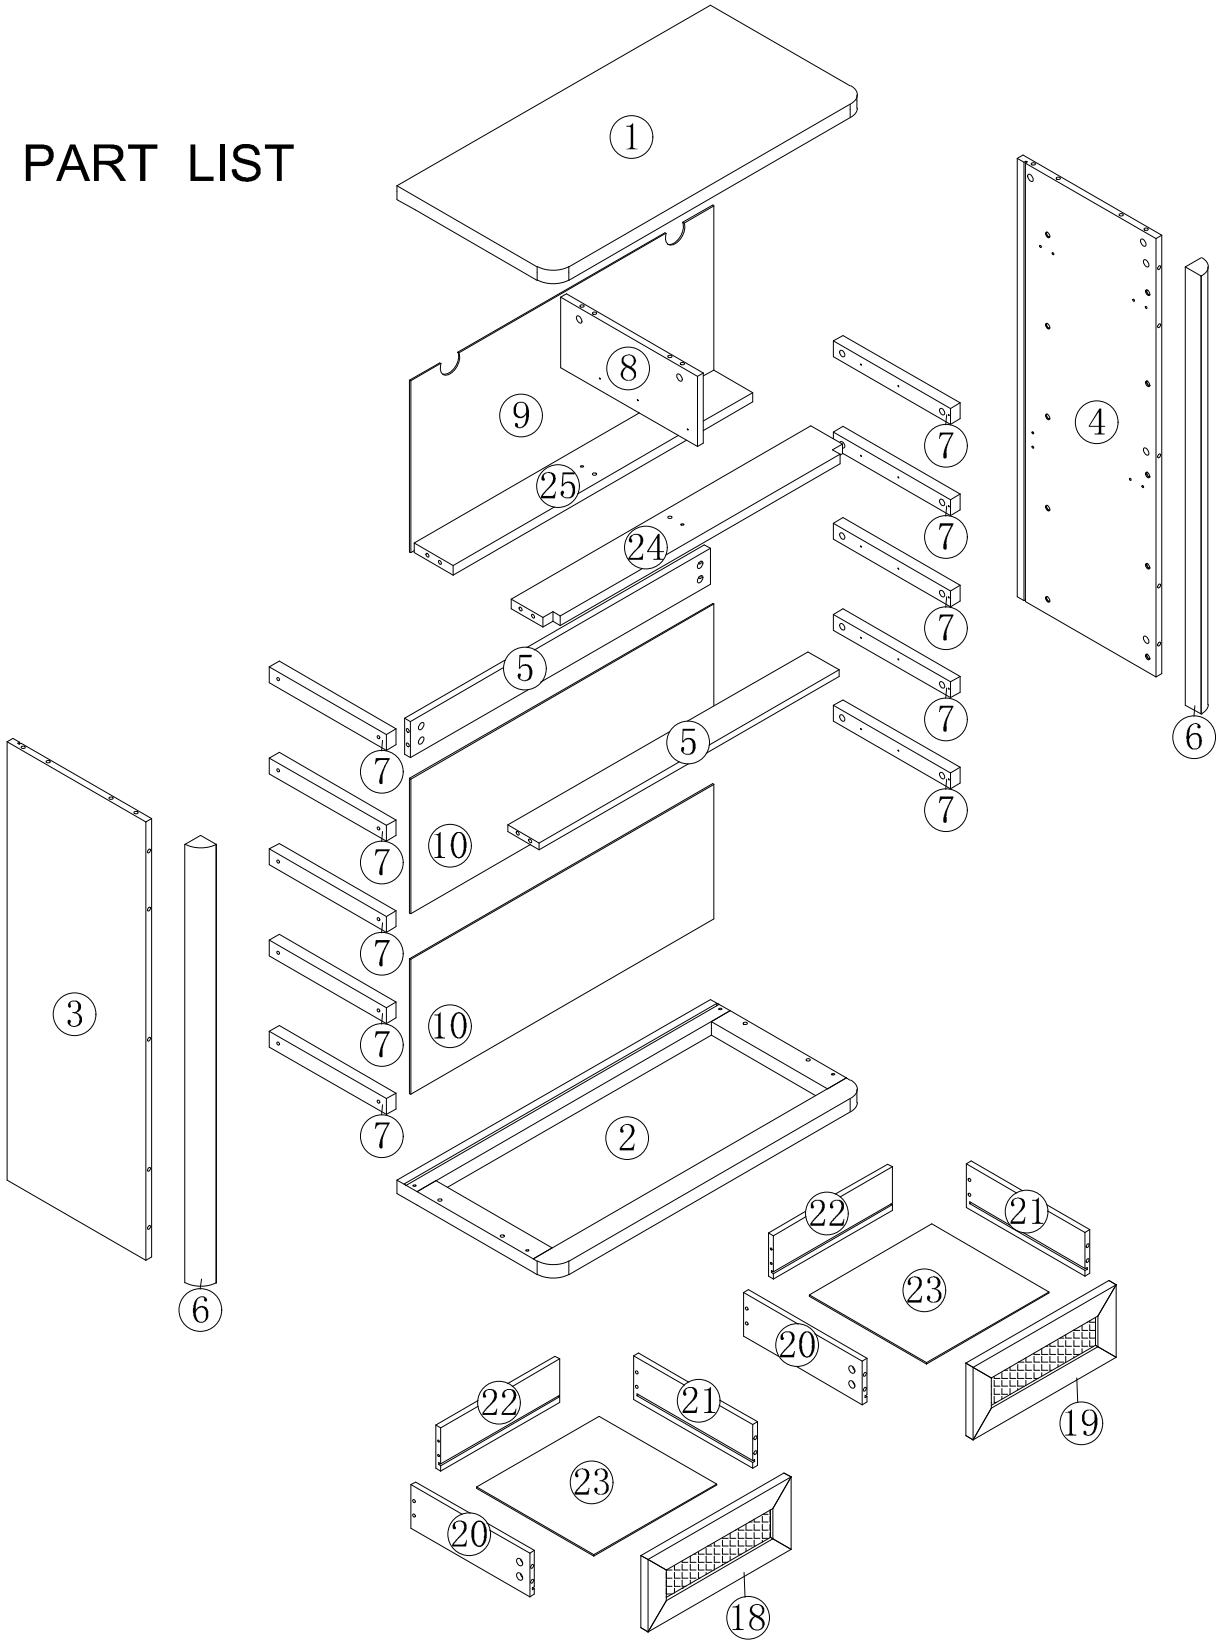


X4












PART LIST

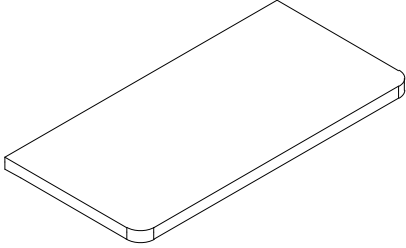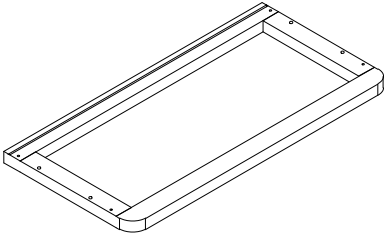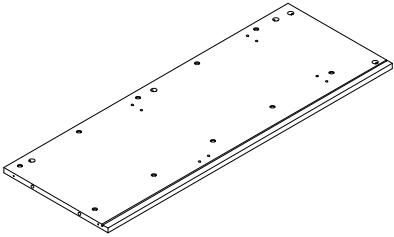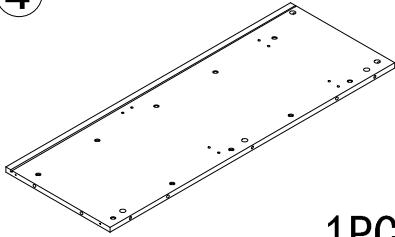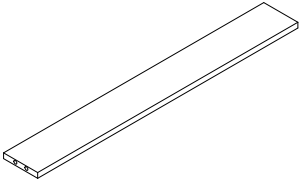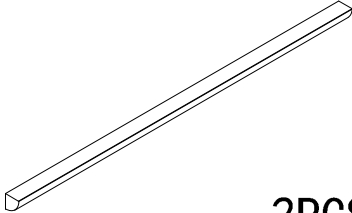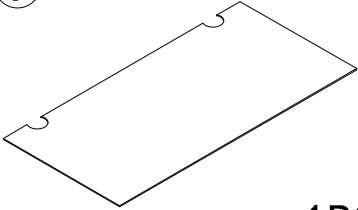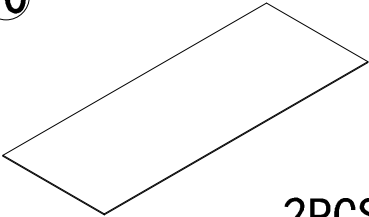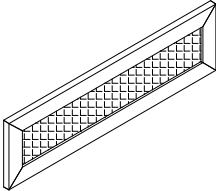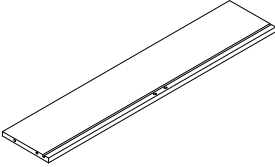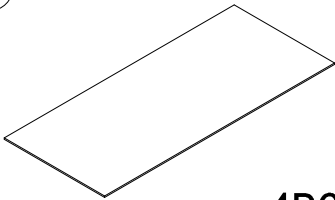①  1PC	②  1PC	③  1PC
④  1PC	⑤  2PCS	⑥  2PCS
⑦  10PCS	⑧  1PC	⑨  1PC
⑩  2PCS	⑪  4PCS	⑬  4PCS
⑭  4PCS	⑮  4PCS	⑯  4PCS
⑰  4PCS	⑱  1PC	⑲  1PC

PART LIST

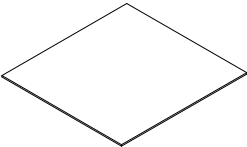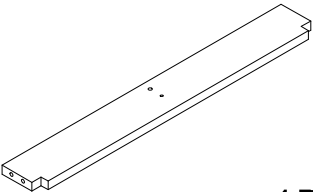
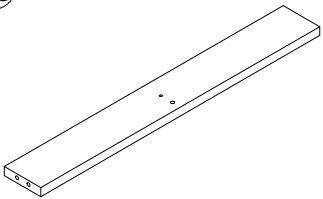
20  2PCS	21  2PCS	22  2PCS
23  2PCS	24  1PC	25  1PC

HARDWARE LIST

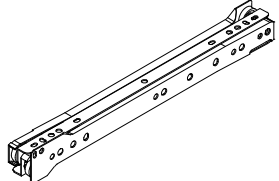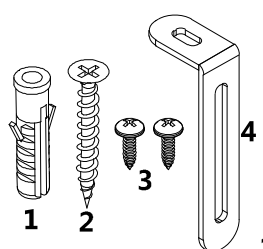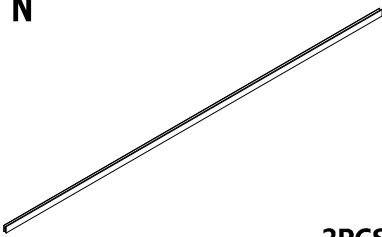
A  ø6X35 (56+3)PCS	B  ø15X9.5 (56+3)PCS	C  ø1/4X25 (20+2)PCS
D  ø8X30 (16+1)PCS	E  ø5X40 (38+3)PCS	F  6PCS
G  (4+1)PCS	H  (10+1)PCS	I  ø3X15 (10+1)PCS
J  6PCS	K  ø3X12 (51+3)PCS	L  ø4X12 (33+2)PCS
M  2SET	N  2PCS	 1PC
 3PCS		




J X 6SET

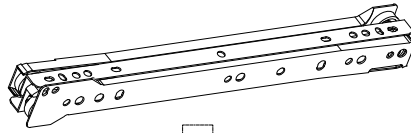


CL




CR




DL



DR

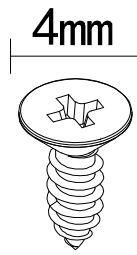


L

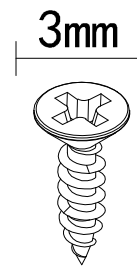


K




M =




1



2




3

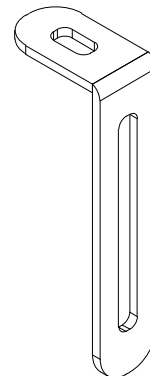



4

STEP 1

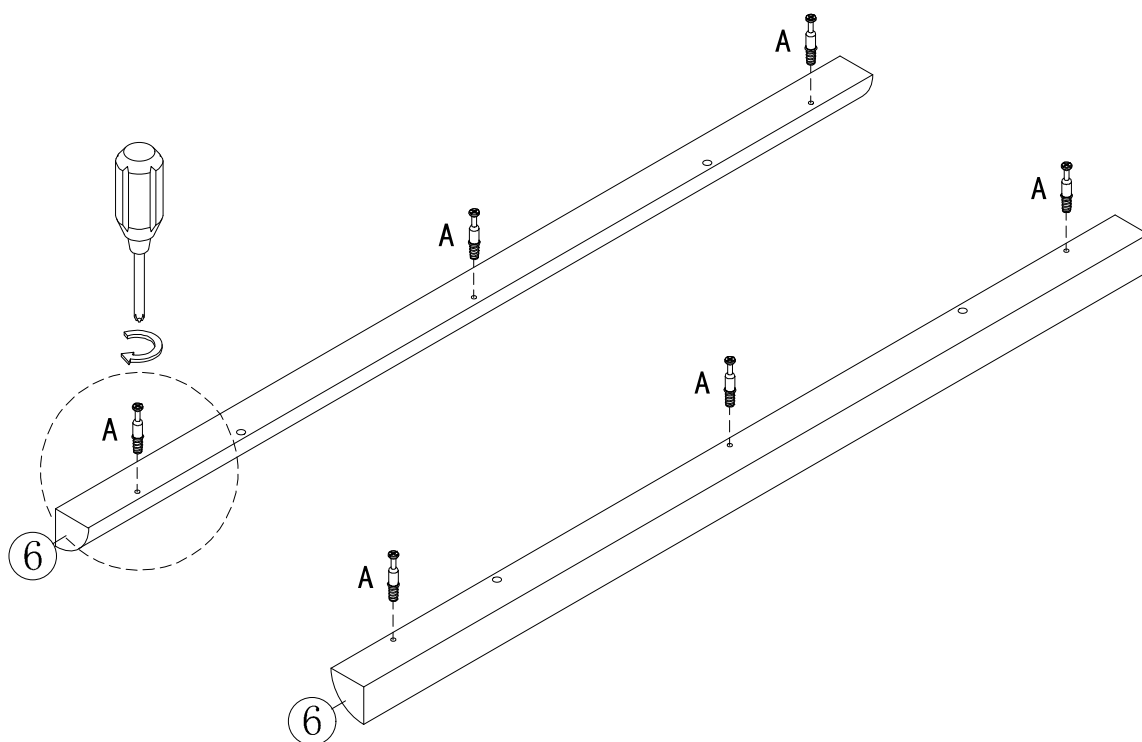


	A X 6PCS
--	----------

STEP 2

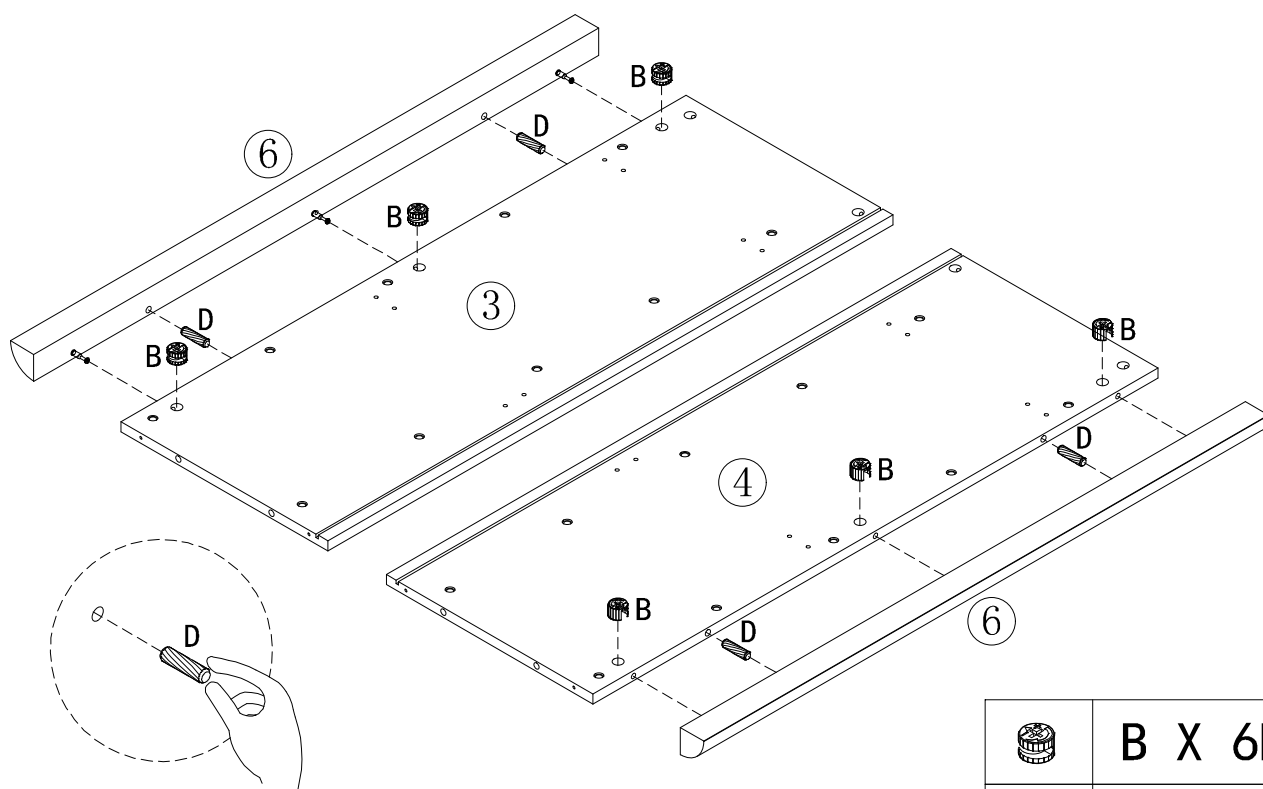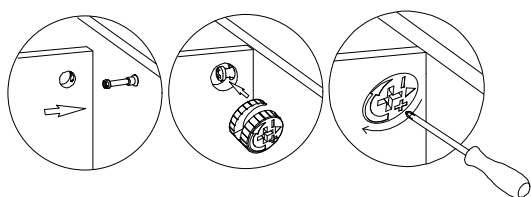


	B X 6PCS
	D X 4PCS

STEP 3

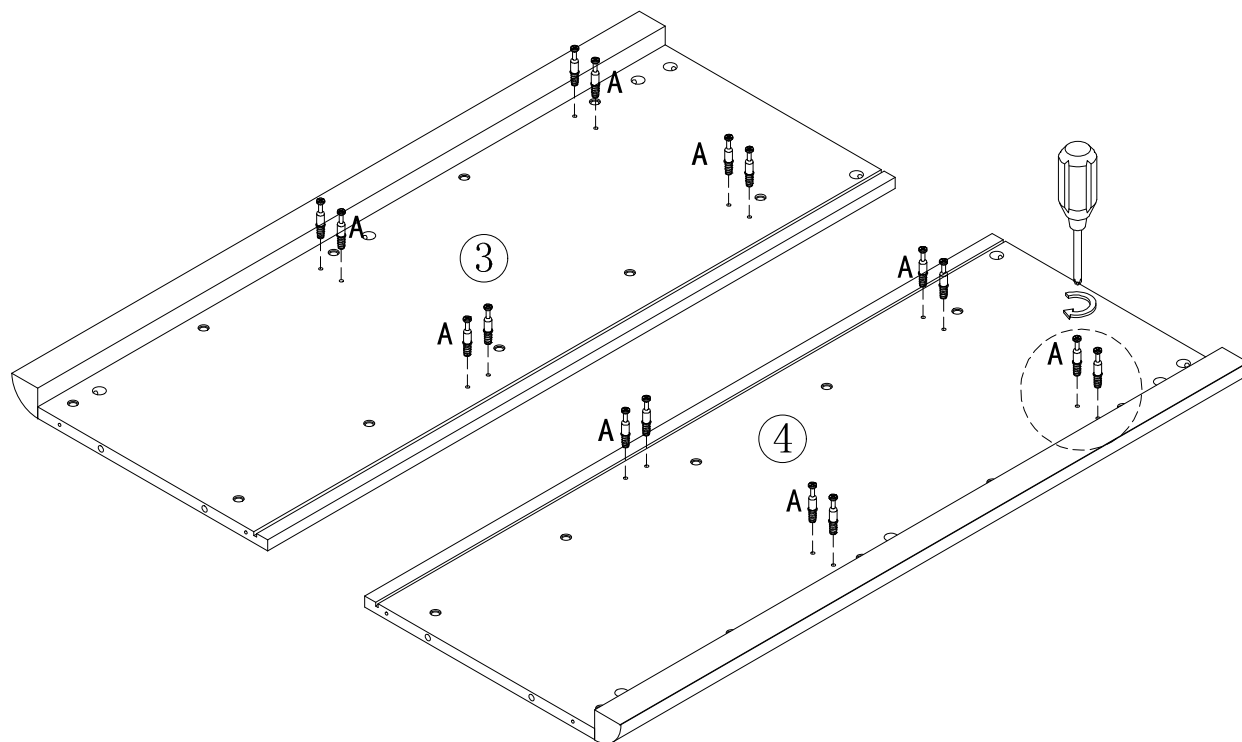


A X 16PCS

STEP 4




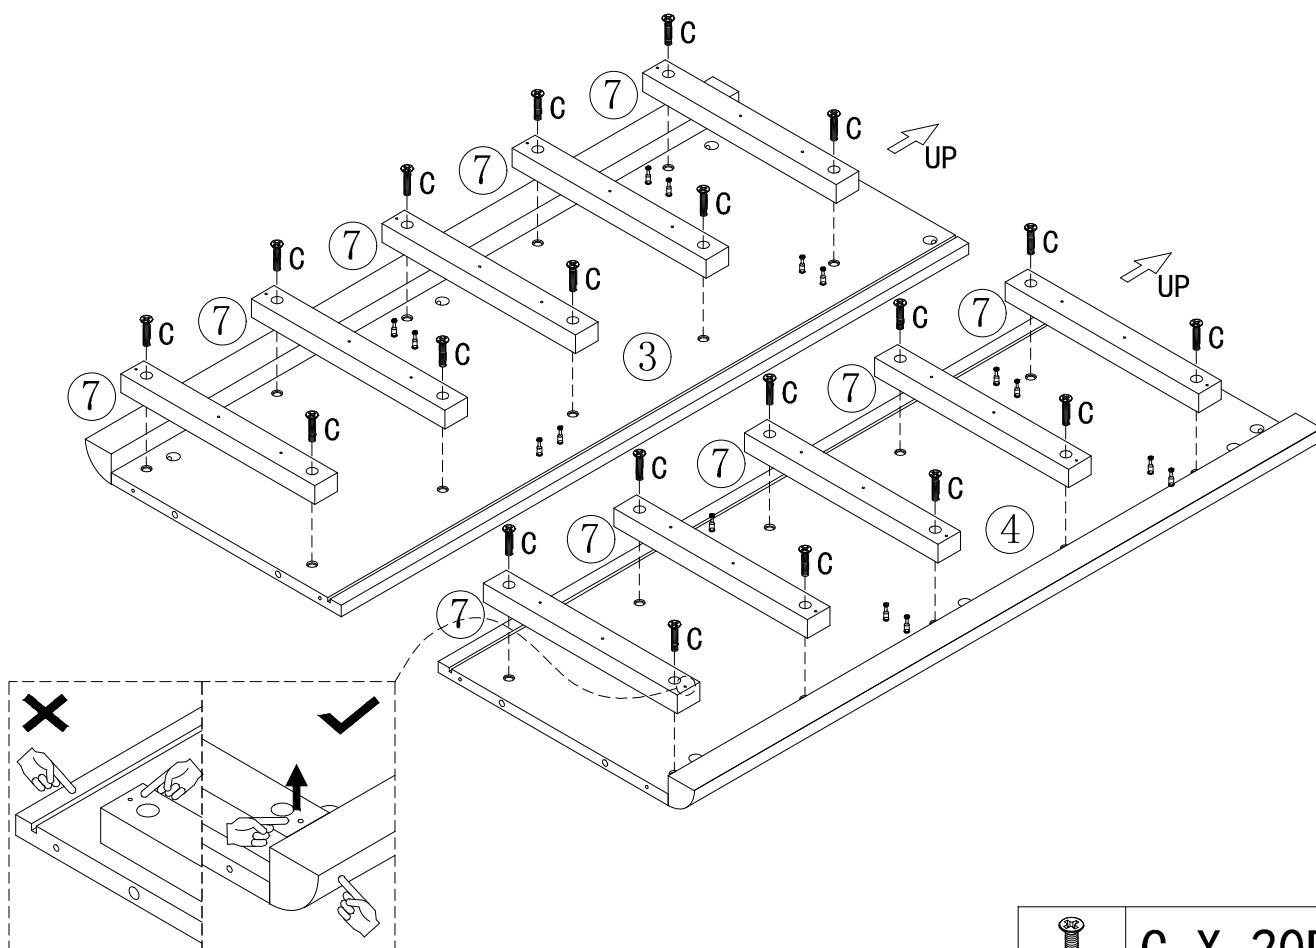


C X 20PCS

STEP 5

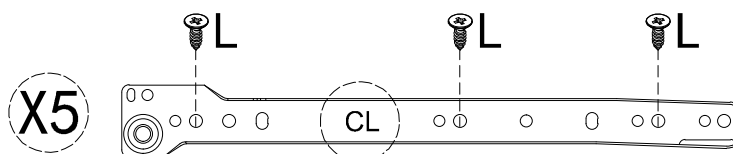


Pay attention to the hole position.

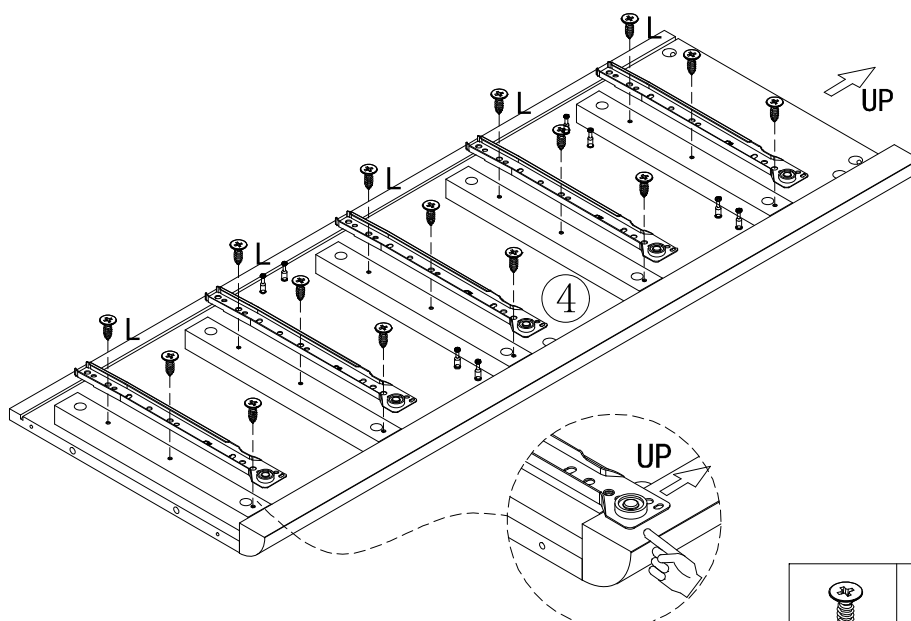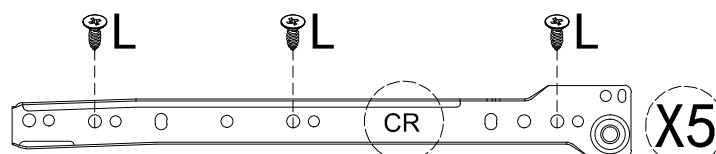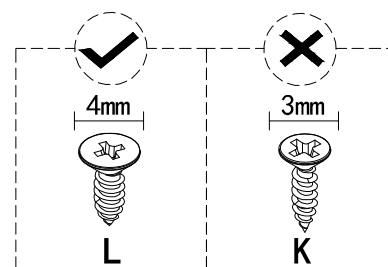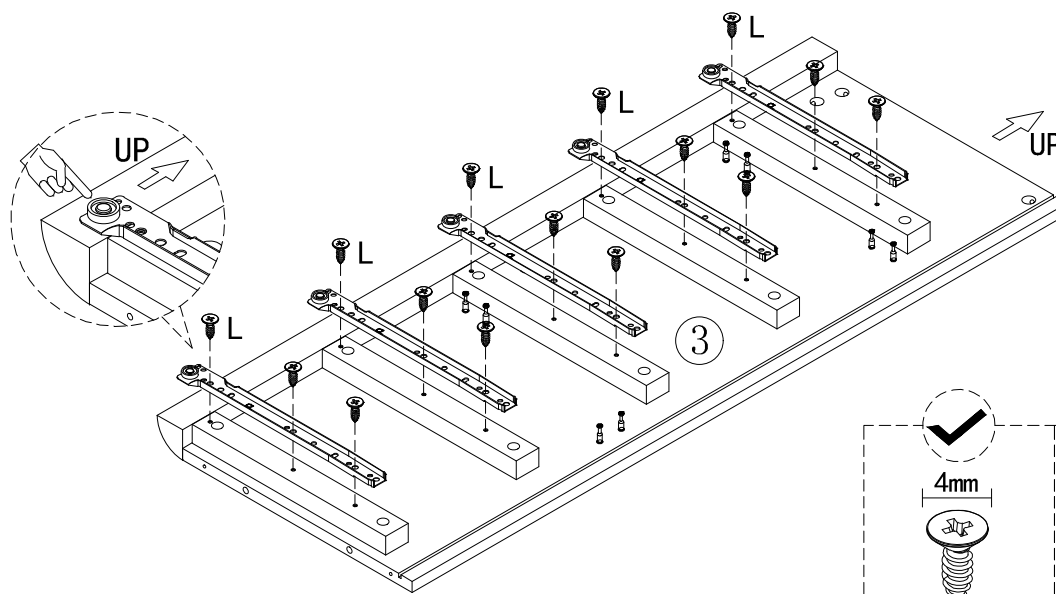


 L X 30PCS

STEP 6

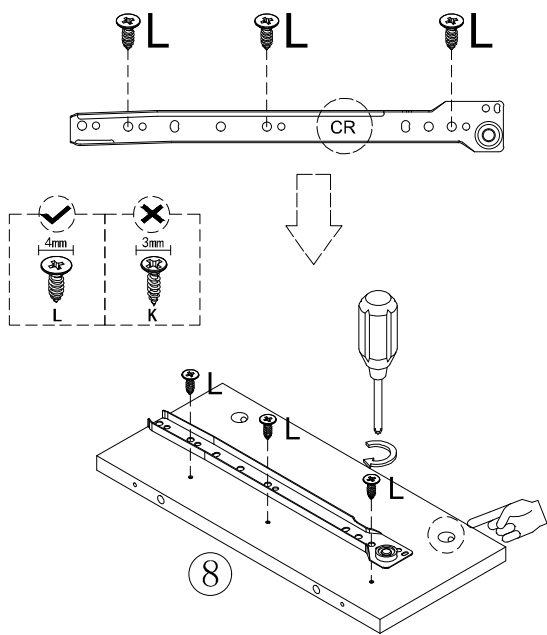

X1

X1

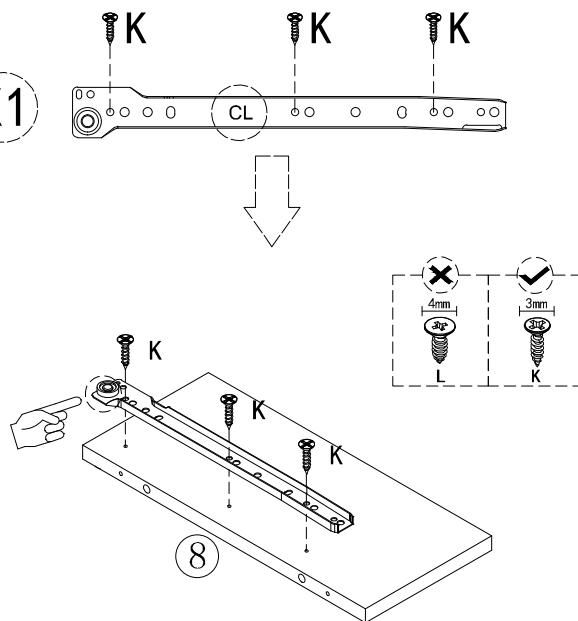

Pay attention to the hole position.


1

ROTATE 180°

2


	L X 3PCS
	K X 3PCS

STEP 7

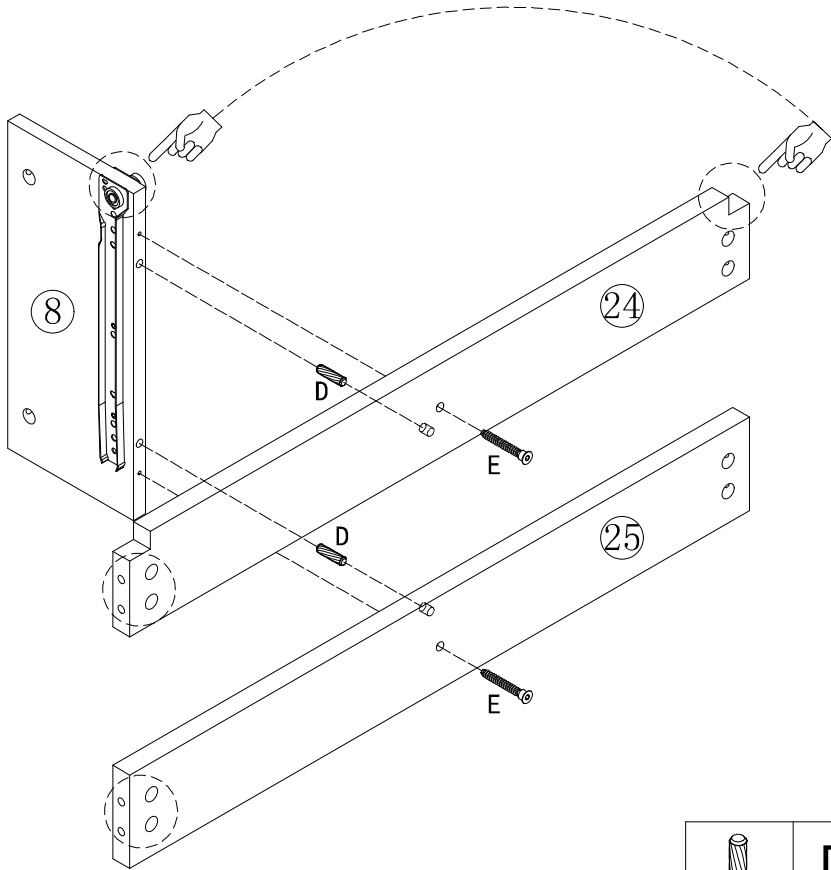


	D X 2PCS
	E X 2PCS

STEP 8

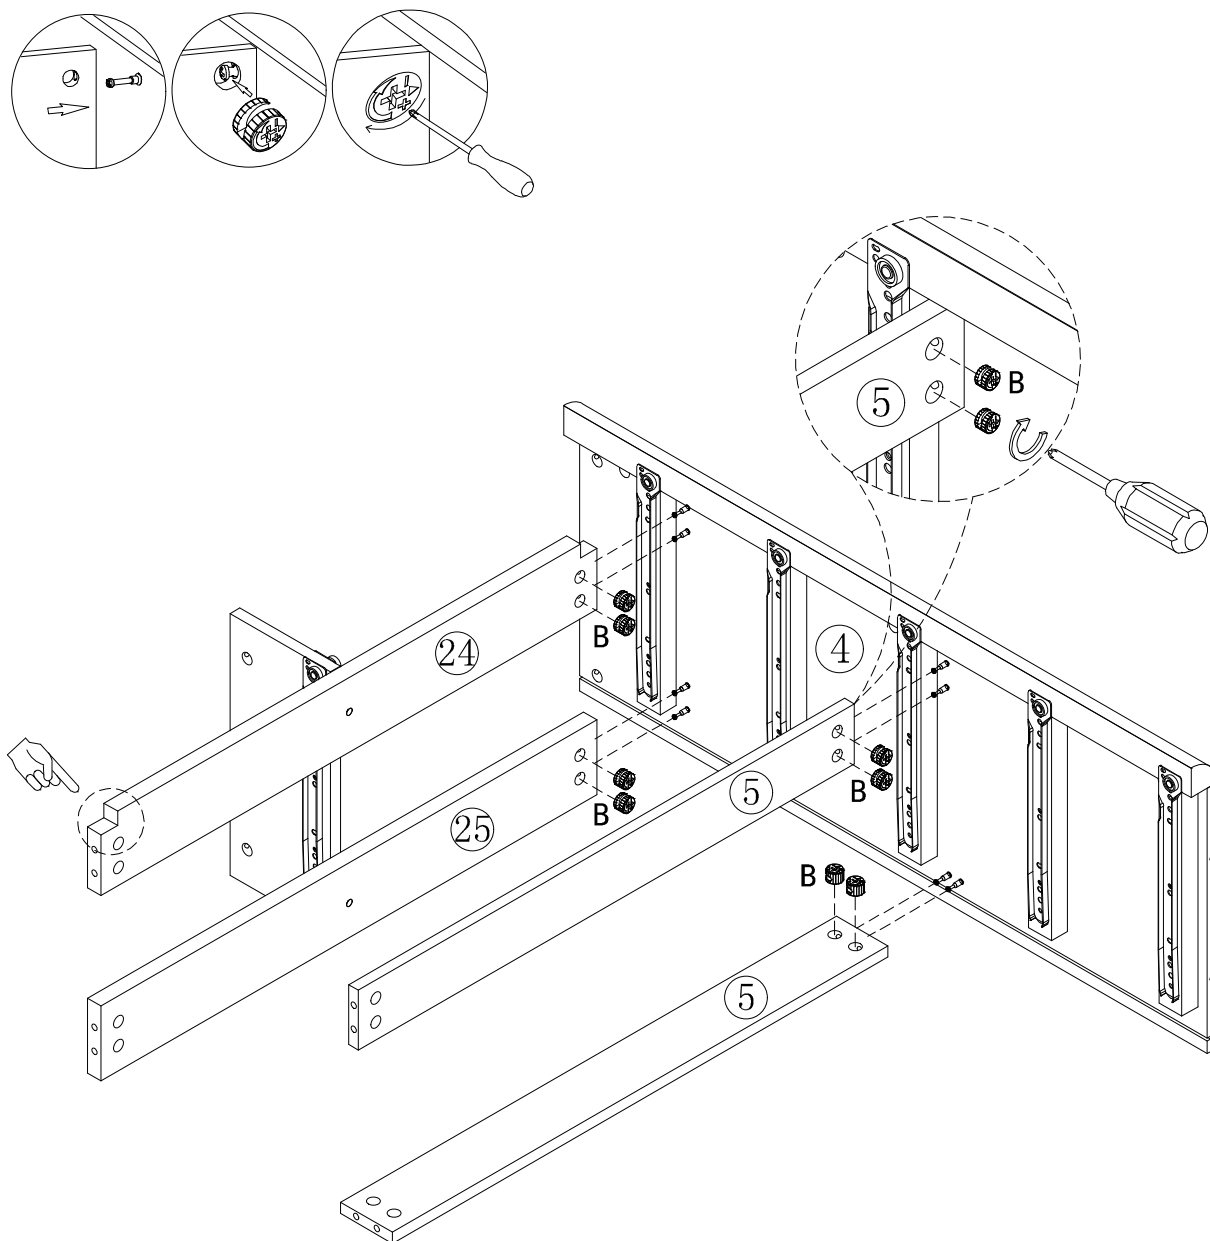


B X 8PCS

STEP 9

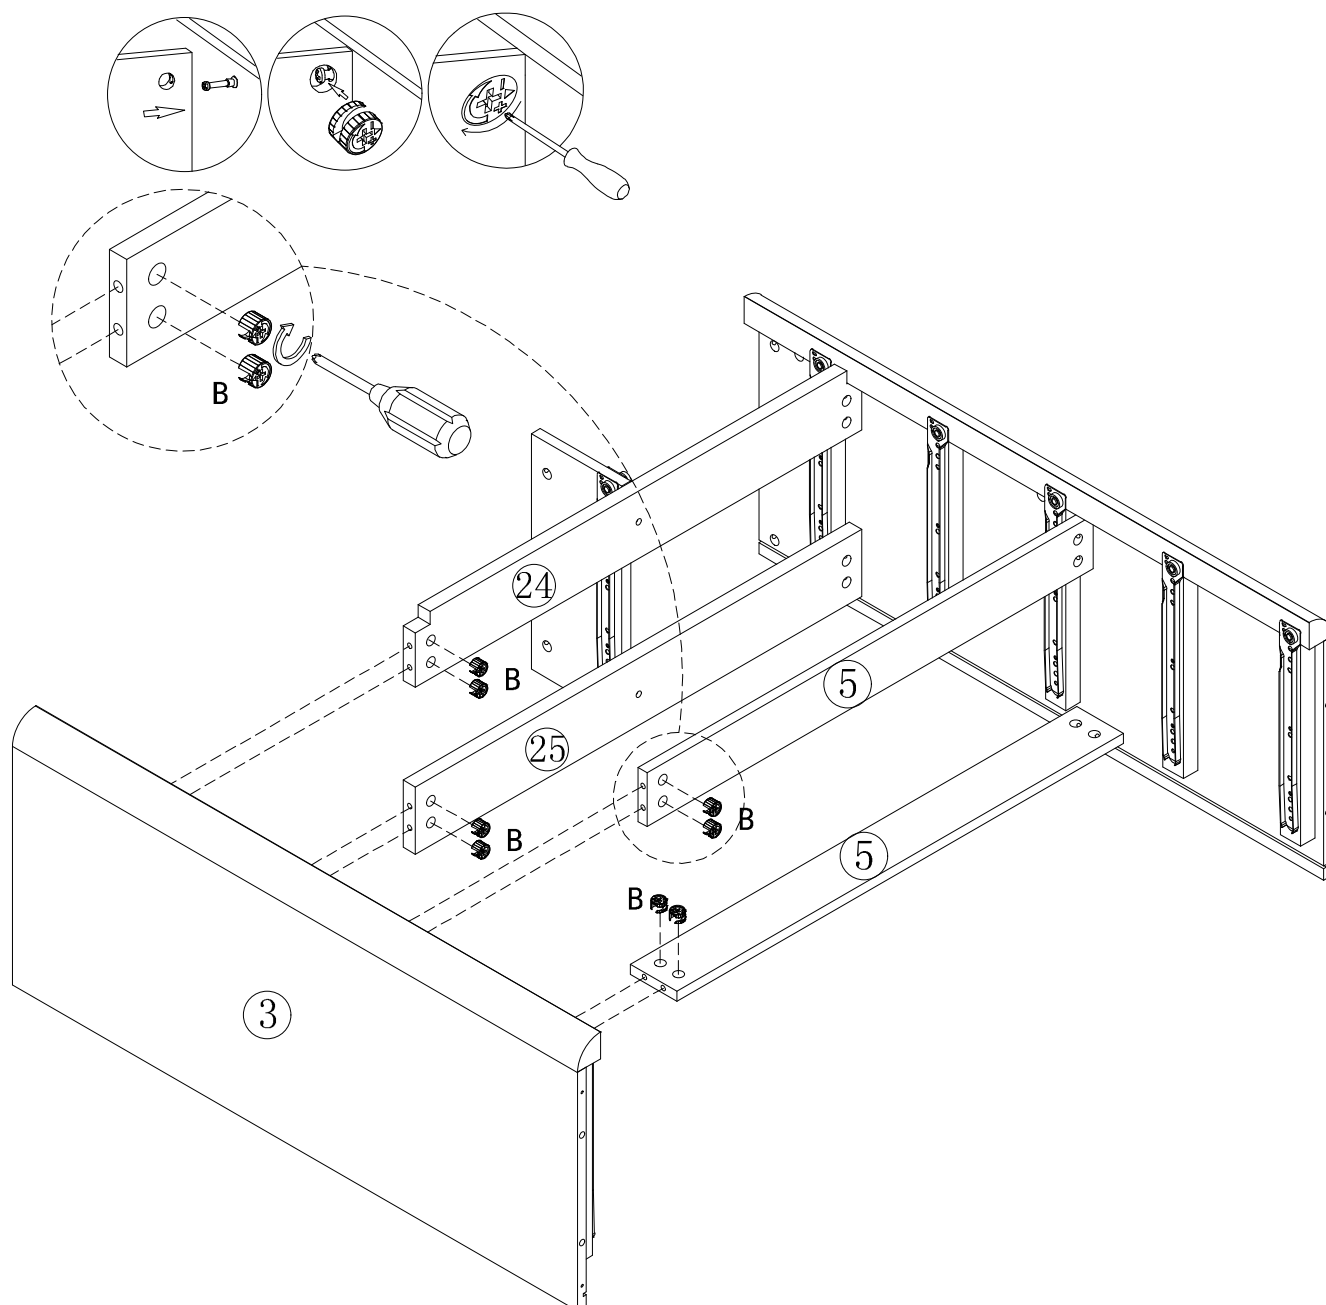


B X 8PCS

STEP 10

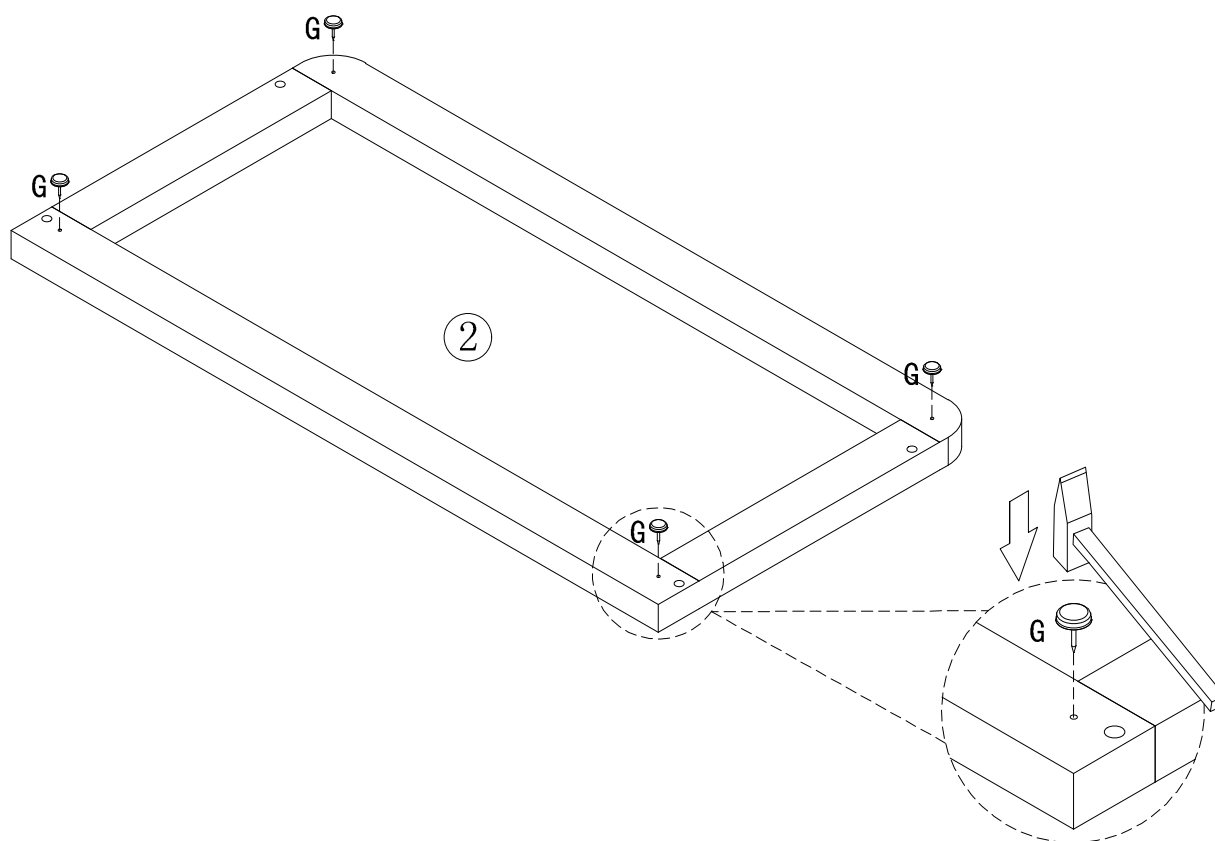


G X 4PCS

STEP 11

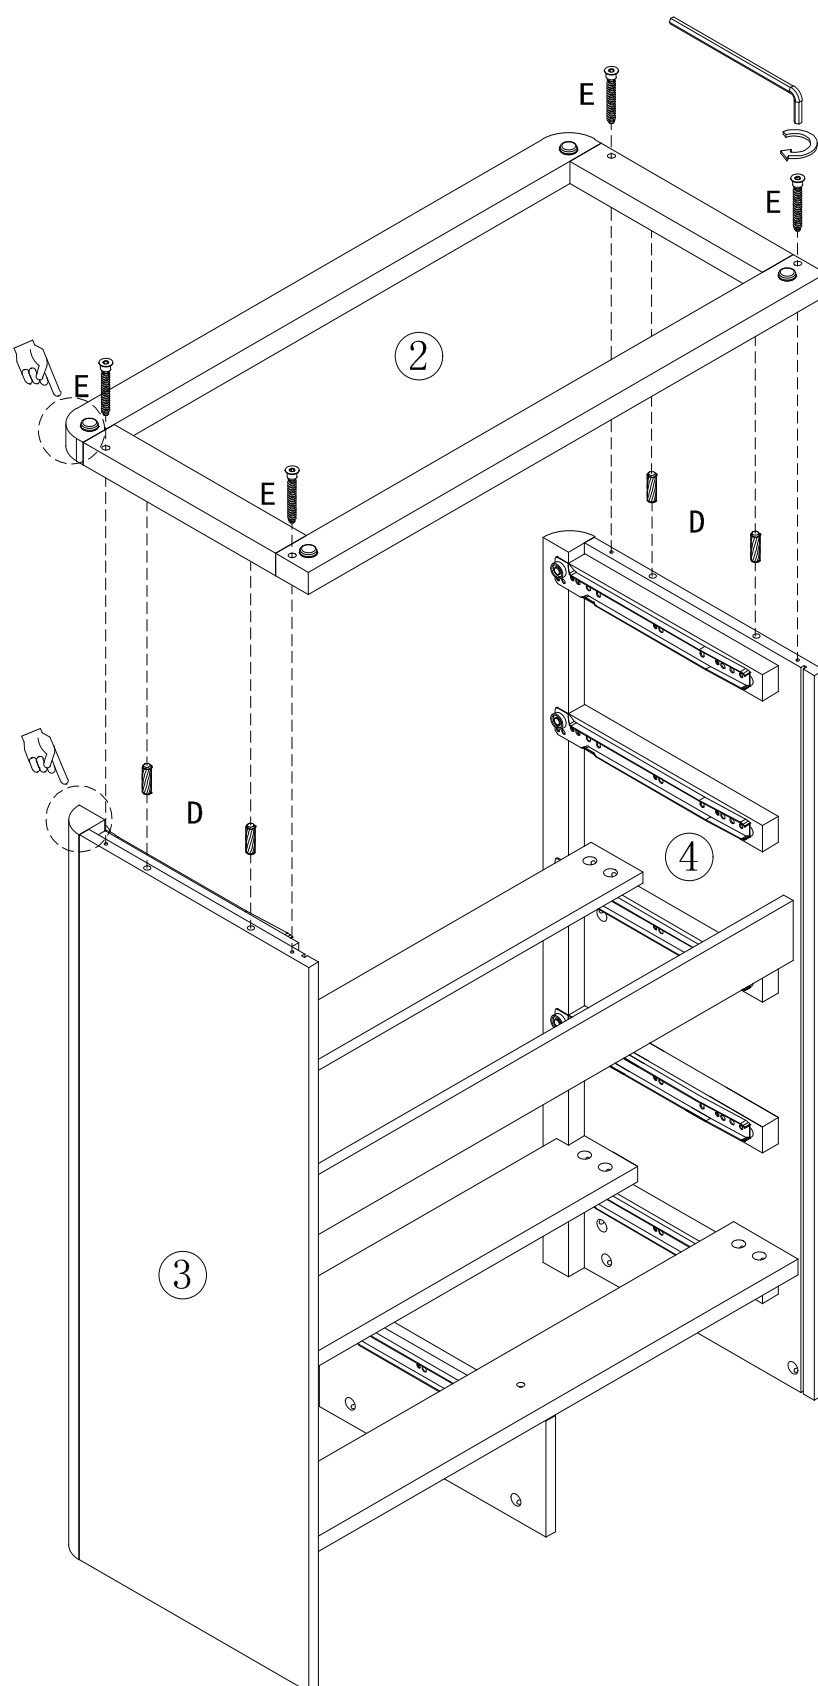


	D X 4PCS
	E X 4PCS

STEP 12

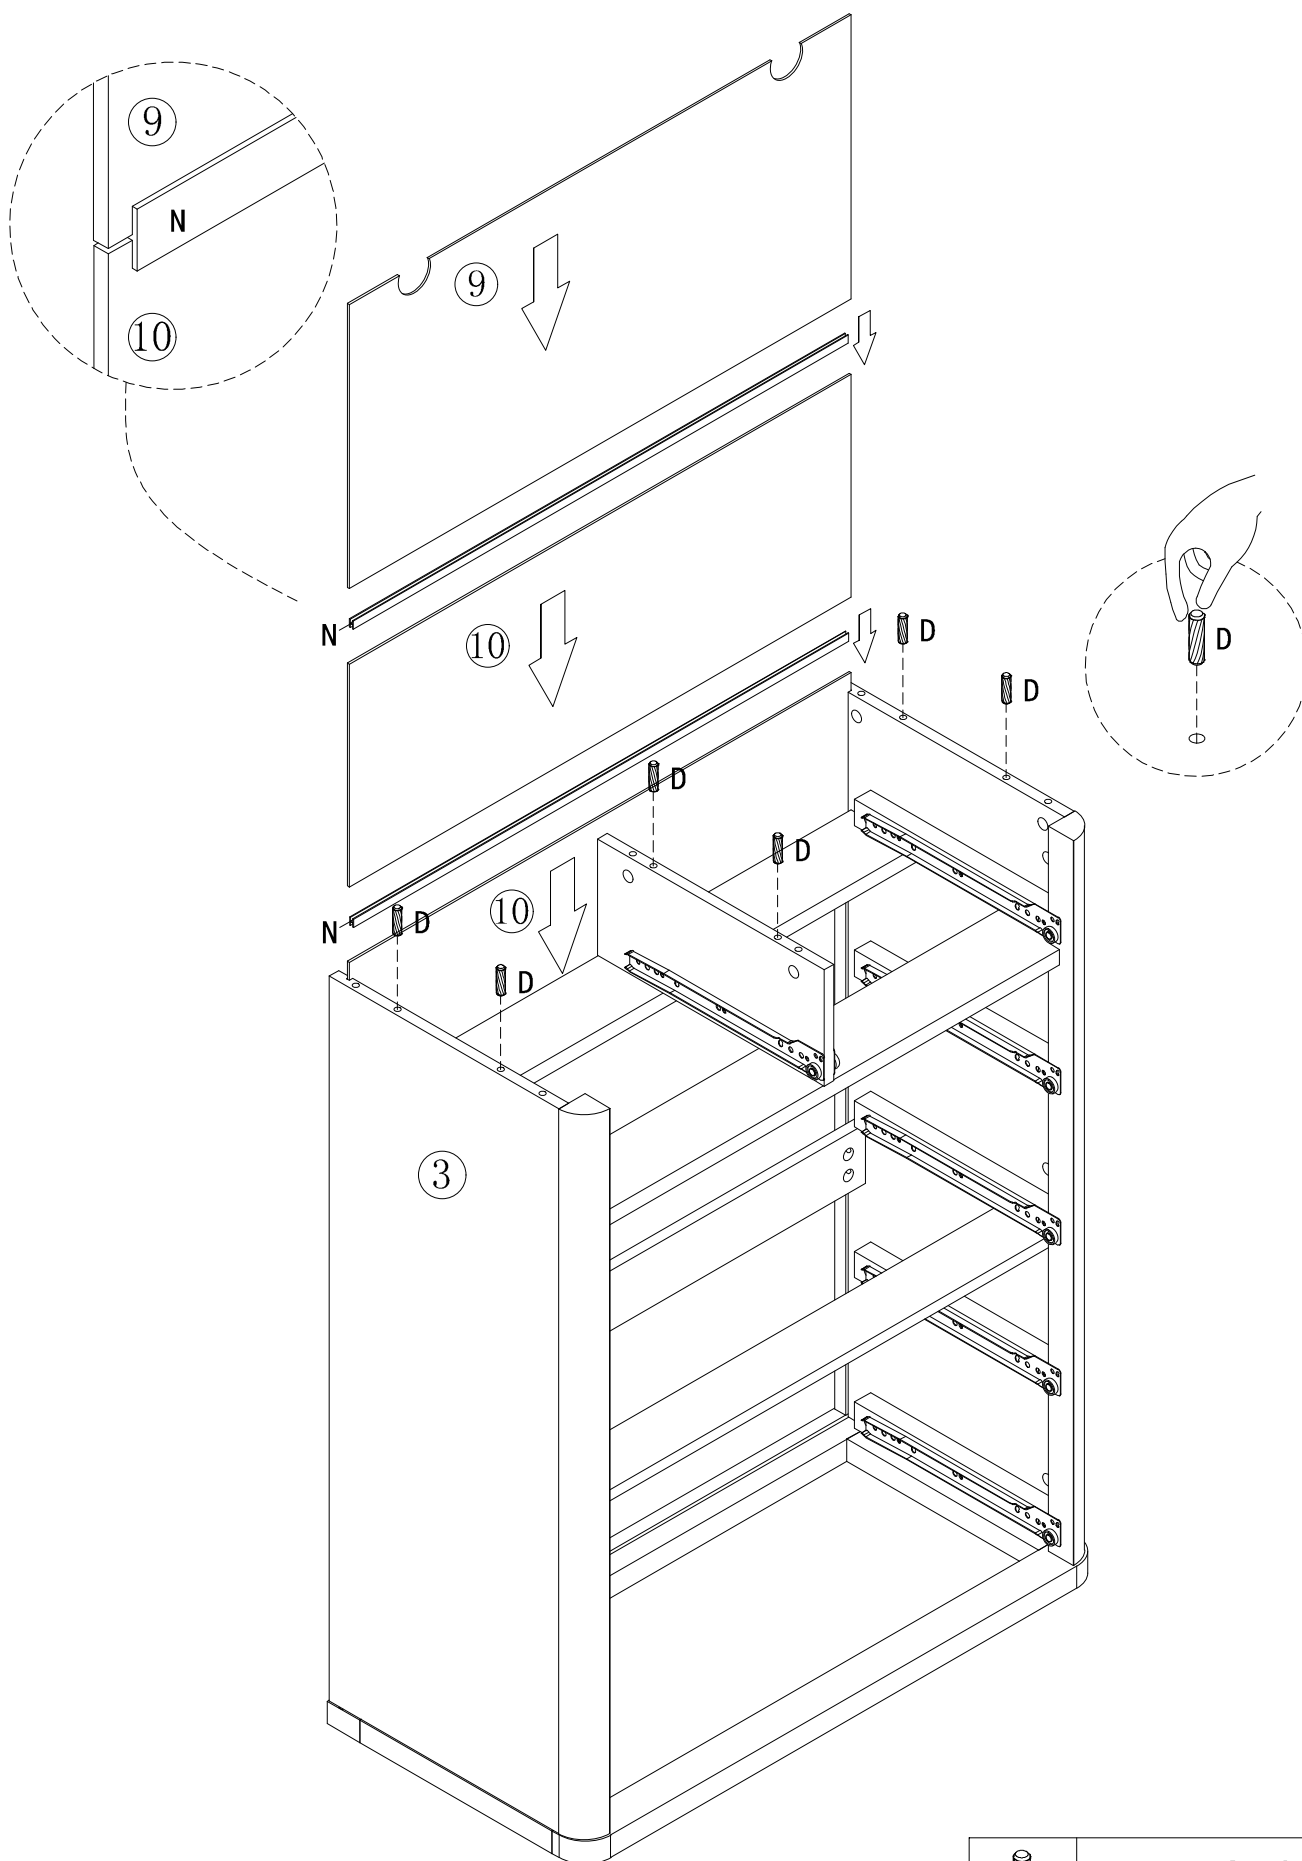


	D X 6PCS
	N X 2PCS

STEP 13



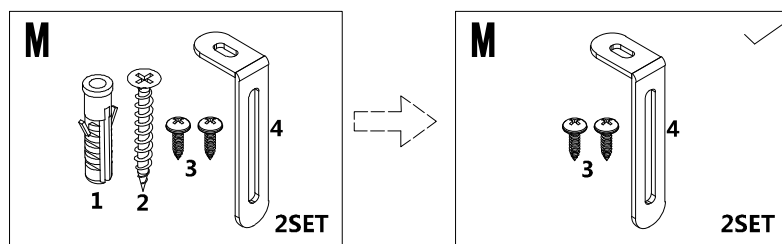


Note: Put the anti-tip device M4 on the top, near the back side, and fix it with a screw M3.

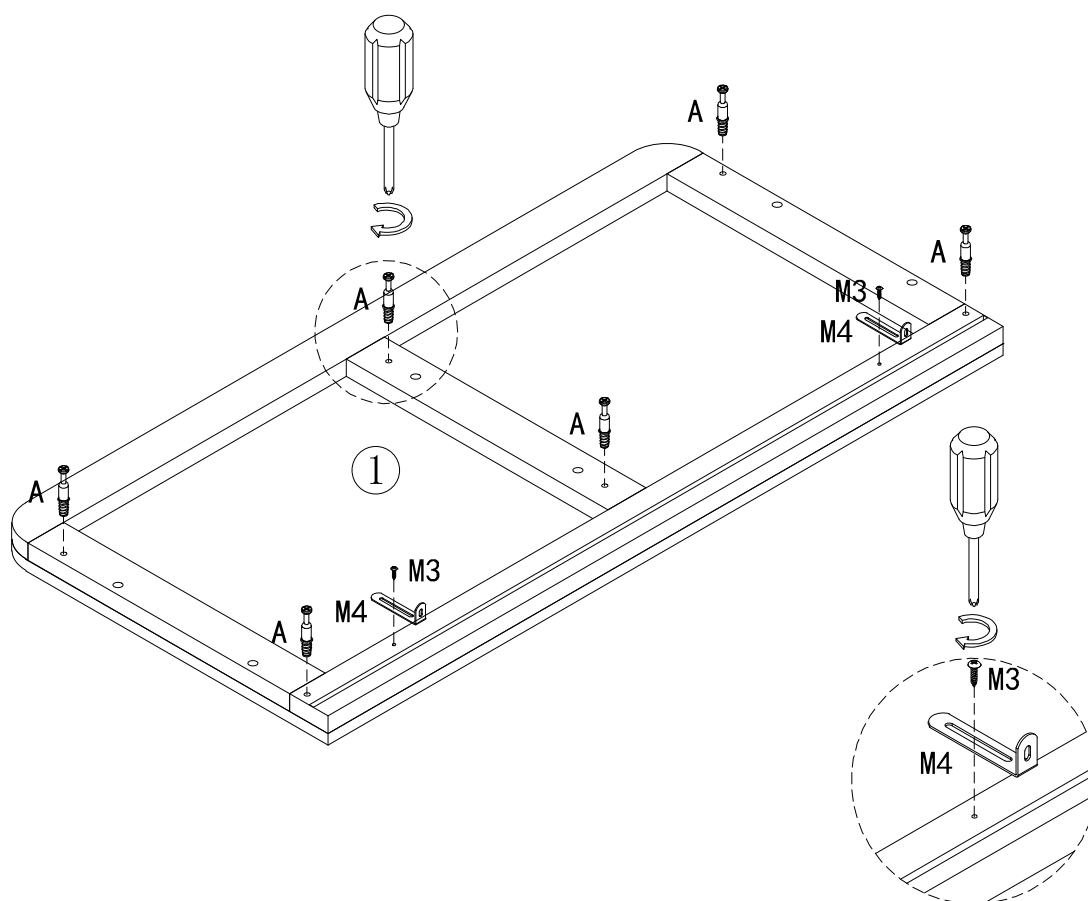

	A X 6PCS
	M X 2SET


STEP 14

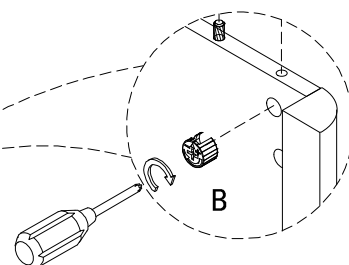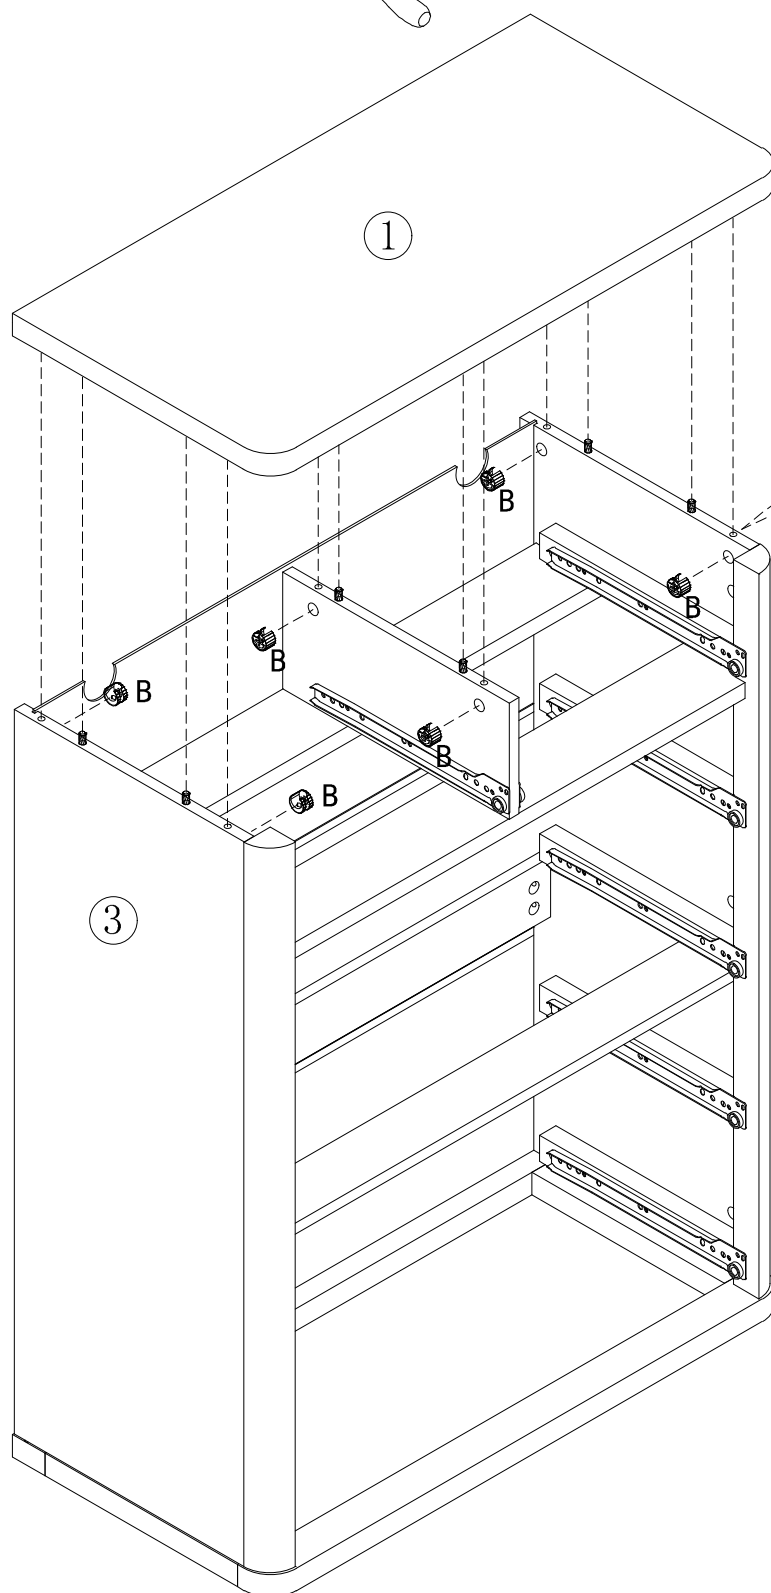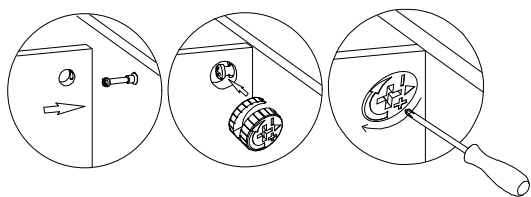

B X 6PCS


STEP 15

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

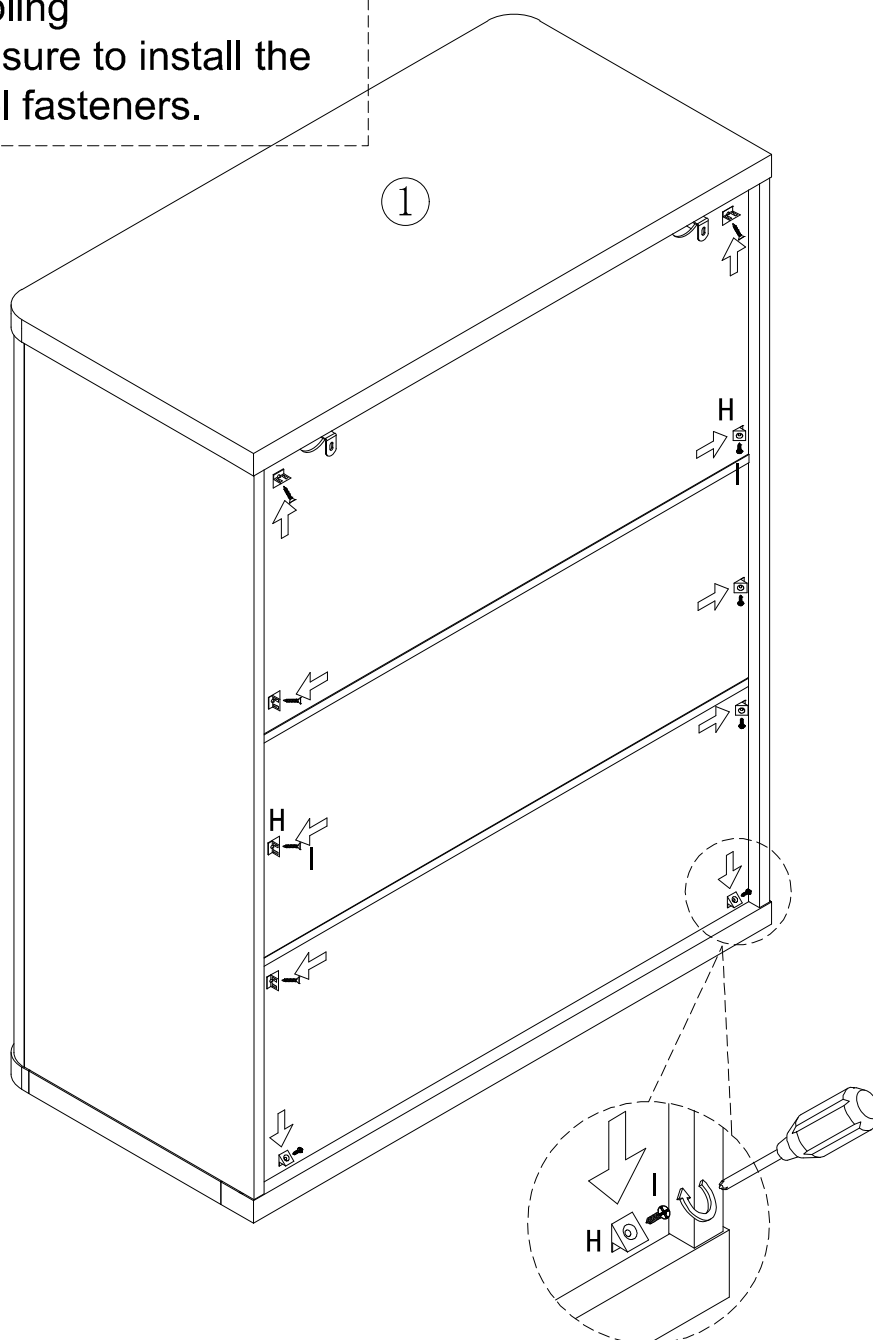

	H X 10PCS
	I X 10PCS




STEP 16

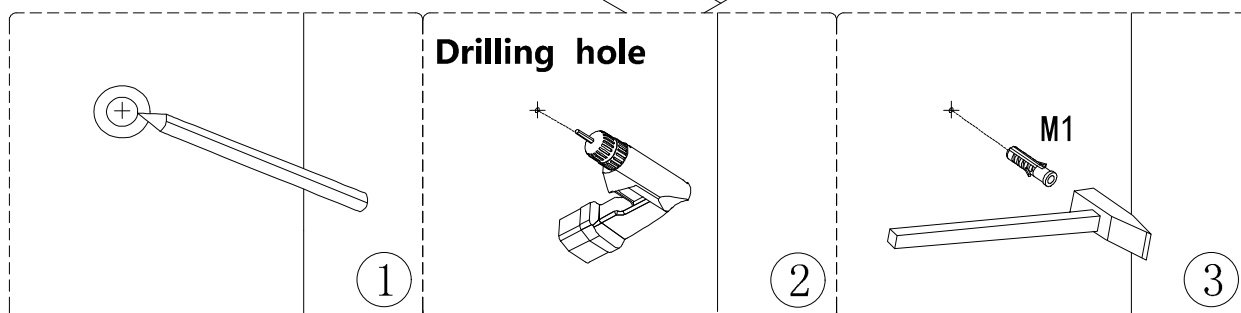



Drill a hole in the wall, then hammer the M1 into the wall with a hammer

Note: Follow step Link M4 and M1 with a M2 using a screwdriver, and assembly it tightly.


WALL

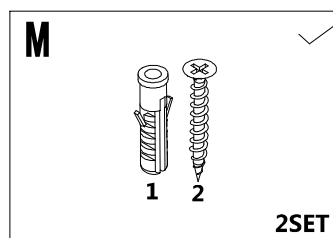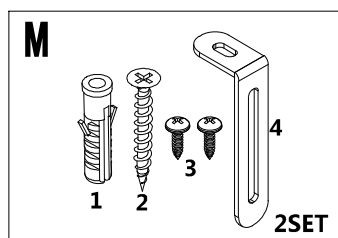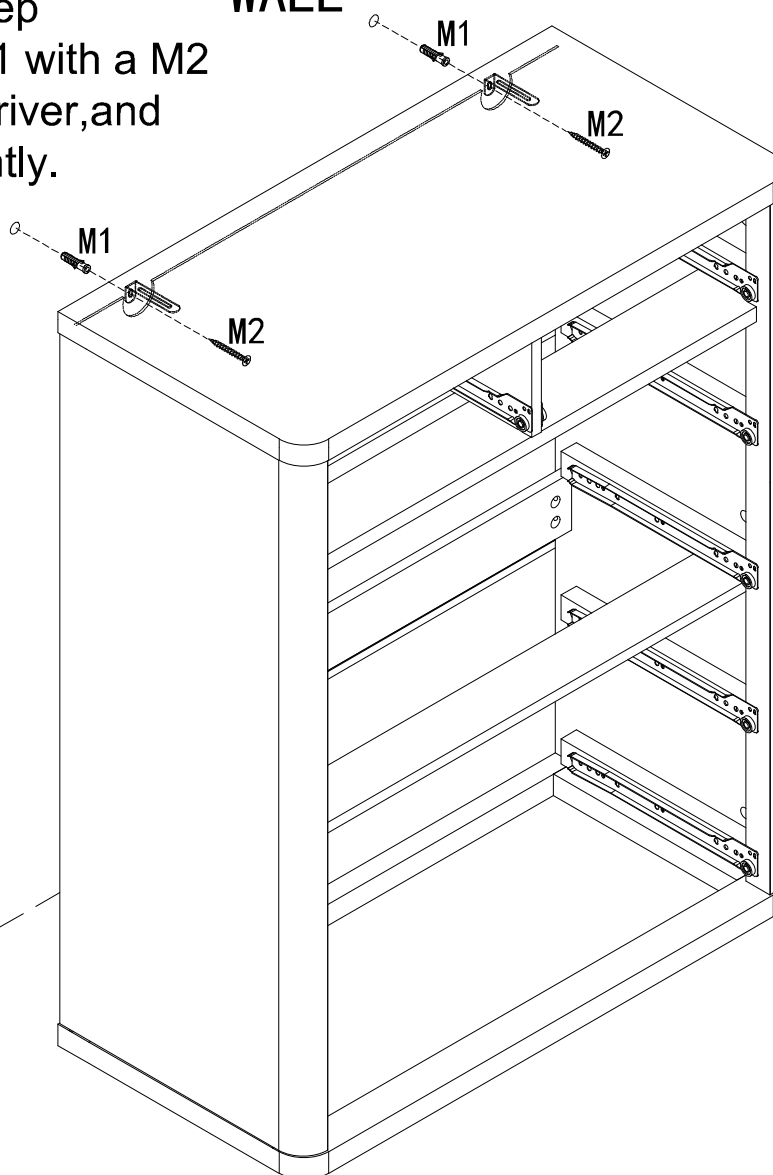


STEP 17

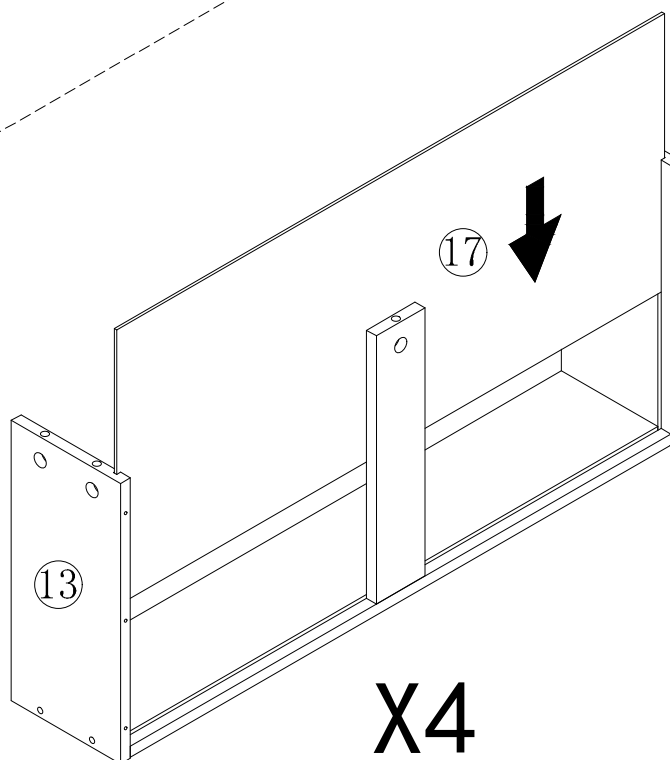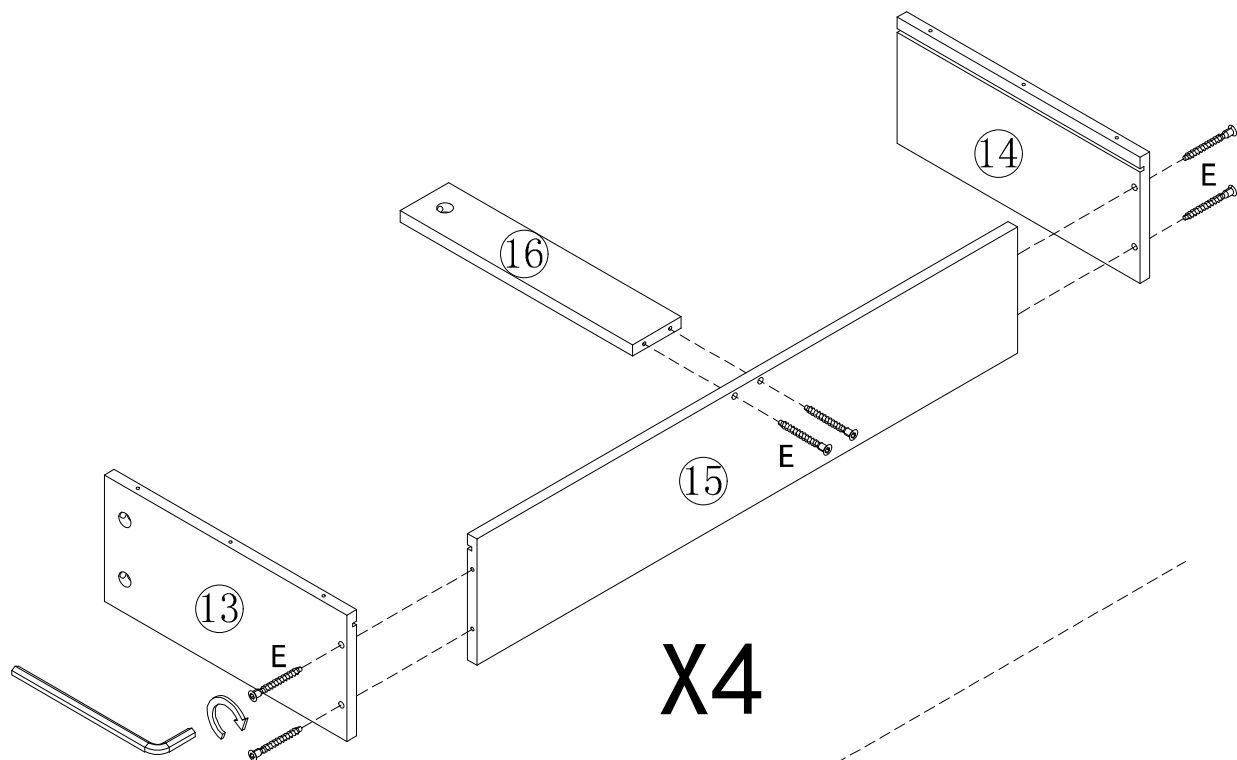

STEP 18

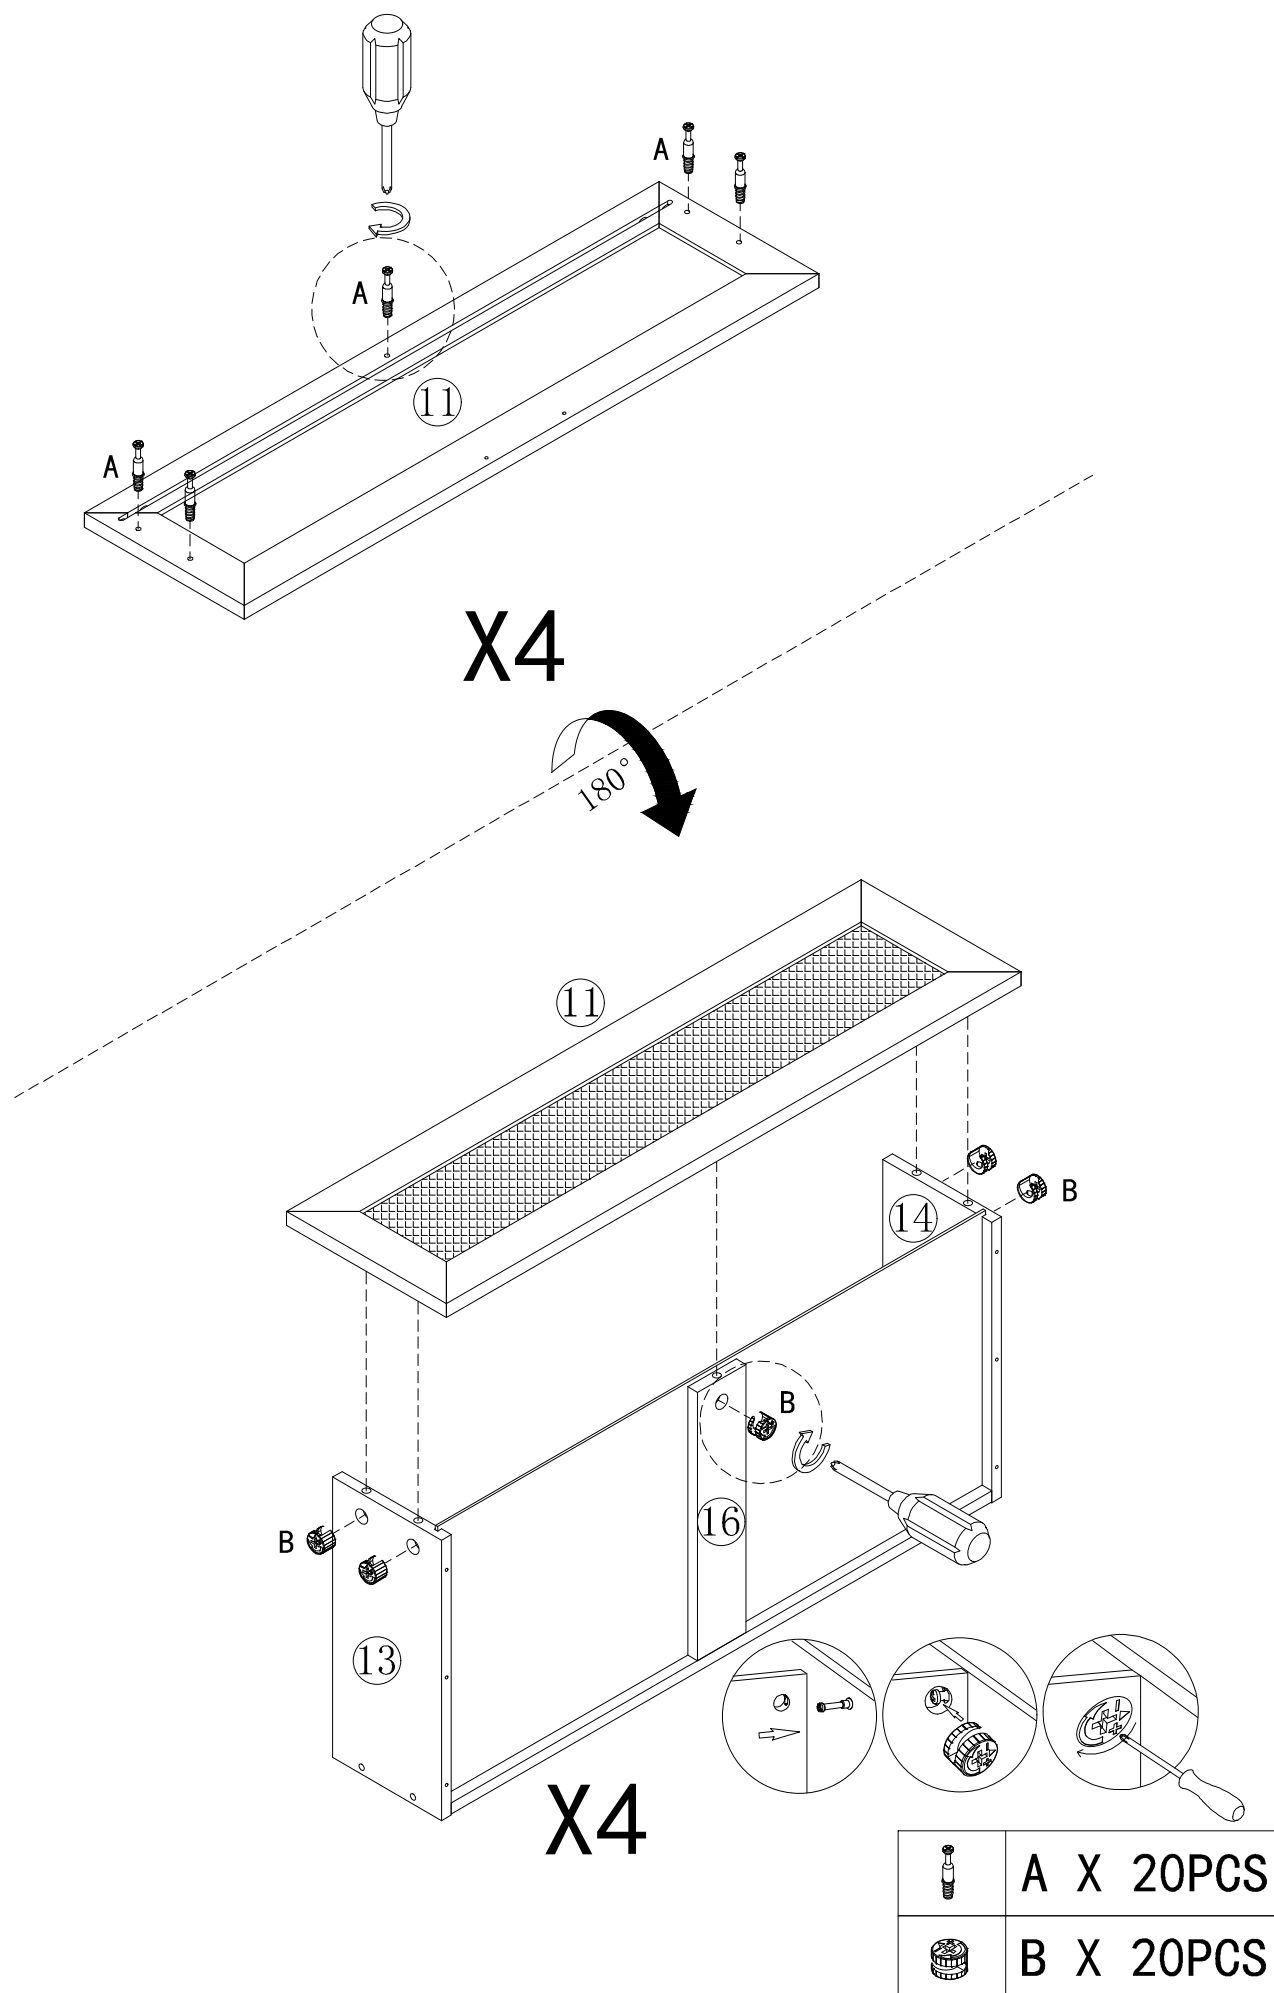


STEP 19

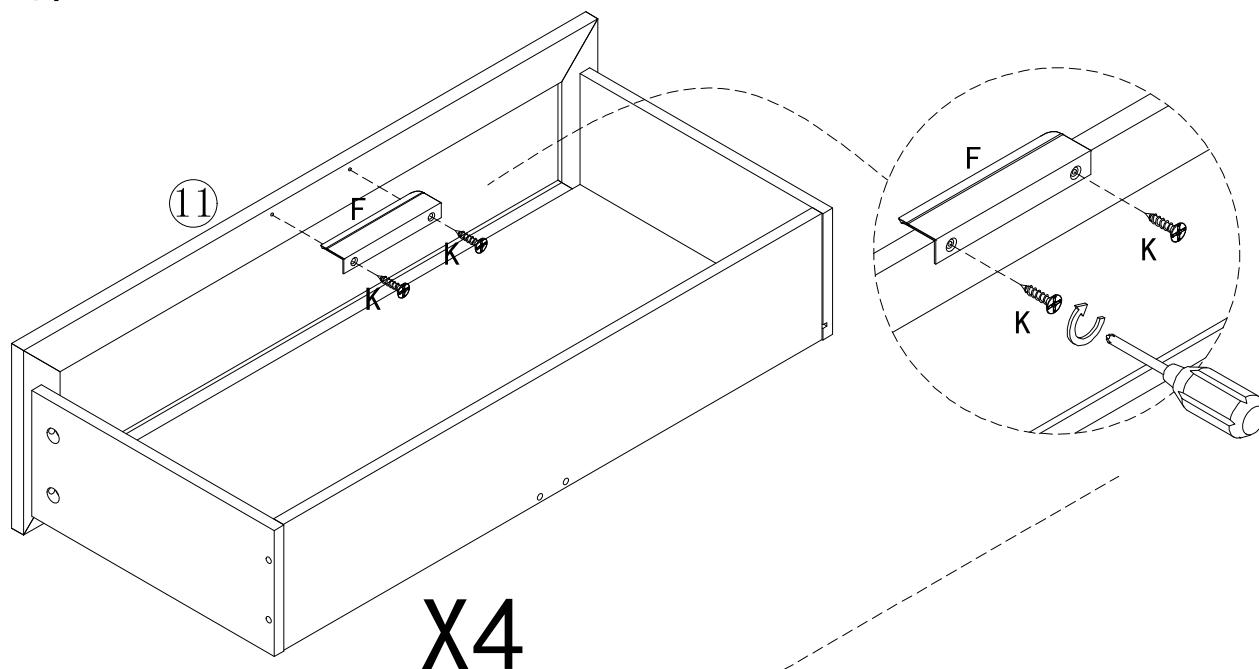


X4

Pay attention to the hole position.



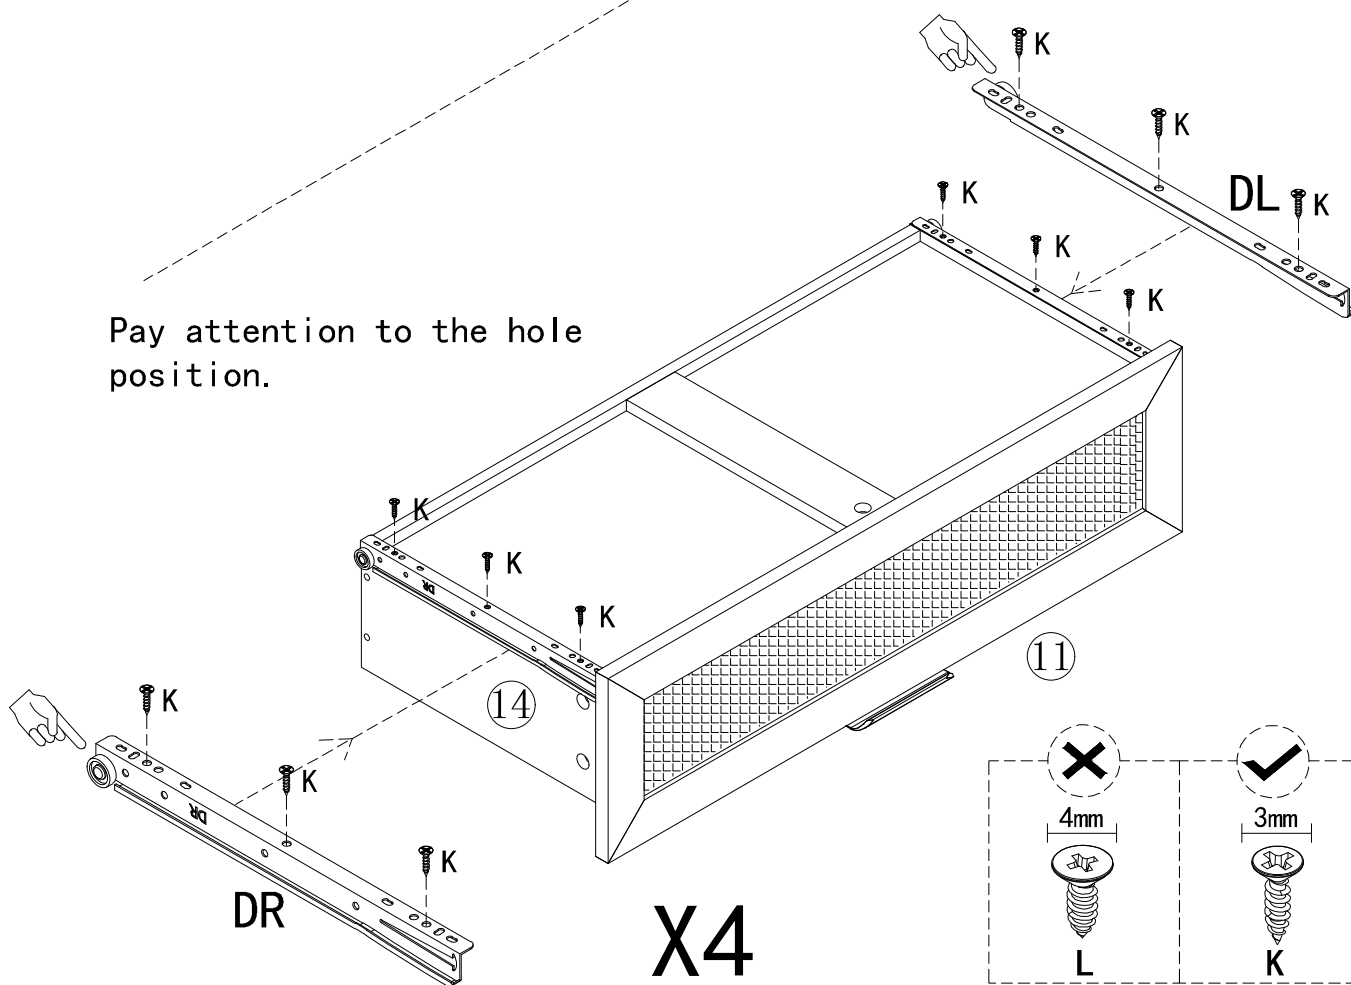


X4

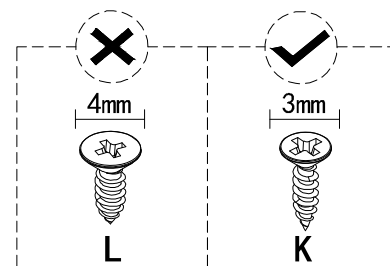


	F X 4PCS
	K X 32PCS


STEP 20

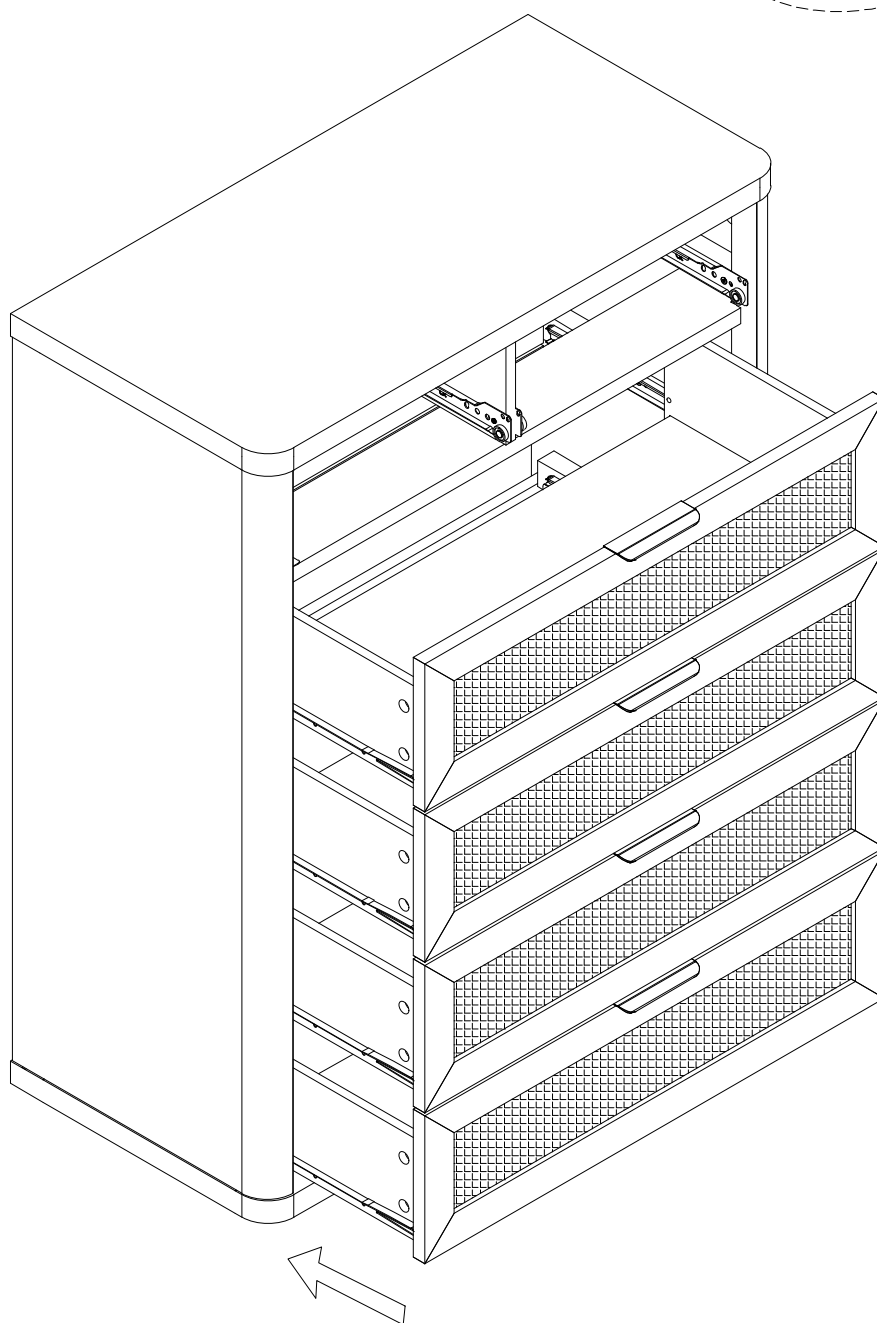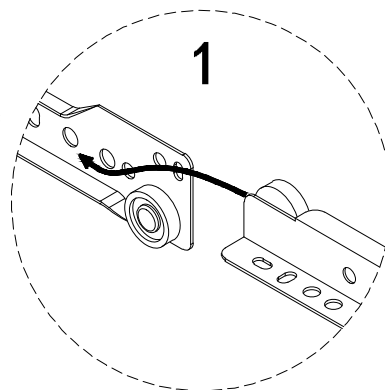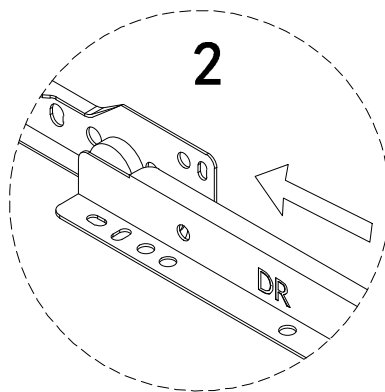

STEP 21

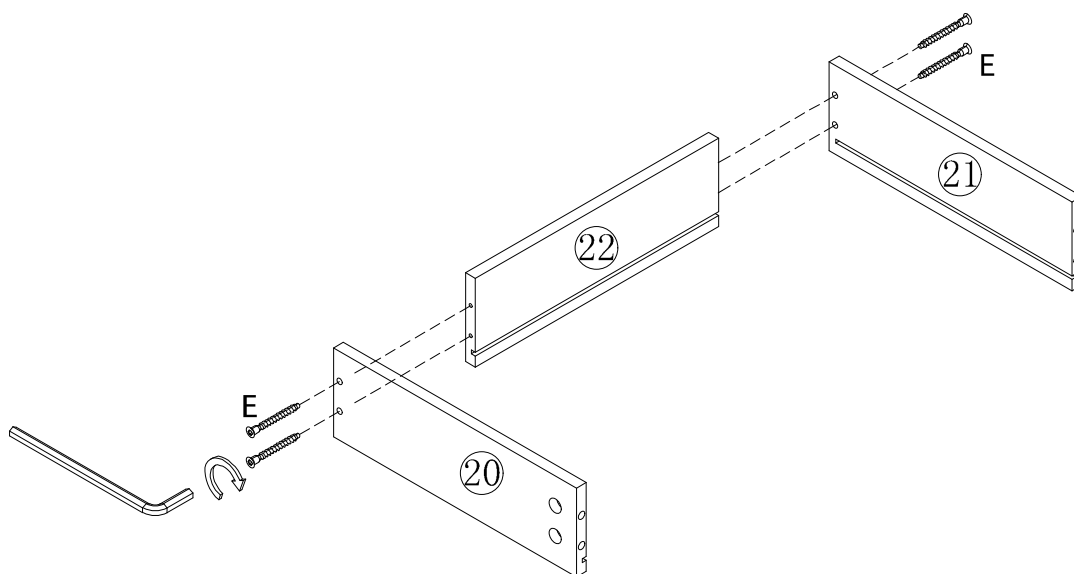

X2

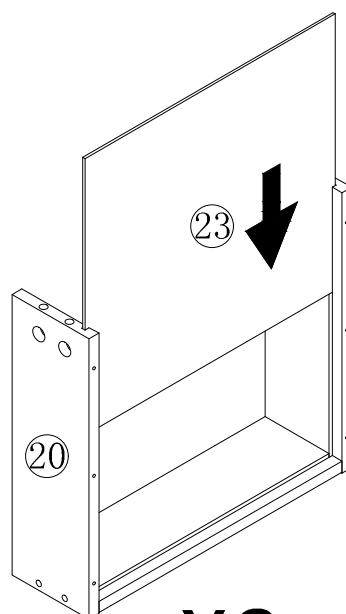


X2




E X 8PCS

STEP 22


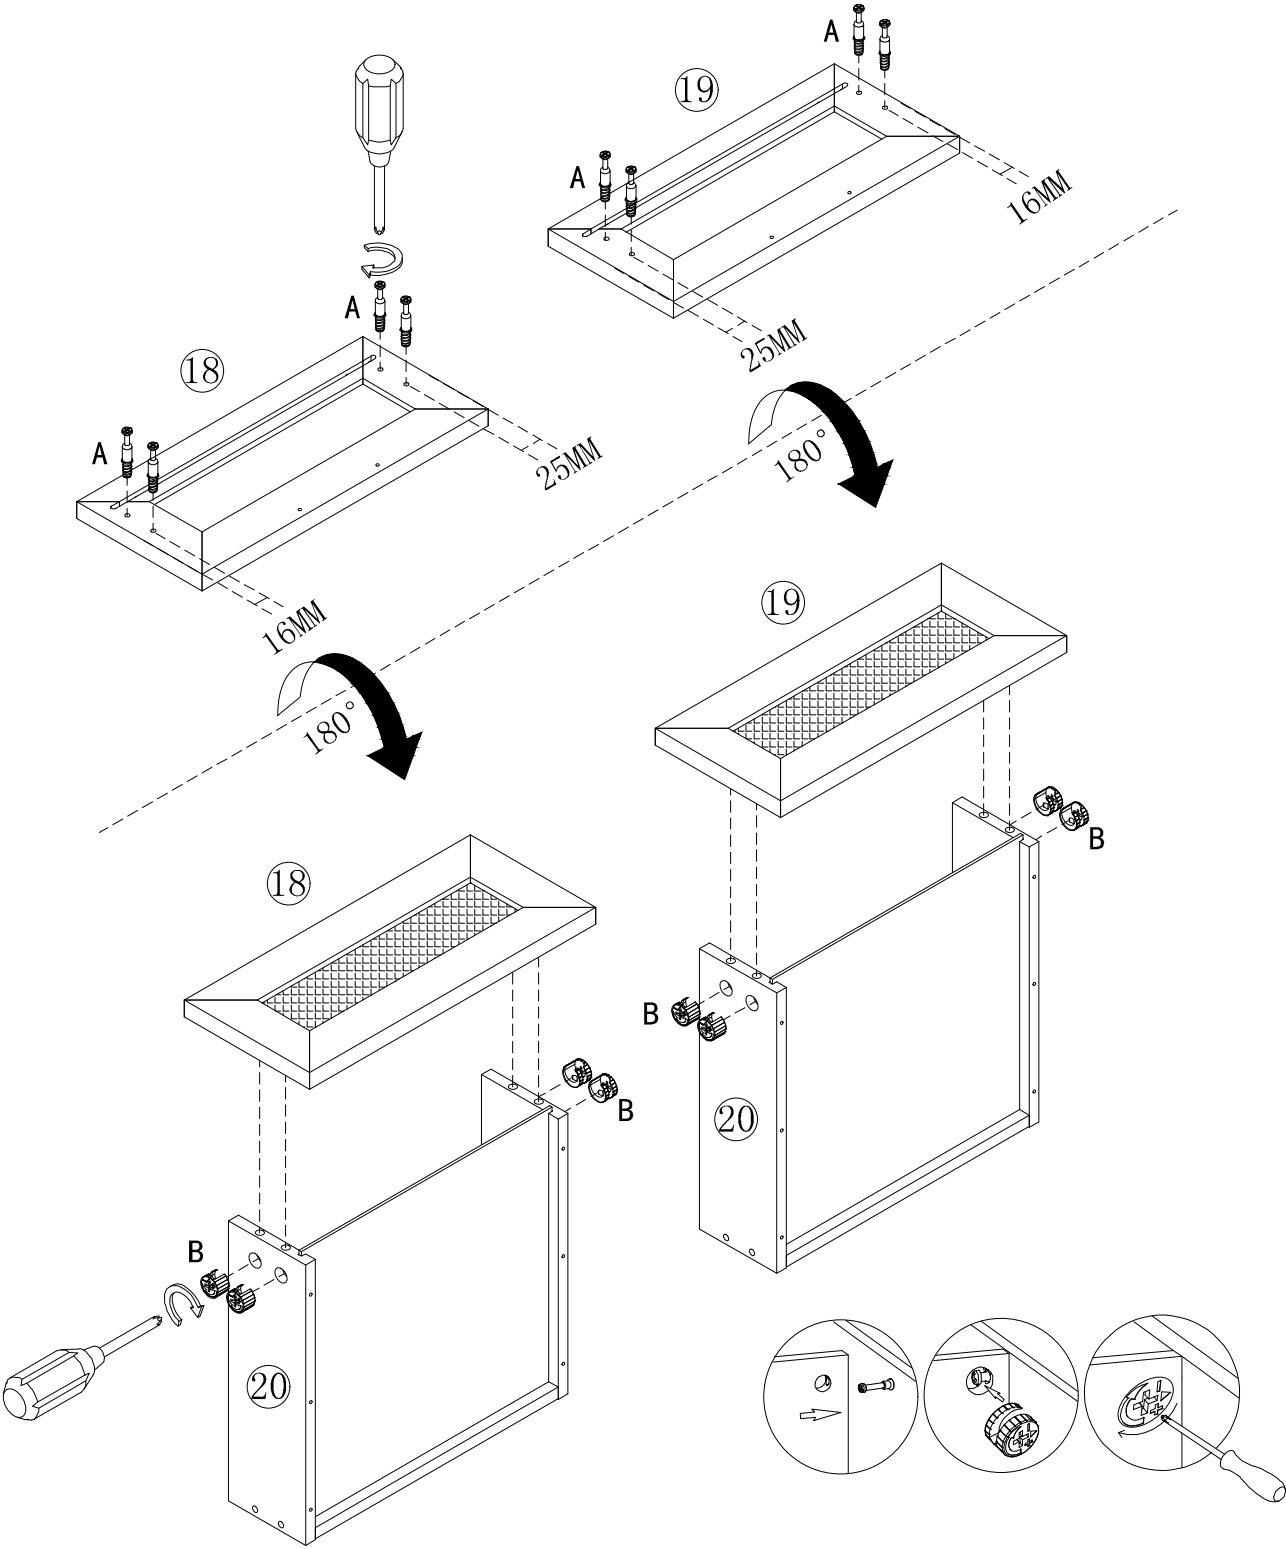


	A X 8PCS
	B X 8PCS

STEP 23


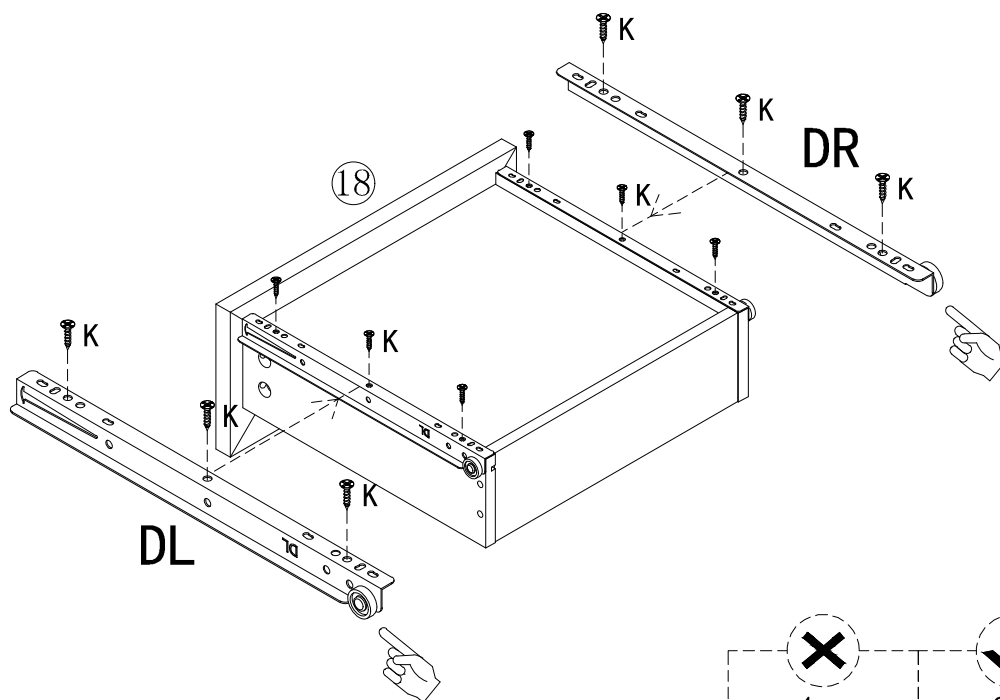


Pay attention to the hole position.

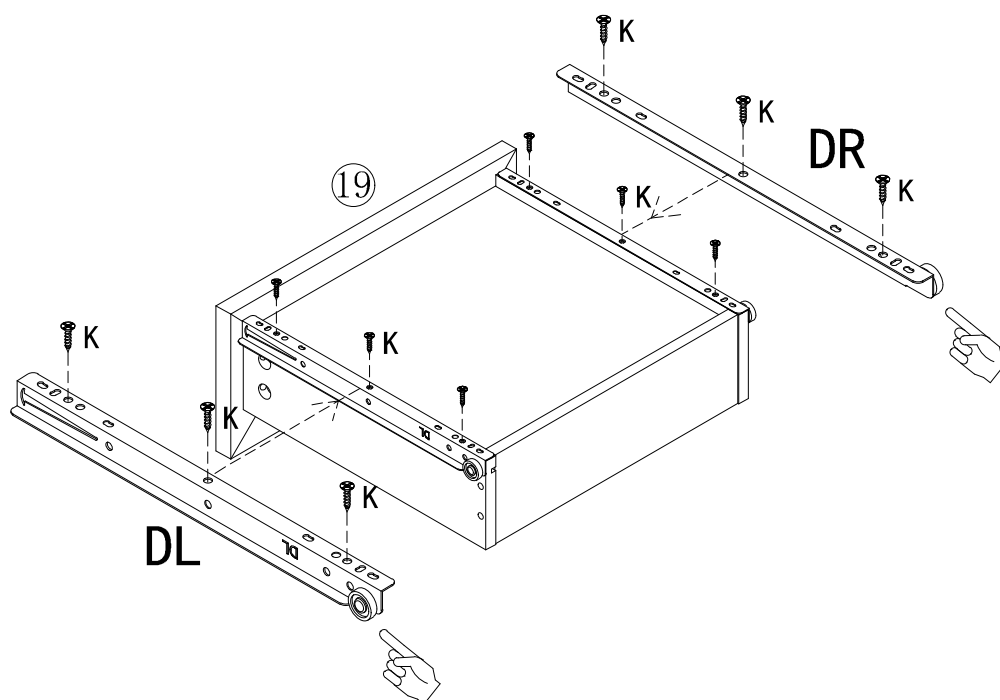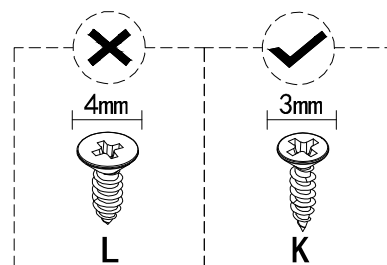




K X 12PCS

STEP 24

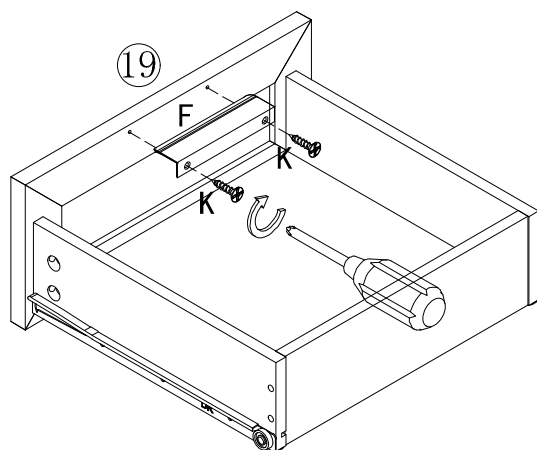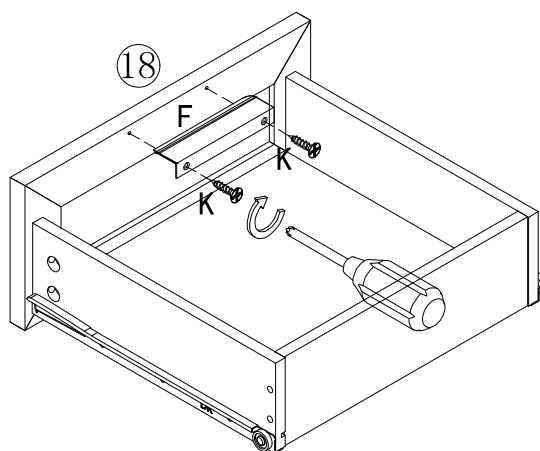

	F X 2PCS
	K X 4PCS

STEP 25

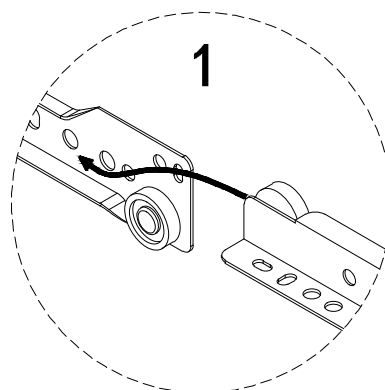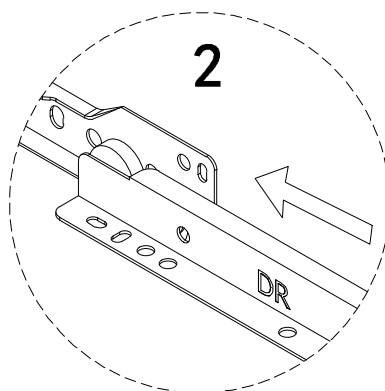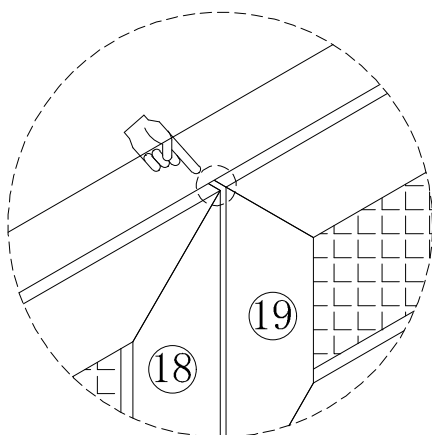

Note: Please insert the drawer into the corresponding position according to the number

