

Installation guide for round frames

Installation preparation



Tear off the protective film on the four-sided panel



The rubber ring is fastened to the panel



Install nose pad accessories, empty tubes, screw nose caps




The ball ring is directly placed in the bottom groove with the protrusion facing upward



The long rod screw passes through any round plate and connects to the round plate through the hole in the base



Screw the nut on the bottom of the base to fix

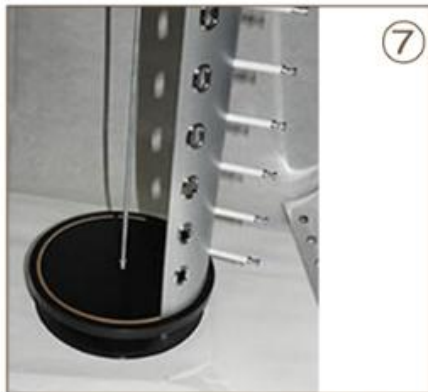

Insert the installed panel into the bottom slot



Install the remaining panels