
Sidetable


CTG065 | 3 Drawers

Assembly Instructions

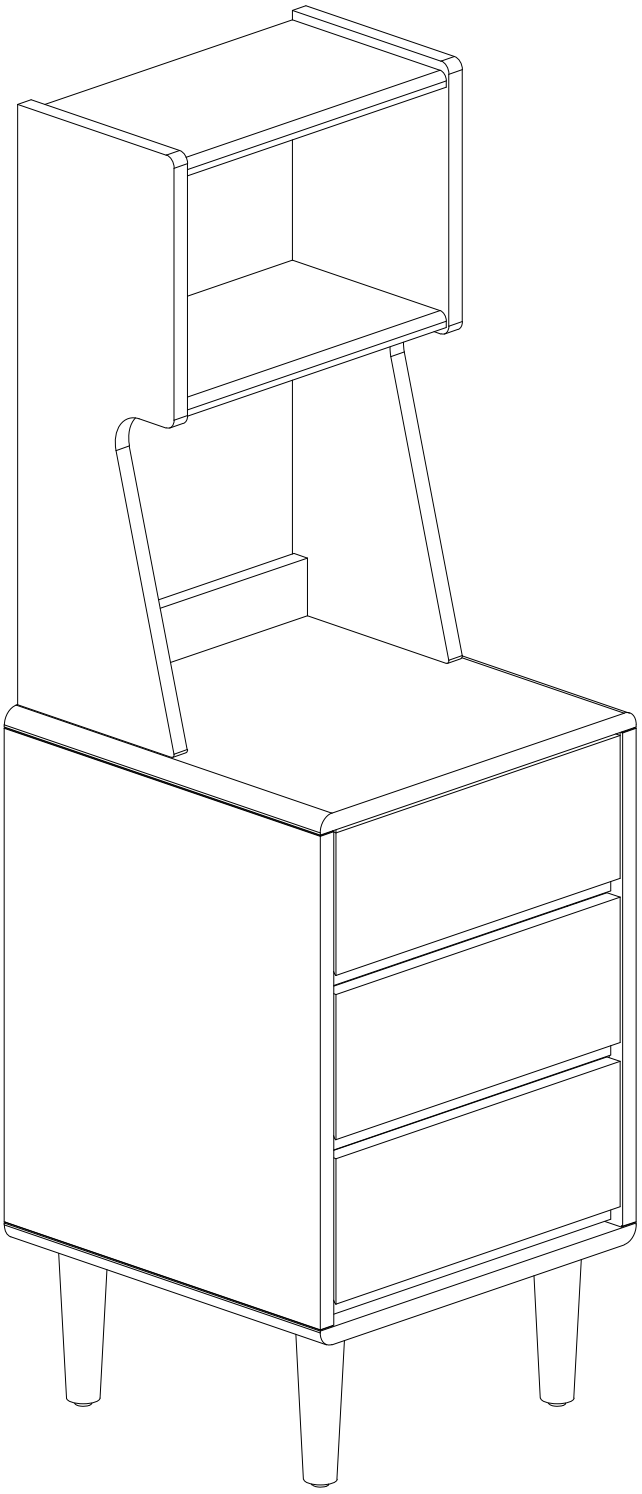


Assembly Diagram

CTG065 | 3 Drawers

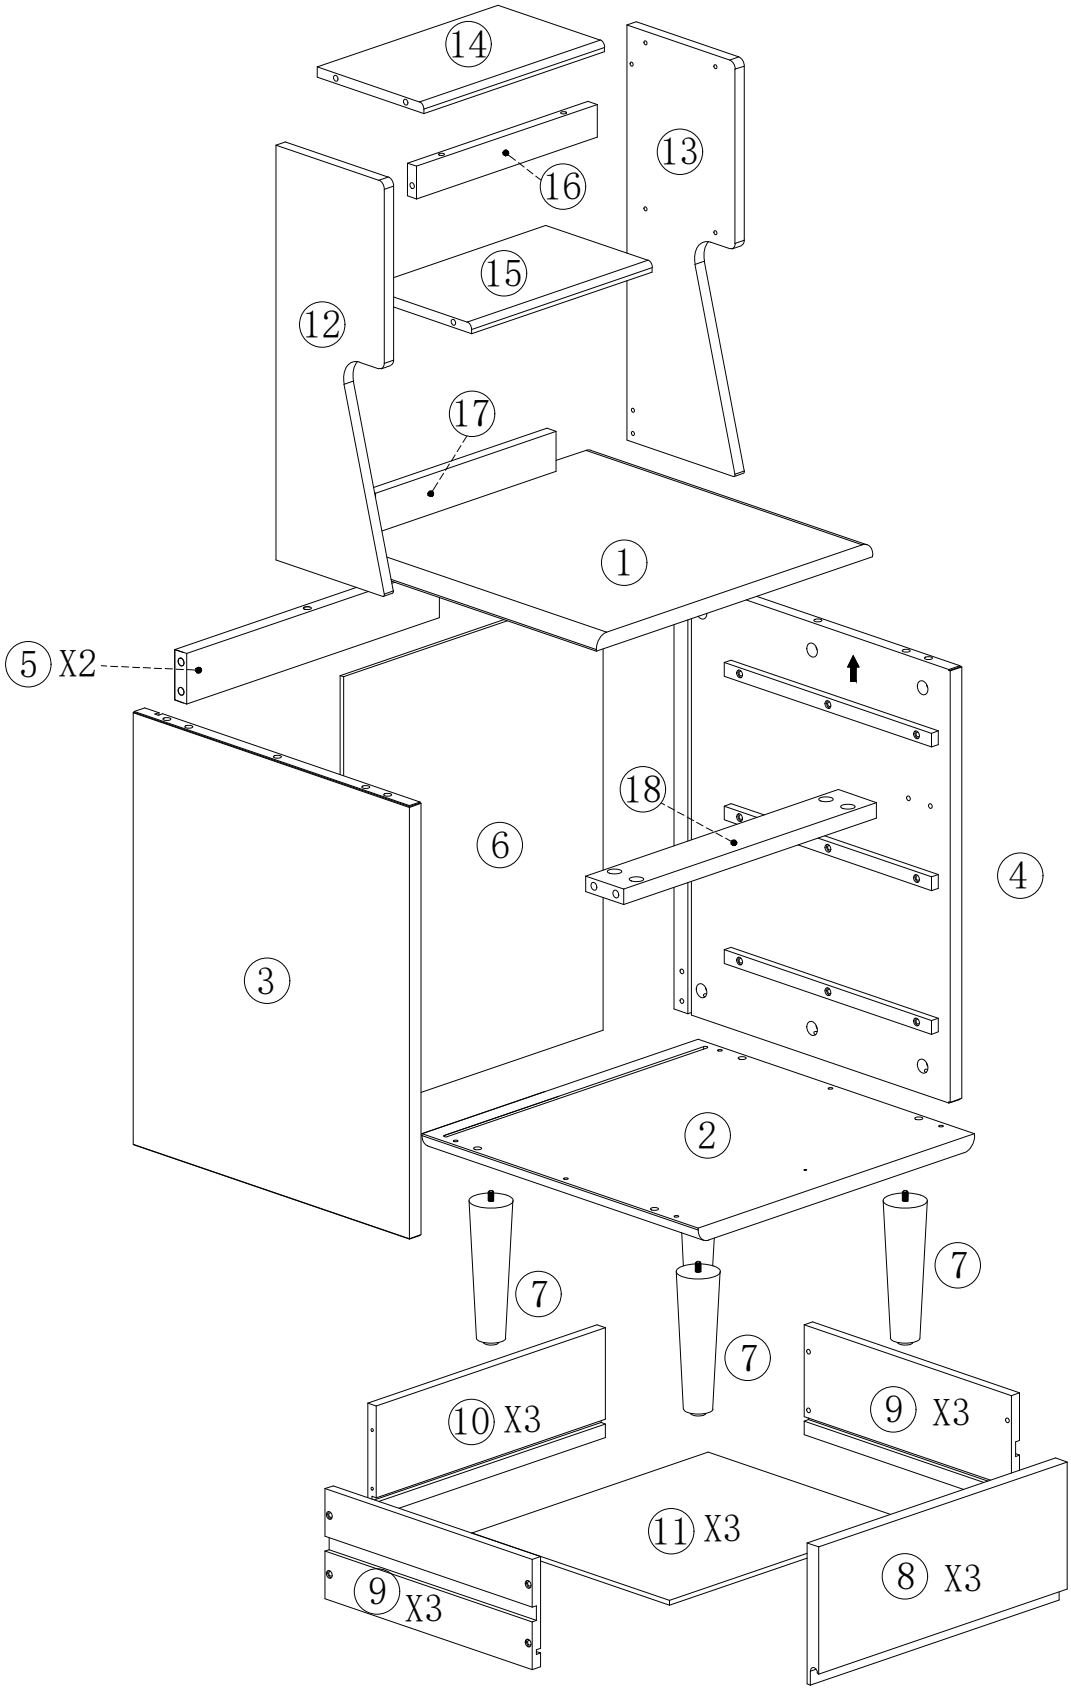

Parts List


CTG065 | 3 Drawers



1 Top panel

400 × 400 × 17MM


Quantity: 1



2 Base panel

400 × 400 × 17MM

Quantity: 1




3 Left side panel

472.5 × 400 × 27MM

Quantity: 1

Slides preinstalled



4 Right side panel


472.5 × 400 × 27MM

Quantity: 1

Slides preinstalled

Parts List


CTG065 | 3 Drawers



5 Upper / lower rear crossbar

366 × 55 × 17MM

Quantity: 2

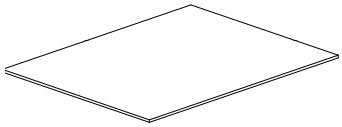

6 Back panel

482 × 376 × 5MM


Quantity: 1



7 Leg

150 × Ø45MM

Quantity: 4




8 Drawer front assembly

360 × 153.5 × 29MM

Quantity: 3

Parts List

CTG065 | 3 Drawers




9 Drawer side

300 × 120 × 12MM

Quantity: 6


Slides preinstalled



10 Drawer back

332 × 120 × 12MM


Quantity: 3



11 Drawer bottom

342 × 286 × 5MM

Quantity: 3

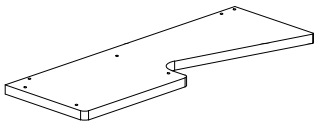


12 Upper unit left side

572 × 198 × 17MM

Quantity: 1

Parts List


CTG065 | 3 Drawers

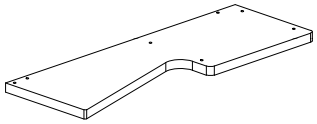

13 Upper unit right side

572 × 198 × 17MM


Quantity: 1



14 Upper unit top

331 × 195 × 14MM


Quantity: 1



15 Upper unit shelf

331 × 195 × 14MM

Quantity: 1




16 Upper rear crossbar

331 × 45 × 17MM

Quantity: 1

Parts List


CTG065 | 3 Drawers



17 Lower rear crossbar

331 × 55 × 17MM

Quantity: 1




18 Middle drawer crossbar

366 × 55 × 17MM

Quantity: 1

Hardware & Tools


CTG065 | 3 Drawers

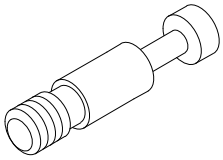

A Cam bolts

L=40MM


Quantity: 44 + 4

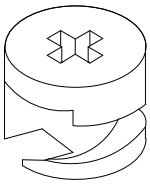

B Cam locks

Ø15 × 9MM


Quantity: 44 + 4



C Wood dowels

Ø8 × 30MM

Quantity: 8 + 1

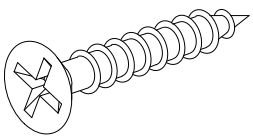

D Flat-head screws


#8 × 25MM

Quantity: 24 + 2

Coarse thread

Hardware & Tools


CTG065 | 3 Drawers

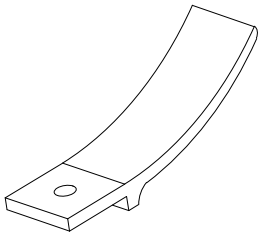

E Drawer retaining clips

L=50MM


Quantity: 3



F Wood screws

#3.5 × 15MM

Quantity: 3




G Ratchet screwdriver

M6 × 136MM

Quantity: 1

Reusable tool

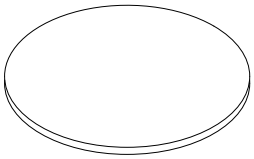


H Cover stickers

Ø20MM

Quantity: 28 + 3

Hardware & Tools


CTG065 | 3 Drawers

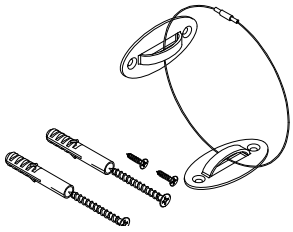

I Tip restraint kit

Quantity: 1 kit

Includes screws and wall plugs



J Leveling feet

M6 × Ø19 × 20MM


Quantity: 4

Preinstalled in legs

Ratchet Screwdriver

CTG065 | 3 Drawers

1. Manual operation setting
2. Clockwise ratchet setting
3. Right-hand ratchet setting
4. Removable and telescopic screwdriver bit.

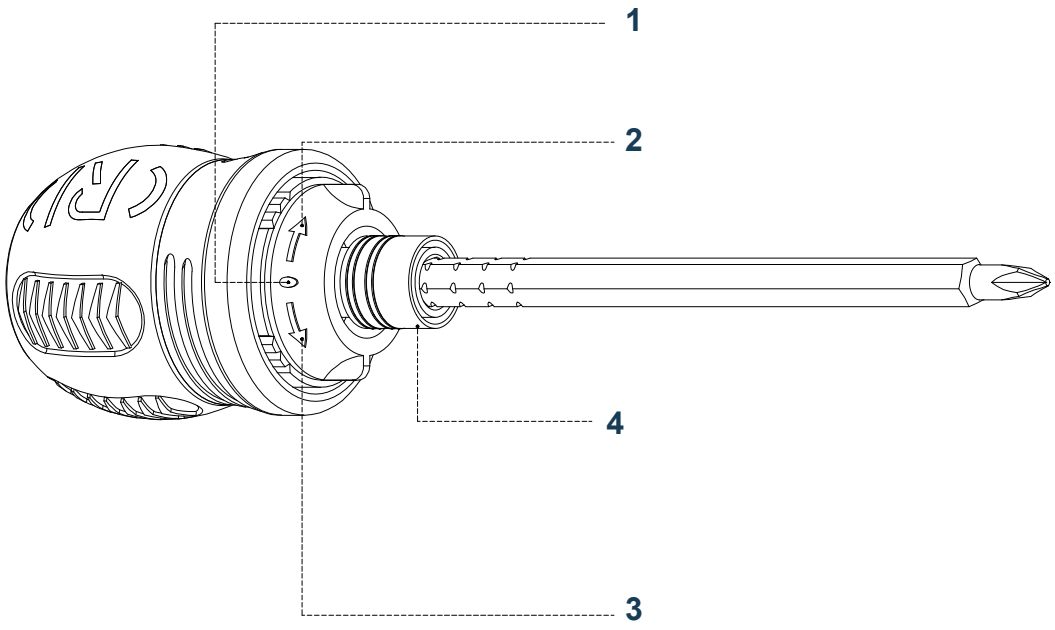

Safety Warnings

CTG065 | 3 Drawers

Place the unit on a level surface, or level it with the included hardware when applicable.

Do not sit or stand on the product. Do not allow children to climb, sit or stand on it.

For safety, the unit must be secured to the wall.

Do not use the unit without installing the tip restraint.

The unit can tip over and cause severe injury or death.

Do not exceed the recommended weight limits.


Distribute weight evenly on each level. Keep heavier loads at the bottom.

Before cutting, drilling or hammering into a wall or floor, check for electrical wiring, plumbing and gas lines. Cutting into them can cause serious injury.


Cam Lock Assembly

CTG065 | 3 Drawers


Illustration key: A = cam bolt; B = cam lock.

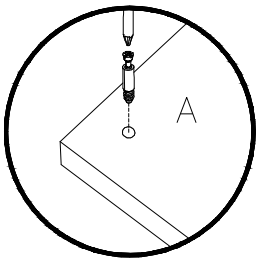


1. Screw the cam bolt into the panel.

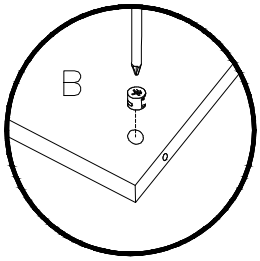


2. Insert the cam lock with its arrow pointing toward the panel edge.

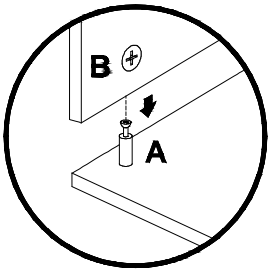

3. Align the cam bolt and cam lock. Insert fully into the cross-bored hole.

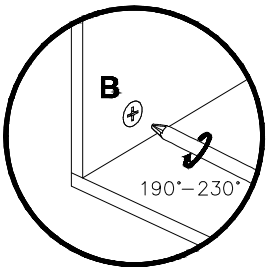

4. Turn the cam lock clockwise 190°–230° to lock the panels.

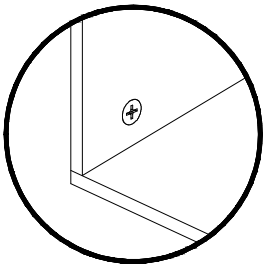

5. Check that the panels fit tightly and the connection is rigid.

Generic Fitting Reference

CTG065 | 3 Drawers


Follow the insertion depths shown for the connector types illustrated.


Illustration labels A and C are generic reference labels.

Use the model-specific parts and hardware lists for assembly.

For a wood dowel, insert it at least halfway.

If necessary, tap gently with a rubber mallet.

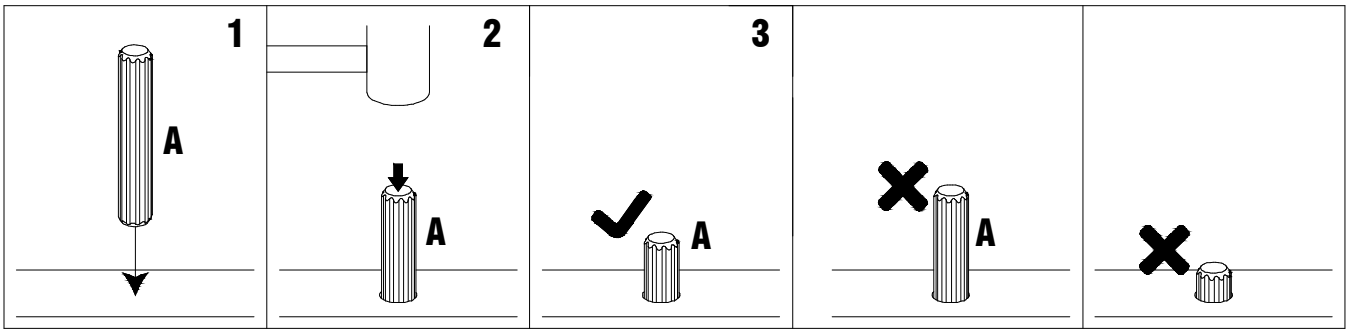

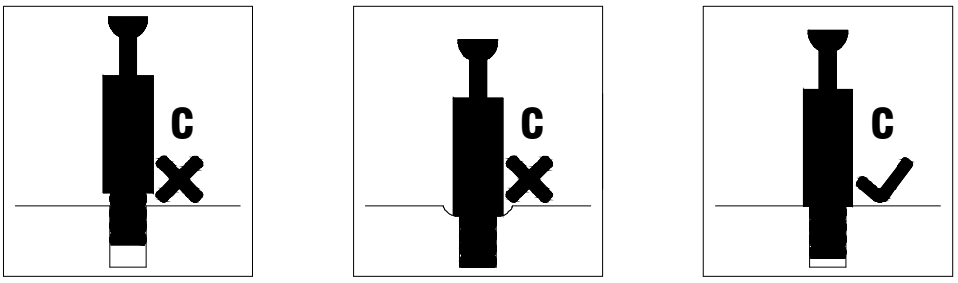

Before Assembly


CTG065 | 3 Drawers

Check all parts against the parts and hardware lists before assembly.


Use the correct screws to avoid splitting or damaging the panels.

The cabinet and drawer slides shown are preinstalled.


Tool G is reused throughout assembly; Leveling Feet J are preinstalled.

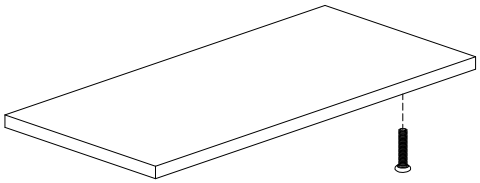

Example

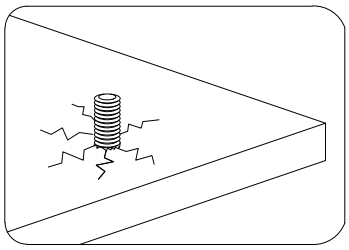

Incorrect: oversized screw

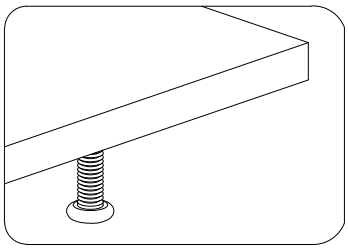


Correct: matching screw


Step 1


CTG065 | 3 Drawers

Install Cam Bolts A in Side Panels 3 and 4 using Tool G.

Hardware: A × 12 Tool: G (reuse)

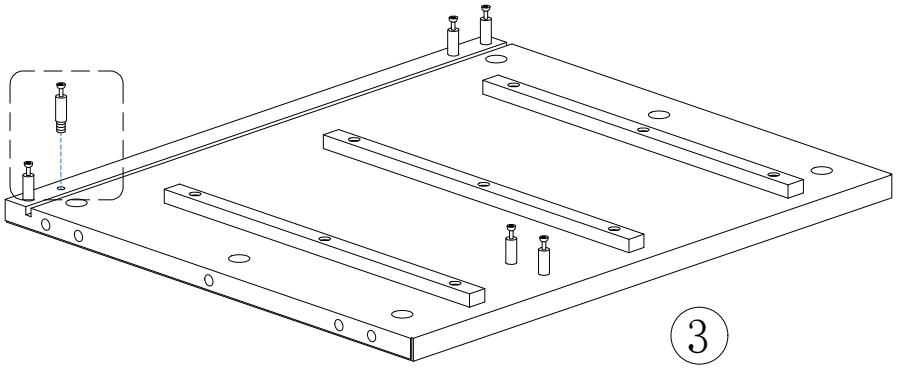

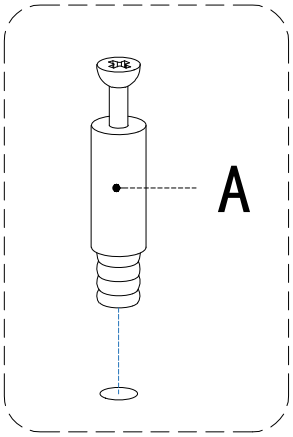

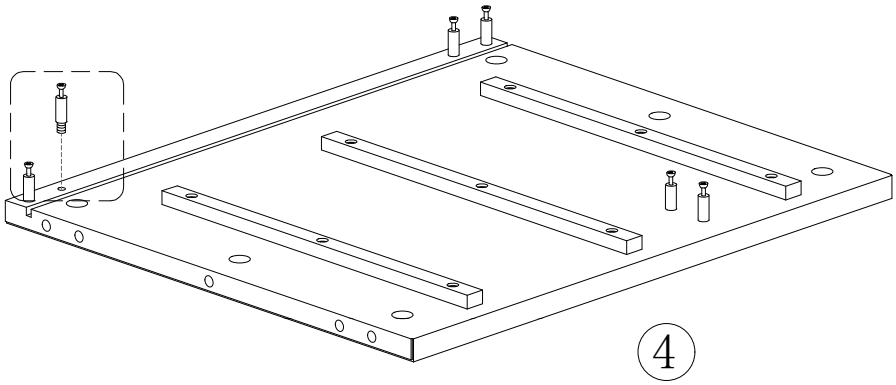


Step 2


CTG065 | 3 Drawers


Install Cam Bolts A in Top Panel 1 and Base Panel 2.


Attach one Retaining Clip E to each of Parts 1, 2 and 18 using Screw F.


Hardware: A × 14 E × 3 F × 3 Tool: G (reuse)

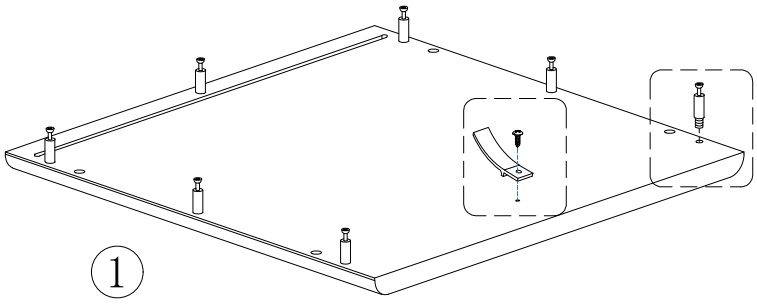

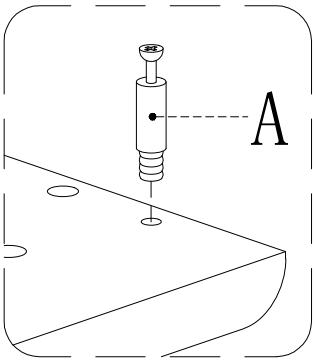

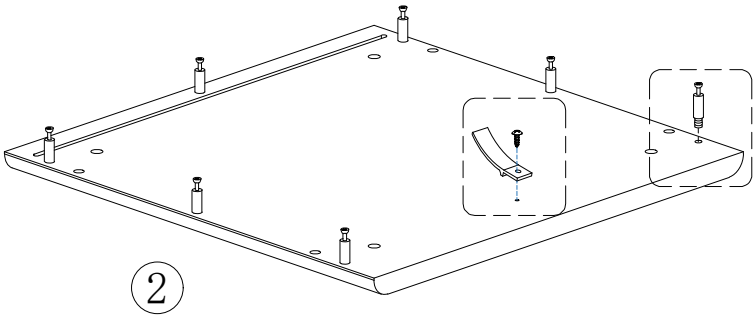

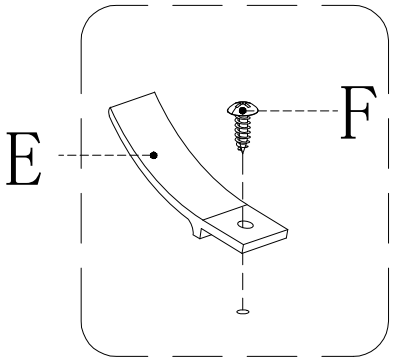


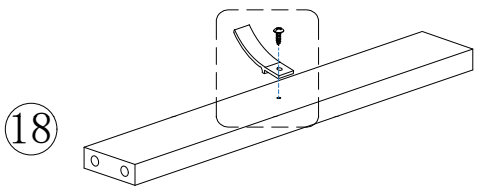

Step 3

CTG065 | 3 Drawers

Join Side Panels 3 and 4 with both Crossbars 5 and Crossbar 18 using Cam Locks B.
Keep the arrows and center holes oriented as shown; apply Stickers H.
Hardware: B × 12 H × 8 Tool: G (reuse)

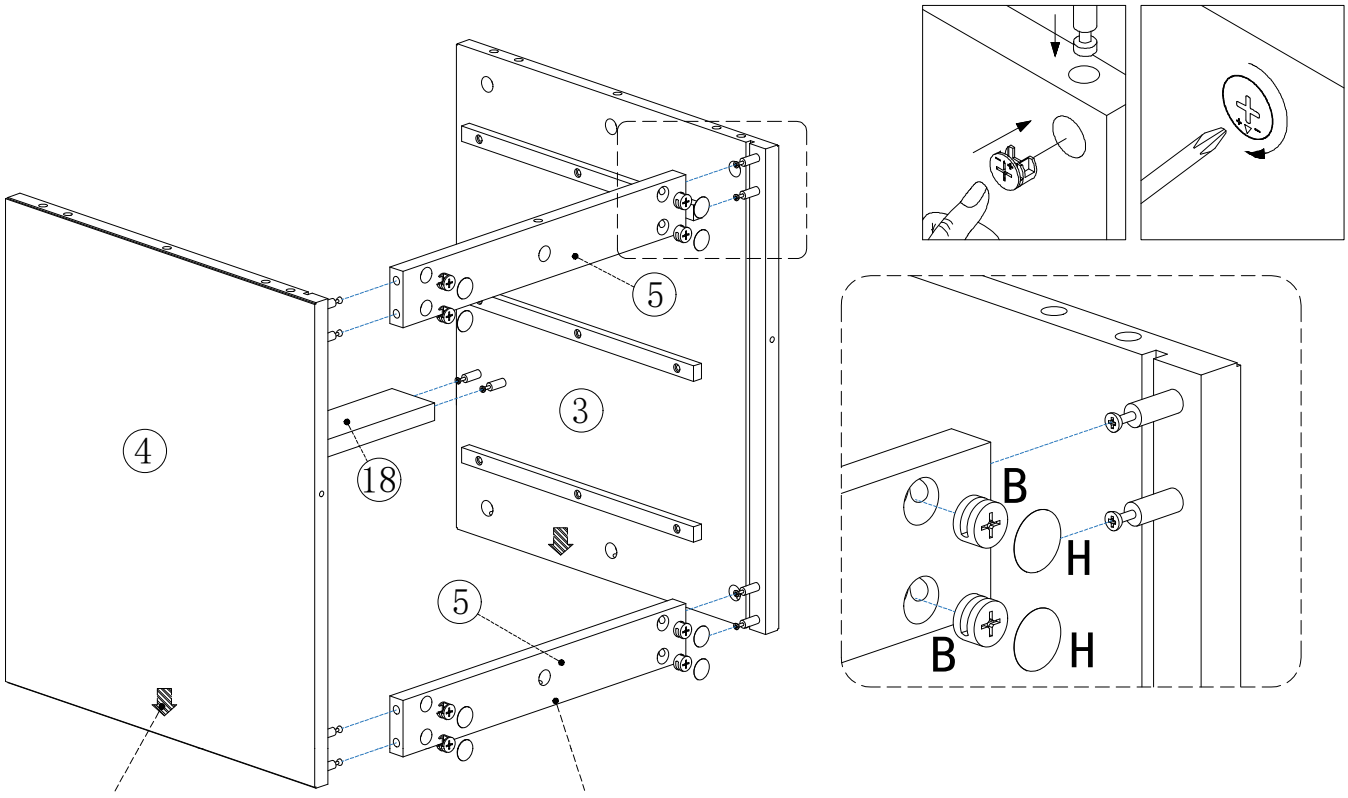



Step 4


CTG065 | 3 Drawers

Attach Top Panel 1 to the assembly from Step 3 using Cam Locks B, Wood Dowels C and Tool G.

Hardware: B × 6 C × 4 Tool: G (reuse)

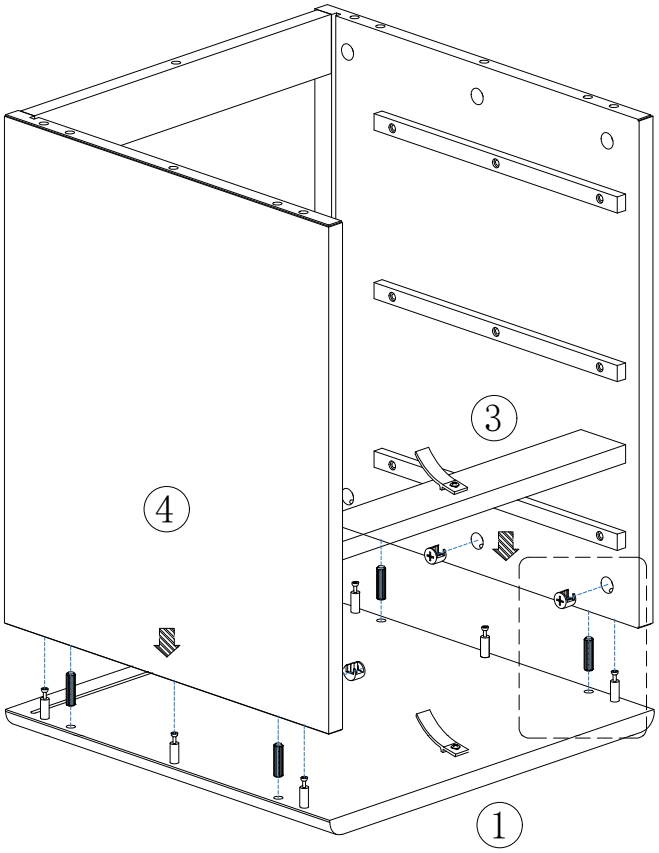

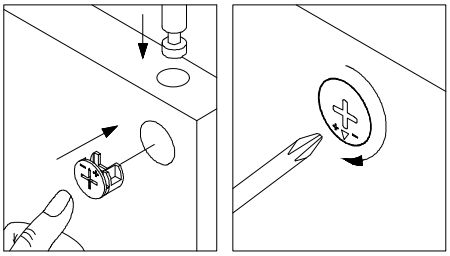


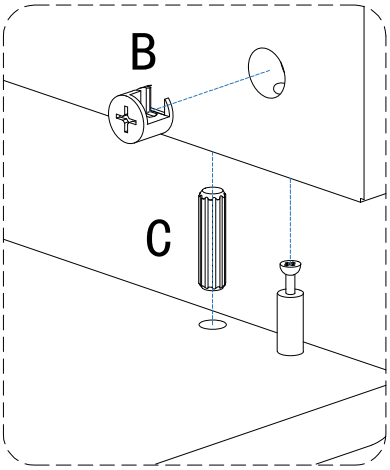

Step 5

CTG065 | 3 Drawers

Slide Back Panel 6 into the grooves of the assembly from Step 4.

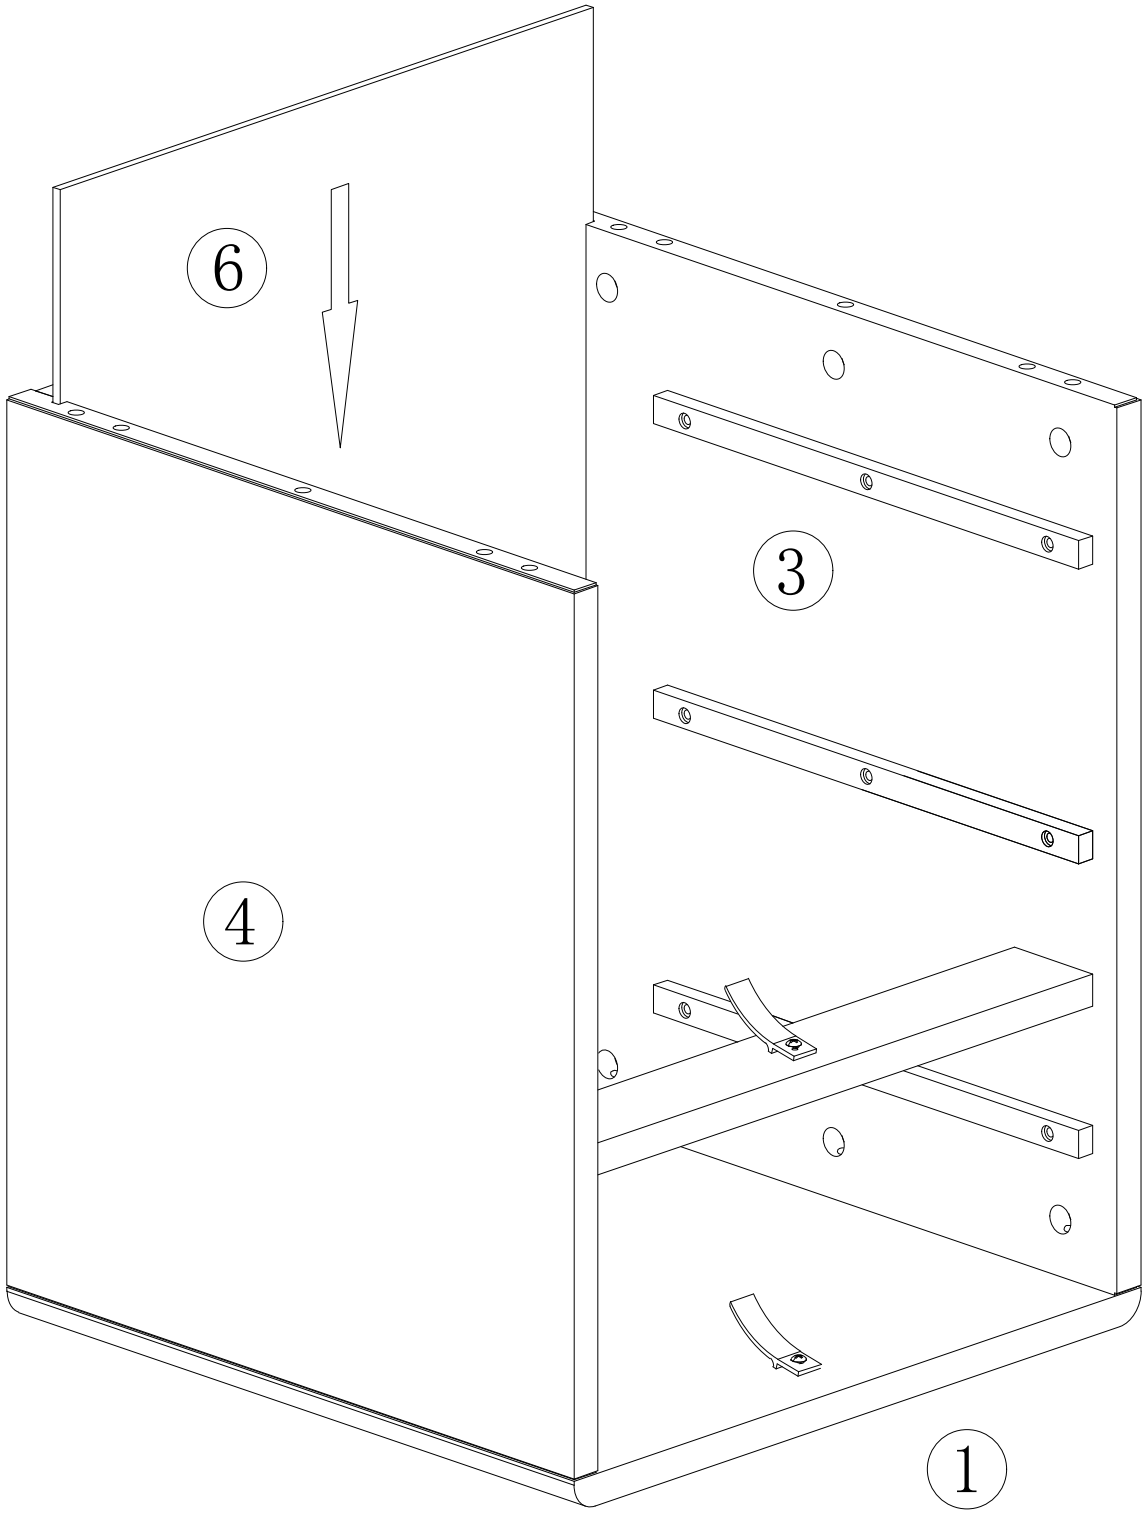



Step 6


CTG065 | 3 Drawers

Attach Base Panel 2 to the assembly from Step 5 using Cam Locks B, Wood Dowels C and Tool G.

Hardware: B × 6 C × 4 Tool: G (reuse)

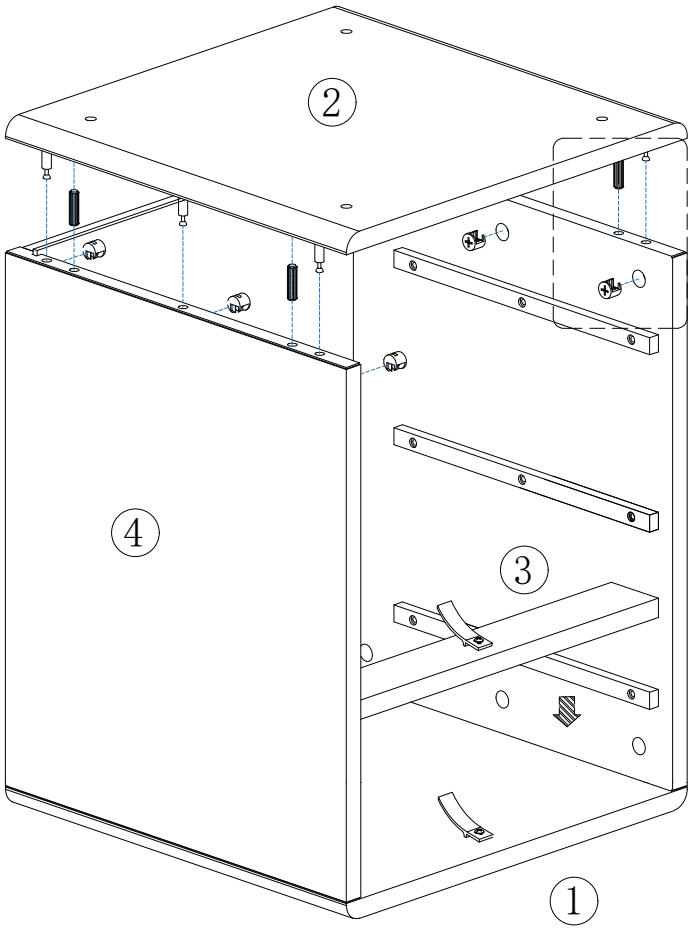

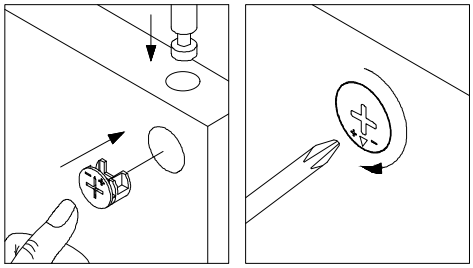


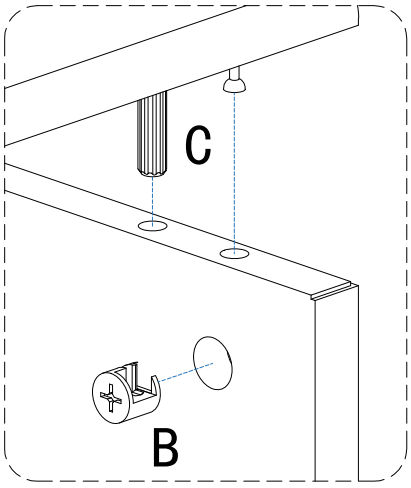


Step 7

CTG065 | 3 Drawers

Fasten Parts 1, 2 and 5 as shown using Cam Locks B.
Cover the indicated holes with Stickers H.
Hardware: B × 2 H × 2 Tool: G (reuse)

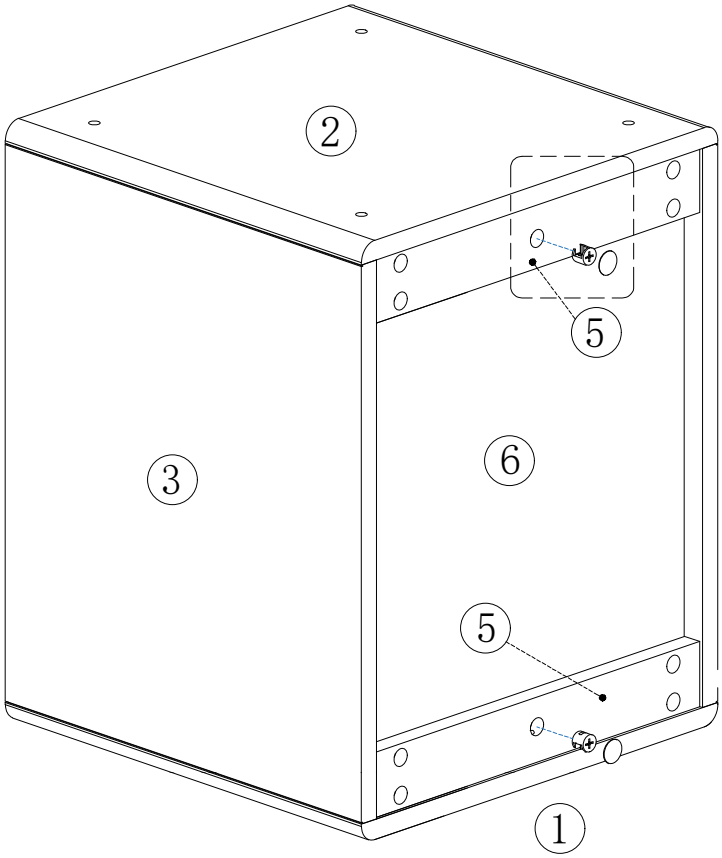


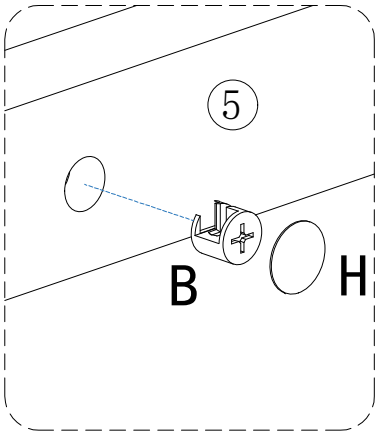


Step 8

CTG065 | 3 Drawers

Screw all four Legs 7 clockwise into Base Panel 2, as shown.

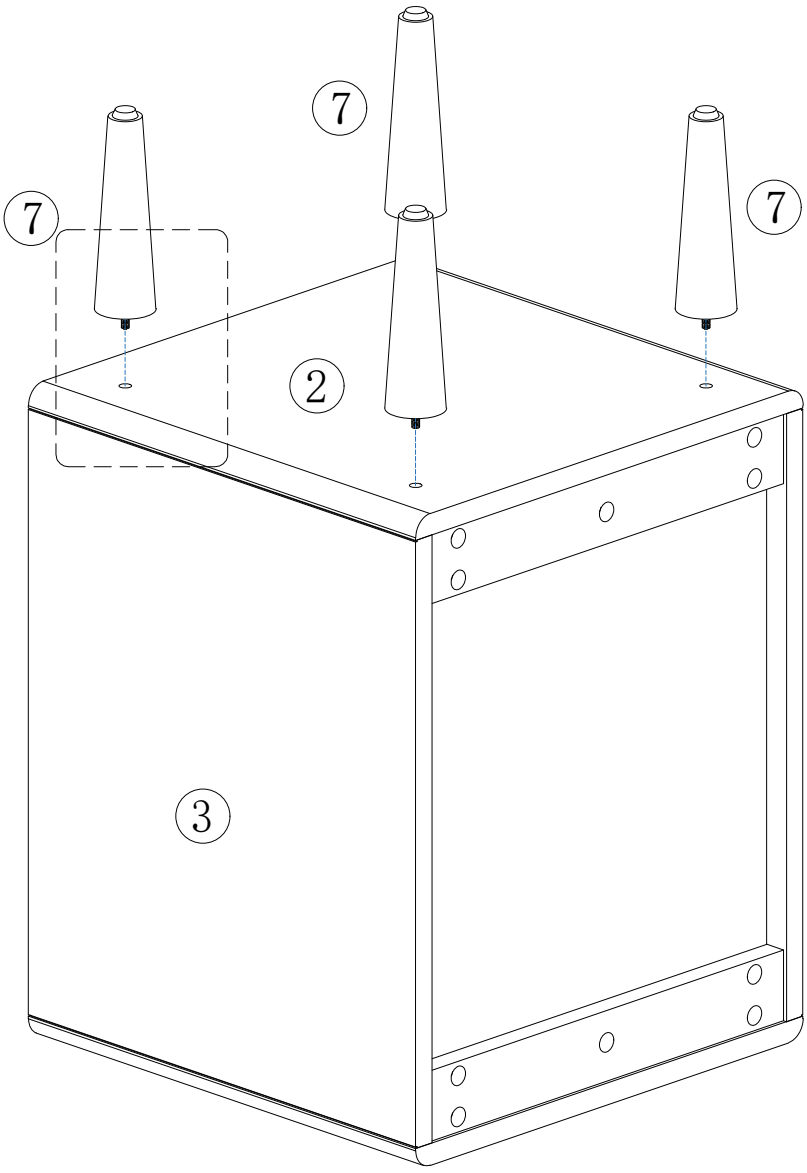

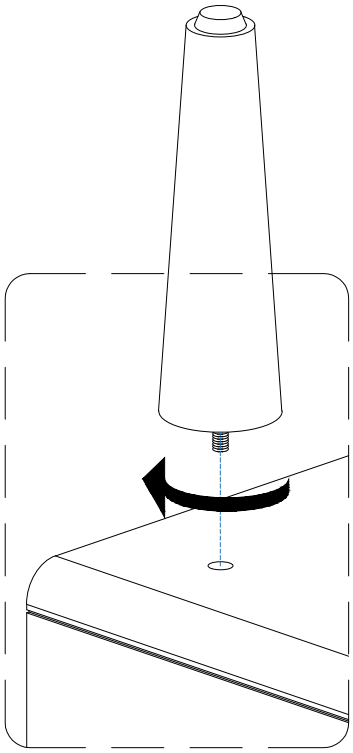



Step 9

CTG065 | 3 Drawers

Turn the preinstalled Leveling Feet J to level the sidetable.

Preinstalled: J × 4

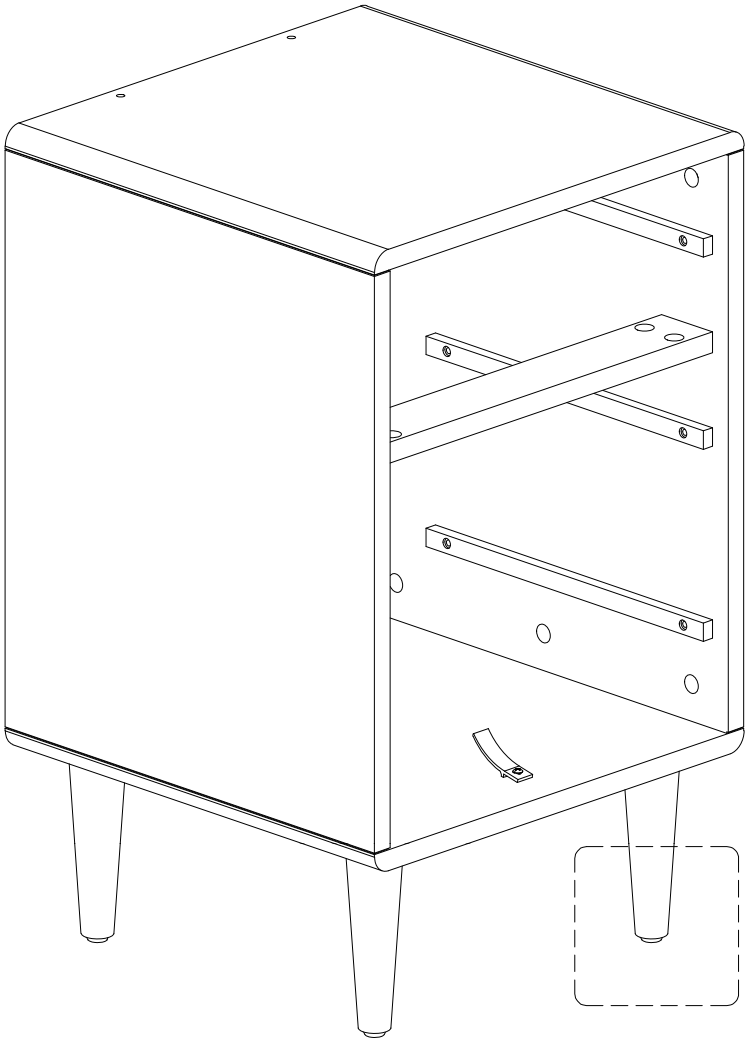

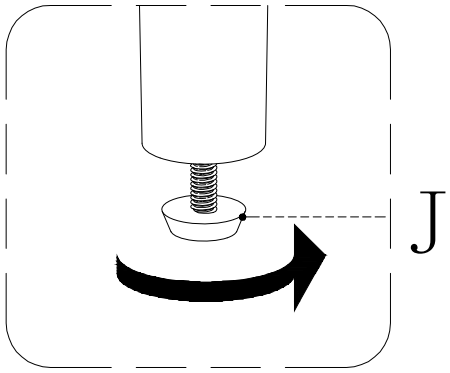



Step 10

CTG065 | 3 Drawers

Attach two Drawer Sides 9 to each Drawer Front Assembly 8 using Screws D and Tool G. Make three identical drawers.

Hardware for all three drawers: D × 12 Tool: G (reuse)

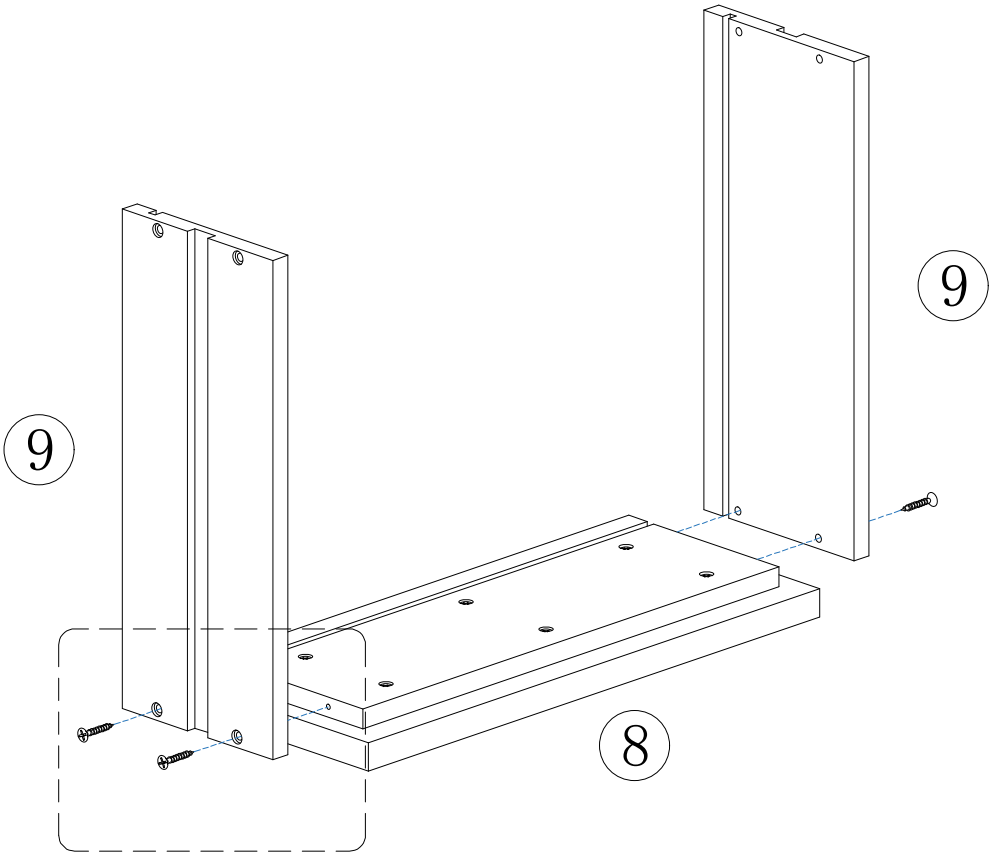


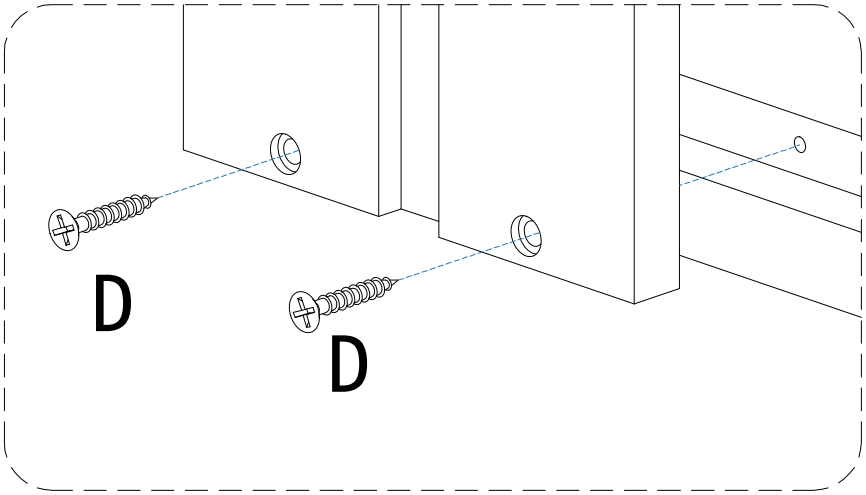

Step 11

CTG065 | 3 Drawers


Slide one Bottom Panel 11 into each drawer assembled in Step 10.
Repeat for all three drawers.

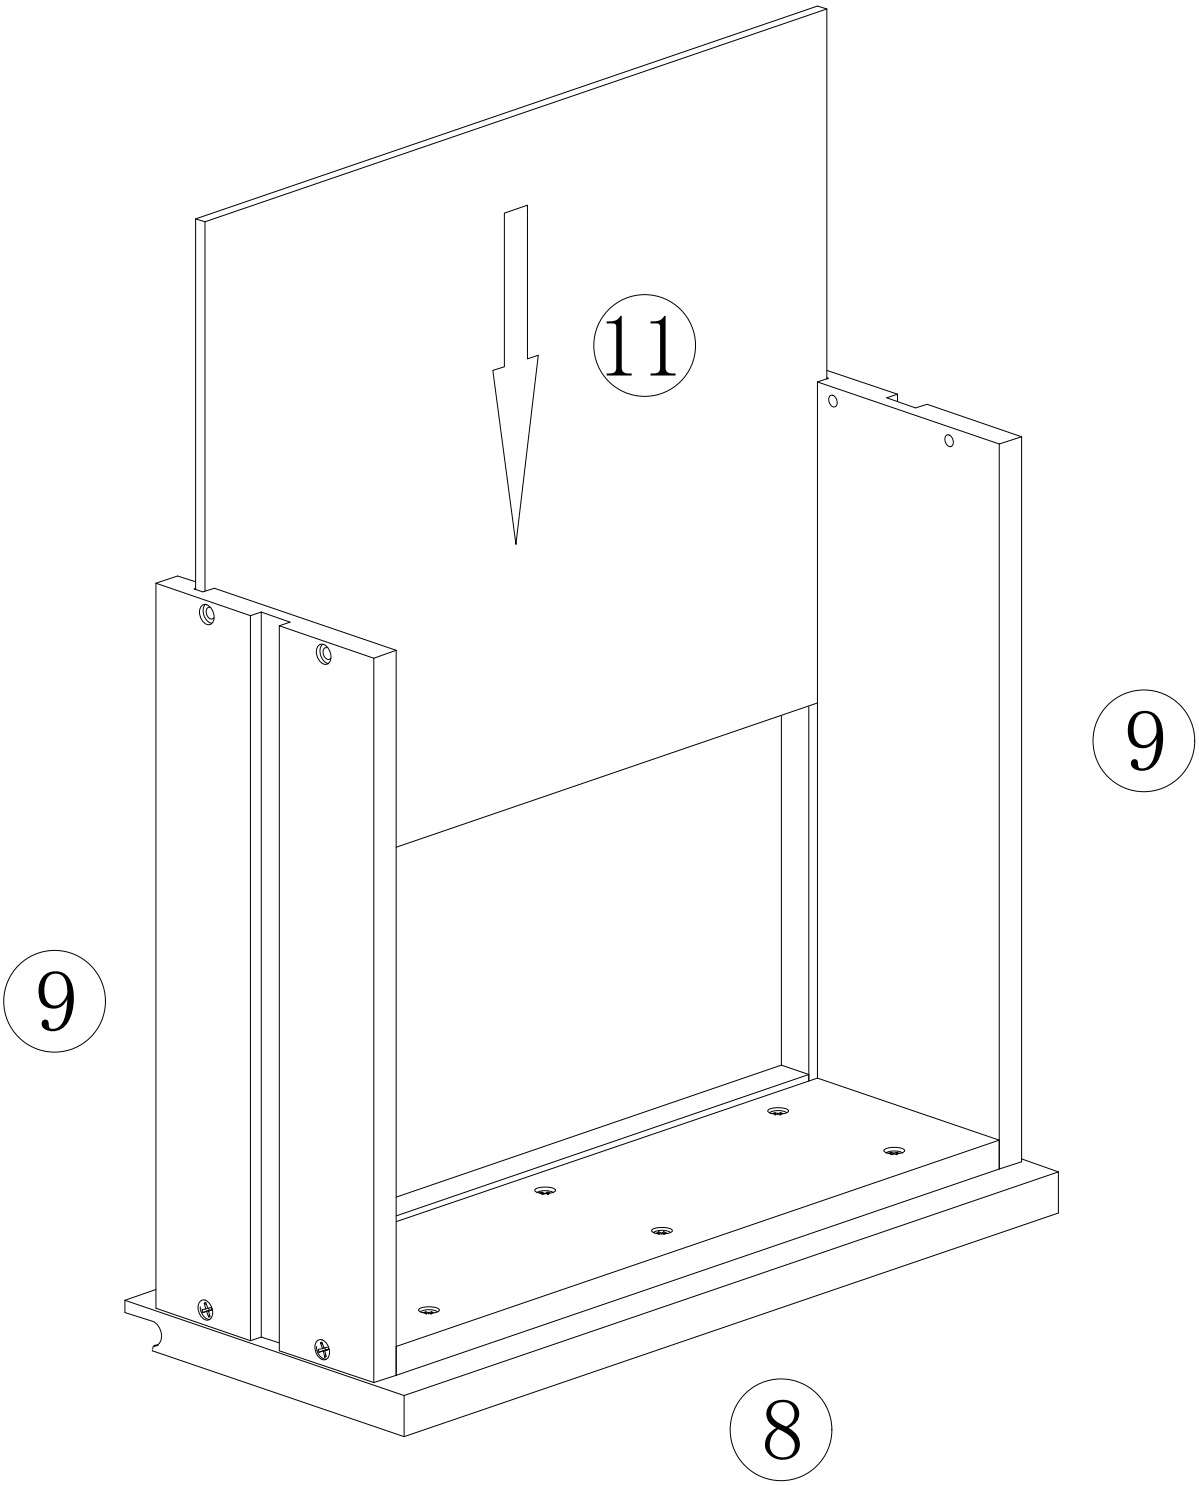



Step 12

CTG065 | 3 Drawers

Attach Back Panel 10 to both Drawer Sides 9 using Screws D.
Repeat for all three drawers.
Hardware for all three drawers: D × 12 Tool: G (reuse)

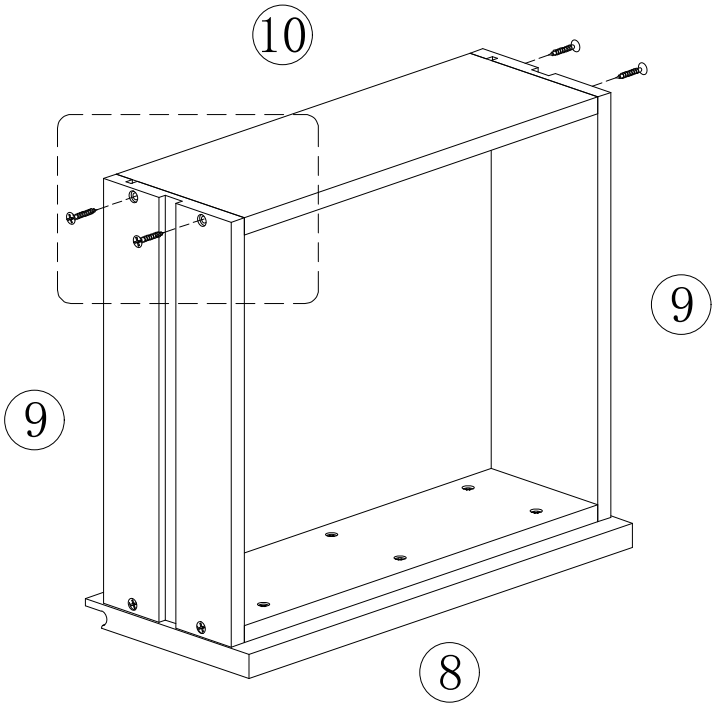

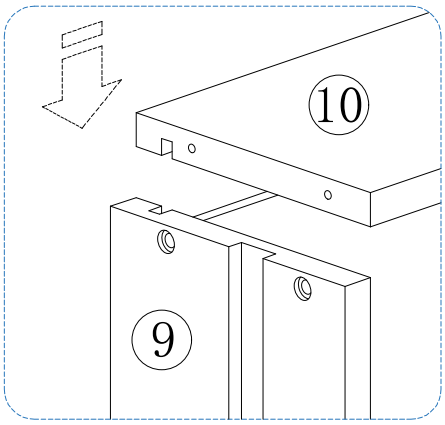


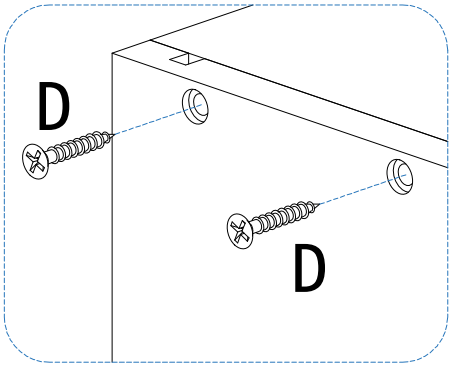

Step 13

CTG065 | 3 Drawers

Align the preinstalled slides and slide all three assembled drawers into the leveled cabinet from Step 9.

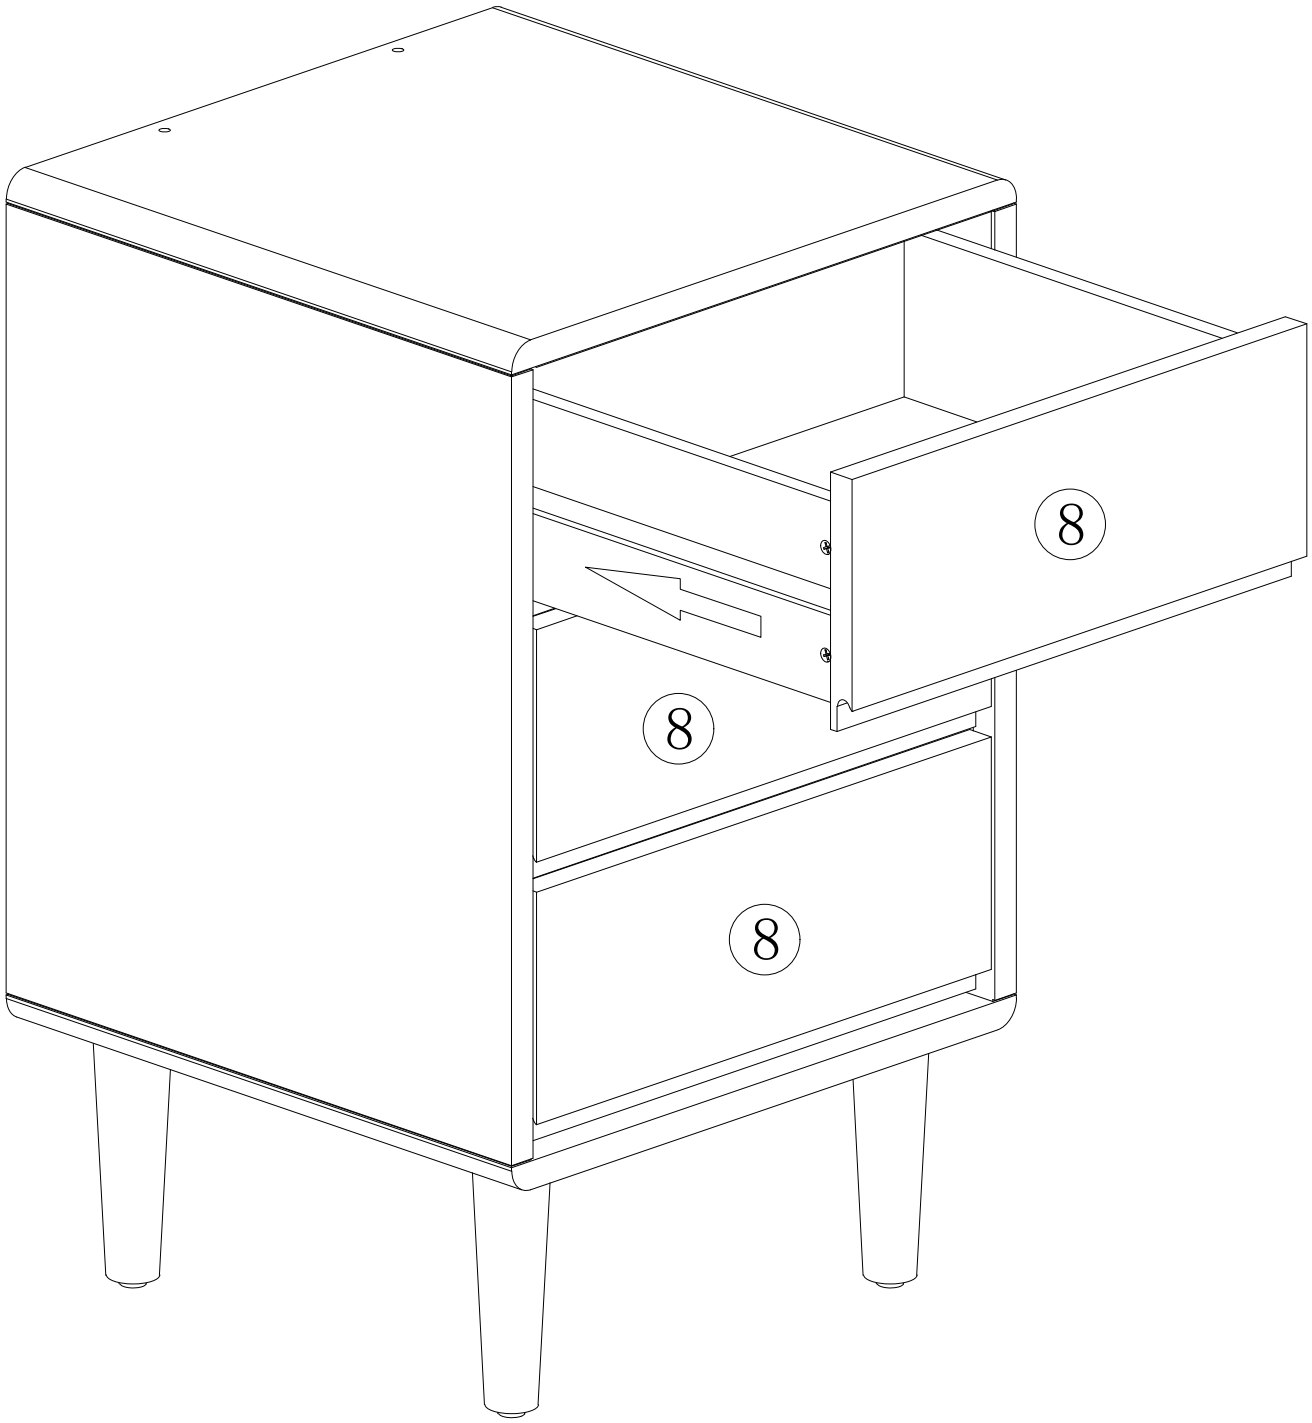



Step 14


CTG065 | 3 Drawers


Install Cam Bolts A in Parts 12, 13 and 14 using Tool G.

Hardware: A × 16 Tool: G (reuse)

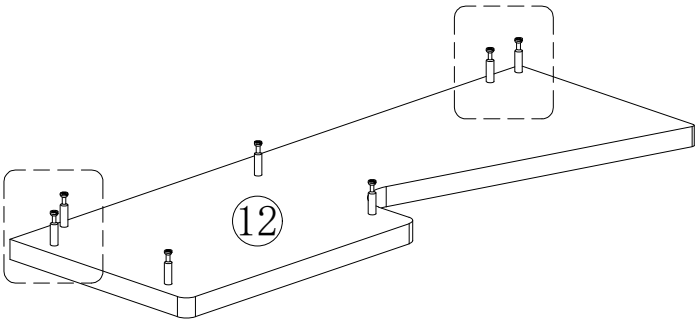

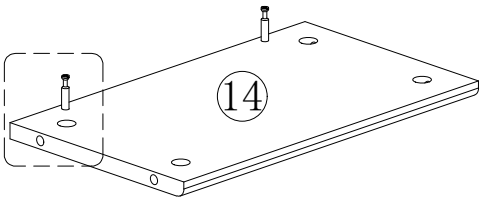

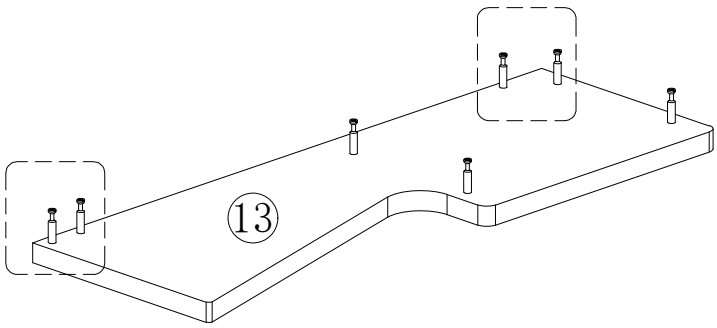


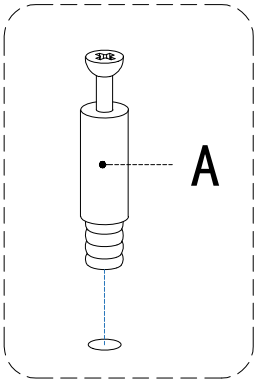



Step 15

CTG065 | 3 Drawers

Attach Upper Rear Crossbar 16 to Upper Unit Top 14
using Cam Locks B; cover the indicated holes with Stickers H.
Hardware: B × 2 H × 2 Tool: G (reuse)

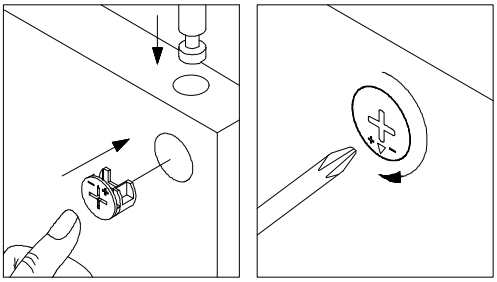

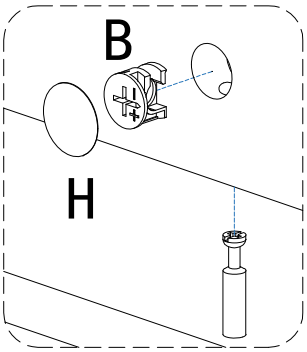


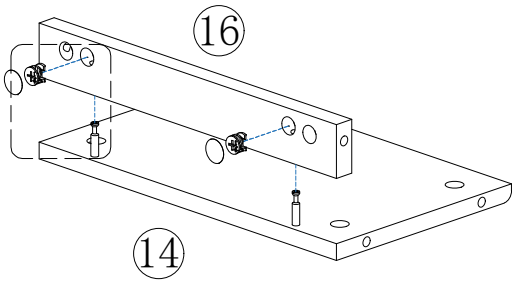

Step 16

CTG065 | 3 Drawers

Attach the assembly from Step 15, Shelf 15 and Crossbar 17
to Right Side 13 using Cam Locks B; apply Stickers H.
Hardware: B × 7 H × 7 Tool: G (reuse)

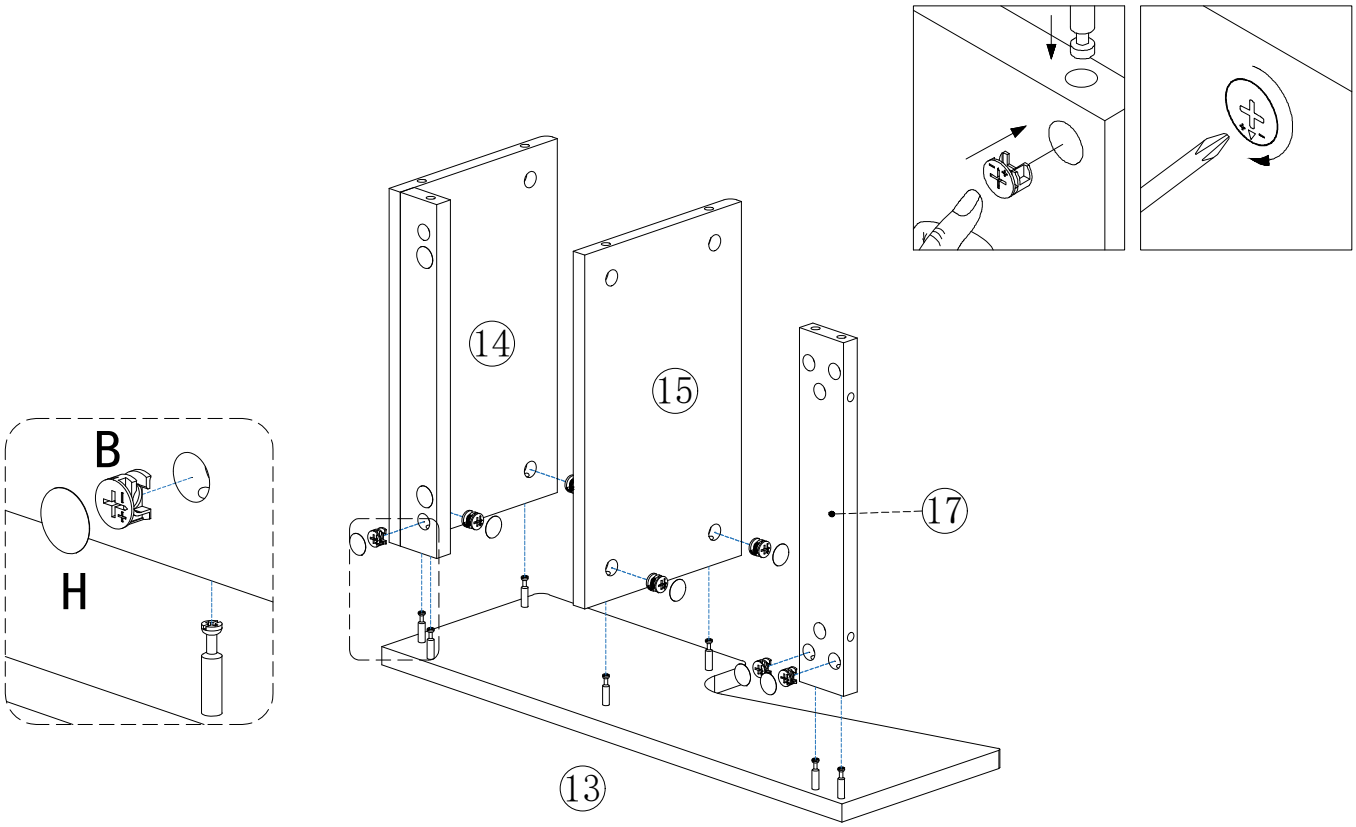



Step 17


CTG065 | 3 Drawers

Attach Left Side 12 to the assembly from Step 16 using Cam Locks B; apply Stickers H.

Hardware: B × 7 H × 7 Tool: G (reuse)

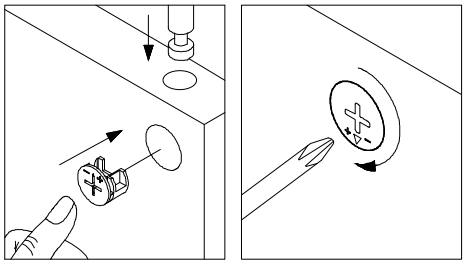

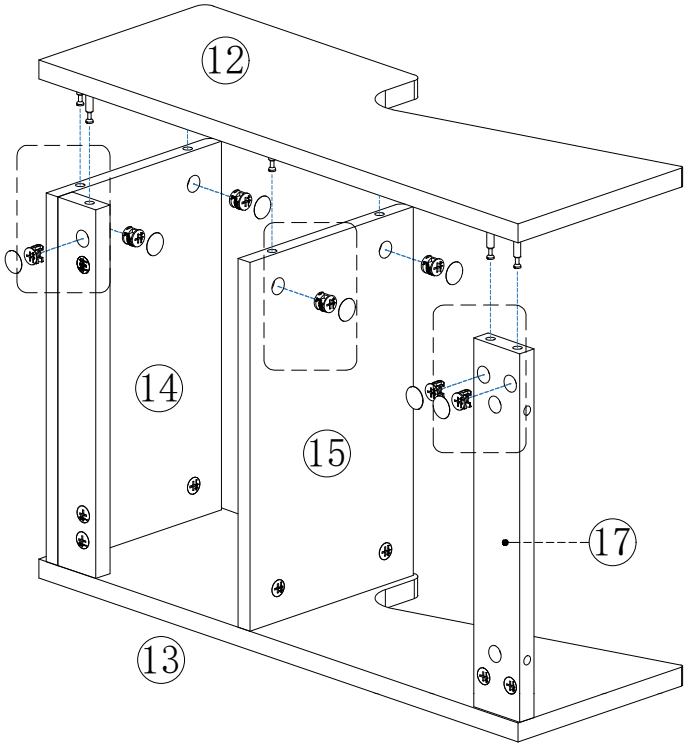

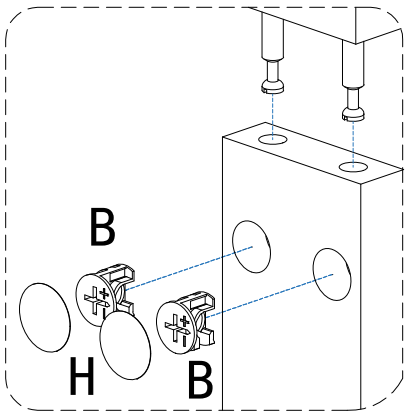



Step 18

CTG065 | 3 Drawers

Install two Cam Bolts A at the indicated positions on Top Panel 1 of the cabinet assembled in Step 13.

Hardware: A × 2 Tool: G (reuse)

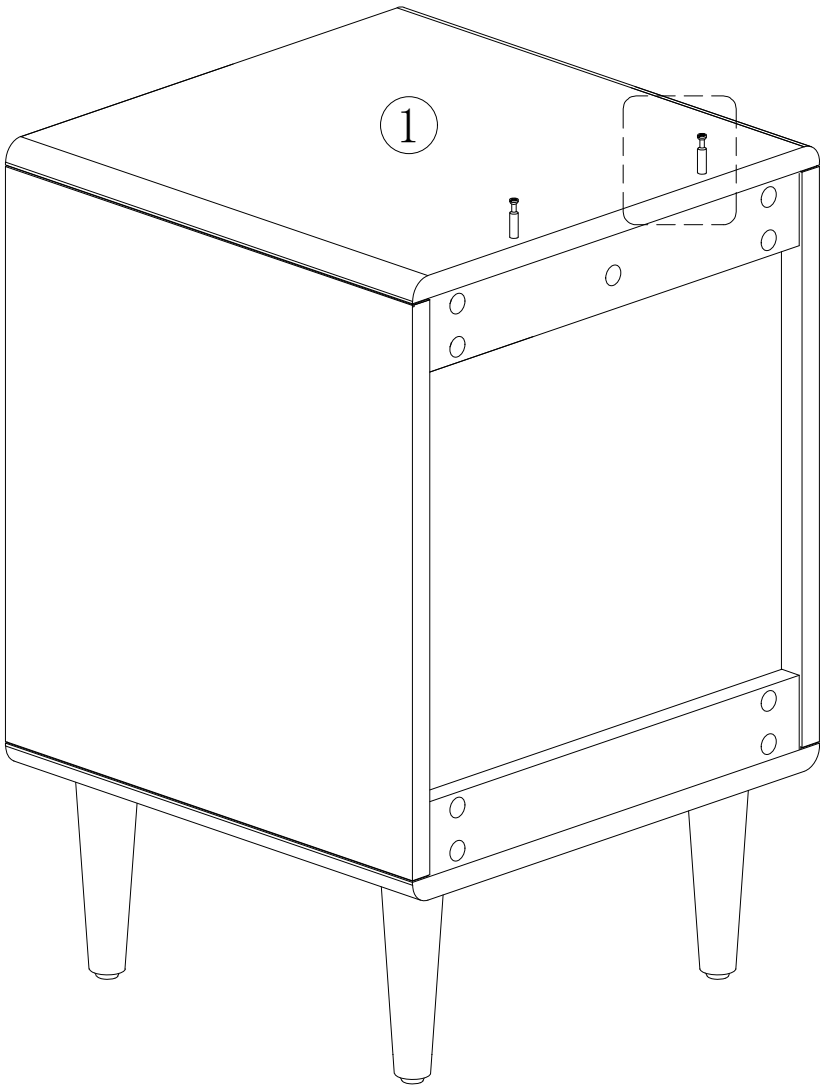

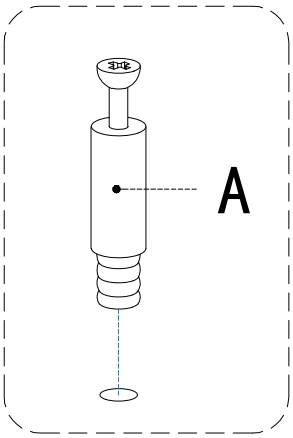


Step 19

CTG065 | 3 Drawers

Join the upper unit from Step 17 to the cabinet from Step 18 using Cam Locks B; apply Stickers H.

Hardware: B × 2 H × 2 Tool: G (reuse)

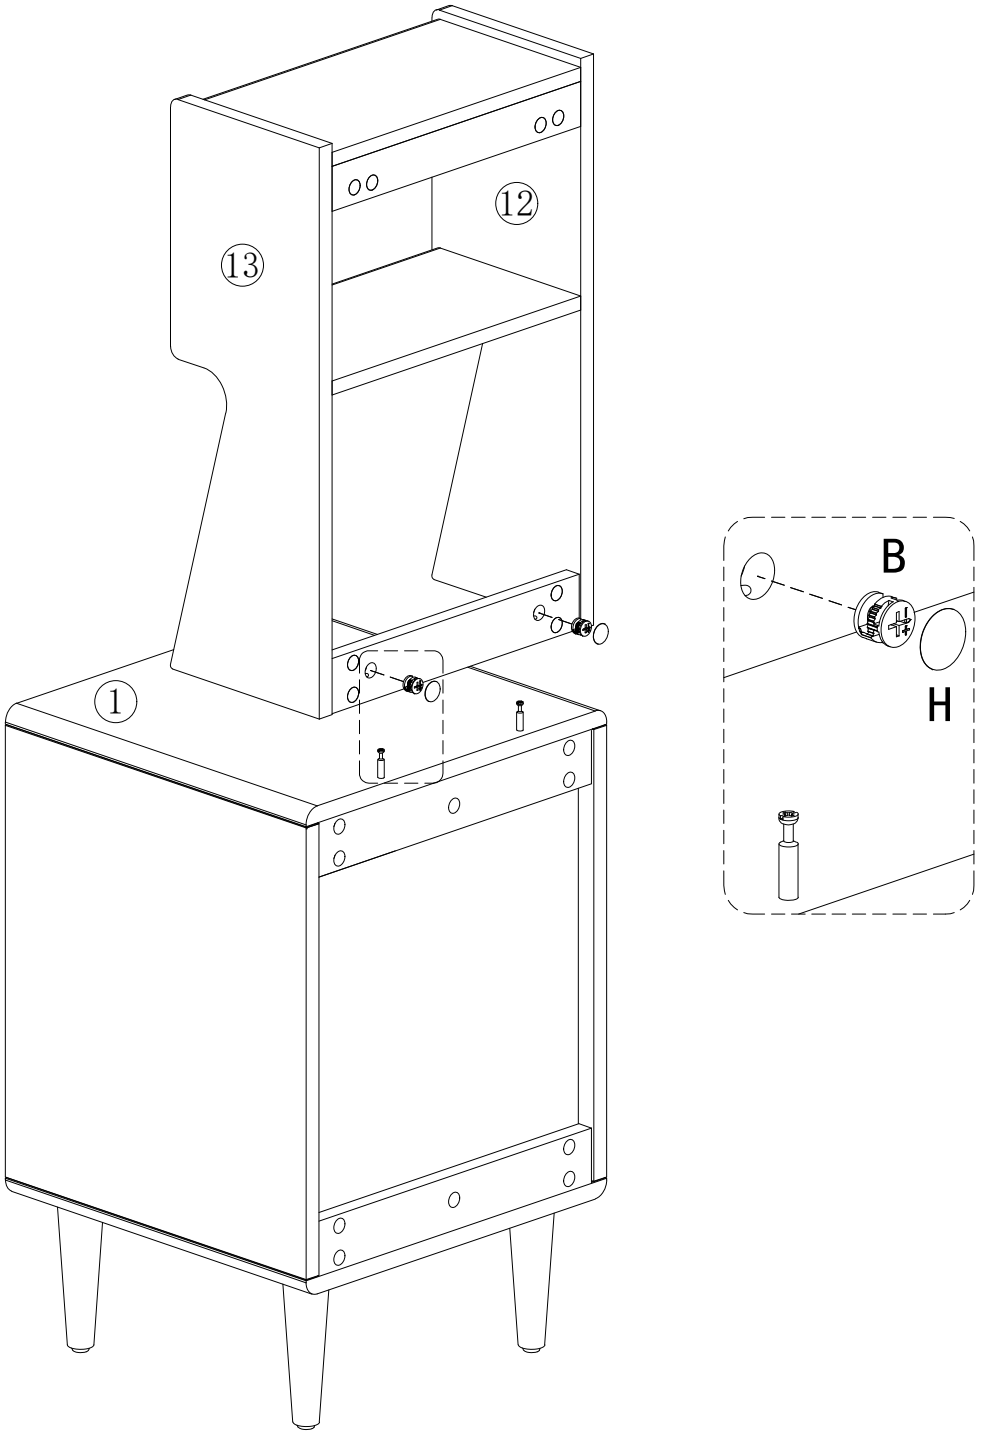

Step 20

CTG065 | 3 Drawers

Secure the assembled unit to the wall using Tip Restraint Kit I,
as shown. Hardware: I × 1 kit

