



FLEXSTONE[®]
LUXURIOUS BATH SURROUNDS

Recessed Shampoo Caddy Install Instructions

Recessed Shampoo Caddy Instructions

Recessed Shampoo Caddy



Installation of Recessed Caddy



1. Recessed Shampoo Caddies are installed between studs in any wall of your surround. Install the FlexStone bath surround as normal, but mark the locations of studs as you go.

For the 17" x 17" Caddy:

Cut a square hole through the FlexStone wall panel, the existing tile (if any), and the sheetrock or cement board. Size the hole just larger than the recessed portion of the caddy (approx. 12.25" x 12.25"). Adding a horizontal stud between vertical studs to secure the bottom side of the caddy is not required, but is recommended for optimal strength. Note: The hole must be smaller than the flange of the caddy! Dry fit caddy.

For the 17" x 26" Caddy:

Cut a rectangular hole through the FlexStone wall panel, the existing tile (if any), and the sheetrock or cement board. Size the hole just larger than the recessed portion of the caddy (approx. 12.25" x 21.25"). Adding a horizontal stud between vertical studs to secure the bottom side of the caddy is not required, but is recommended for optimal strength. Note: The hole must be smaller than the flange of the caddy! Dry fit caddy.

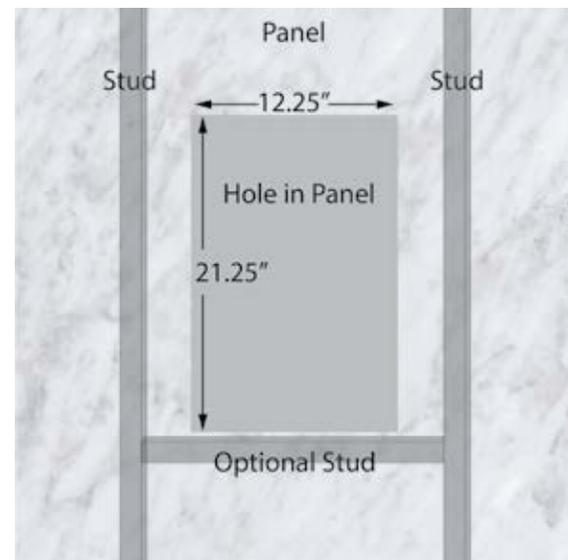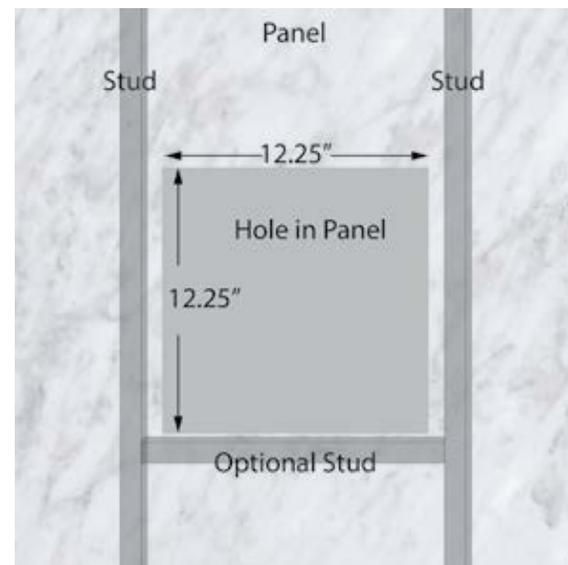

3. Peel away protective masking from the caddy, apply construction adhesive to the back side of the entire flange, filling the cavity on the backside of the flange.

4. Press the caddy into the hole until the flange is flat against the FlexStone wall panel. Secure with painters' tape until the adhesive cures. The cured adhesive will hold the caddy in place and also form a secondary water barrier.

5. Apply 100% silicone, as with the rest of the FlexStone bath surround, to all corners and edges, as well as all internal corners of the caddy. This forms the primary leak barrier.

