



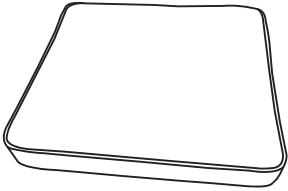
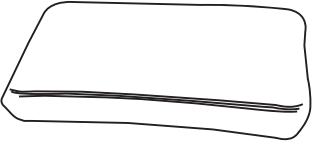
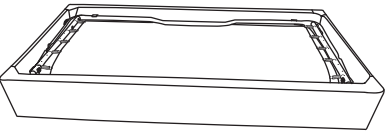
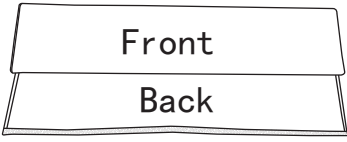

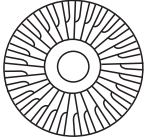





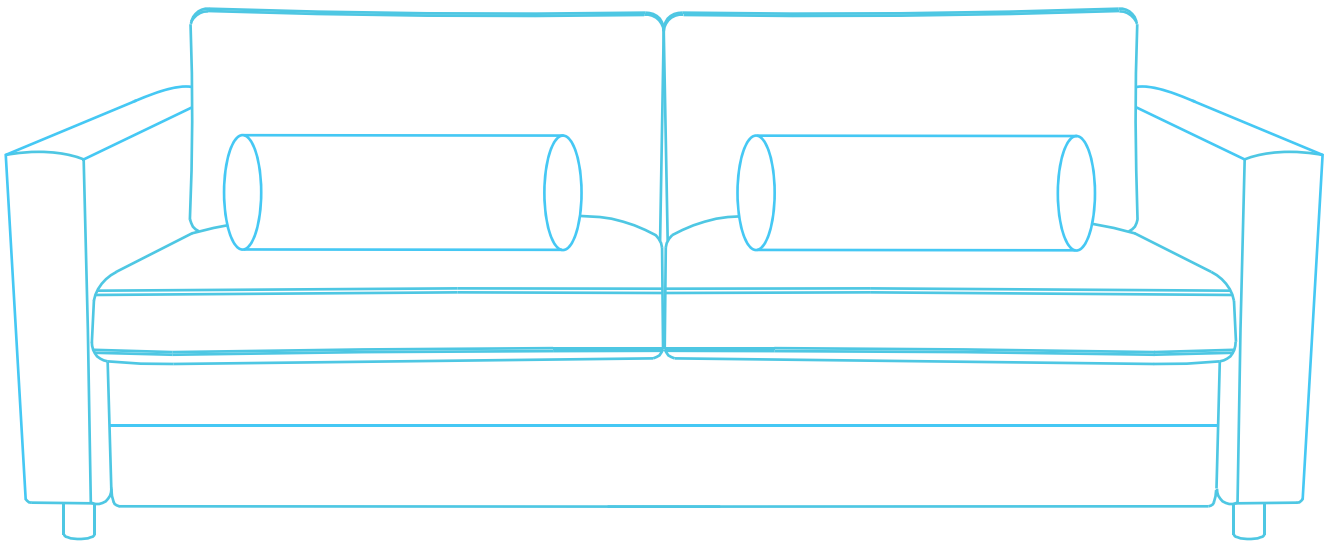


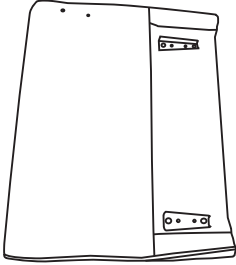


INSTALLATION GUIDE

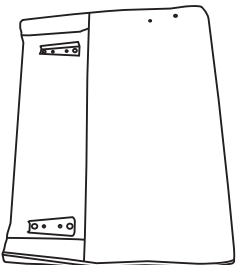


SOFA
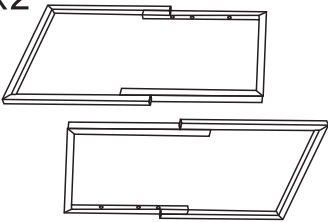
<p>A Right Armrest</p> 	<p>B Left Armrest</p> 	<p>C Pillow X2</p> 	<p>D Seat X2</p> 	
<p>E Backrest X2</p> 	<p>F Base</p> 	<p>G Back Base</p> 	<p>J Allenkey</p> 	
<p>K Washer X4</p> 	<p>M Feet X4</p> 	<p>N Insert X 6</p> 	<p>O Screw X 16</p>  <p>M6x16mm</p>	<p>P Insert X 2</p> 
<p>R x2</p> 	<p>S x2</p> 	<p>T x6</p> 	<p>U Screw X 8</p>  <p>M6x40mm</p>	


STEP 1

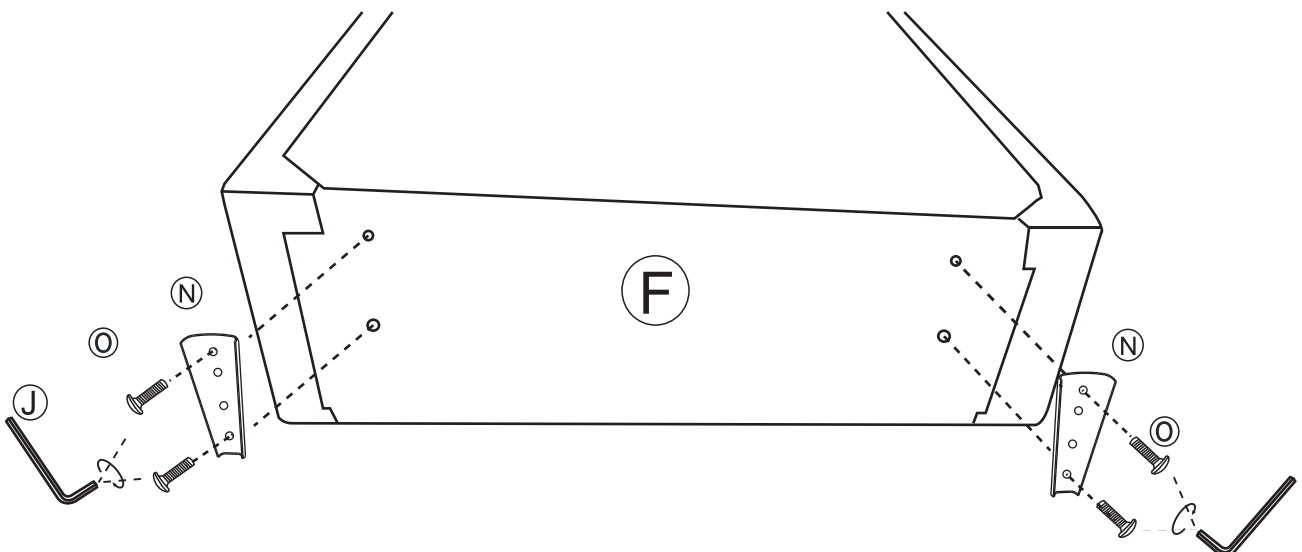


STEP 2

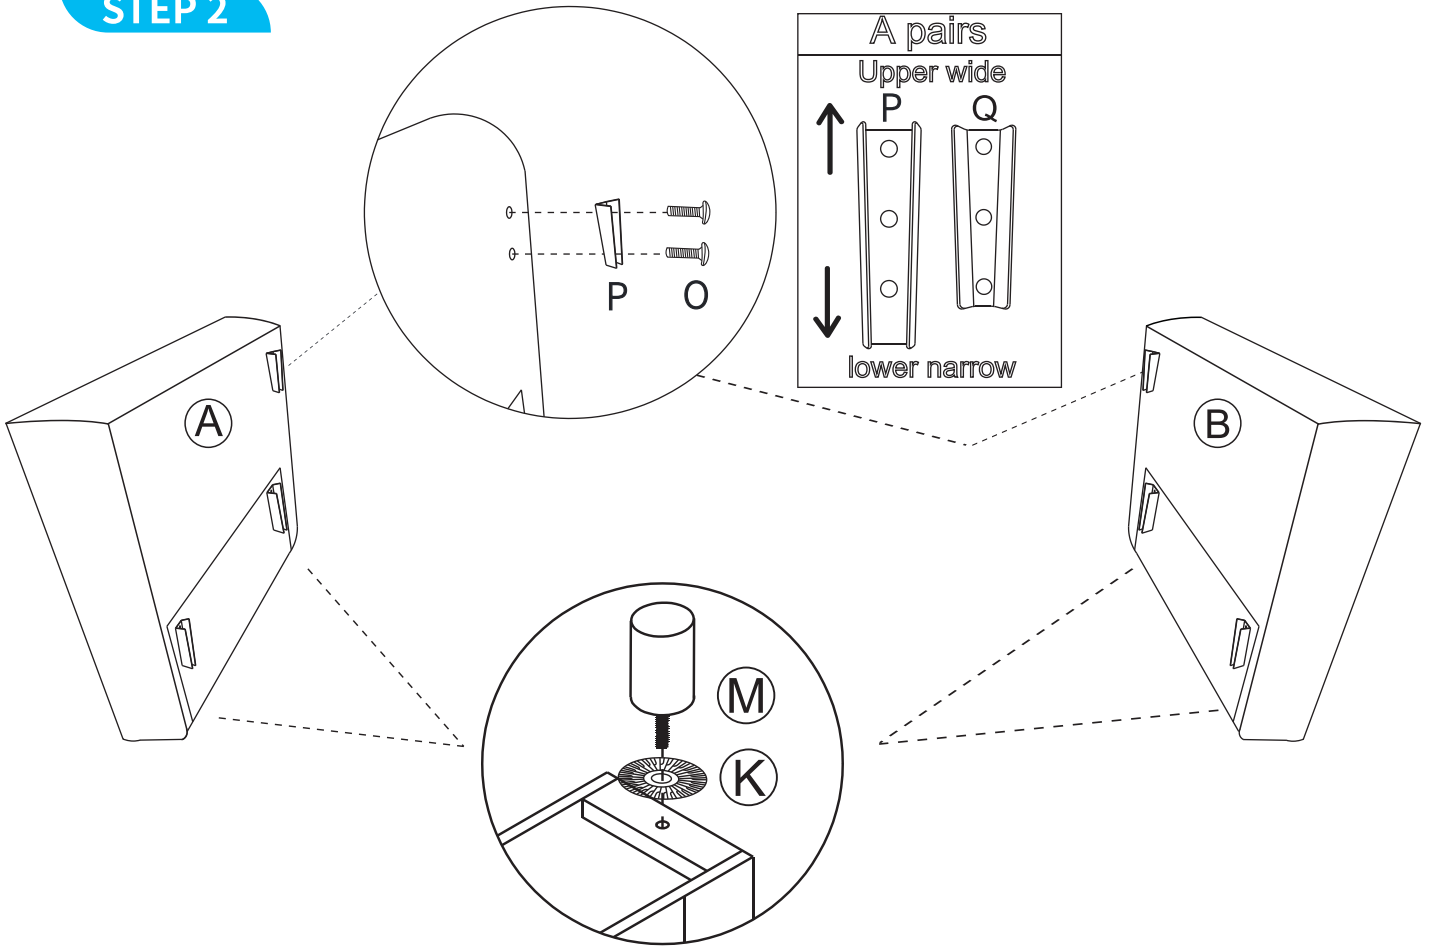


STEP 3

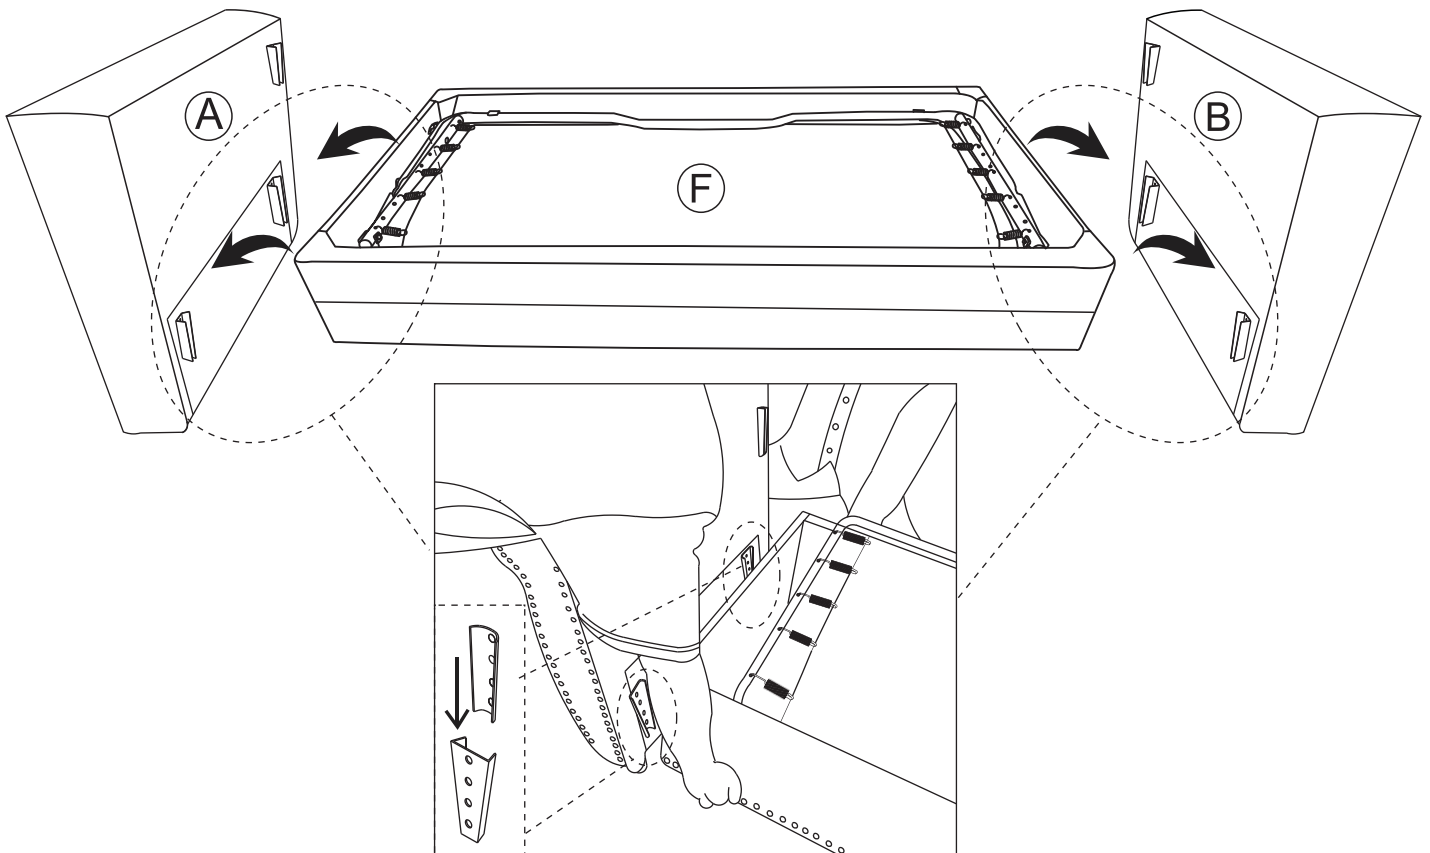


STEP 4

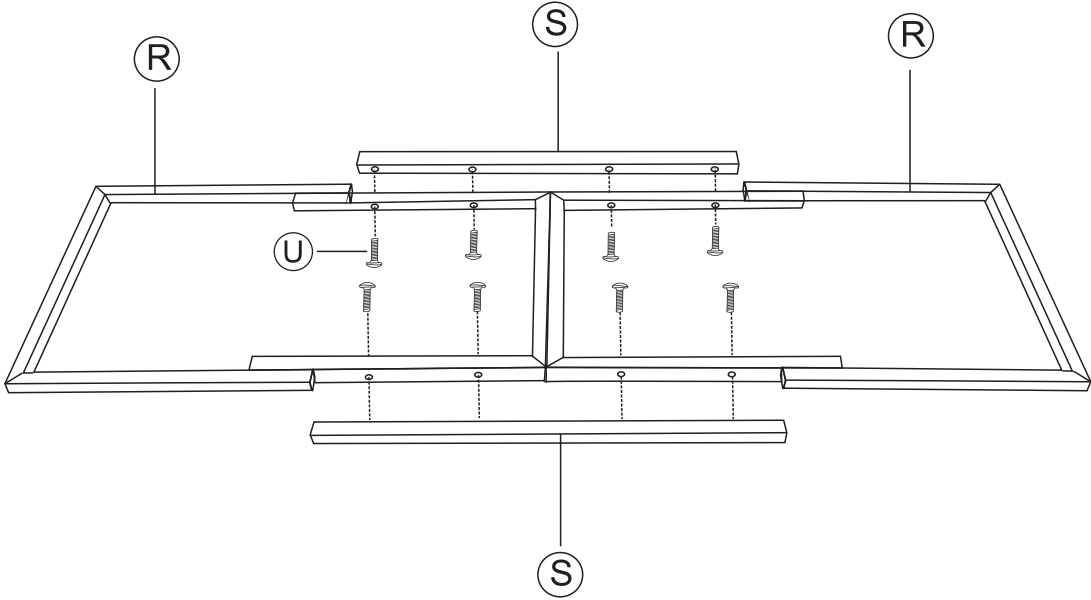


STEP 5

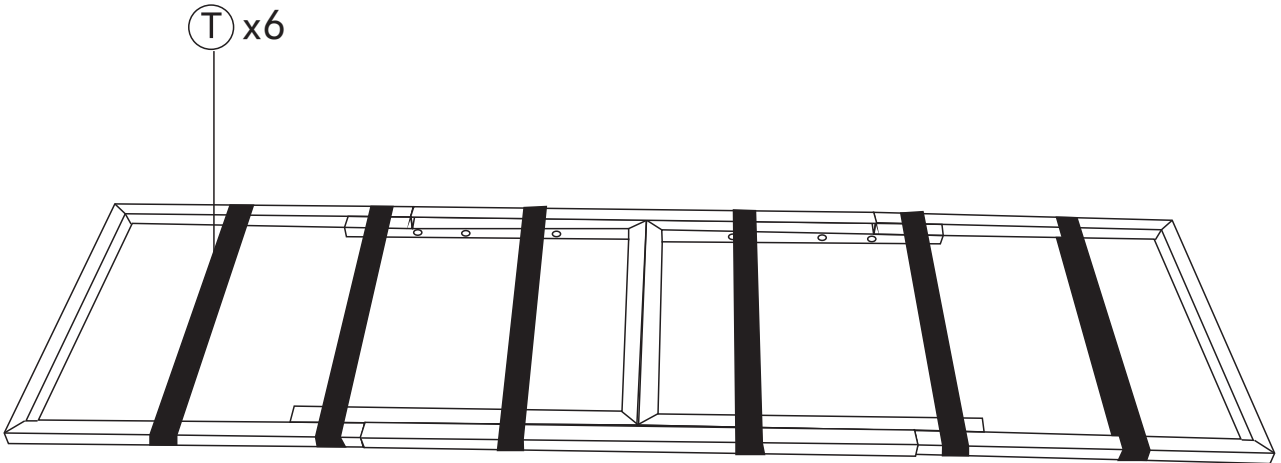


STEP 6

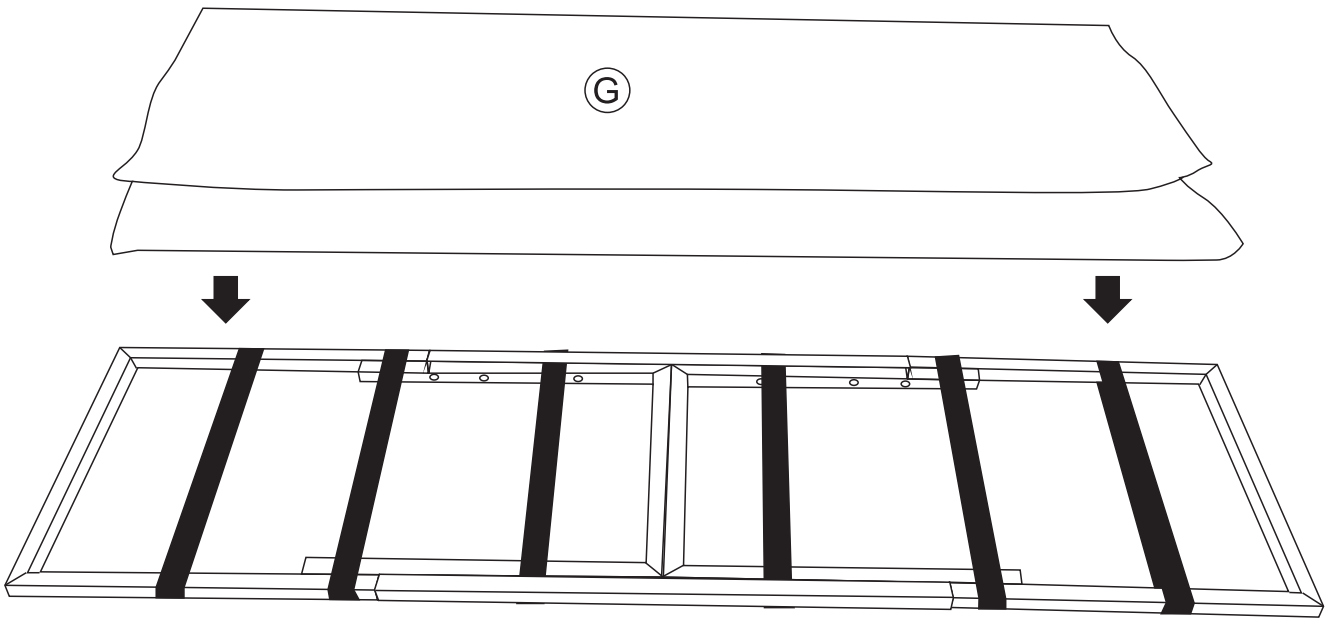


STEP 7

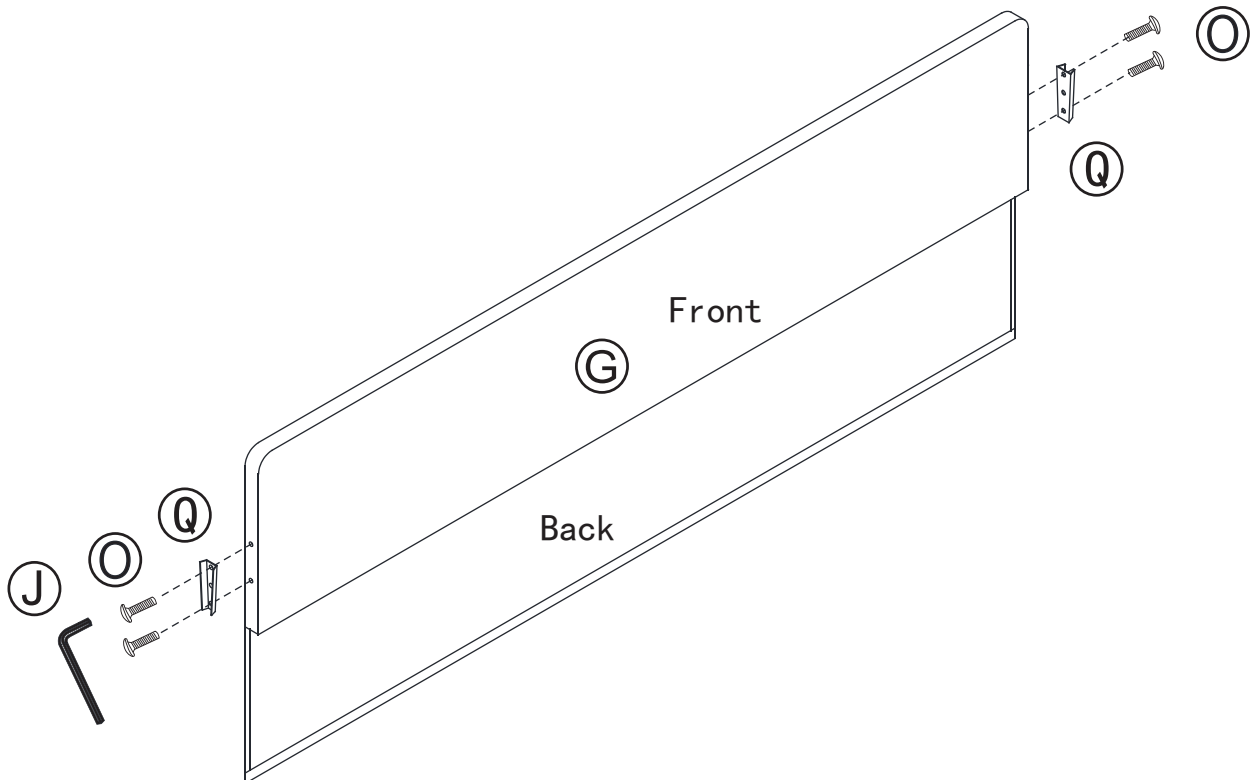


STEP 8

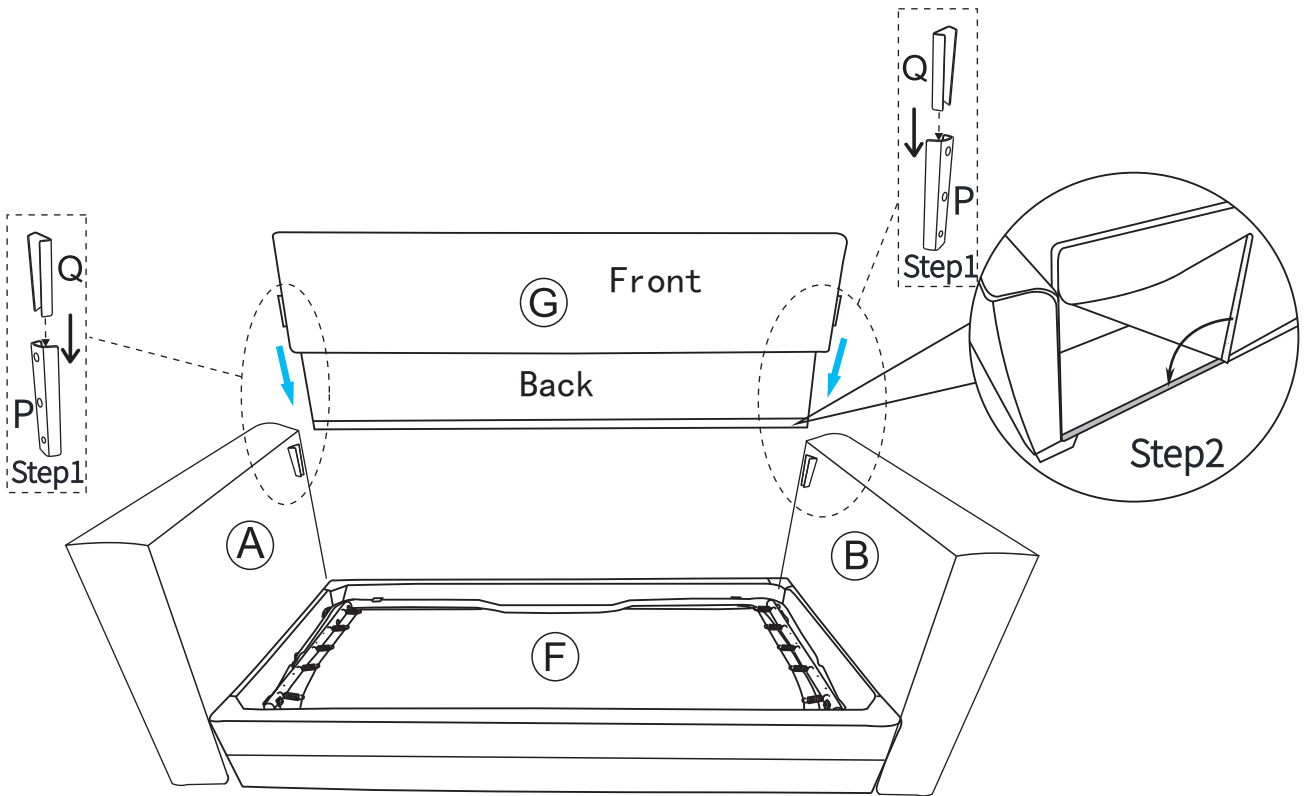


STEP 9

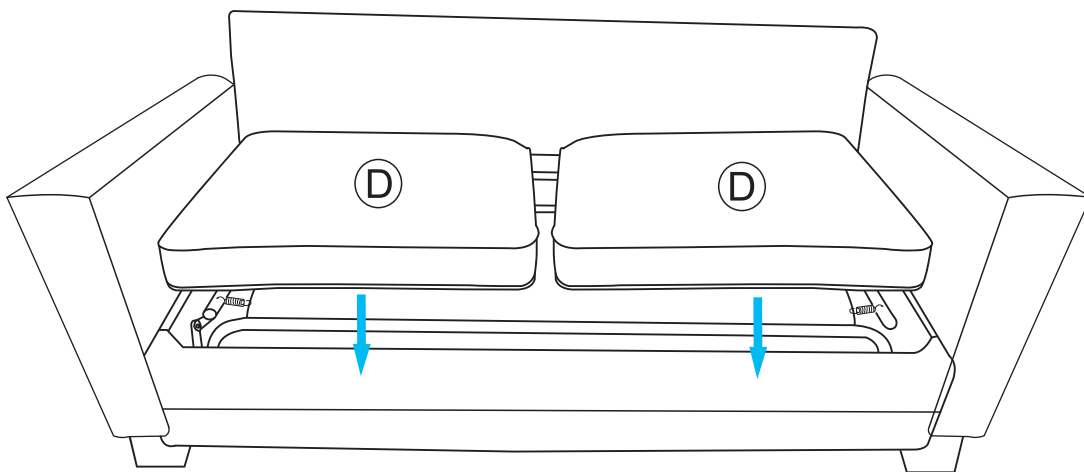

STEP 10

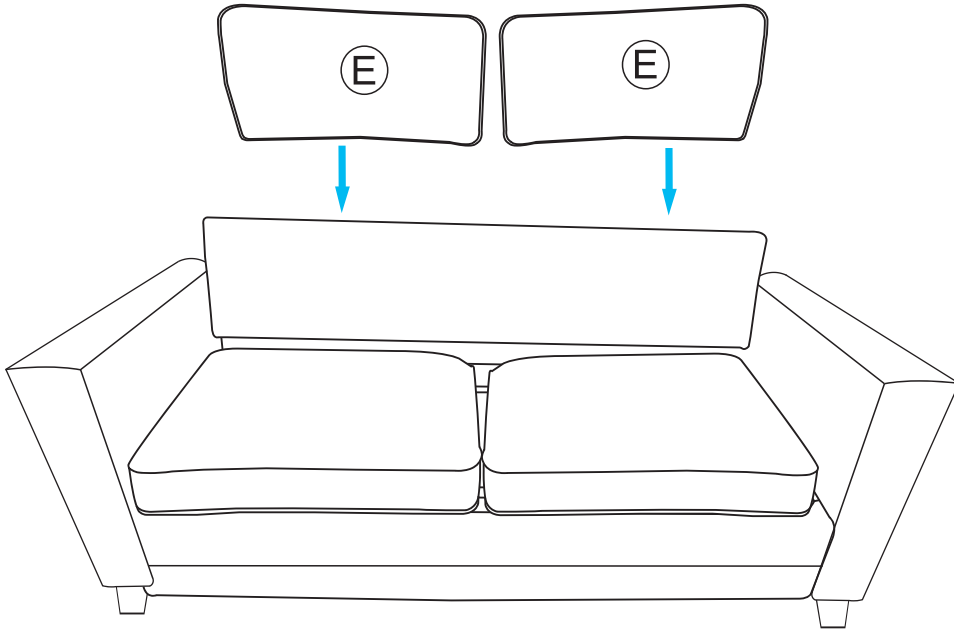


COMPLETE

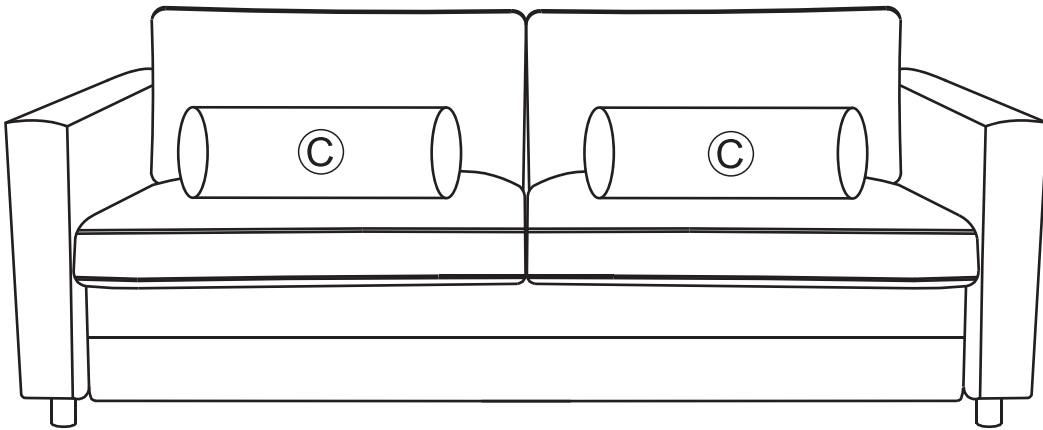



Product Instruction Manual

STEP 1



TRANSFORM

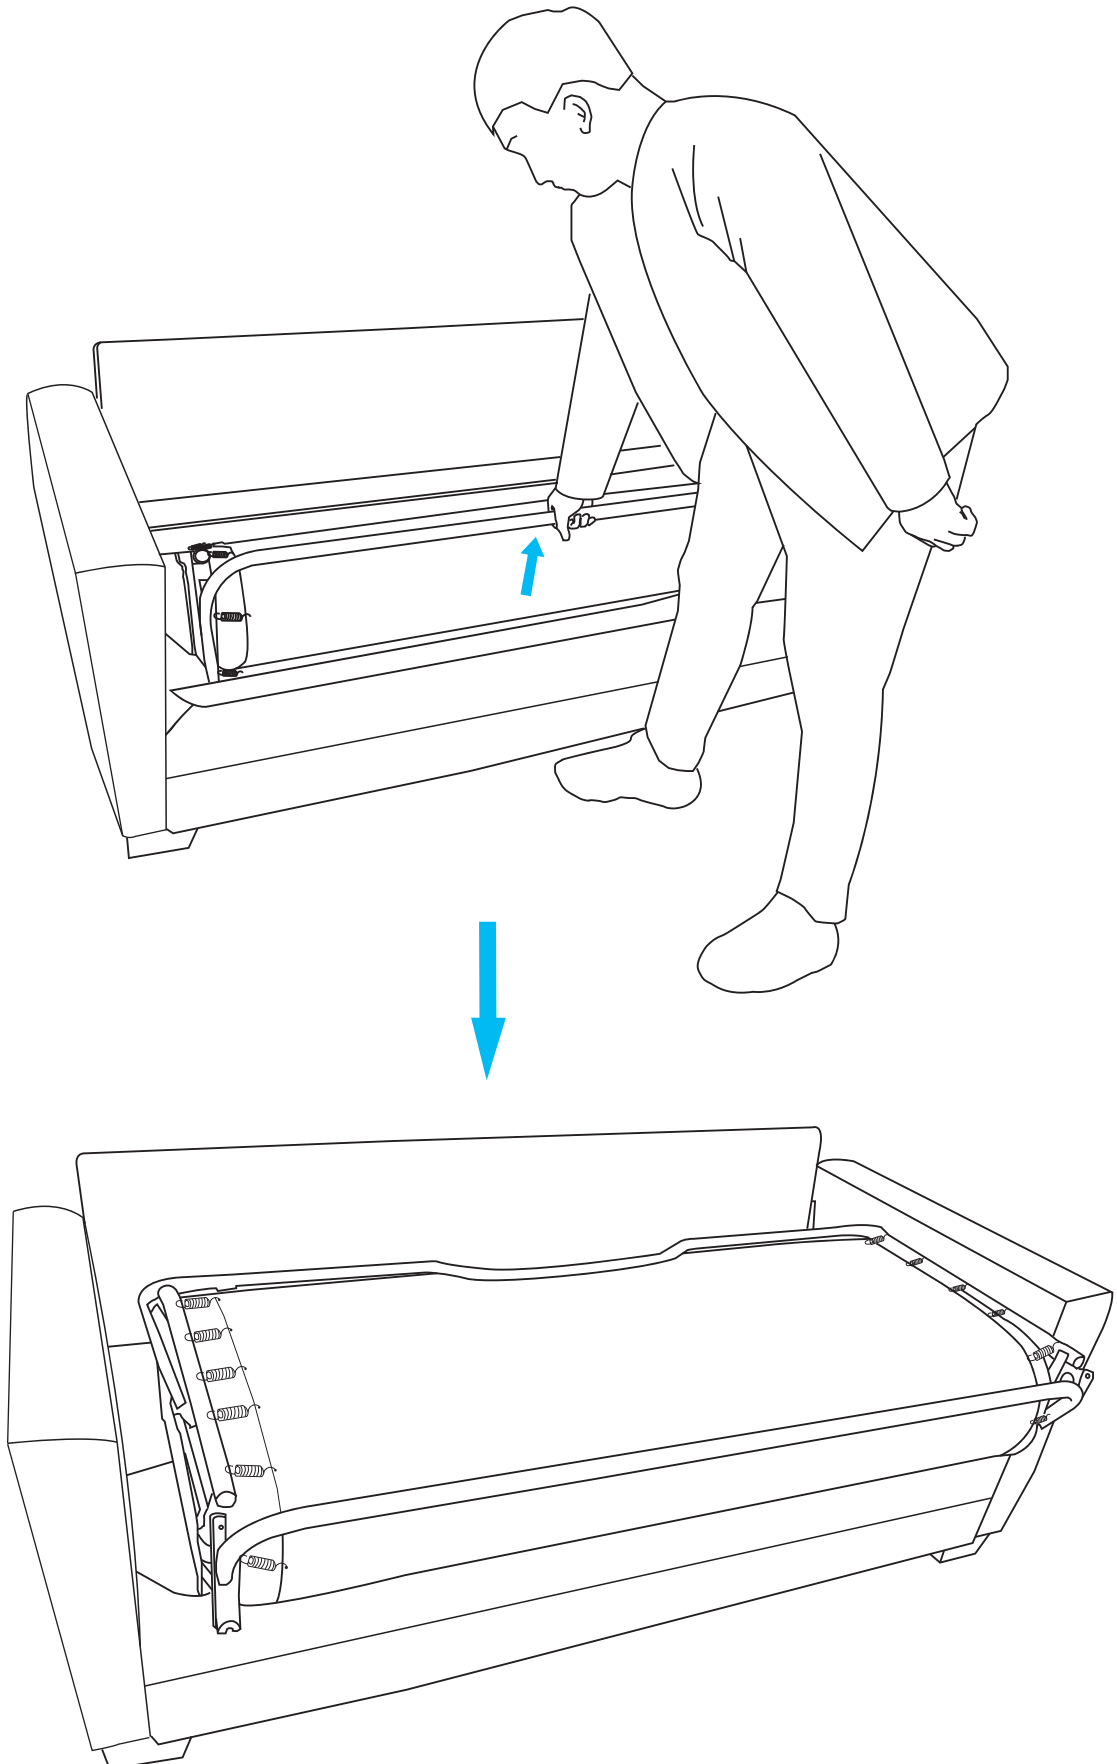

STEP 2

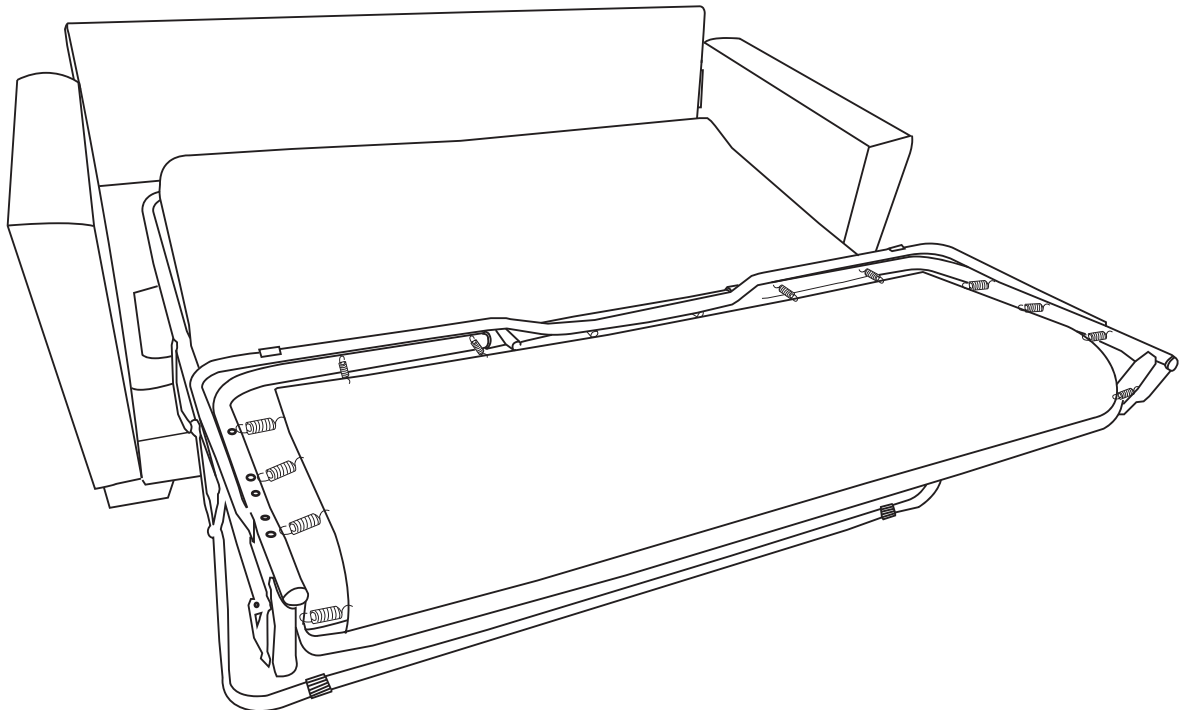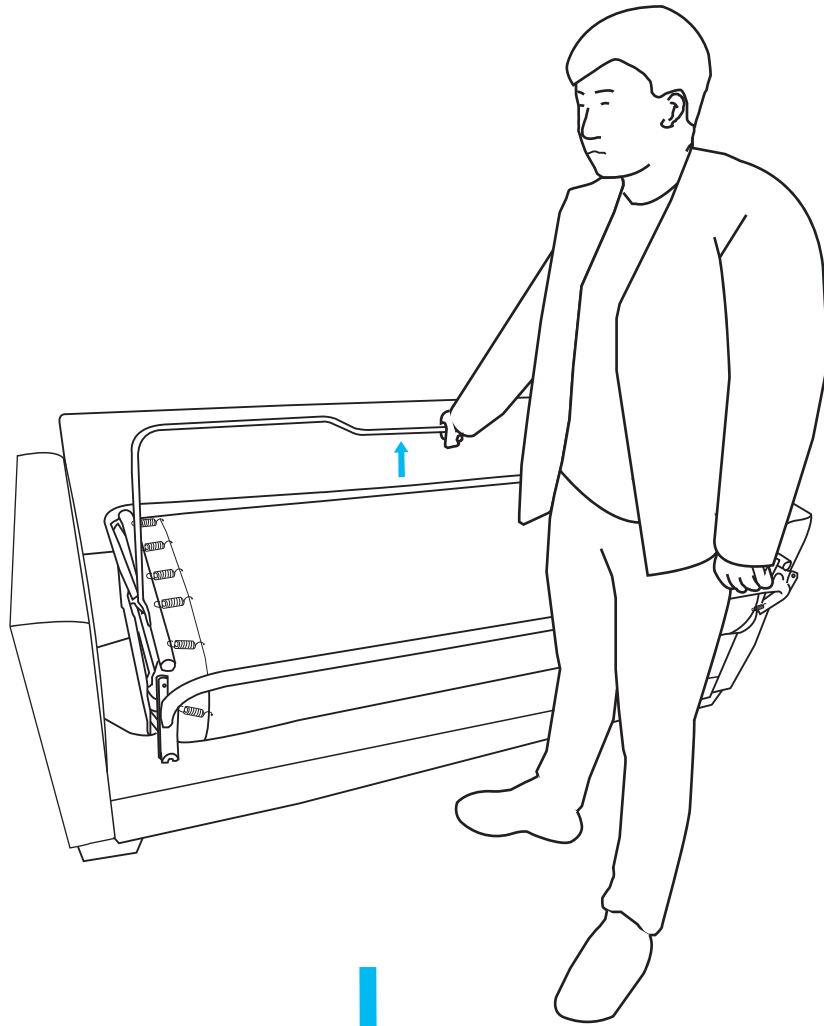

STEP 3

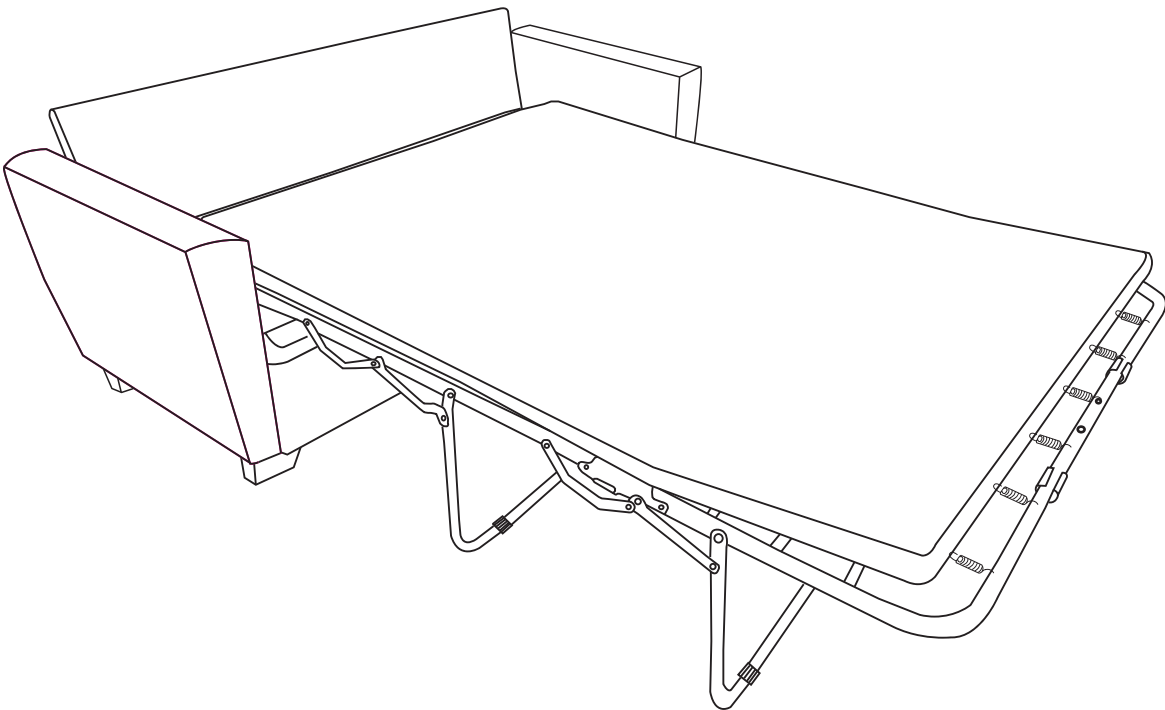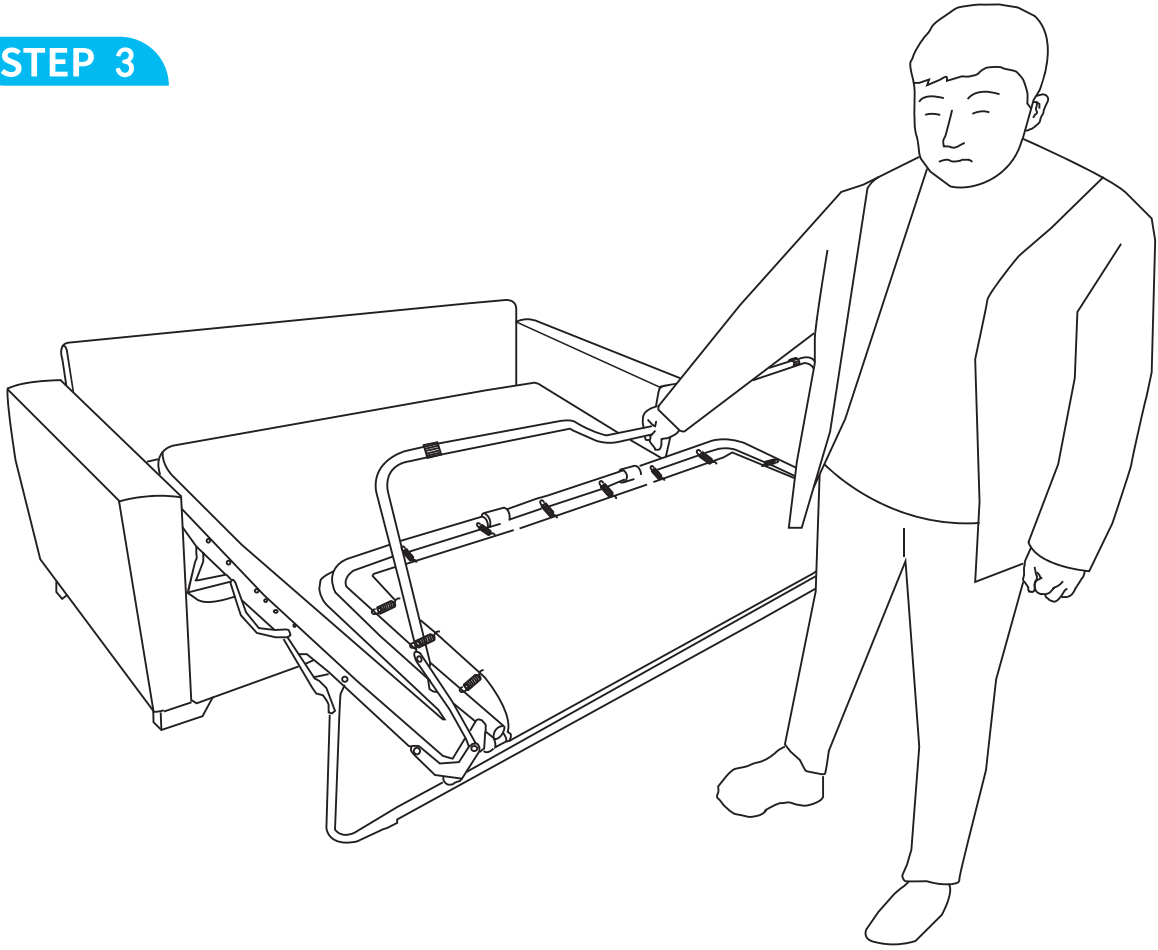

STEP 4

