

# ASSEMBLY INSTRUCTIONS

## FULL BED (3+3)

### (BOX 1)

#### BOX OF HEADBOARD

| NO | ITEM       | QTY   |
|----|------------|-------|
| A  | HEADBOARD  | 1 PC  |
| B  | FOOTBOARD  | 1 PC  |
| C  | HB LEG L&R | 2 PCS |

### (BOX 2)

#### BOX OF SIDE RAIL

| NO | ITEM             | QTY   |
|----|------------------|-------|
| D  | SIDE RAIL        | 2 PCS |
| E  | BED SLAT         | 3 PCS |
| F  | BED SLAT SUPPORT | 3 PCS |

### (BOX 1)

#### HARDWARE LIST


| NO | ITEM                                 | QTY   |
|----|--------------------------------------|-------|
| 1  | JCBC BOLT<br>M6 x 30MM BLK           | 6 PCS |
| 2  | SPRING WASHER<br>1/4" RBW            | 6 PCS |
| 3  | FLAT WASHER<br>1/4" ID x 13mm OD BLK | 6 PCS |
| 4  | ALLEN KEY m4 x 65mm BLK              | 1 PC  |

### (BOX 2)


#### HARDWARE LIST

| NO | ITEM                                       | QTY   |
|----|--------------------------------------------|-------|
| 5  | FLAT HEAD CHIPBOARD<br>SCREW m4 x 32mm RBW | 6 PCS |


**STEP 1 :** Attach Head Board Leg ( C ) to Head Board ( A ) as shown using JCBC BOLT( 1 )with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY ( 4 ).

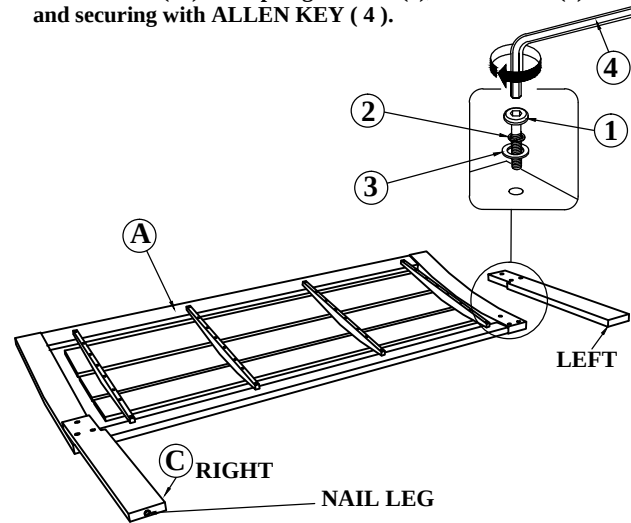

**STEP 2 :** Hook SIDE RAIL (D) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (B).

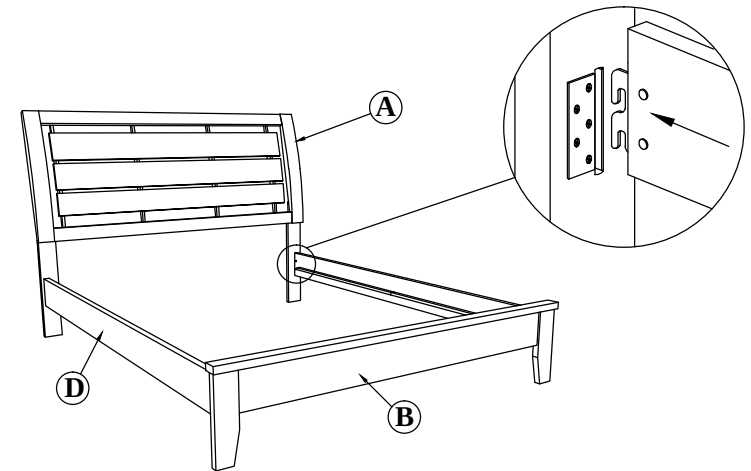

**STEP 3 :** Fix the Bed Slats Support ( F ) to Bed Slats ( E ) as Shown and fix the Bed Slats to Side Rail ( D ) by using Flat Head Chipboard Screw ( 5 ). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

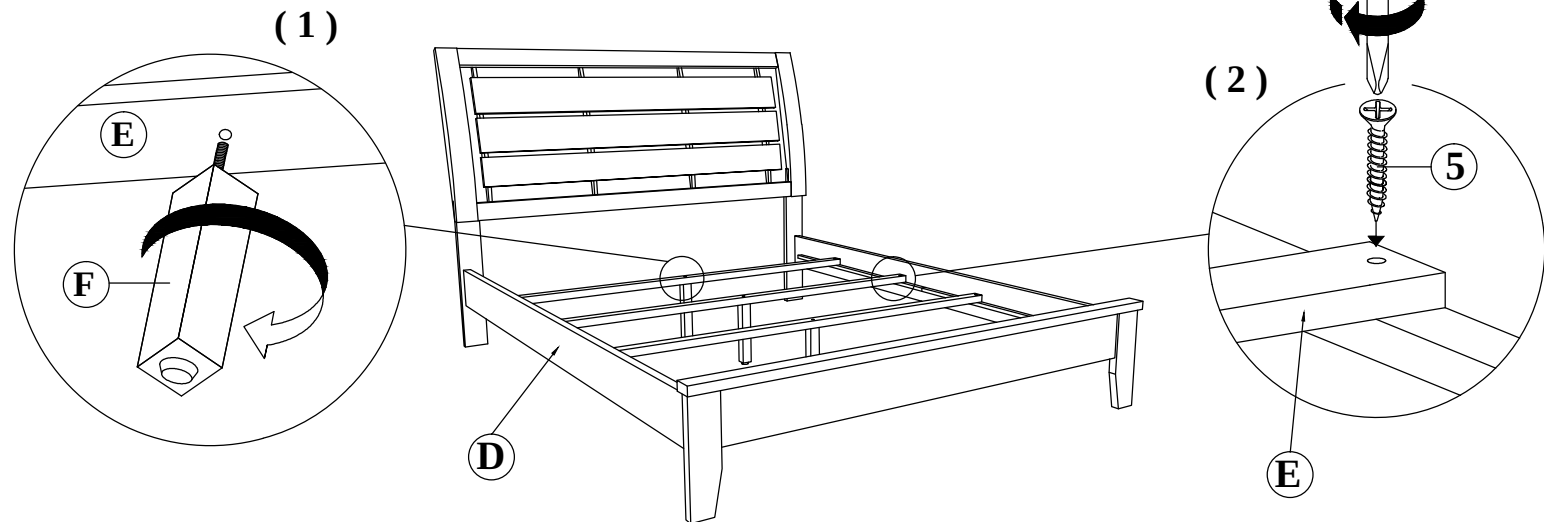

**NOTE :** MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.