


WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product

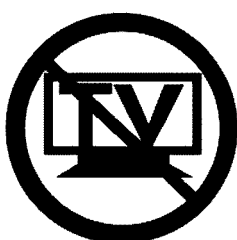
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. • Do not defeat or remove the drawer interlock system. <i>This is a permanent label. Do not remove!</i>
	

Assembly Instructions











Caution : You must read this before you proceed

Please look in *** for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.**











CHEST

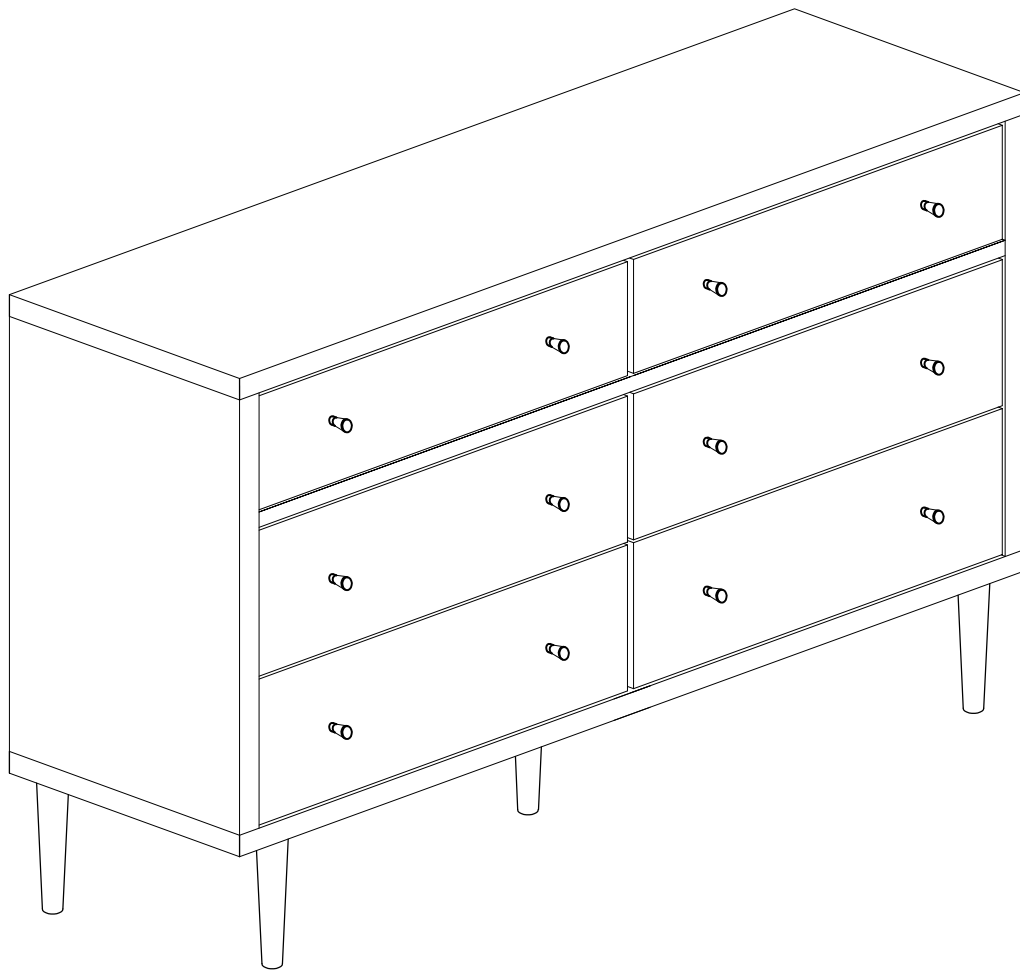

Parts List

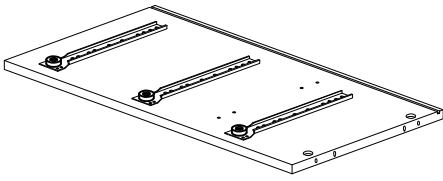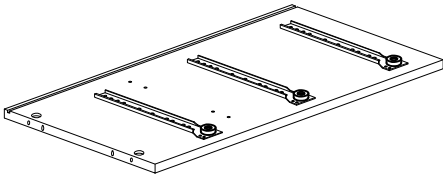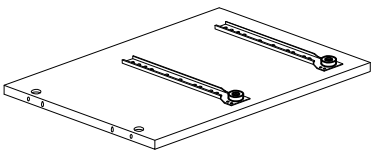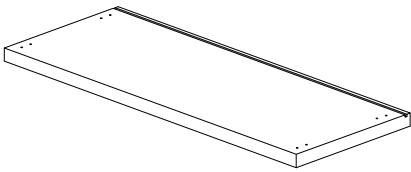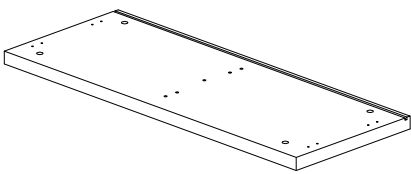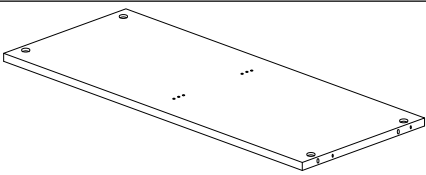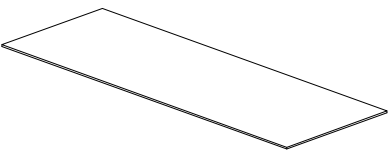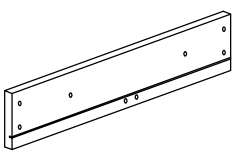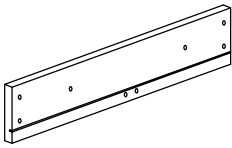Label	Picture	Description	QTY
A		Right Side Panel	1
B		Left Side Panel	1
C		Centre Panel Top	1
D		Centre Panel Bottom	1
E		Top Panel	1
F		Bottom Panel	1
G		Fixed Panel	1
H		Back Panel	2
I		Drawer Front Right- Small	1
J		Drawer Front Left- Small	1







Parts List

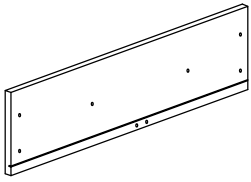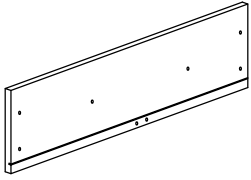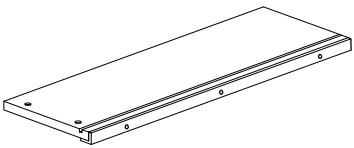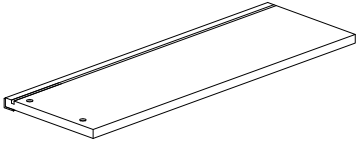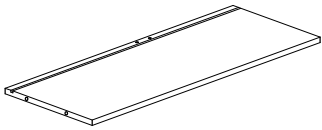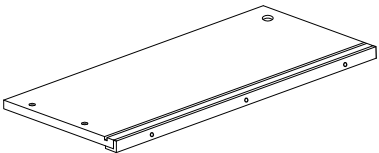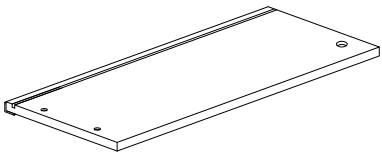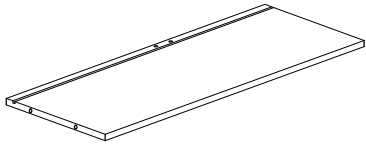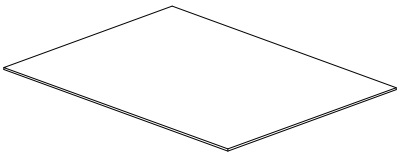Label	Picture	Description	QTY
K		Drawer Front Right - Large	2
L		Drawer Front Left - Large	2
M		Drawer Right Panel - Small	2
N		Drawer Left Panel - Small	2
O		Drawer Back Panel - Small	2
P		Drawer Right Panel - Large	4
Q		Drawer Left Panel - Large	4
R		Drawer Back Panel - Large	4
S		Drawer Bottom Support	6
T		Drawer Base	6
U		Leg Ø45 /27mm (180mm)	4




Parts List

Label	Picture	Description	QTY
V		Centre Leg	1

Hardware


Label	Picture	Description	QTY
①		Wood Dowel (Ø6 X 30mm)	25
②		Large Camlock (15 X 12mm)	13
③		Cam Bolt	25
④		Wood Dowel (Ø8 X 30mm)	19
⑤		Flat Head Screw (M3.5 x 25mm)	37
⑥		Anti Tip Strap + Screw	2
⑦		Backply Stopper	9
⑧		Flat Head Screw (M3 x 20mm)	9
⑨		Small Camlock (15 X 9mm)	13
⑩		Pan Head Bolt (M4 x 25mm)	13
⑪		Knob	12
⑫		Allen Head Screw (M7 x 60mm)	5
⑬		Allen Head Bolt (M8 X 60MM)	6
⑭		Allen Wrench (M5)	1
⑮		Allen Wrench (M4)	1
⑯		Flat Head Screws (M5 x 40mm)	5

Hardware

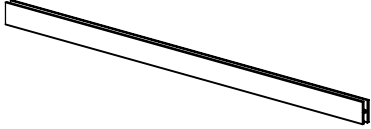Label	Picture	Description	QTY
17		Adjustable Screw	1
18		Pvc H	1
19		Leveler	6
20		Screw Driver (Not Provided)	1

Assembly Preparation

Before
Beginning
Assembly

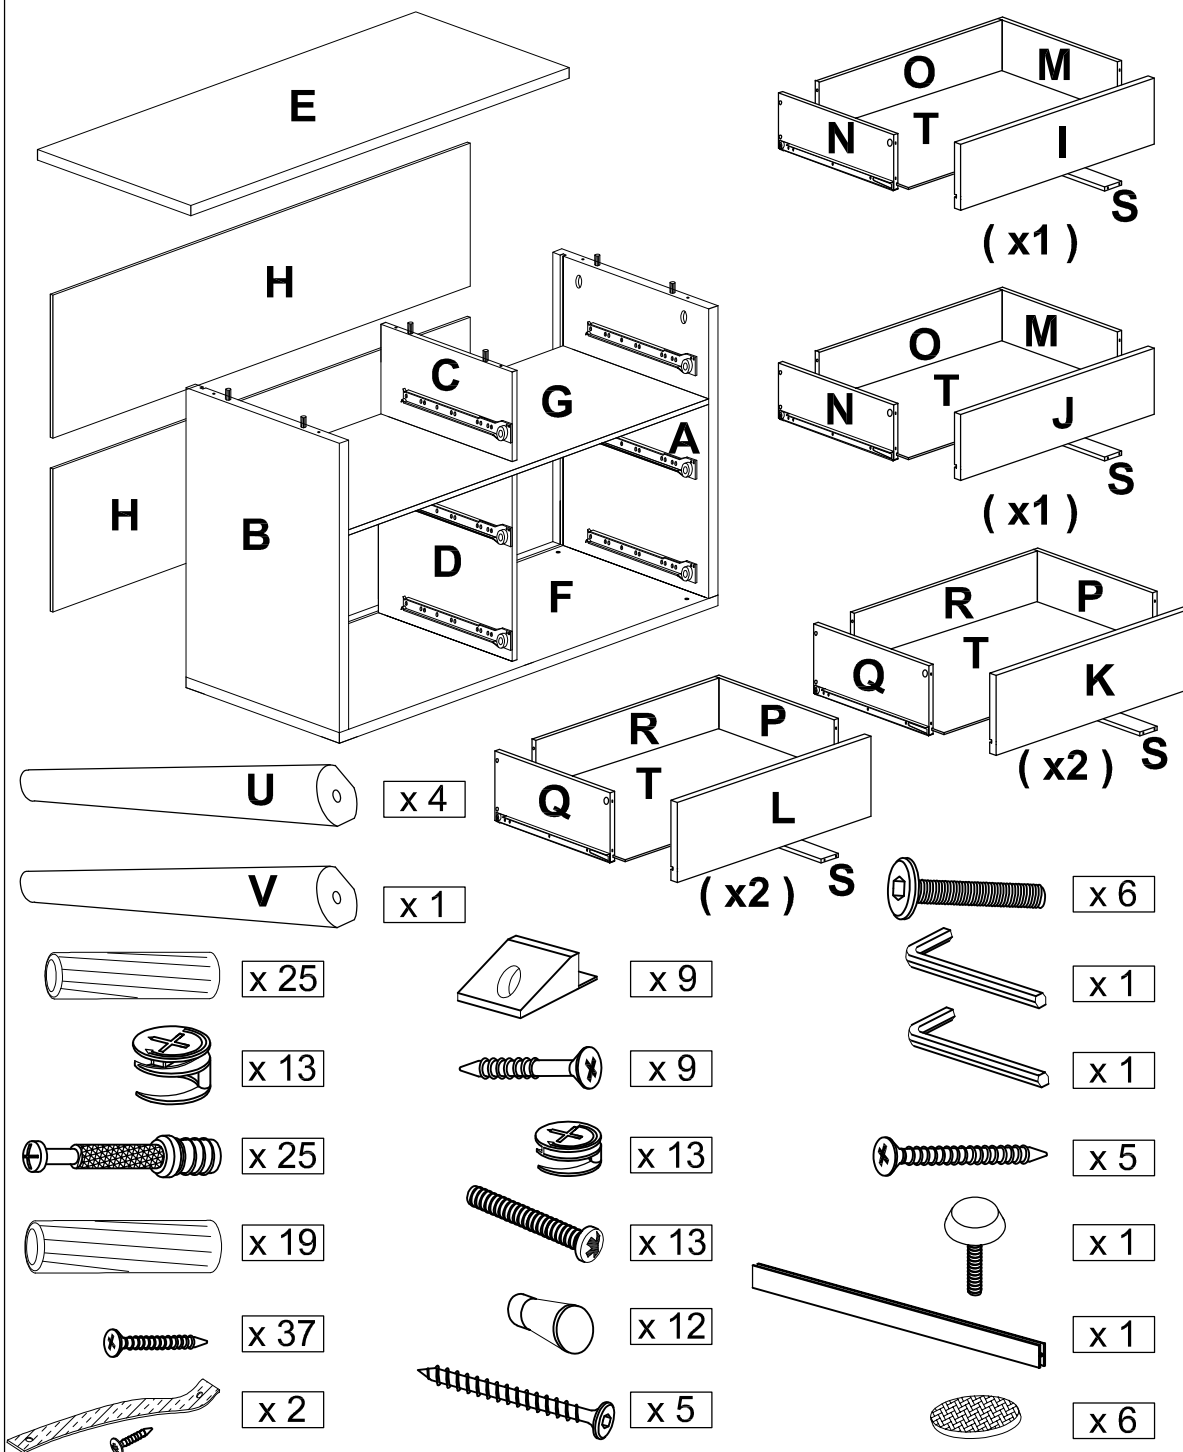

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

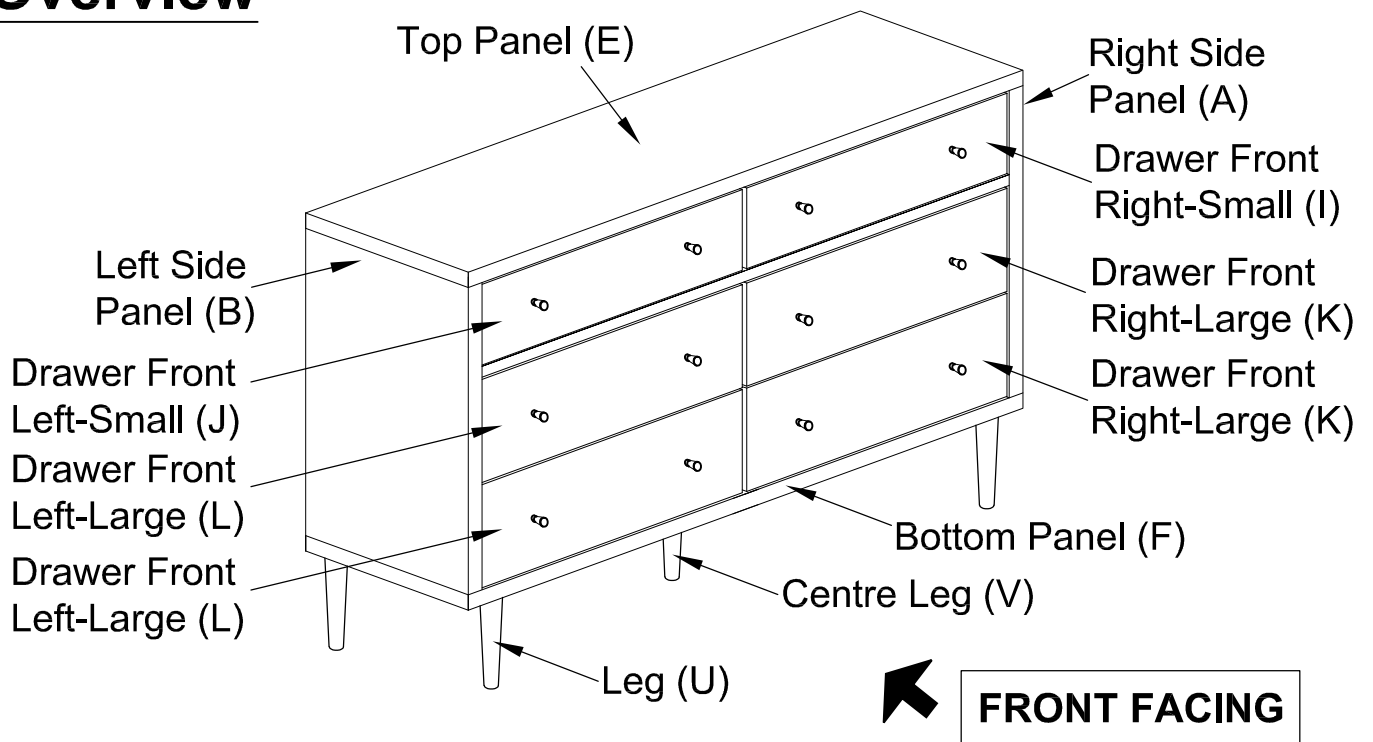


This Chest has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Chest, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarize yourself with the parts and steps before assembly.

Step 1

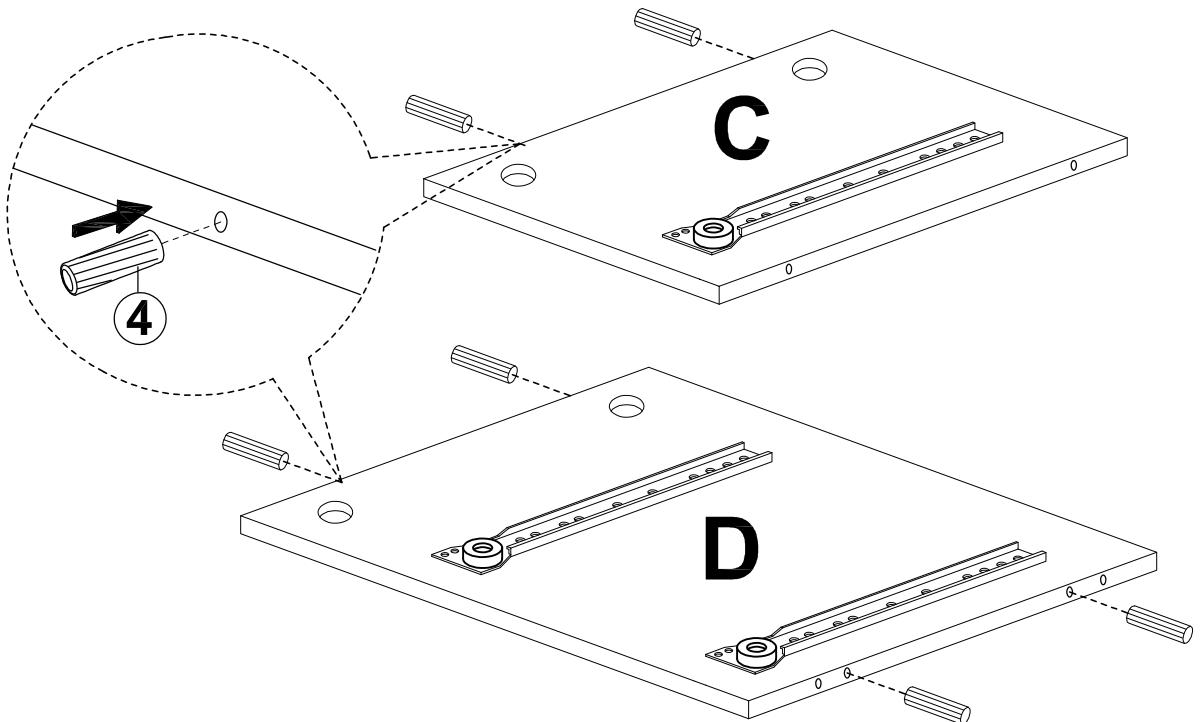

Unpack and place all parts on a clean, non-marring surface.
Attach Wood Dowels (4) to the mounting positions on Fixed Panel (C) and Centre Bottom Panel (D).


Step 2

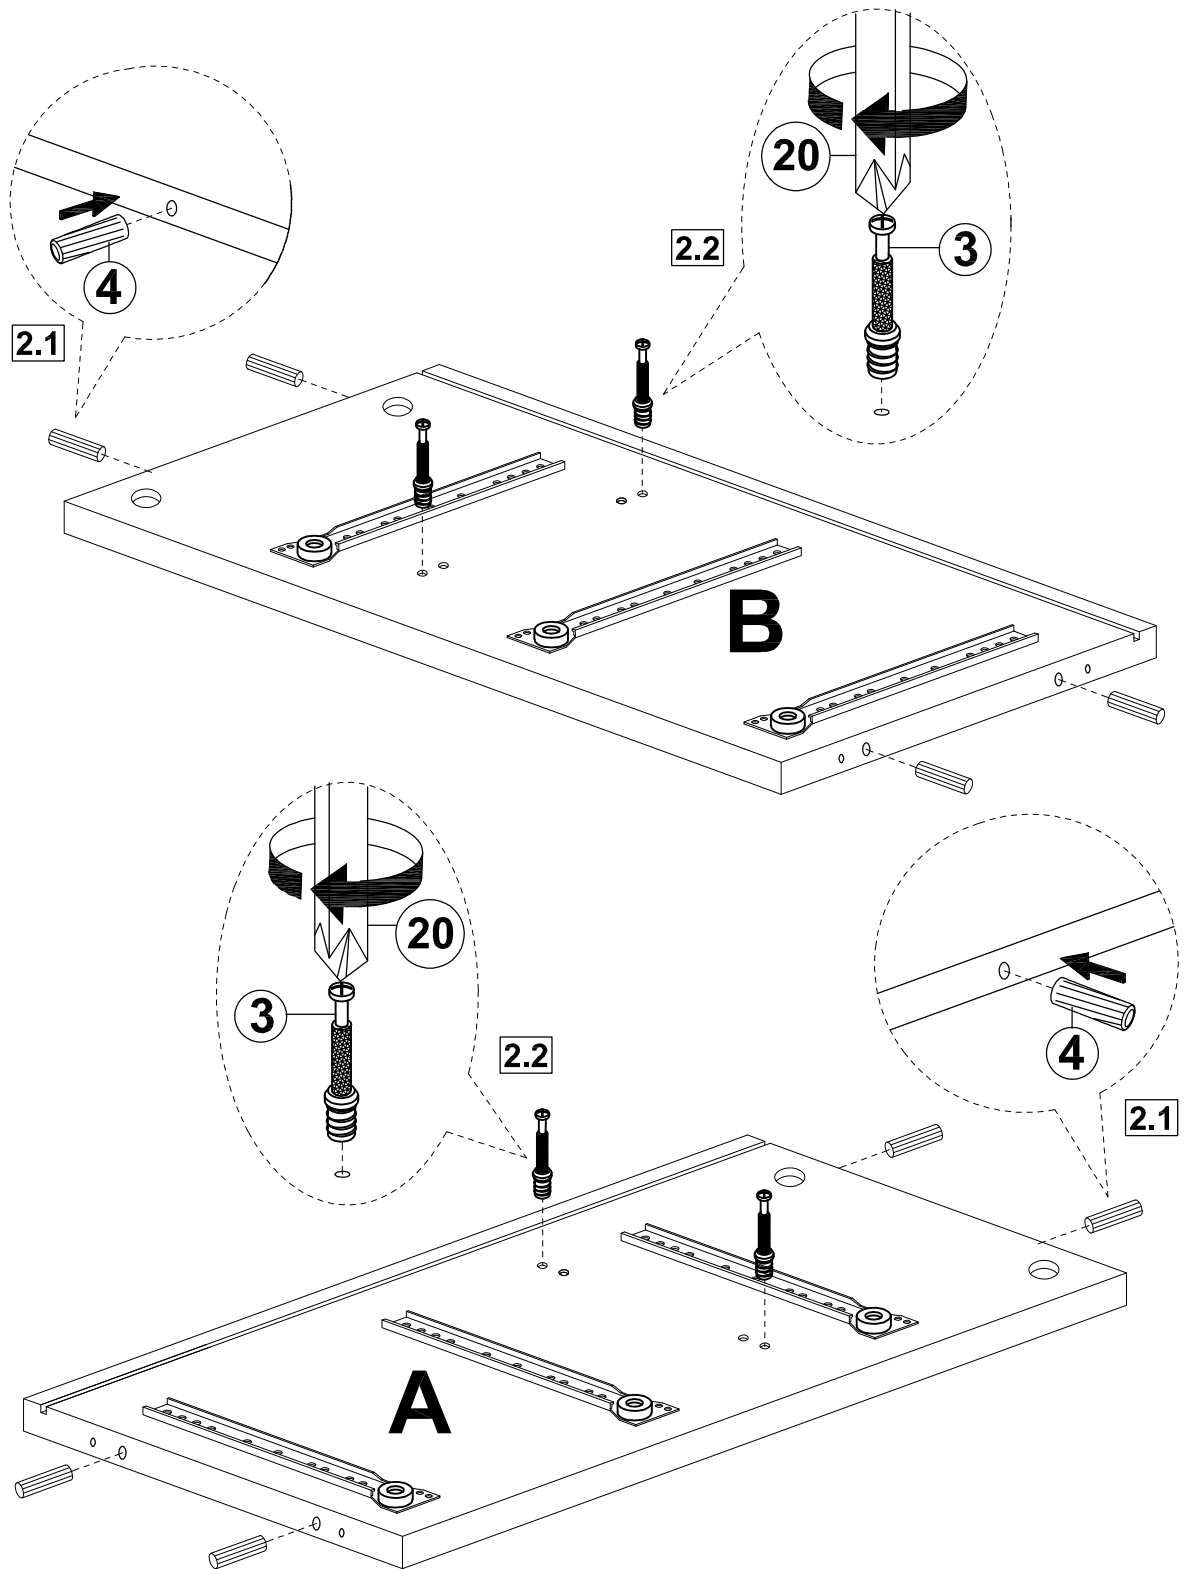

2.1) Insert Wood Dowels (4) into the mounting positions on the side edges of the Left Side Panel (B) and Right Side Panel (A).

2.2) Attach Cam Bolts (3) into the mounting positions on Left Side Panel (B) and Right Side Panel (A) with the Screw Driver (20).


Step 3

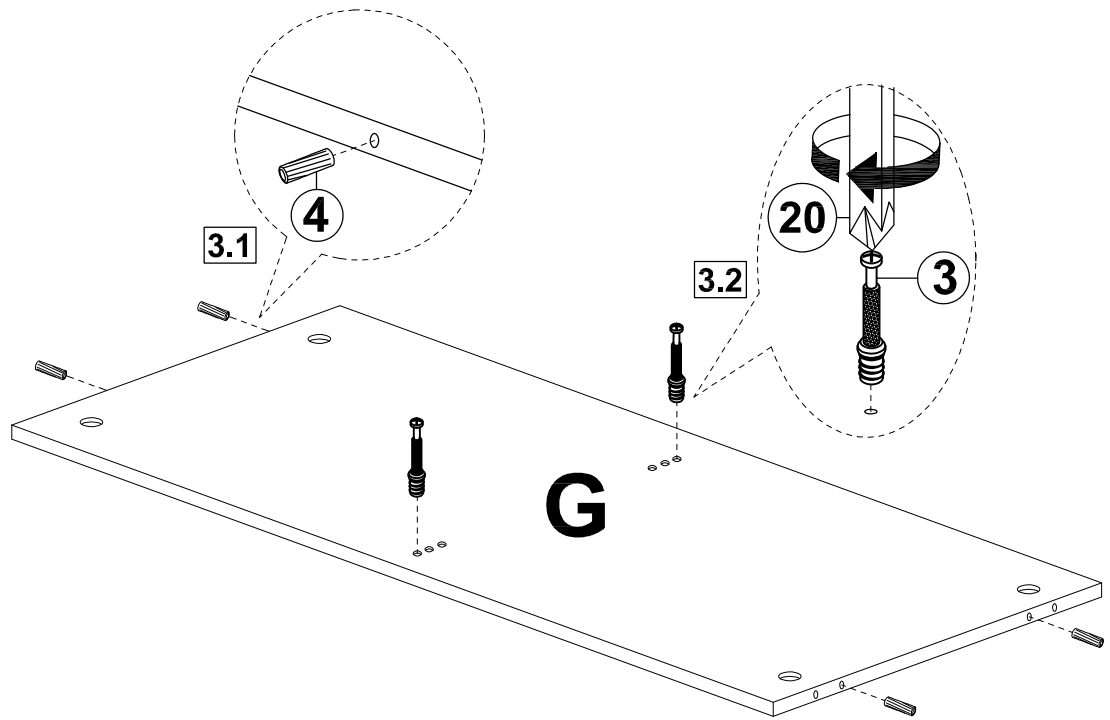

3.1) Insert Wood Dowels (4) into the mounting positions on the side edges of the Fixed Panel (G).


3.2) Insert Cam Bolts (3) into the mounting positions on the top Fixed Panel (G) with a Screw Driver (20).

Step 4

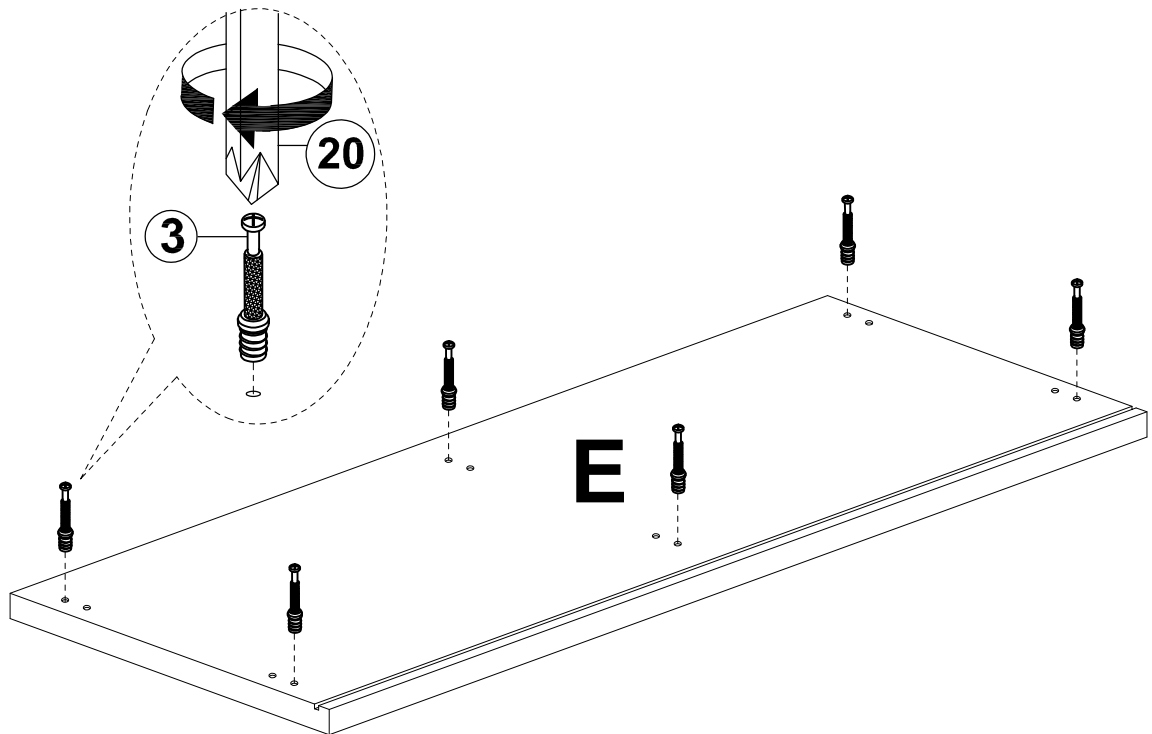

Insert Cam Bolts (3) to the mounting positions on the Top Panel (E) with a Screw Driver (20).

Step 5

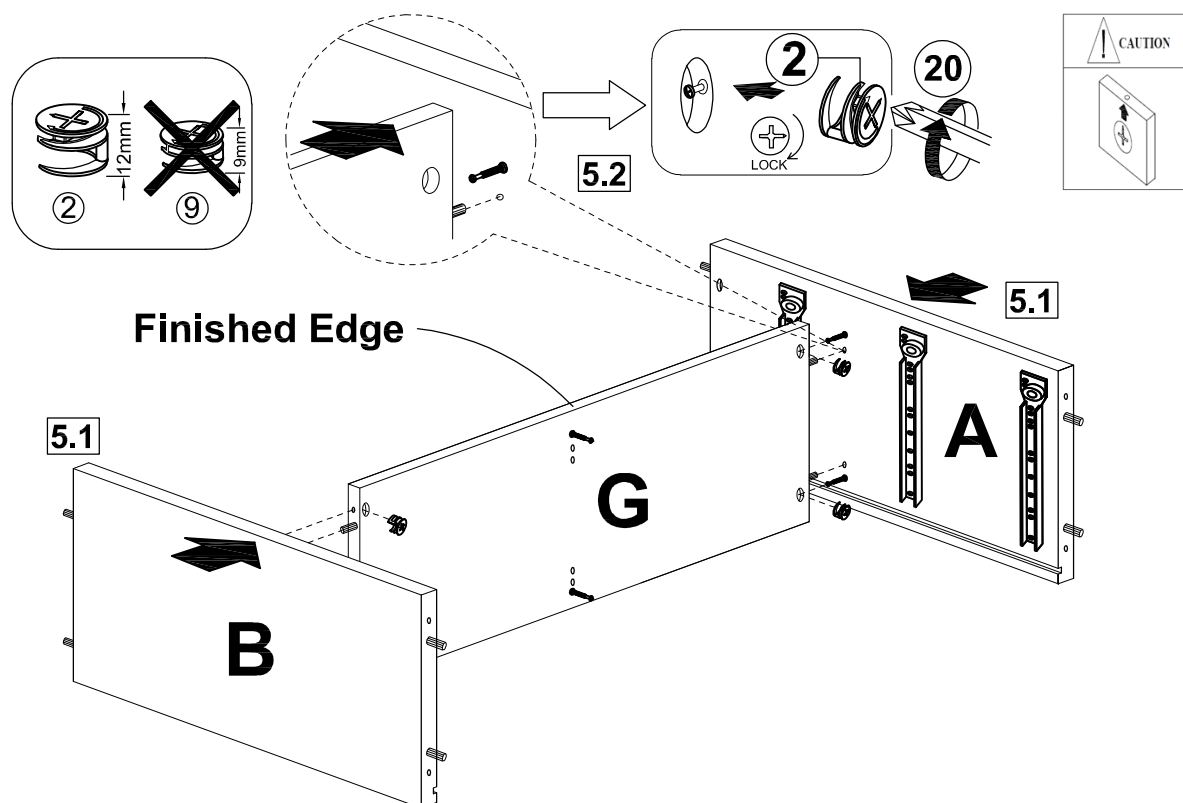


5.1) Attach Left Side Panel (B) and Right Side Panel (A) to Fixed Panel (G).

5.2) Insert Large Cam-locks (2) into the mounting positions on Fixed Panel (G) and turn clockwise to lock onto the cam-bolts using a Screw Driver (20).

CAUTION: Insert the Cam-locks (2) per the correct orientation as indicated in the above picture.


Step 6

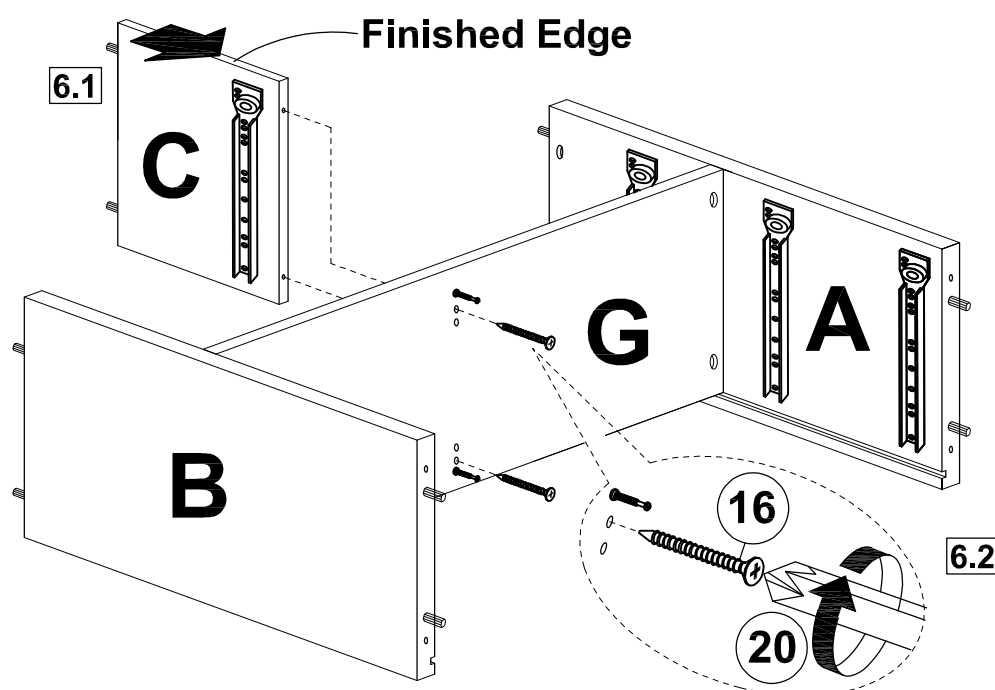

6.1) Position and attach Centre Panel Top (C) to Fixed Panel (G) as shown.

6.2) Use Flat Head Screws (16) to affix Centre Panel Top (C) to Fixed Panel (G) using a Screw Driver (20).

Step 7

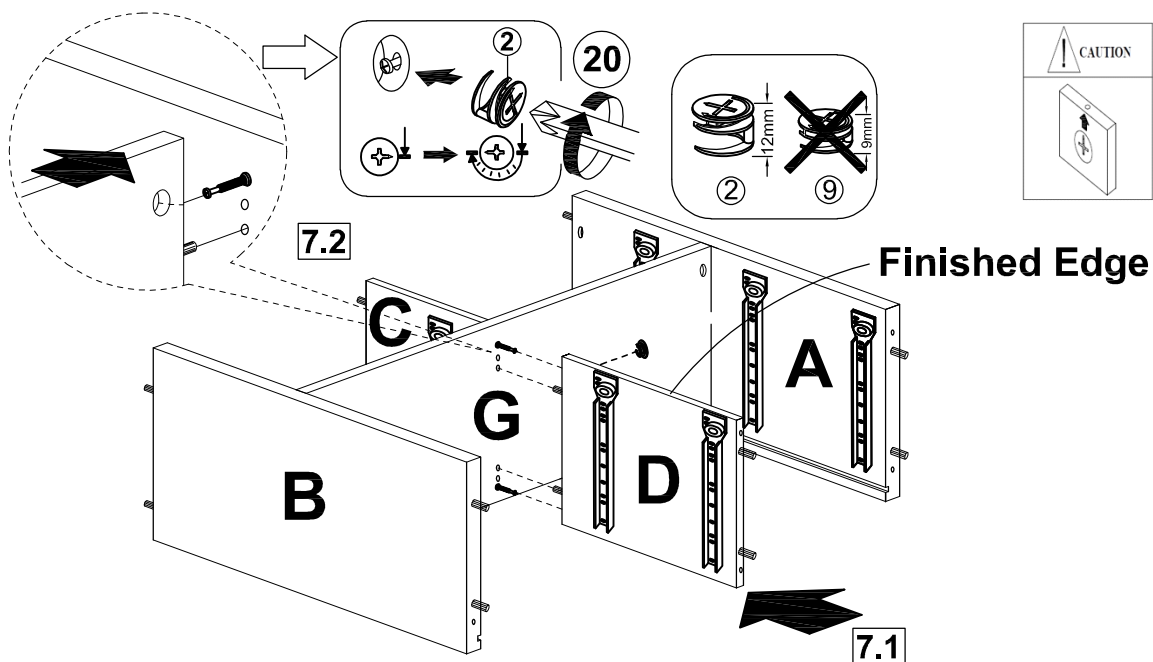


7.1) Position and attach Centre Panel Bottom (D) to Fixed Panel (G) as shown.

7.2) Insert Large Cam-locks (2) into the mounting positions on Centre Panel Bottom (D) and turn clockwise to lock onto the cam-bolts using a Screw Driver (20).

CAUTION: Insert the Cam-locks (2) per the correct orientation as indicated in the above picture.


Step 8

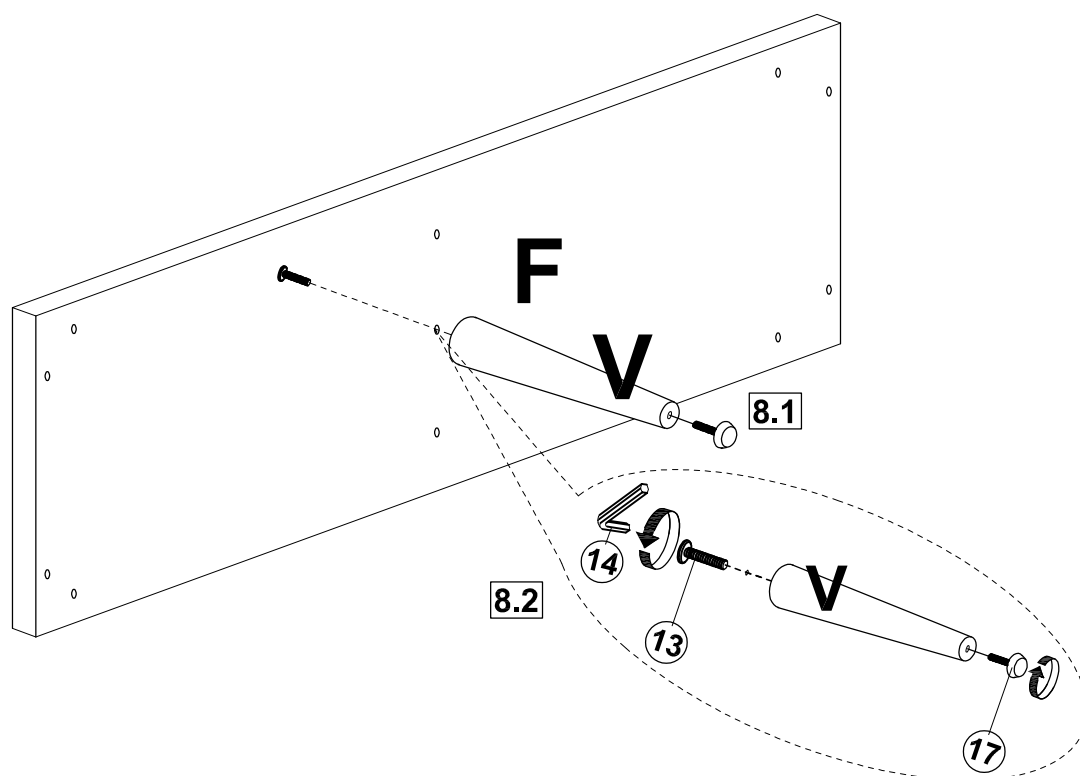

8.1) Attach Centre Leg (V) to Bottom Panel (F) as shown. Use Allen Head Bolts (13) to fasten the Leg to the Bottom Panel (D) using Allen Wrench (14).

8.2) Insert the Adjustable Screw (17) into the screw hole on the bottom of the Centre Leg (V) and turn clockwise to fasten it to the Centre Leg.

Step 9

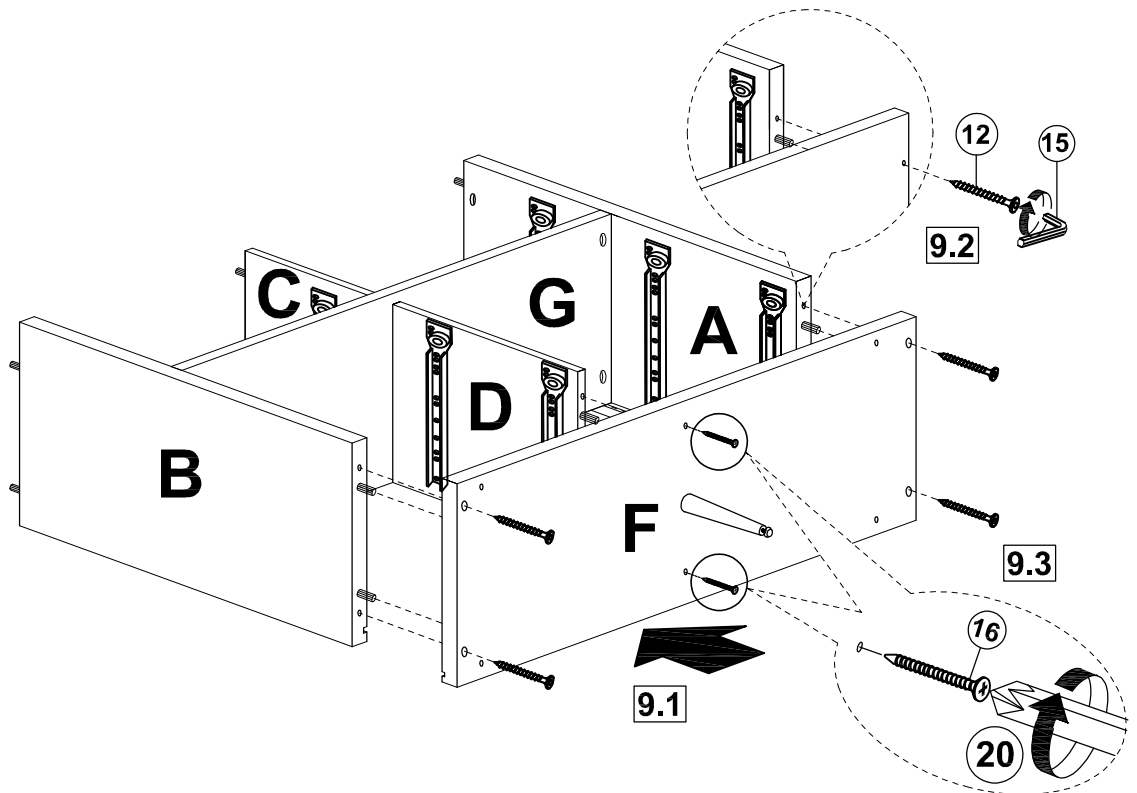


9.1) Attach Bottom Panel (F) to Right Side Panel (A) and Left Side Panel (B) via the wood dowels respectively.

9.2) Use Allen Head Screws (12) to fasten Bottom Panel (F) to Right Side Panel (A) and Left Side Panel (B) using Allen Wrench (15).

9.3) Use Flat Head Screws (16) to fasten Bottom Panel (F) to Centre Bottom Panel (D) using a Screw Driver (20).


Step 10

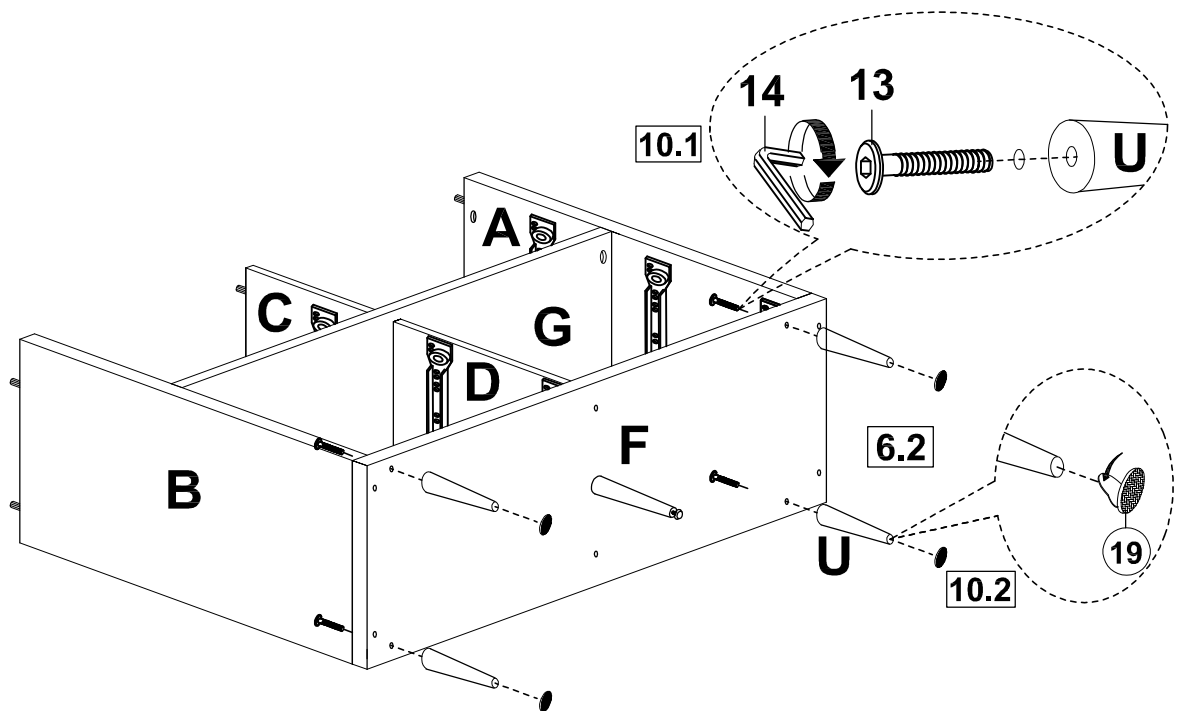

10.1) Attach Leg (U) to Bottom Panel (F) as shown. Use Allen Head Bolts (13) to fasten Leg to the Bottom Panel (F) using Allen Wrench (14).


10.2) Paste a leveler (19) on the bottom of each Leg (U).

Step 11

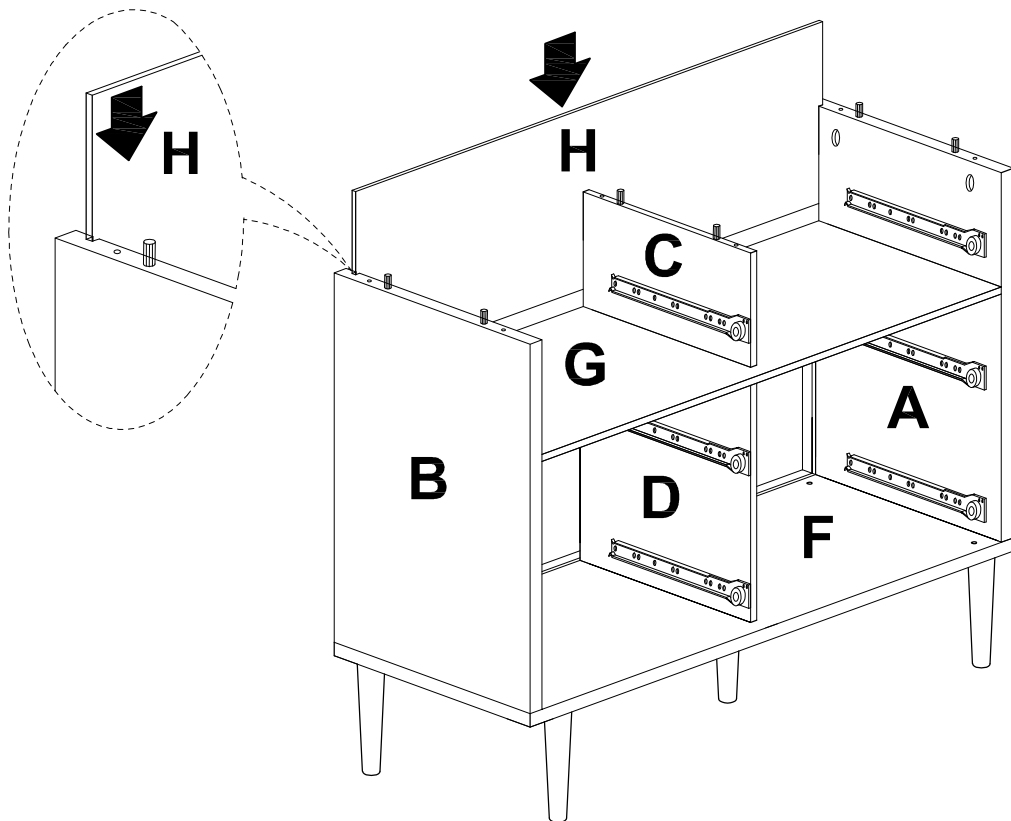

Fit one of the Back Panels (H) to Right Side Panel (A) and Left Side Panel (B) by inserting it into the grooves as shown.



Step 12

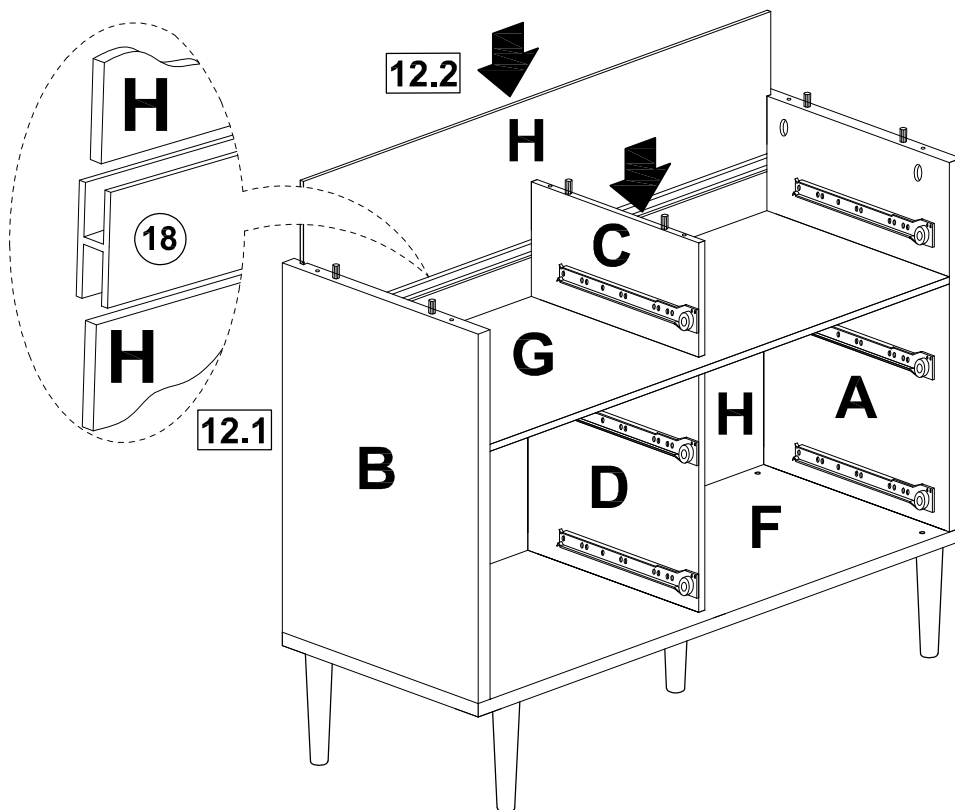

12.1) Slide the PVC-H (18) in lengthwise to joint the Back Panel (H) as shown.

12.2) Fit another Back Panel (H) by inserting it into the grooves on Right Side Panel (A), Left Side Panel (B) and PVC H (18) as shown.

Step 13

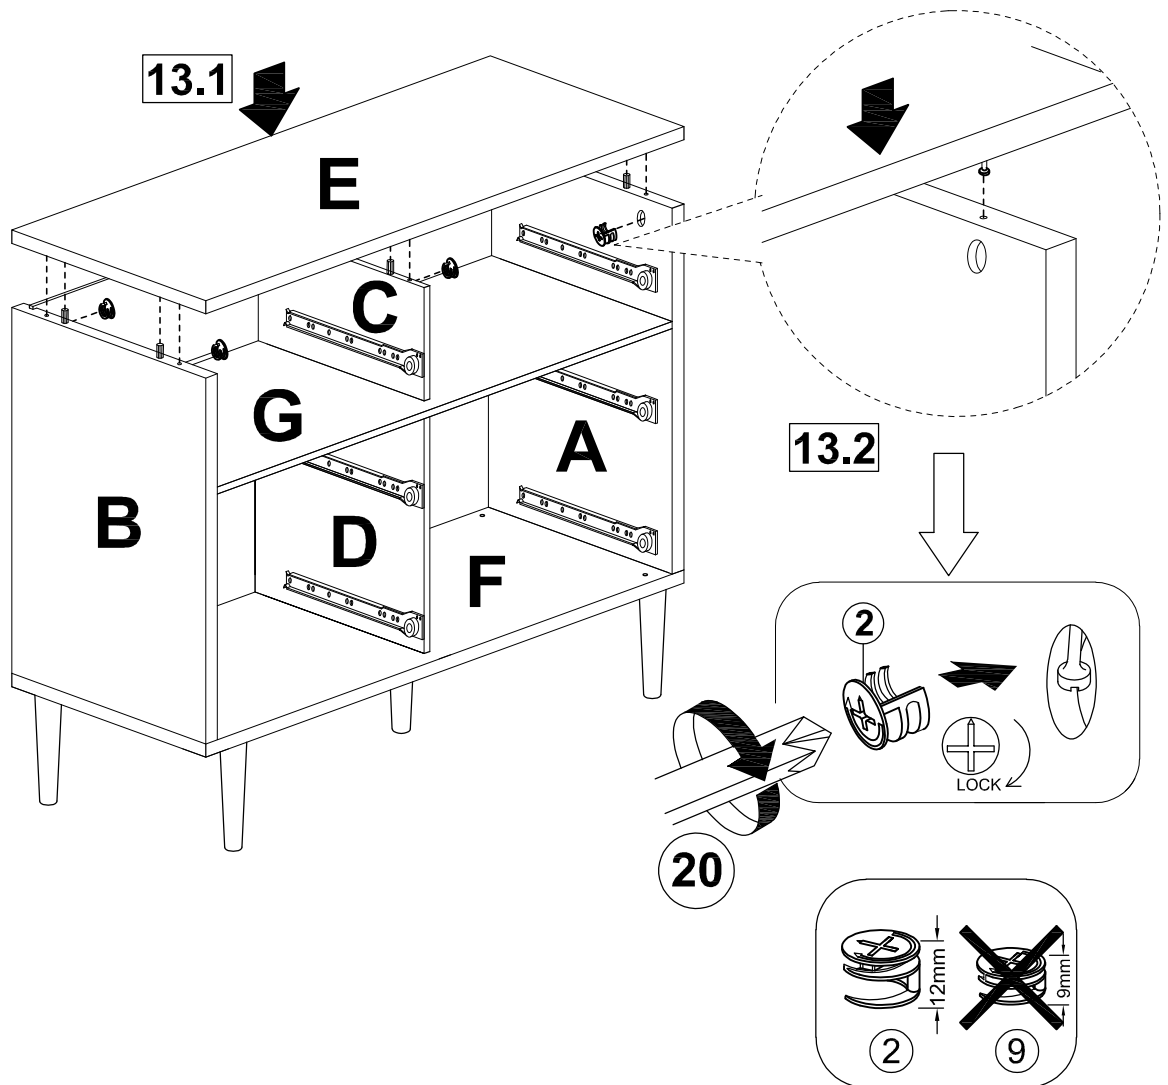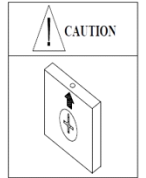


13.1) Attach Top Panel (E) to Right Side Panel (A), Left Side Panel (B) and Back Panel (H) via the wood dowels and the Cam-bolts.

13.2) Insert Large Cam-locks (2) into the mounting positions on Right Side Panel (A), Left Side Panel (B) and Centre Panel Top (C) and turn clockwise to lock onto the cam-bolts using a Screw Driver (20).

CAUTION: Insert the Cam-locks (2) per the correct orientation as indicated in the above picture.

Step 14

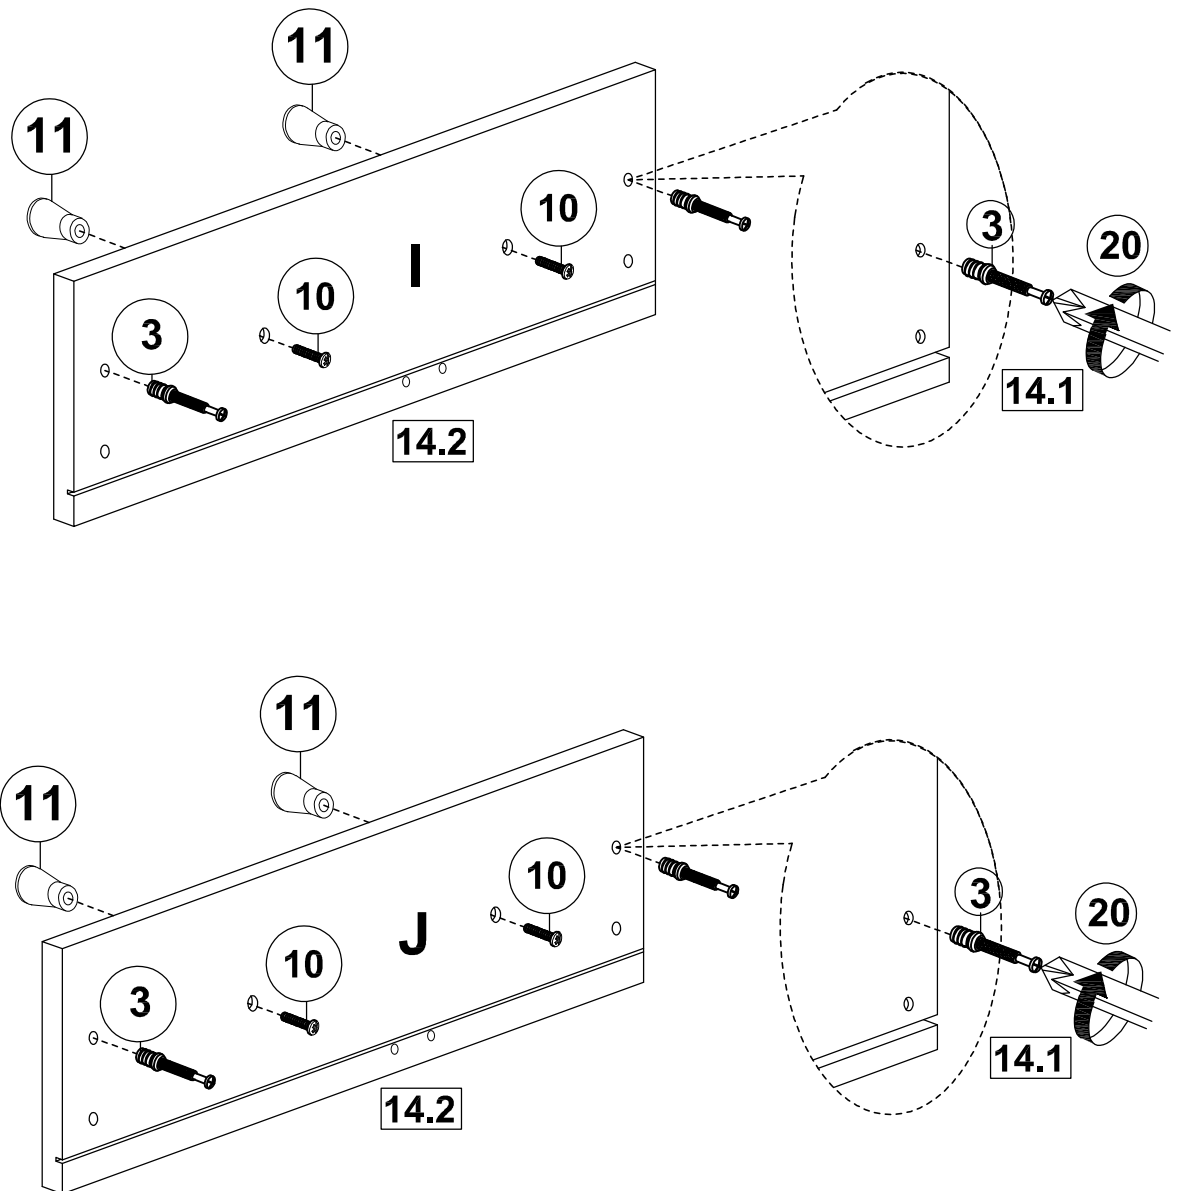


14.1) Use a Screw Driver ((20)) to screw Cam Bolts ((3)) into the mounting positions on the inside face of Drawer Front Right - Small (I) and Drawer Front Left - Small (J) as shown. Note : It is easier to screw in Cam Bolts with the Drawer Front Right - Small and Drawer Front Left - Small laid flat down - take care not to scratch or damage the front face of the Drawer Front Right - Small and Drawer Front Left - Small panel.

14.2) Position Drawer Front Right - Small (I) and Drawer Front Left - Small (J) vertically as shown. Align the mounting positions on Knobs ((11)) to the bolt holes on Drawer Front Right - Small (I) and Drawer Front Left - Small (J).

Insert Pan Head Bolts ((10)) through the bolt holes on Drawer Front Right - Small (I) and Drawer Front Left - Small (J) to thread into the bolt holes on Knobs ((11)).

Use a screw driver to screw in the Pan Head Bolts - do not tighten the bolts fully until both bolts are in place.

Step 15

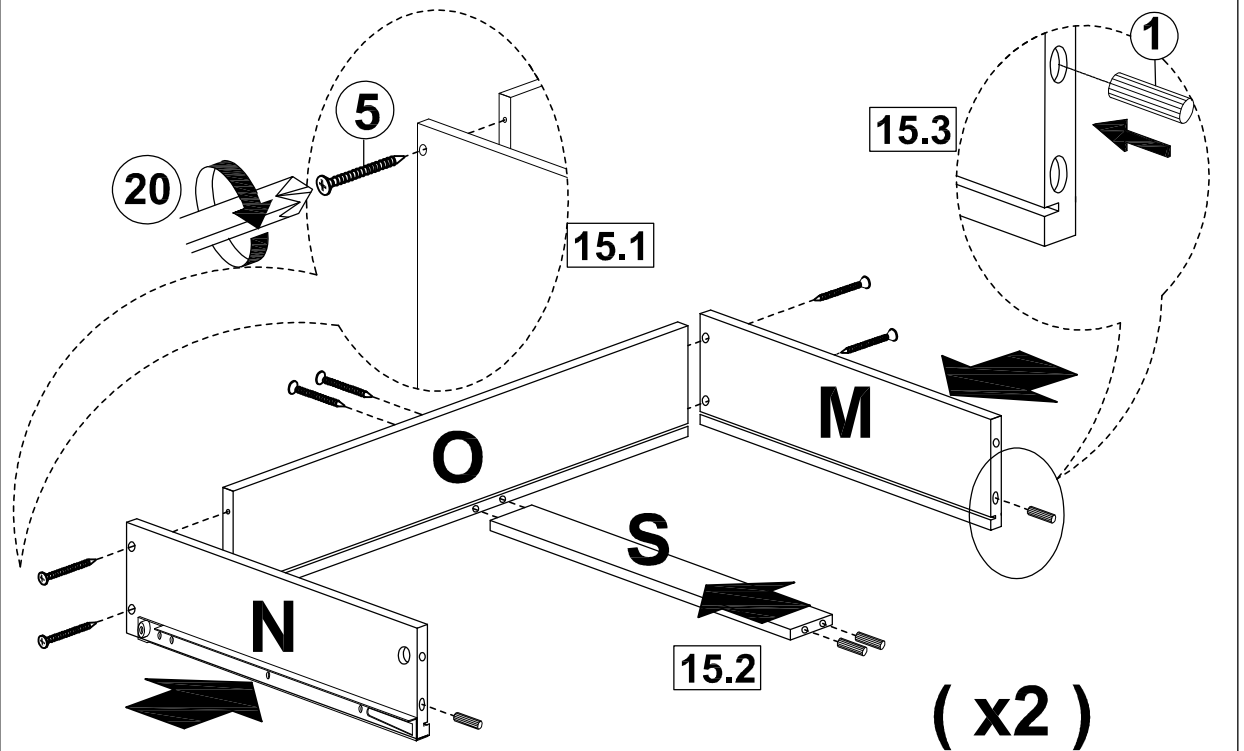


15.1) Attach Drawer Right Panel - Small (M) and Drawer Left Panel - Small (N) to Drawer Back Panel - Small (O) as shown-note the grooves on each panel are at the bottom. Use Flat Head Screws (5) to fasten side panels to back panel.

Do not tighten screws completely until all screws are in place in each panel.

15.2) Align the mounting positions on Drawer Bottom Support (S) to the mounting positions on Drawer Back Panel - Small (O) and use Flat Head Screws (5) to fasten Drawer Bottom Support (S) to Drawer Back Panel - Small (O).



15.3) Insert Wood Dowels (1) into the mounting positions on the front edge of Drawer Right Panel - Small (M), Drawer Left Panel - Small (N) and Drawer Bottom Support (S).

Step 16

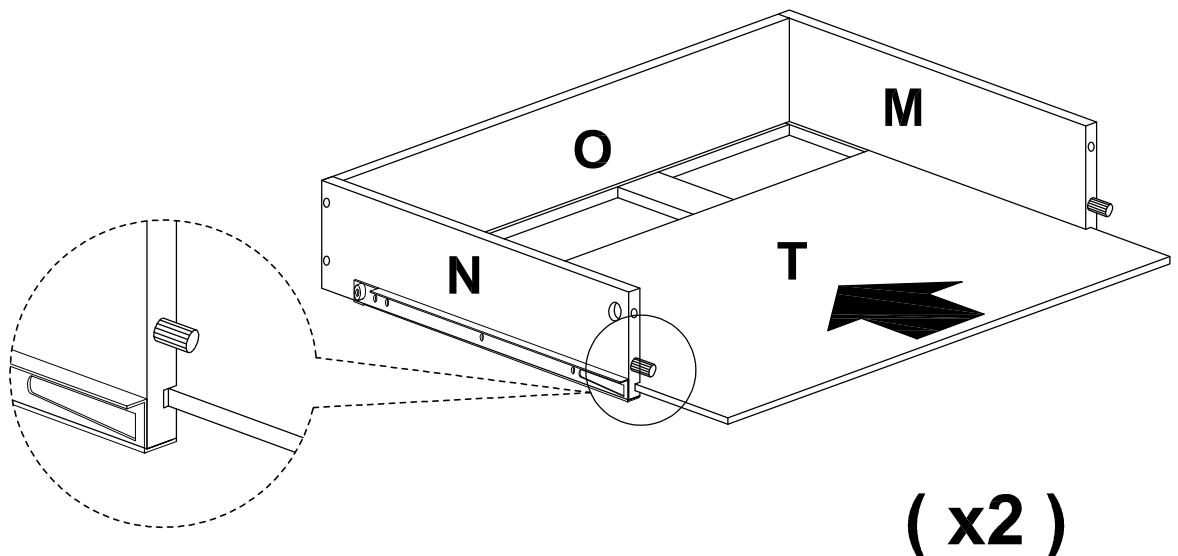

Slide the Drawer Base (T) into the grooves on Drawer Right Panel - Small (M), Drawer Left Panel - Small (N) and Drawer Back Panel - Small (O).

Step 17

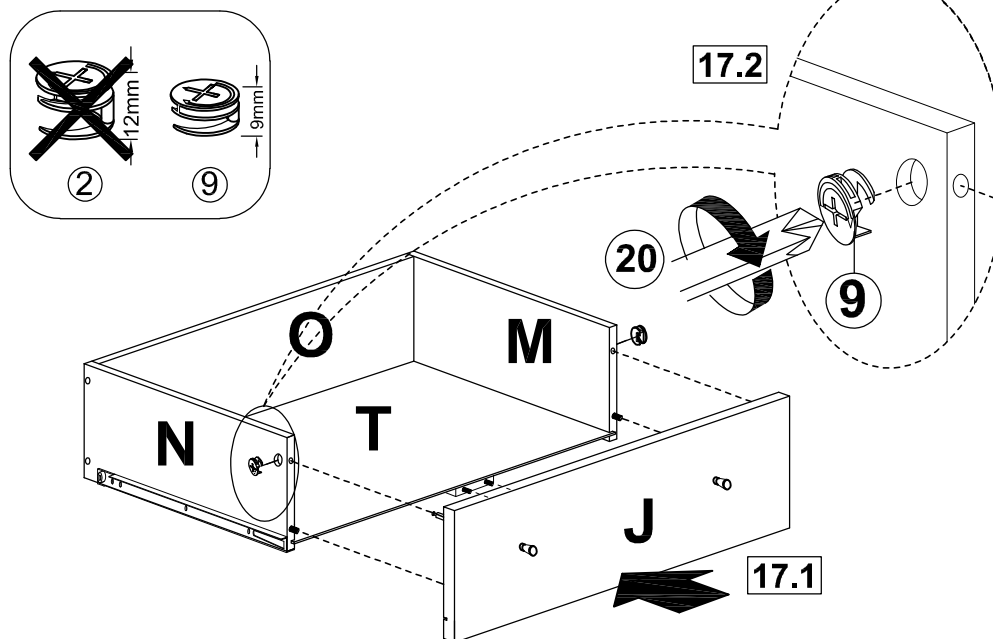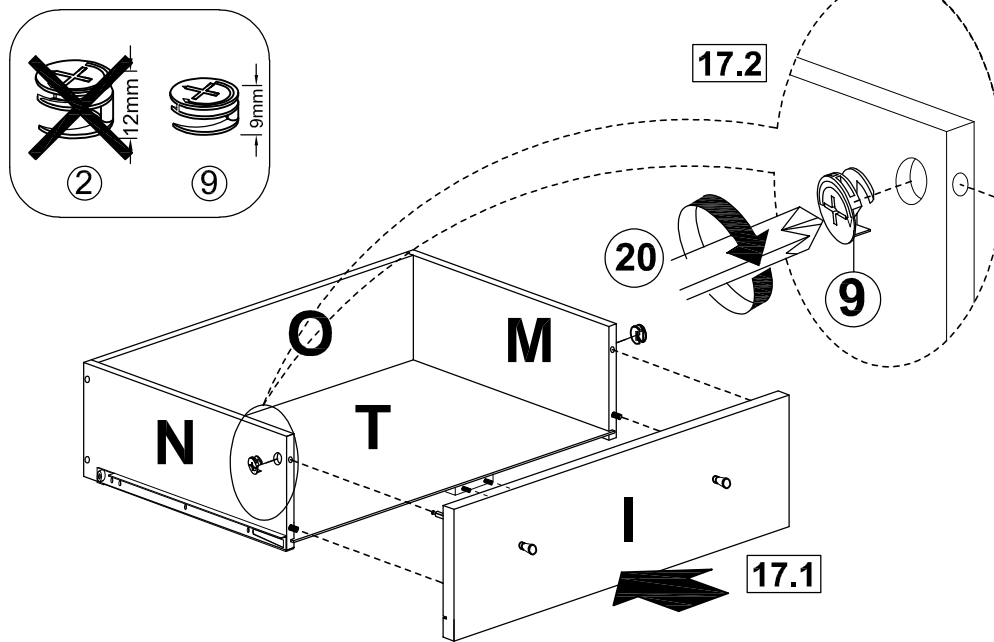


17.1) Attach Drawer Front Right - Small (I) and Drawer Front Left - Small (J) to Drawer Right Panel - Small (M) and Drawer Left Panel - Small (N) via the cam-bolts and the wood dowels on the respective parts. Check that the front edge of Drawer Bottom Support (S) fits into the groove on Drawer Front Right - Small (I) and Drawer Front Left - Small (J).

17.2) Insert Small Cam-locks (9) into the mounting positions on Drawer Right Panel - Small (M) and Drawer Left Panel - Small (N) and turn clockwise to lock onto the cam-bolts.

CAUTION: Insert the Cam-locks (9) per the correct orientation as indicated in the above picture.

Step 18

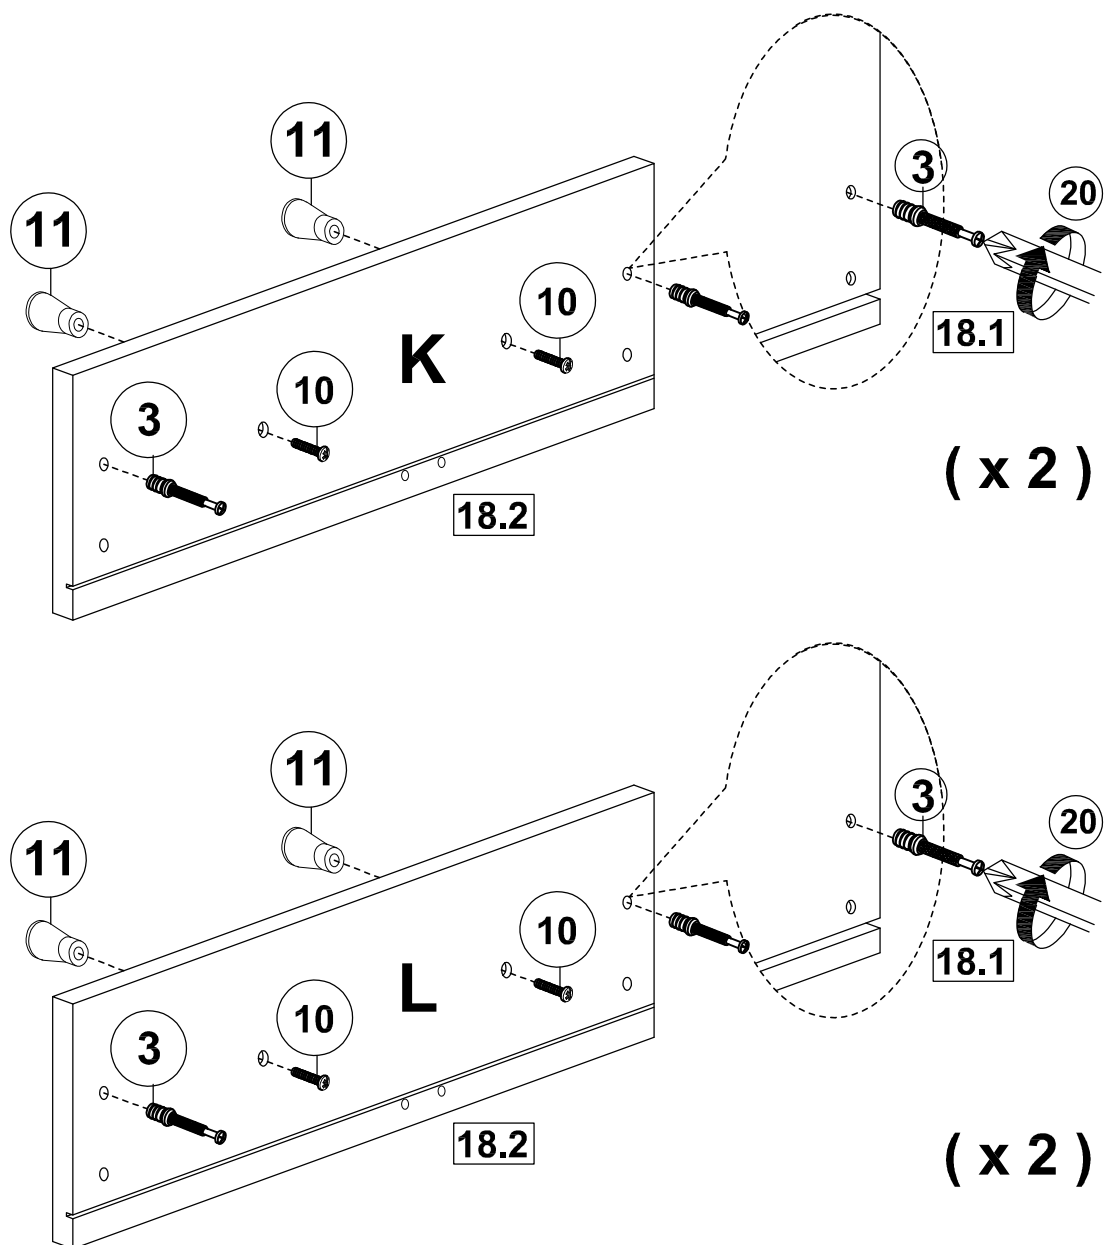


18.1) Use a Screw Driver (20) to screw Cam Bolts (3) into the mounting positions on the inside face of Drawer Front Right - Large (K) and Drawer Front Left - Large (L) as shown. Note : It is easier to screw in Cam Bolts with the Drawer Front Right - Large and Drawer Front Left - Large laid flat down - take care not to scratch or damage the front face of the Drawer Front Right - Large and Drawer Front Left - Large panel.

18.2) Position Drawer Front Right - Large (K) and Drawer Front Left - Large (L) vertically as shown. Align the mounting positions on Knobs (11) to the bolt holes on Drawer Front Right - Large (K) and Drawer Front Left - Large (L).

Insert Pan Head Bolts (10) through the bolt holes on Drawer Front Right - Large (K) and Drawer Front Left - Large (L) to thread into the bolt holes on Knobs (11).

Use a screw driver to screw in the Pan Head Bolts - do not tighten the bolts fully until both bolts are in place.

Step 19

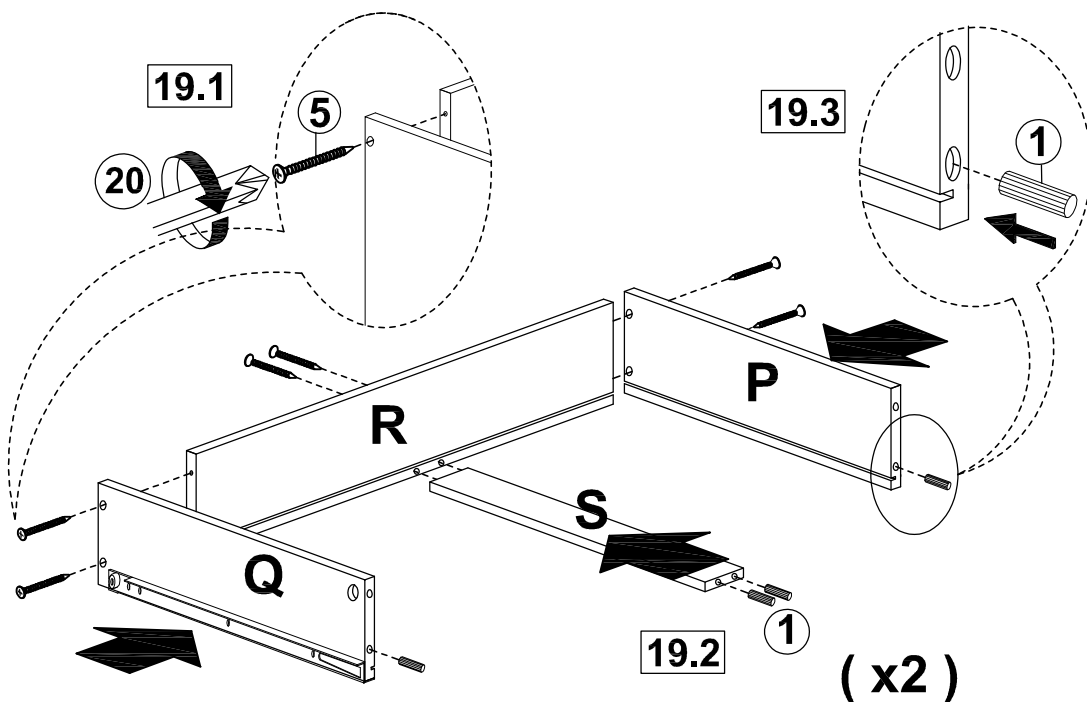


19.1) Attach Drawer Right Panel - Large (P) and Drawer Left Panel - Large (Q) to Drawer Back Panel - Large (R) as shown-note the grooves on each panel are at the bottom. Use Flat Head Screws (5) to fasten side panels to back panel.

Do not tighten screws completely until all screws are in place in each panel.

19.2) Align the mounting positions on Drawer Bottom Support (S) to the mounting positions on Drawer Back Panel - Large (R) and use Flat Head Screws (5) to fasten Drawer Bottom Support (S) to Drawer Back Panel - Large (R).



19.3) Insert Wood Dowels (1) into the mounting positions on the front edge of Drawer Right Panel - Large (P), Drawer Left Panel - Large (Q) and Drawer Bottom Support (S).

Step 20

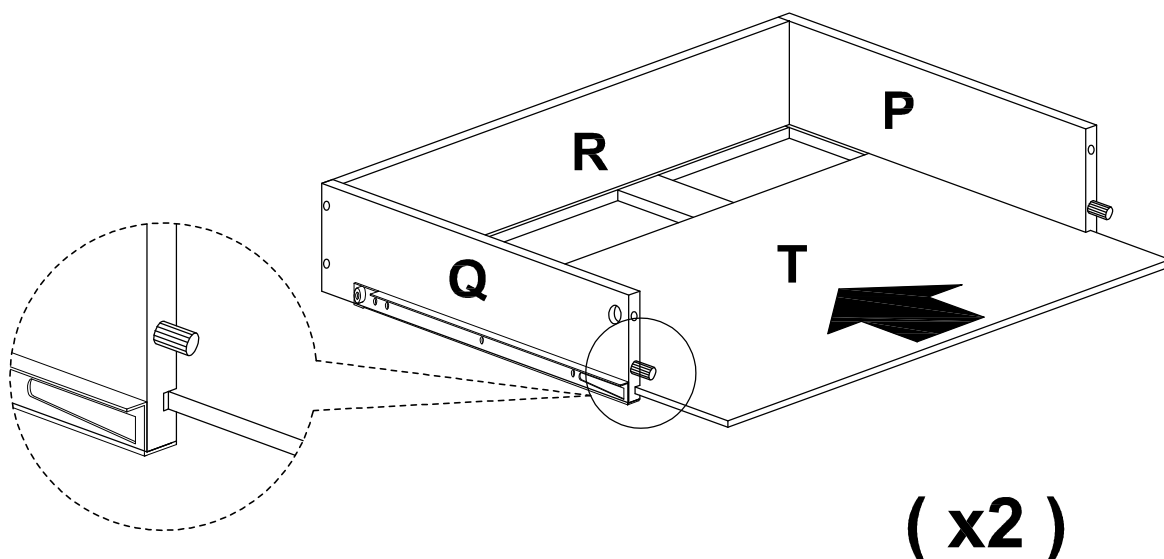

Slide the Drawer Base (T) into the grooves on Drawer Right Panel - Large (P), Drawer Left Panel - Large (Q) and Drawer Back Panel - Large (R).

Step 21

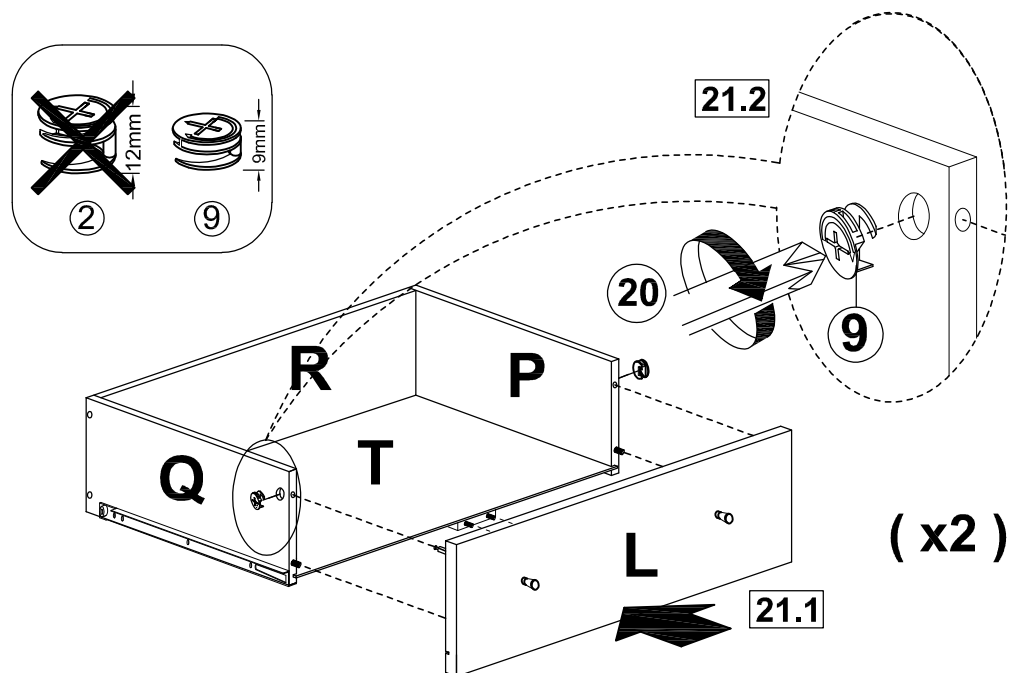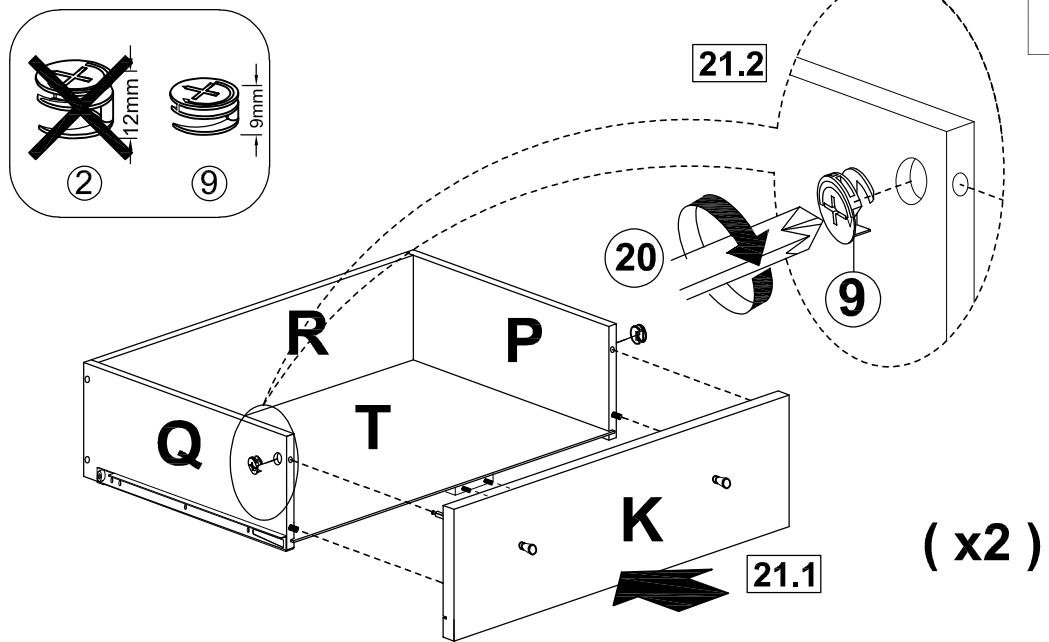


21.1) Attach Drawer Front Right - Large (K) and Drawer Front Left - Large (L) to Drawer Right Panel - Large (P) and Drawer Left Panel - Large (Q) via the cam-bolts and the wood dowels on the respective parts. Check that the front edge of Drawer Bottom Support (S) fits into the groove on Drawer Front Right - Large (K) and Drawer Front Left - Large (L).

21.2) Insert Small Cam-locks (9) into the mounting positions on Drawer Front Right - Large (K) and Drawer Front Left - Large (L) and turn clockwise to lock onto the cam-bolts.


CAUTION: Insert the Cam-locks (9) per the correct orientation as indicated in the above picture.

Step 22

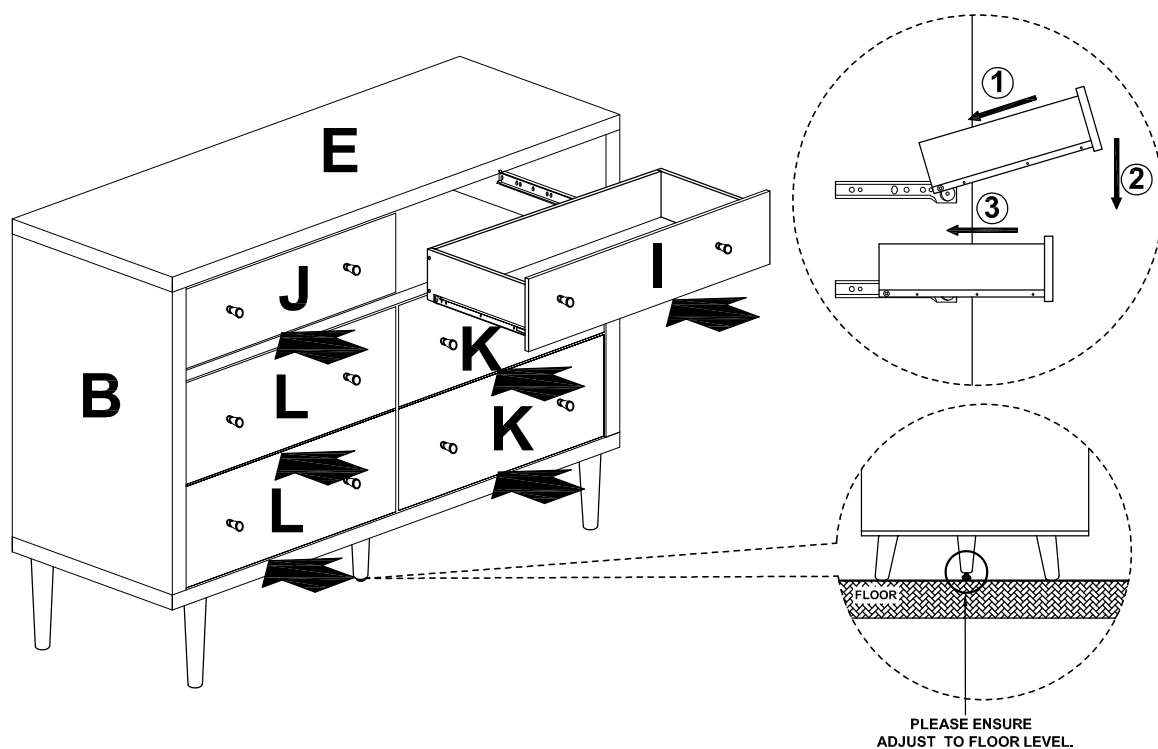


Place the Drawers into the Chest assembly by aligning the rails.

Step 23

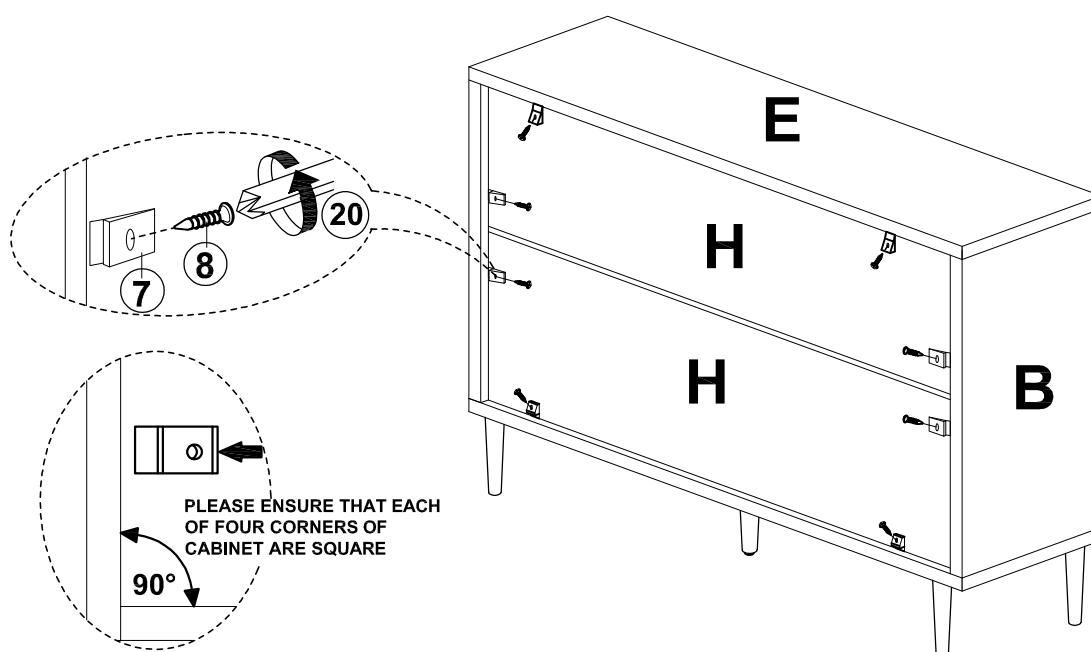

Use Screw Driver (20) to affix Backply Stoppers (7) and Flat Head Screws (8) in the location on Back Panel (H) as shown.

Step 24

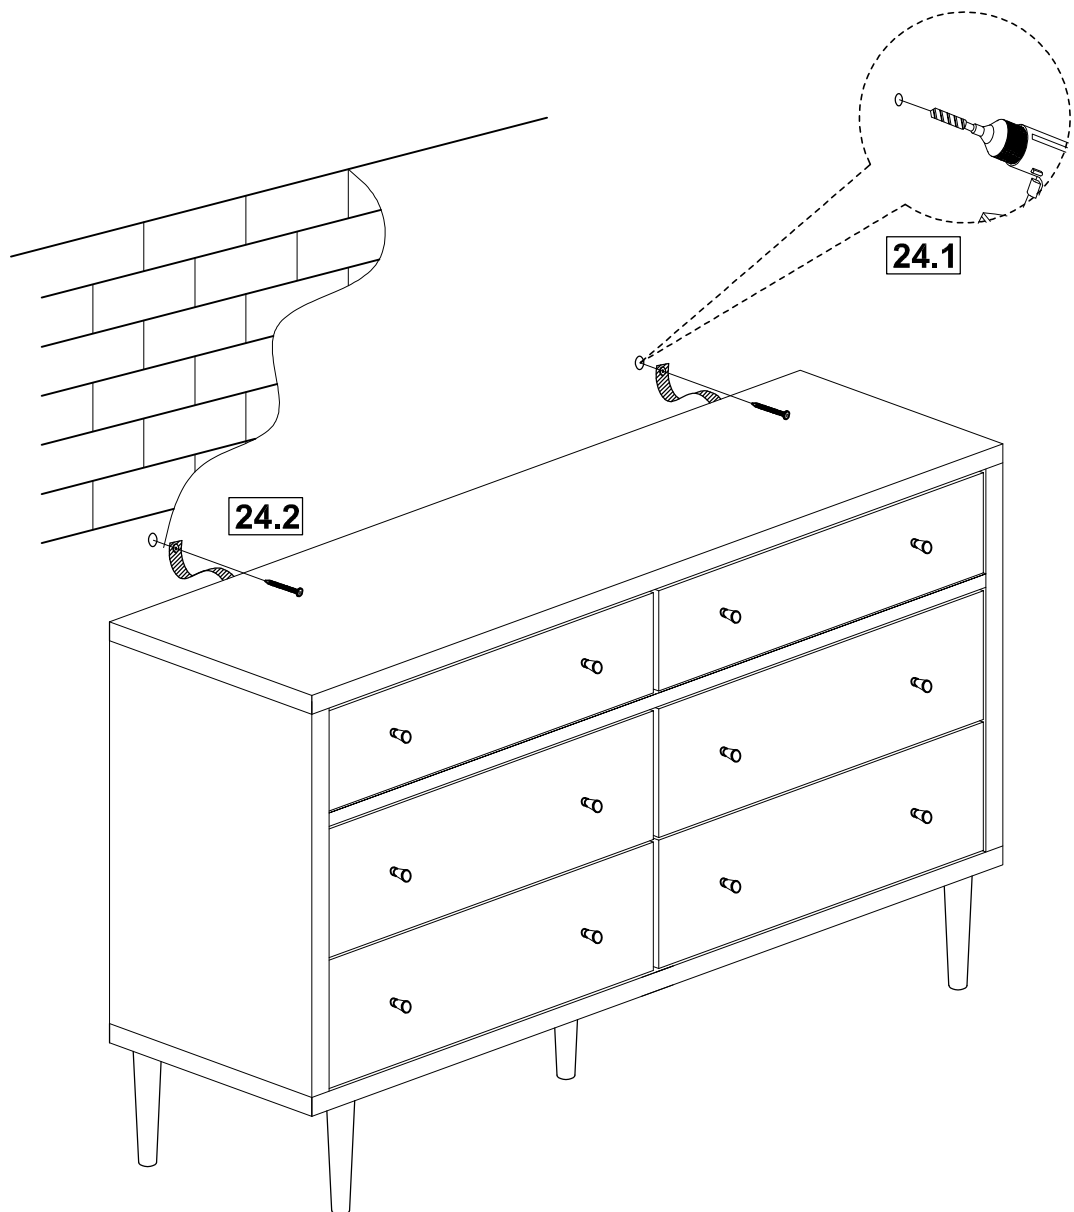

24.1) Drill holes in the wall and insert wall anchors / Rawl plugs.

24.2) Insert screws through the Straps and drive the screws into the wall anchors / Rawl Plugs.


NOTE : Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the Anti- Tip Strap and that the fixing is safe and secure before use.

The screws supplied are to affix the Anti-Tip Strap to the chest.




WARNING

Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: **ALWAYS** secure this furniture to the wall using
Cabinet Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

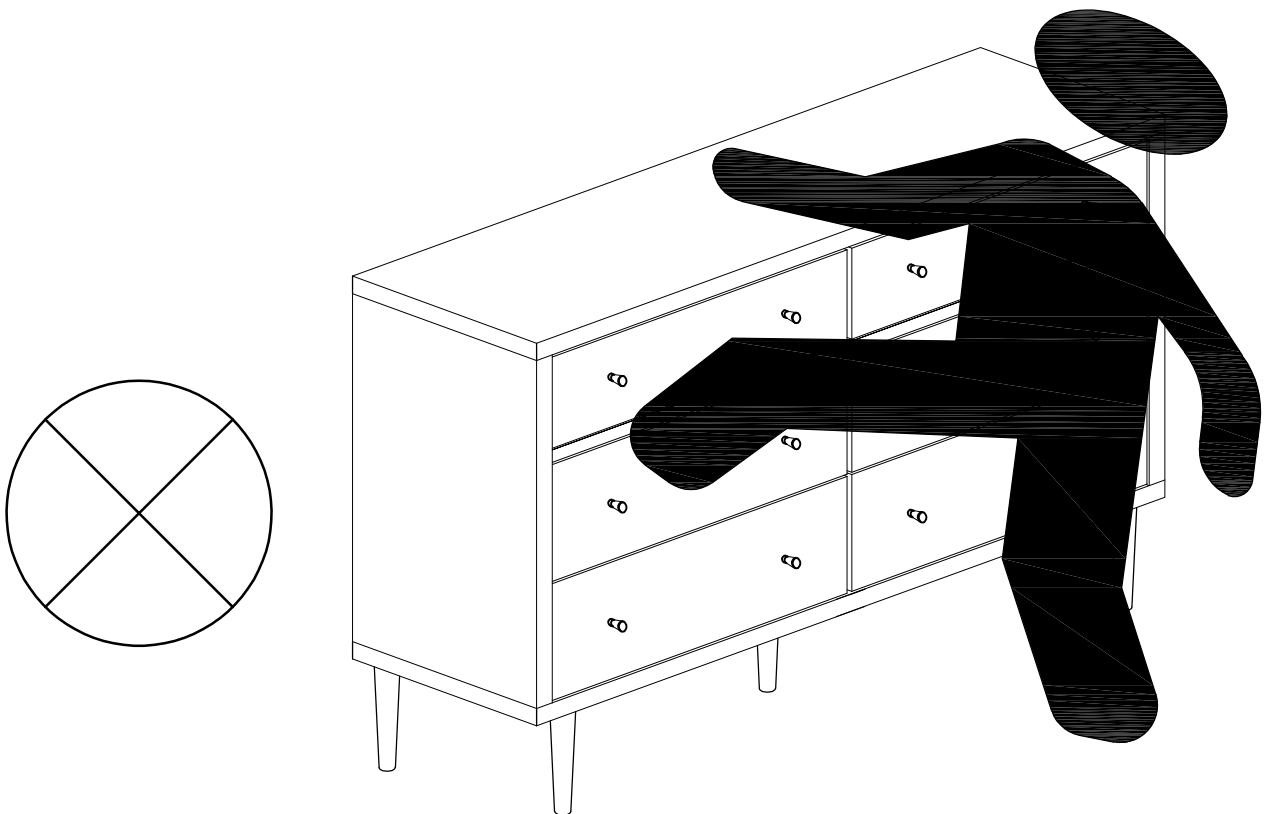

Step 25

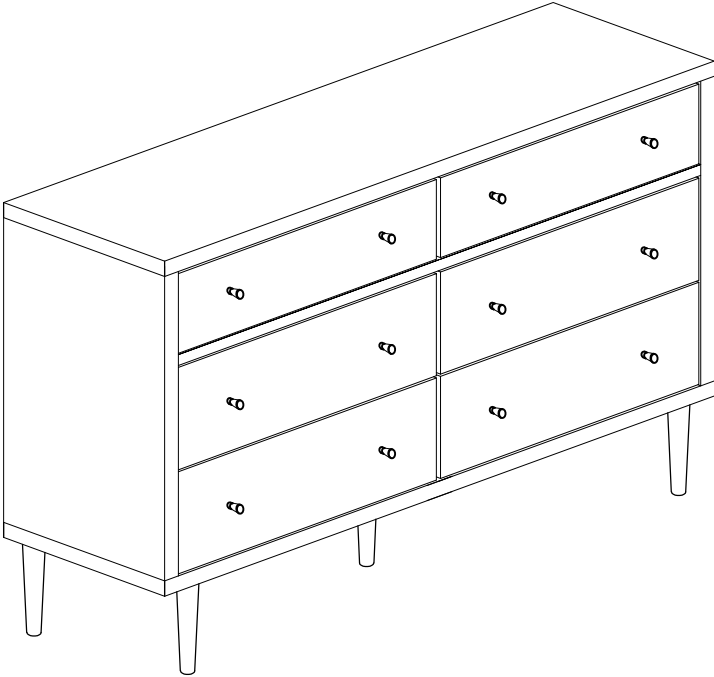

Your Chest is ready for use.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Questions & Answers about Proposition 65

• What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals. Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

• What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.