

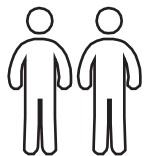


Lateral Metal Filing Cabinet Instructions





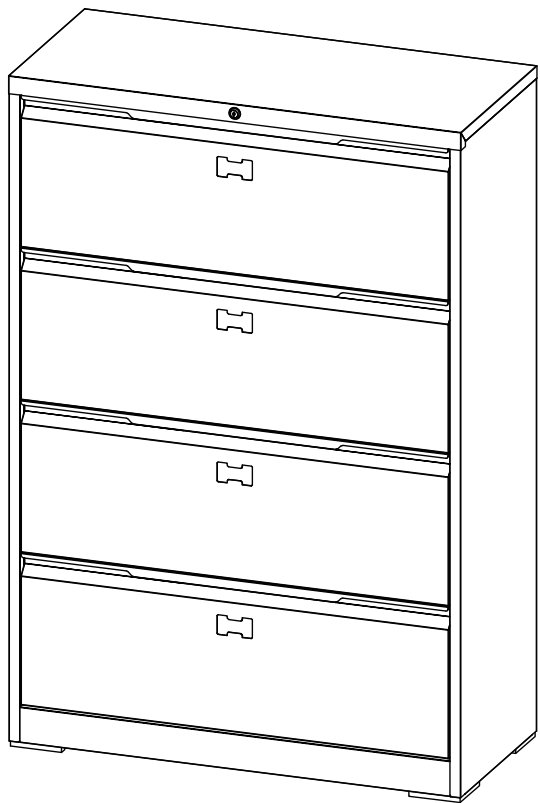


Assembly Video







PACKAGE CONTENTS

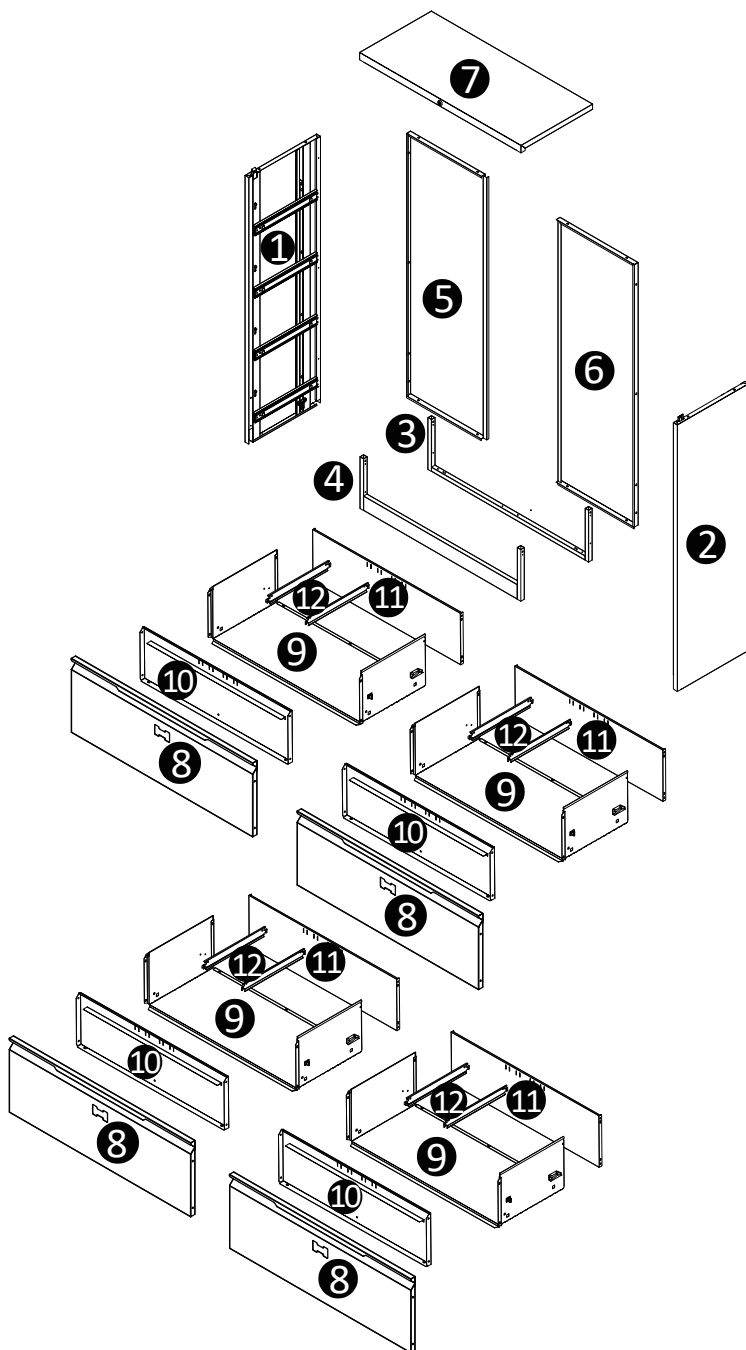



ACCESSORIES

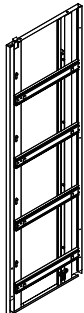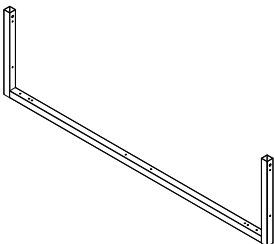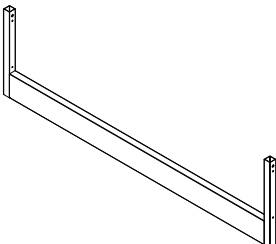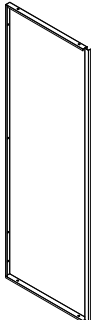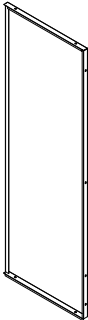1-Left side panel	1pc	2-Right side panel	1pc
			
3-Rear bottom bracket	1pc	4-Front bottom bracket	1pc
			
5-Left back panel	1pc	6-Right back panel	1pc
			

ACCESSORIES

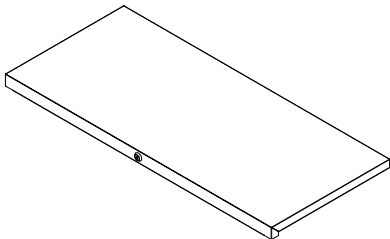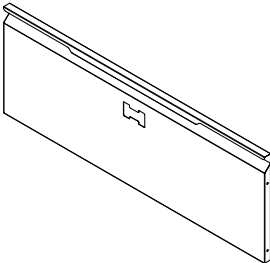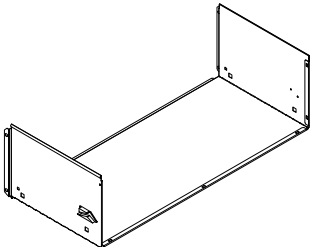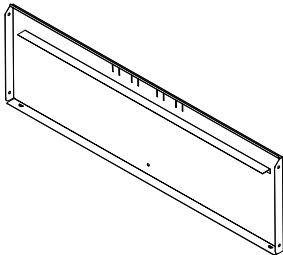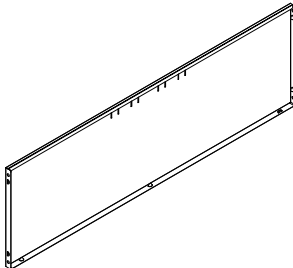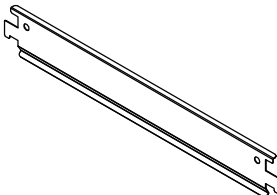
7-Top panel	1pc	8-Drawer panel	4pcs
			
9-Drawer box	4pcs	10-Drawer lining	4pcs
			
11-Back plate of drawer	4pcs	12-File hanger	8pcs
			

ACCESSORIES

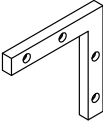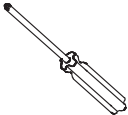
A	Self-tapping screw	23pcs	 M4*10
B	Expansion Bolt	2sets	 M4*30mm M5 M8
C	Gap pad	16pcs	
D	L shape pad	4pcs	
E	Self-tapping screw	16pcs	 M4*20
F	Cross Screwdriver	1pc	
G	Glove	1pair	

ASSEMBLY

- 1 Insert the front bottom bracket (Part 4) and rear bottom bracket (Part 3) into the left side panel (Part 1) respectively. Pay attention to the direction.

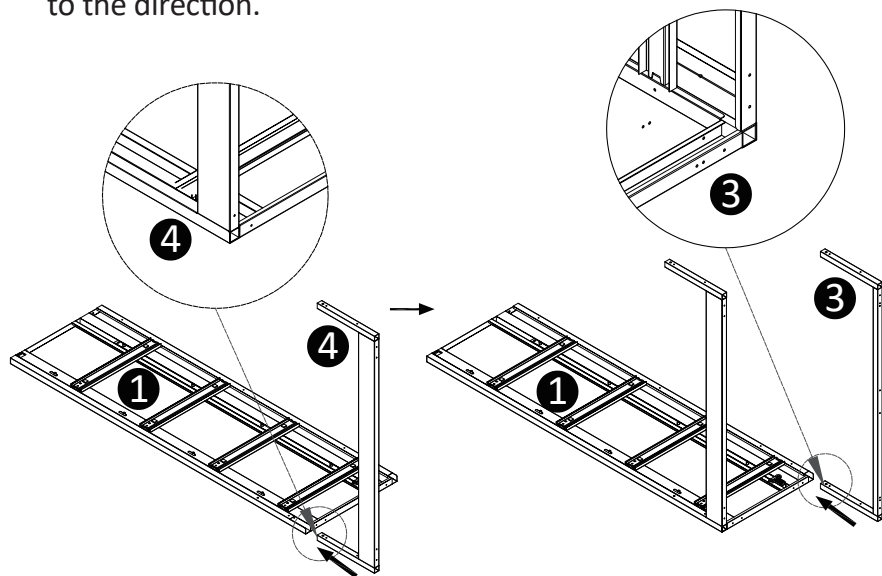


- 2 Insert the right panel Part 2 into the front bottom bracket (Part 4) and rear bottom bracket (Part 3).

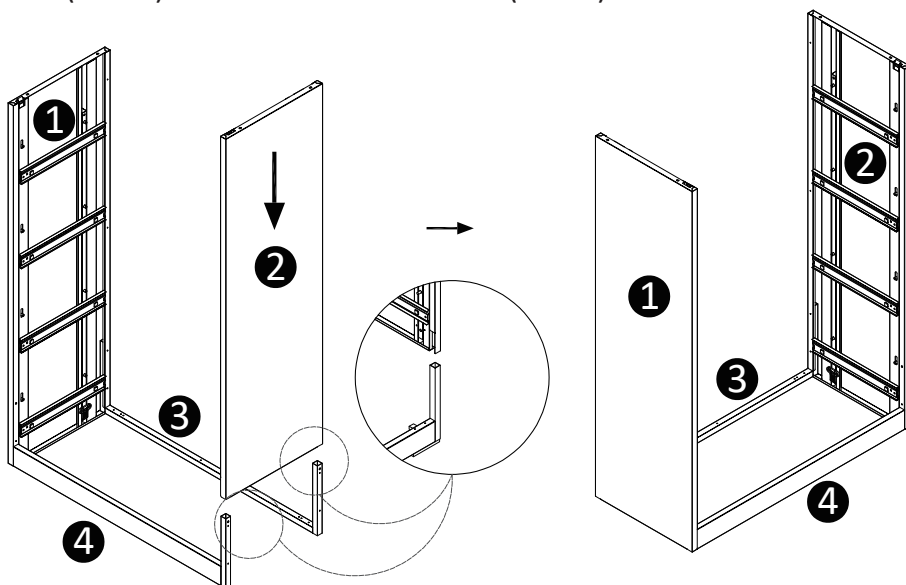


ASSEMBLY

- 3** Fix the L shape pad (Part D) with self-tapping screw (Part E) under the bottom brackets.

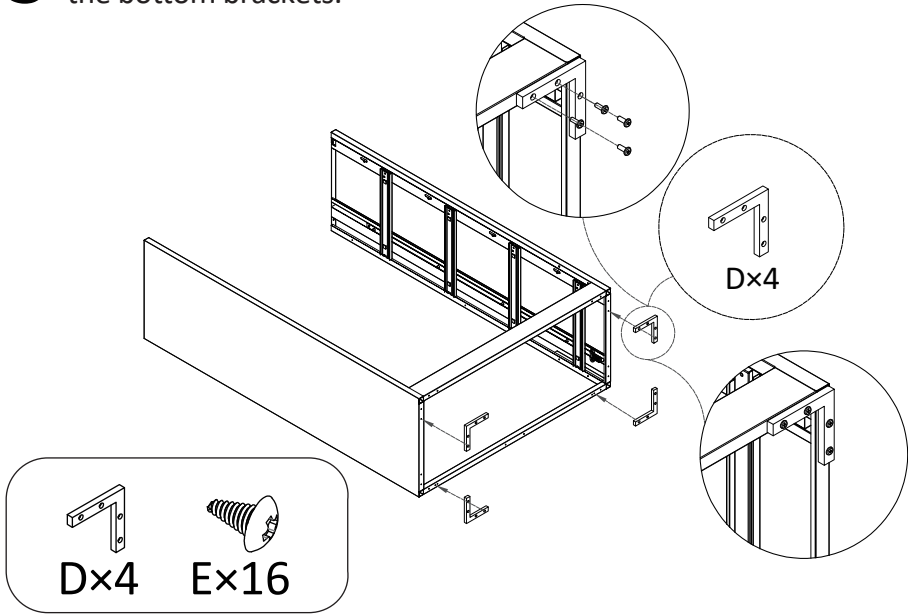


- 4** Place the right back panel (Part 6) into the slot of left back panel (Part 5), then fix them with self-tapping screw (Part A).

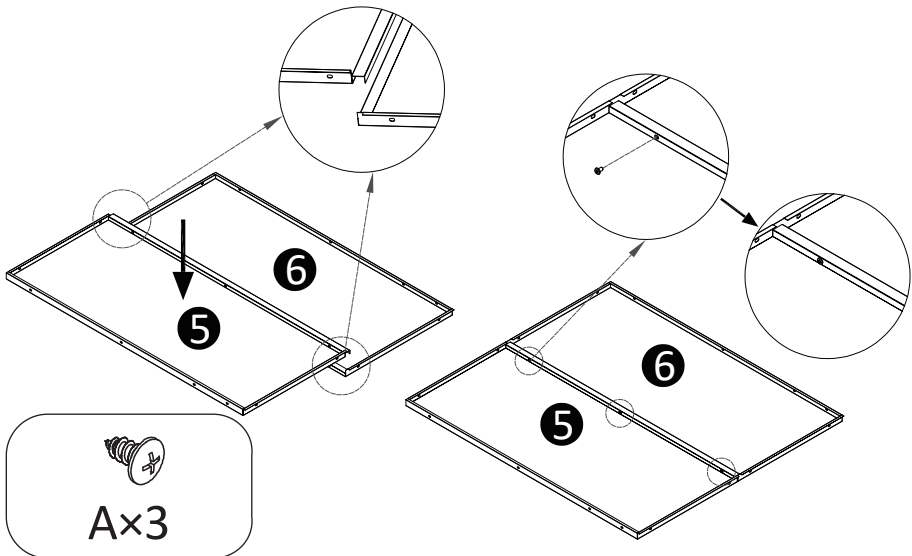


ASSEMBLY

- 5** Place the back panel (Part 5&6) between the side panels, then fix them with self-tapping screw (Part A).

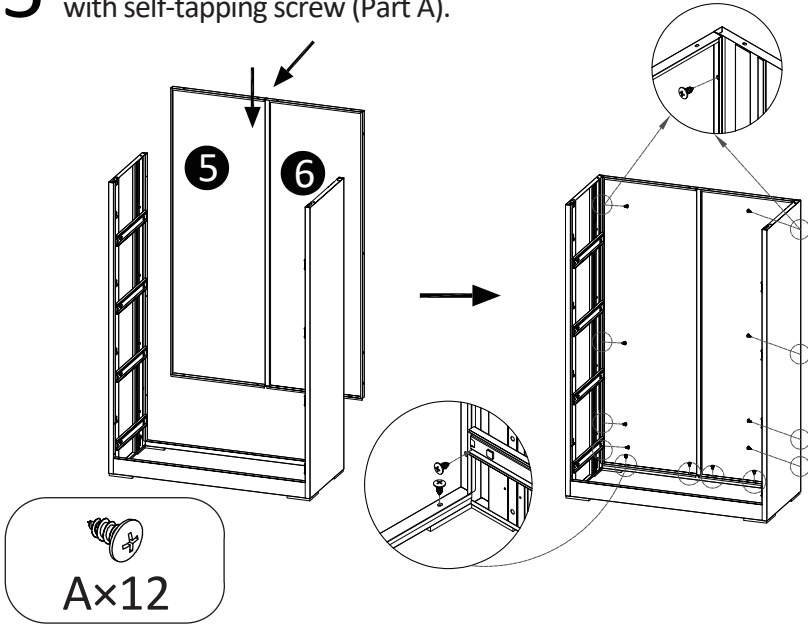


- 6** Place the top panel (Part 7), push it down so that secure the side panel, back panel.

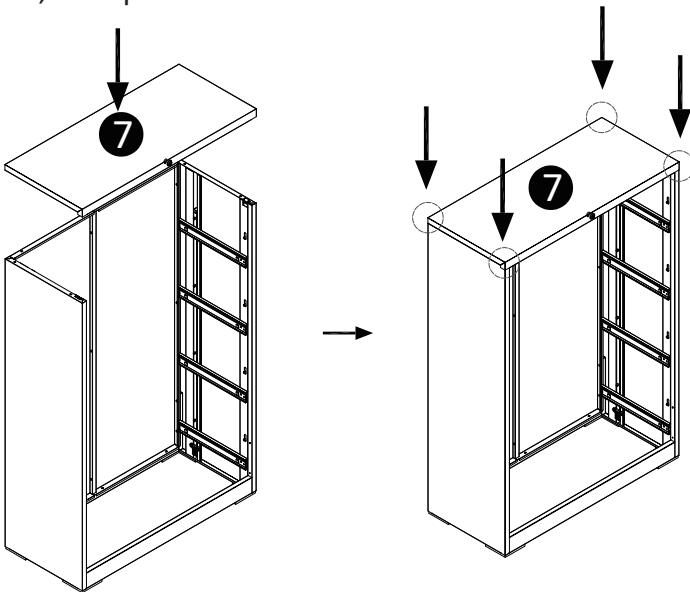


ASSEMBLY

- 7** Move the locking rod on the left & right side panels upwards, then move the spring shaft inside the top panel to insert it into the small hole of the locking rod. Pay Attention to the left and right side all need do it.

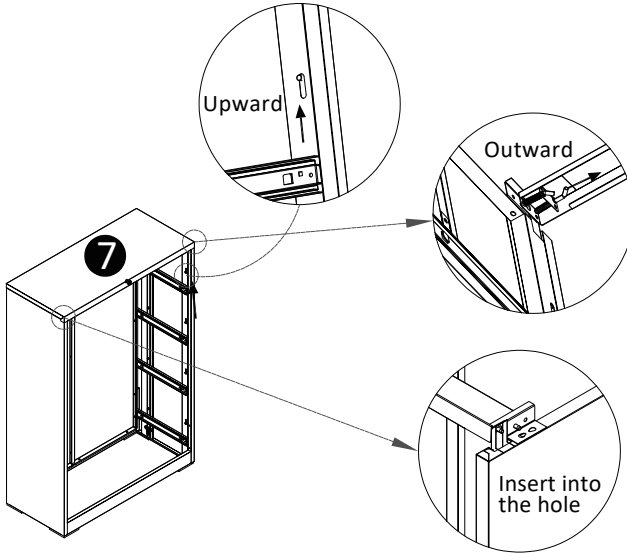


- 8** From the inner hole of the top panel, fix the side panel, back panel and top panel with self-tapping screw Part A.

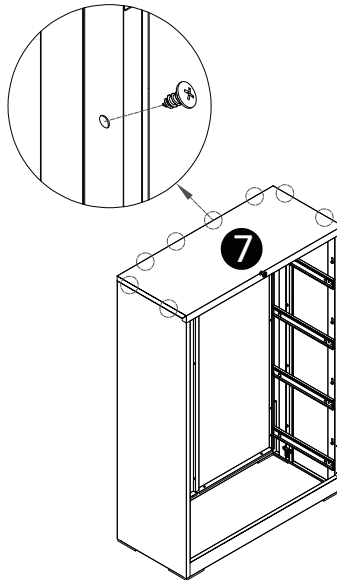

A×8


ASSEMBLY

- 9** The cabinet can be fixed on the wall as you need.

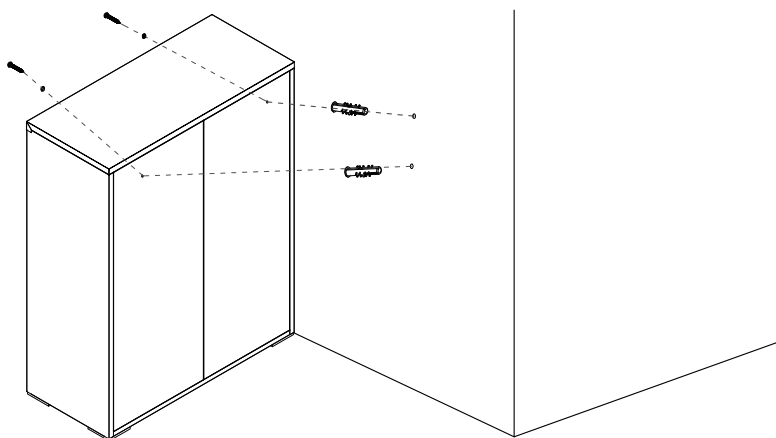


M4*30mm M5 M8

Bx2

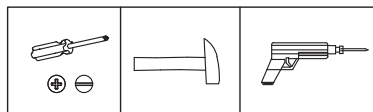


- 10** Take out the drawer lining (Part 10) , back plate of drawer (Part 11) and file hanger (Part 12) from drawer panel (Part 8).

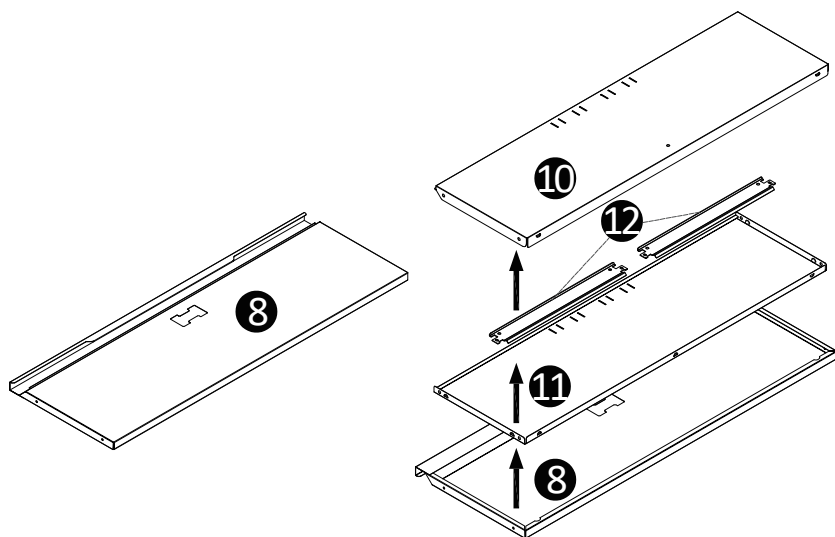


ASSEMBLY

- 11** Place the drawer box (Part 9) into drawer panel, then open it.

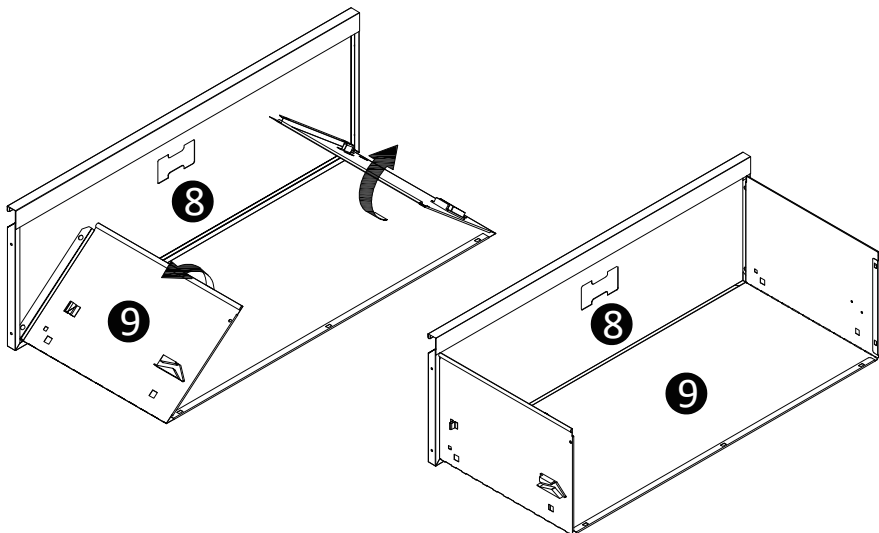


- 12** Place the drawer lining (Part 10), push it down and secure the drawer box and drawer panel.

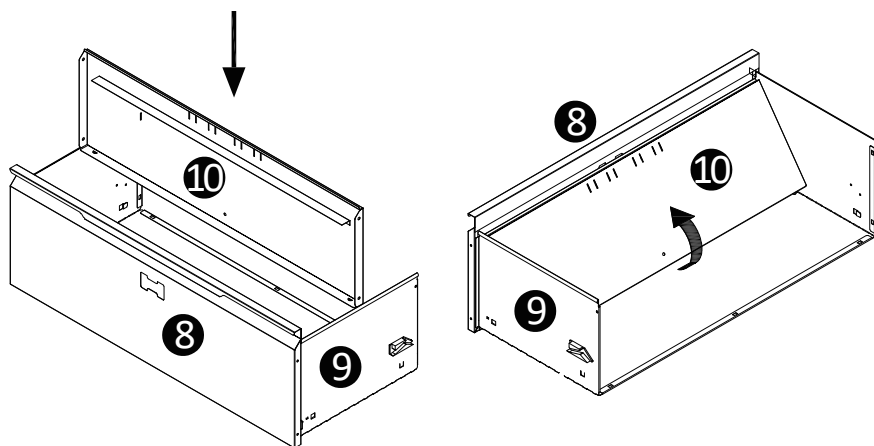


ASSEMBLY

- 13** Snap the buckles on back plate of drawer (Part 11) into the drawer box, and secure them.

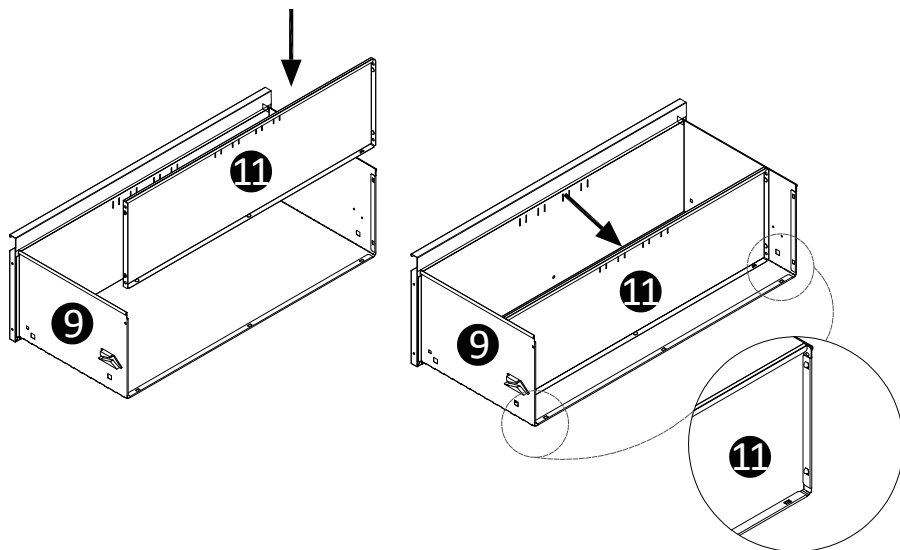


- 14** Place the file hanger (Part 12) as you need.

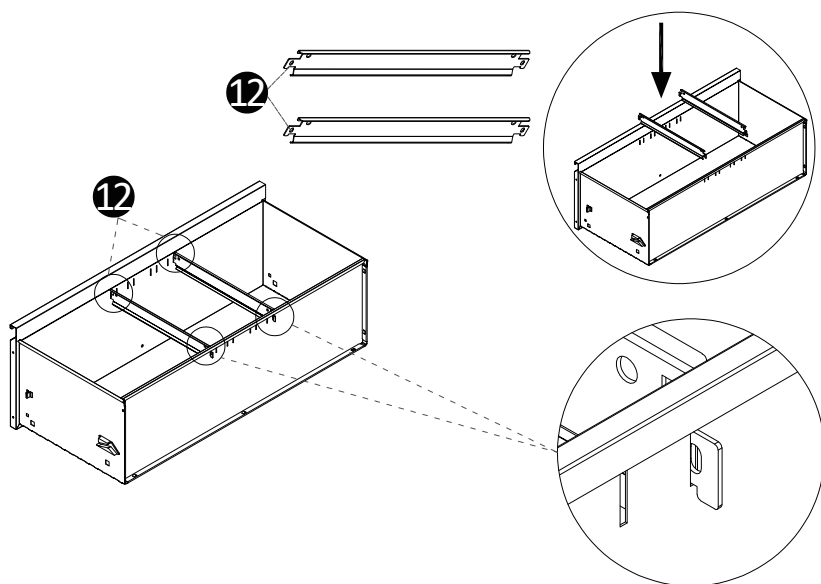


ASSEMBLY

- 15** According to the diagram, take out the slide rail core from the side panel rails.

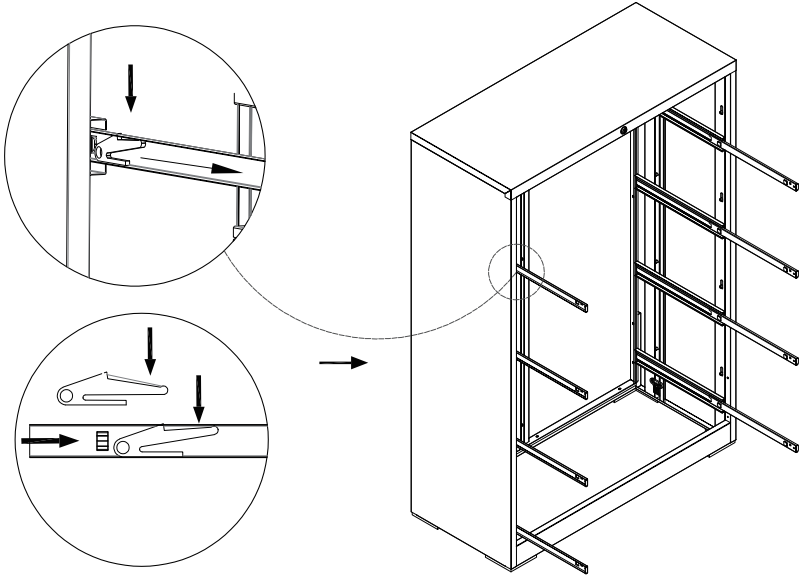


- 16** Install the gap pad Part C on the edge of drawer panel. Install the slide rail core on the side wall of drawer box (Part 9) in the corresponding direction.

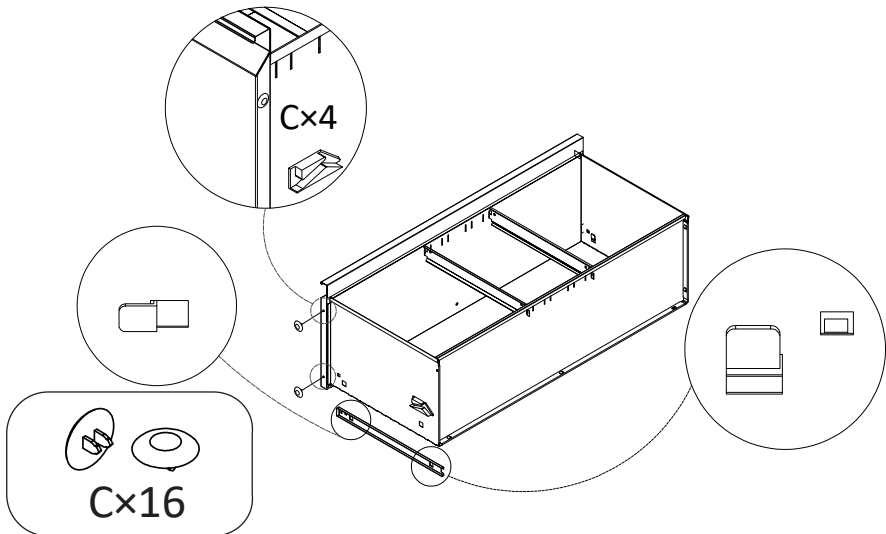


ASSEMBLY


- 17** Align the drawer with the slide rail core with the side panels slide rail, and then insert it into the cabinet.

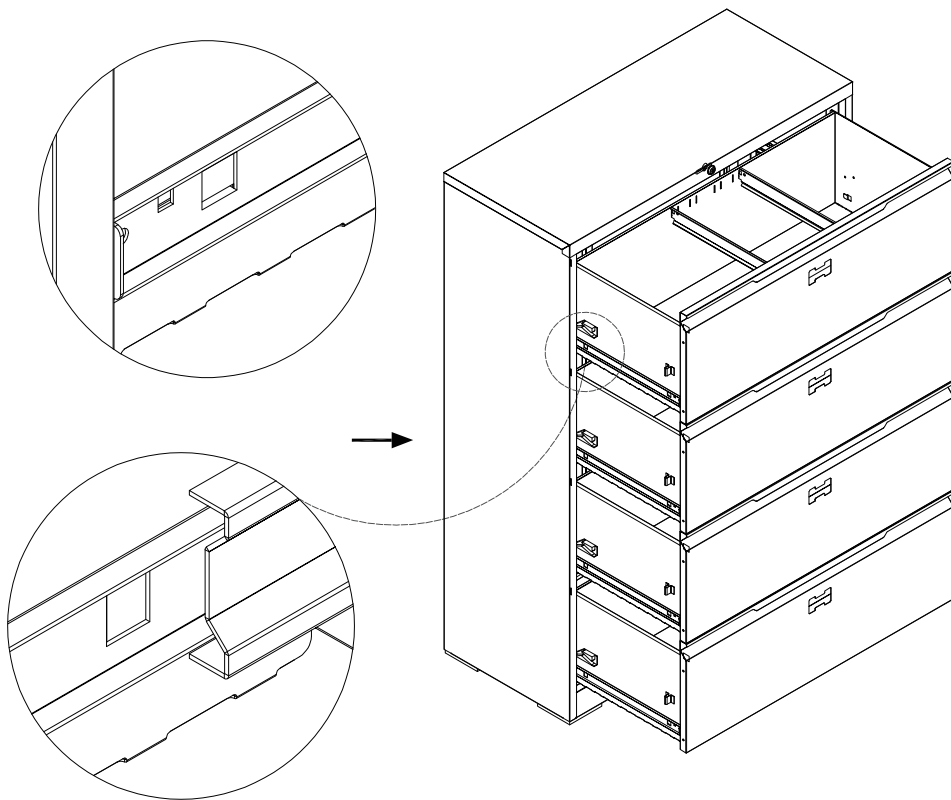

ASSEMBLY

18 Assembly completed.

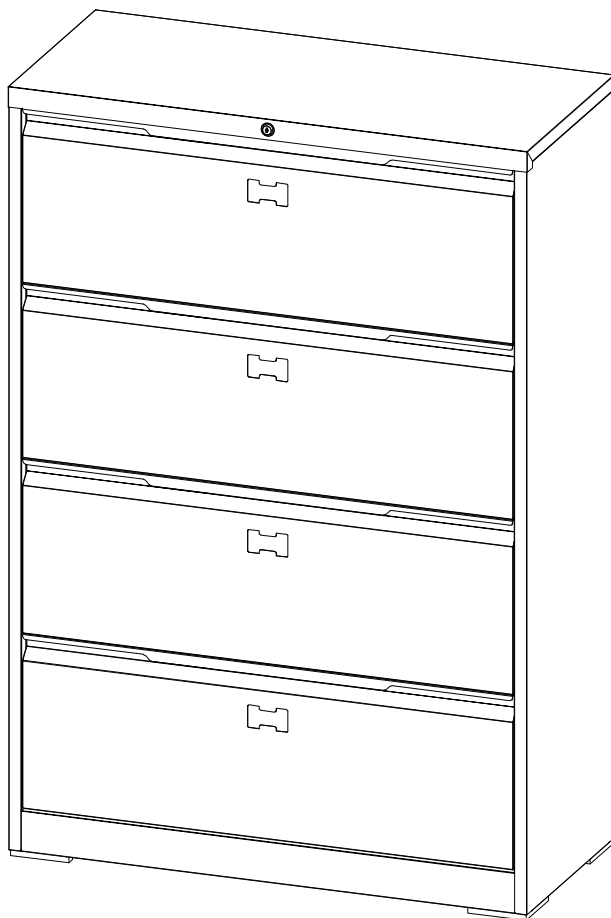

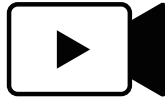

Assembly Video