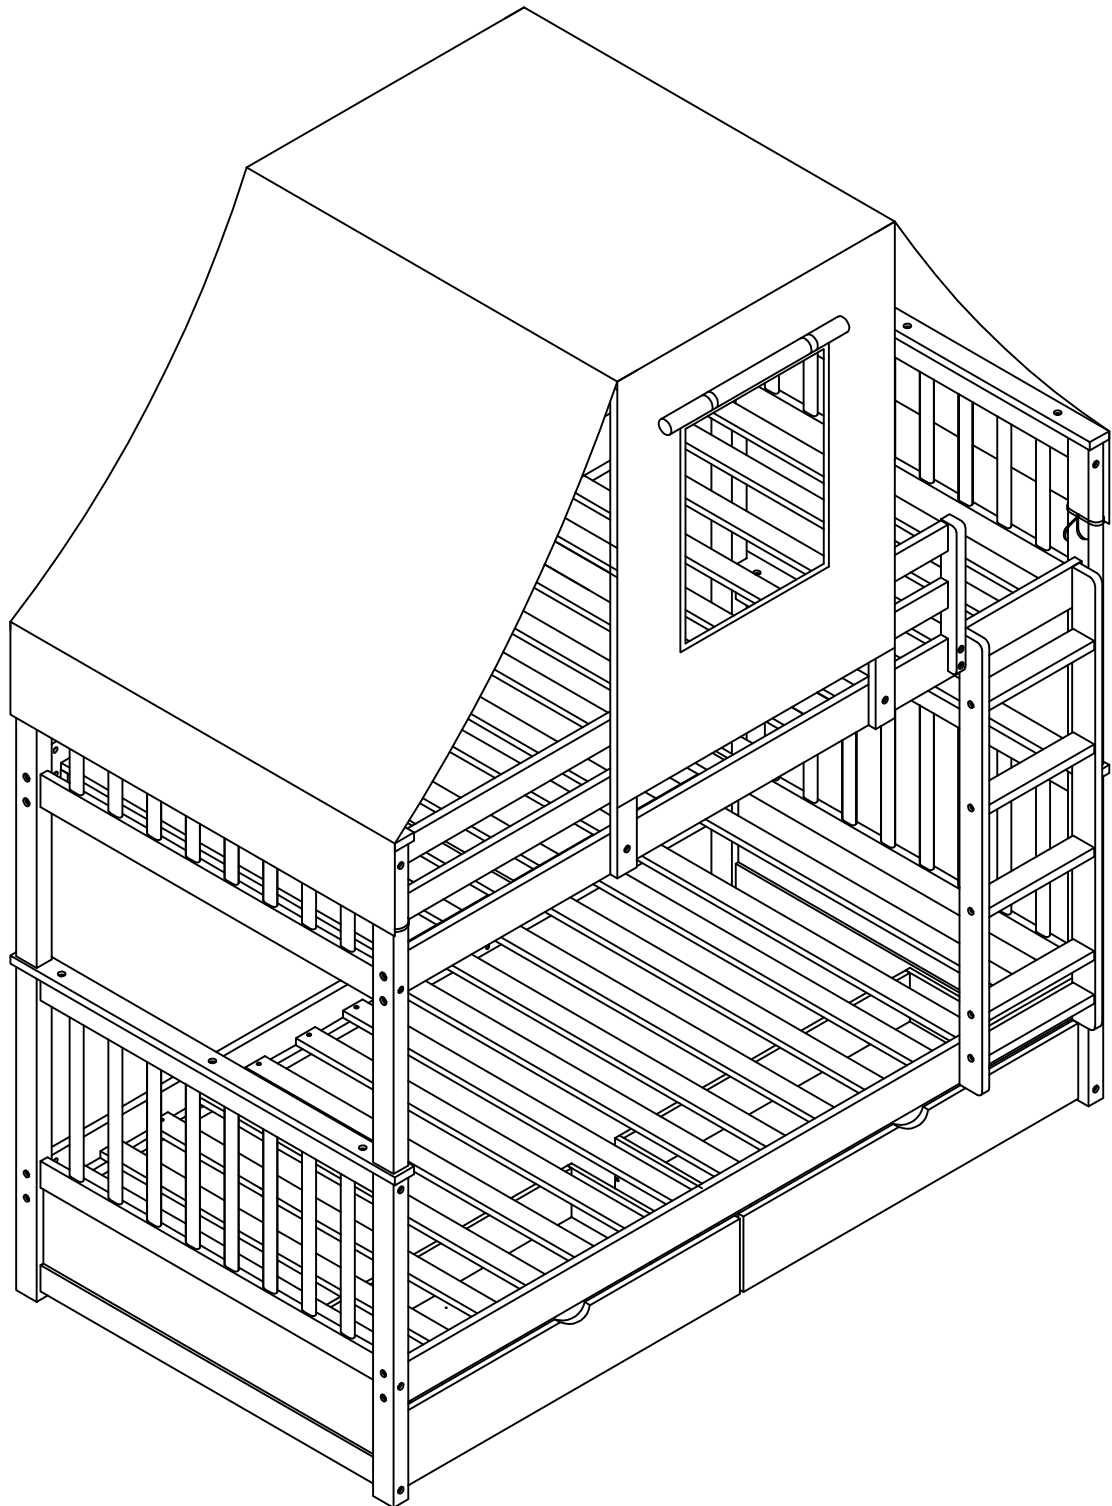


ASSEMBLY INSTRUCTIONS

BUNK BED



WF310771/WF310772

! SAFETY WARNINGS !

1. This bed is designed for use only mattress(es) meeting the following specifications on the upper bunk, and lower bunk:

Upper bunk


Bed type	Length	Width	Thickness
Twin Standard	74" - 75"	38 1/2"	6"

Lower bunk










Bed type	Length	Width	Thickness
Twin Standard	74" - 75"	38 1/2"	6"

2. Replacement parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC.) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of the mattress must be at least 5 in. (127 mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
11. Use of a night light may provided added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD – Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for axample, but not limited, hook, belts and jump ropes.
15. Keep these instructions for future reference
16. Prohidit more than one person on upper bunk .
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet .
18. Be caertain all staples are out of the box before beginning assembly on the shipping carton .



















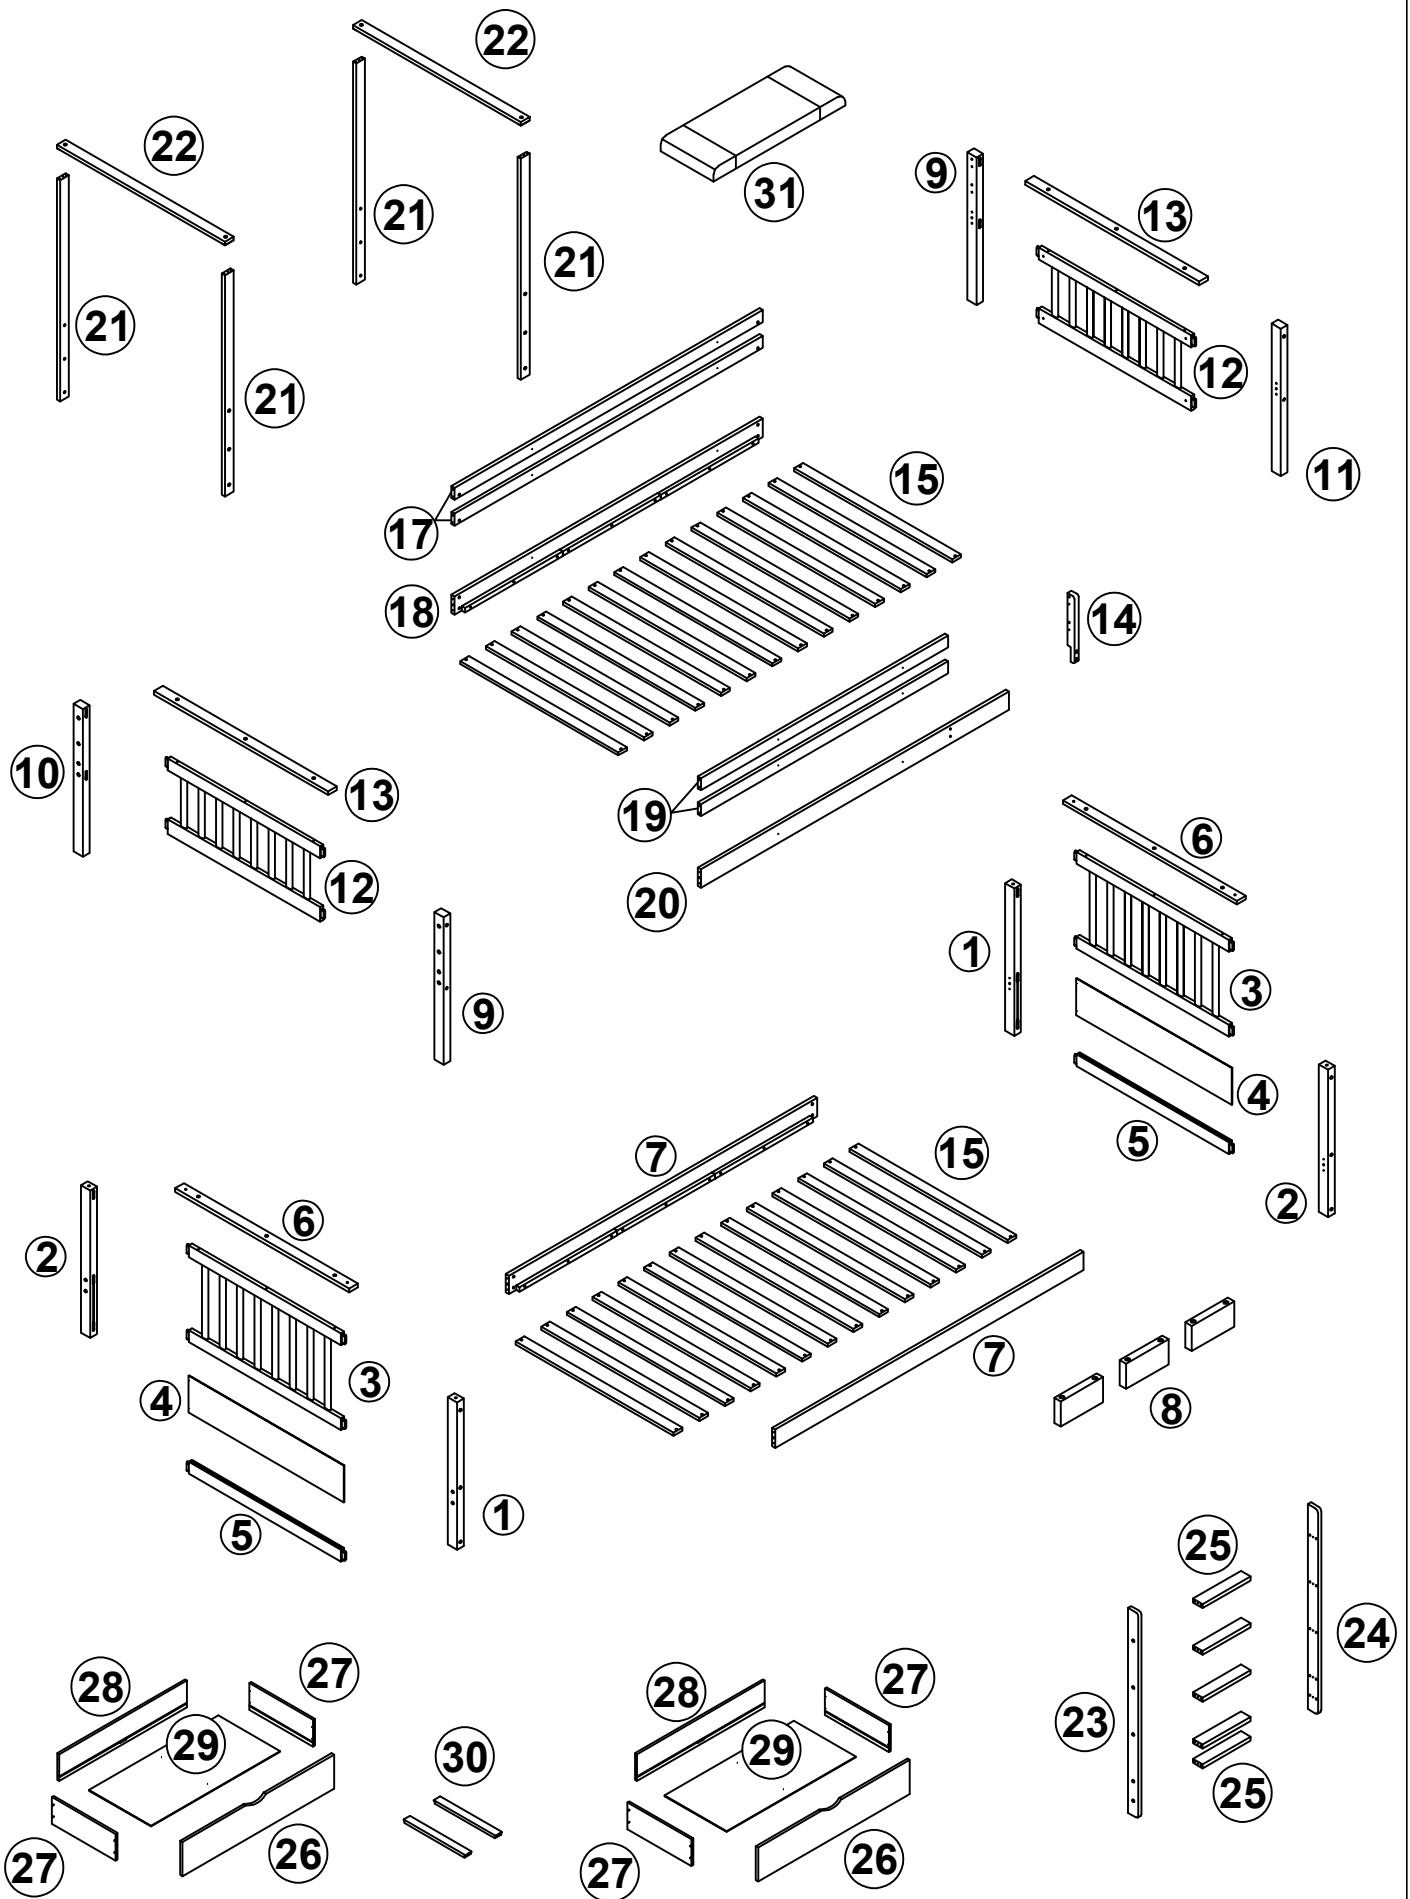
Detail View











Part List : WF310771

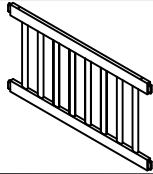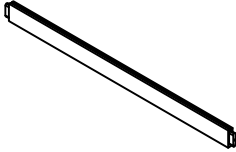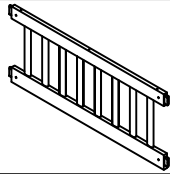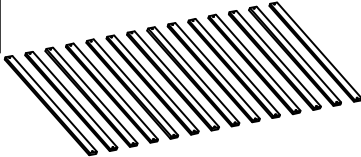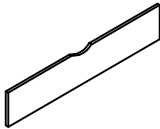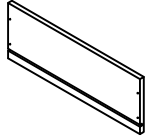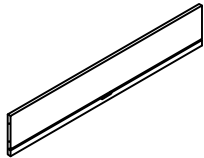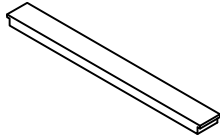3		5		12	
Bottom frame - 2pcs		Lower beam - 2pcs		Upper frame - 2pcs	
15		26		27	
Slats - 28pcs		Drawer front - 2pcs		Drawstring hip - 4pcs	
28		29		30	
Back drawer - 2pcs		Bottom of drawer - 2pcs		Bottom support - 2pcs	

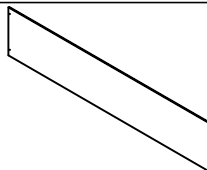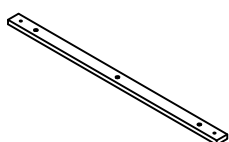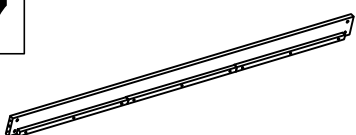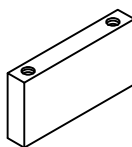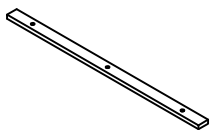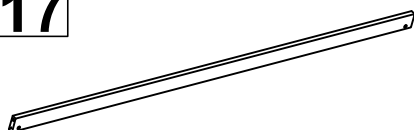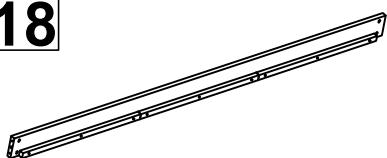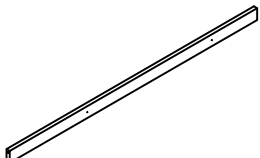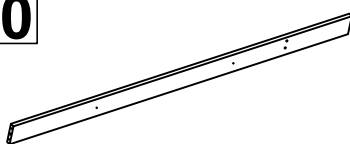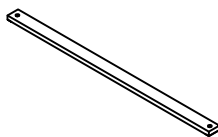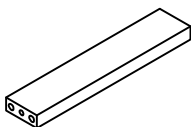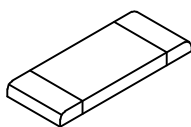
Part List : WF310772

1		2		4	
Lower leg (L/R) - 2pcs		Lower leg (L/R) - 2pcs		Panel - 2pcs	
6		7		8	
Cap for lower HB&FB - 2pcs		Lower shoulder - 2pcs		Wood block - 3pcs	
9		10		11	
Upper leg - 2pcs		Upper leg - 1pc		Upper leg - 1pc	
13		14		17	
Cap for upper HB&FB - 2pcs		Rafters - 1pc		Long beams - 2pcs	
18		19		20	
Upper shoulder - 1pc		Short top bar - 2pcs		Upper shoulder - 1pc	
21		22		23	
Roof stand - 4pcs		Roof crossbar - 2pcs		Stairs stand (left) - 1pc	
24		25		31	
Stairs stand (right) - 1pc		Stair steps - 5pcs		Cloth - 1pc	

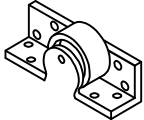
Hardware List : WF310772

A	 Ø10*30mm Wood dowel (36pcs)	B	 Ø1/4"*100mm Hex-Head bolt (20pcs)	C	 Ø6*50mm Hex-Head screw (26pcs)
D	 Ø1/4"*9.5*12mm Horizontal-Hole bolt (44pcs)	E	 Ø1/4"*65mm Hex-Head bolt (2pcs)	F	 Ø1/4"*30mm Hex-Head bolt (14pcs)
G	 Ø1/4" Nut (14pcs)	H	 #4*30mm Screw (78pcs)	J	 #4*20mm Screw (12pcs)
K	 K4mm Allen key (1pc)	L	 Ø1/4"*80mm Hex-Head bolt (22pcs)	M	 Ø35mm Small Wheel (8pcs)
Q	 Hook (4pcs)	R	 90*17*2mm Foam stick (4pcs)	P	 #3.5*12mm Screw (20pcs)
T	 Ø10*90mm Metal dowel (4pcs)	U	 Ø8*30mm Wood dowel (8pcs)		


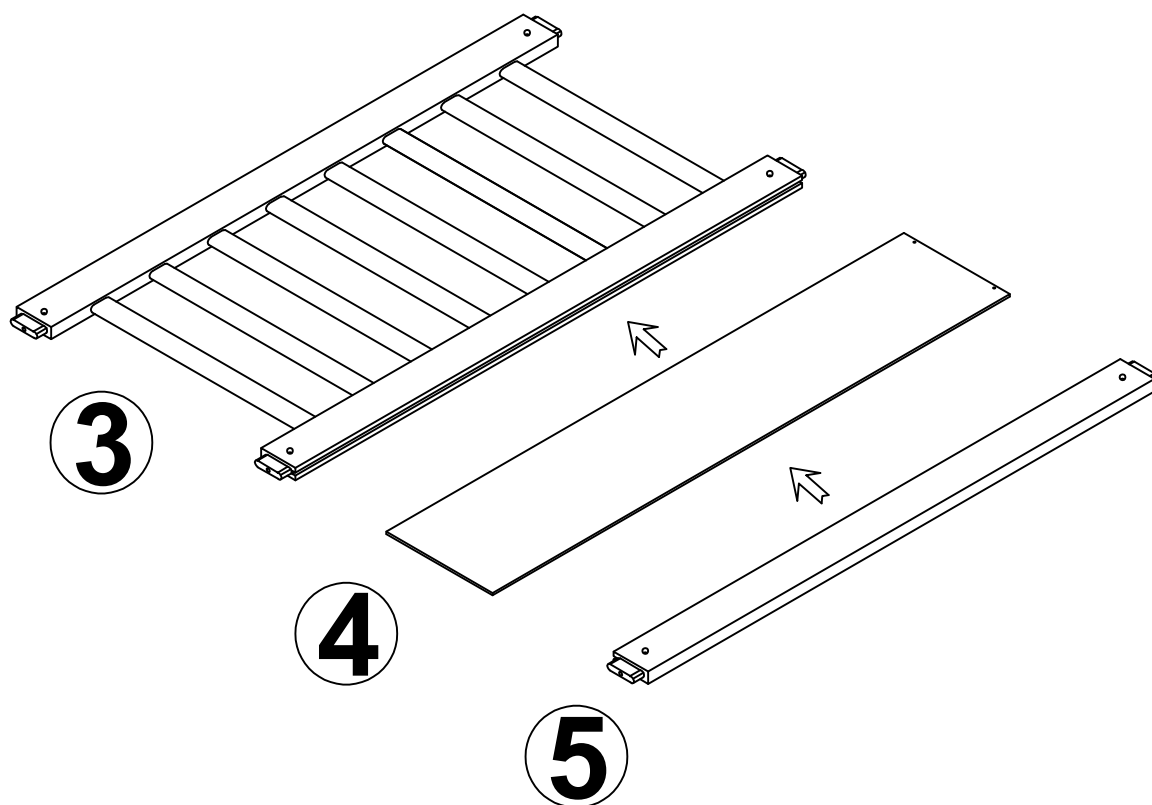
Step 1:




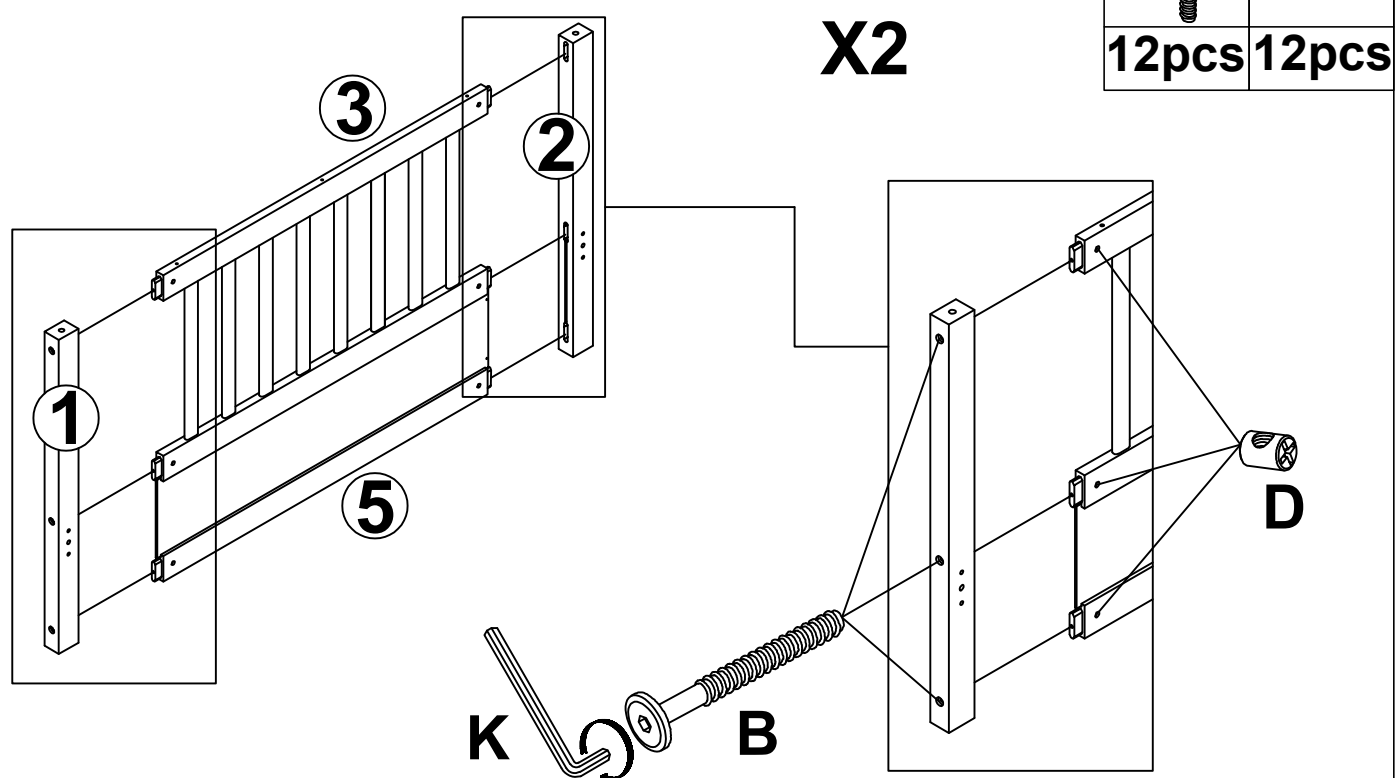
Step 2:



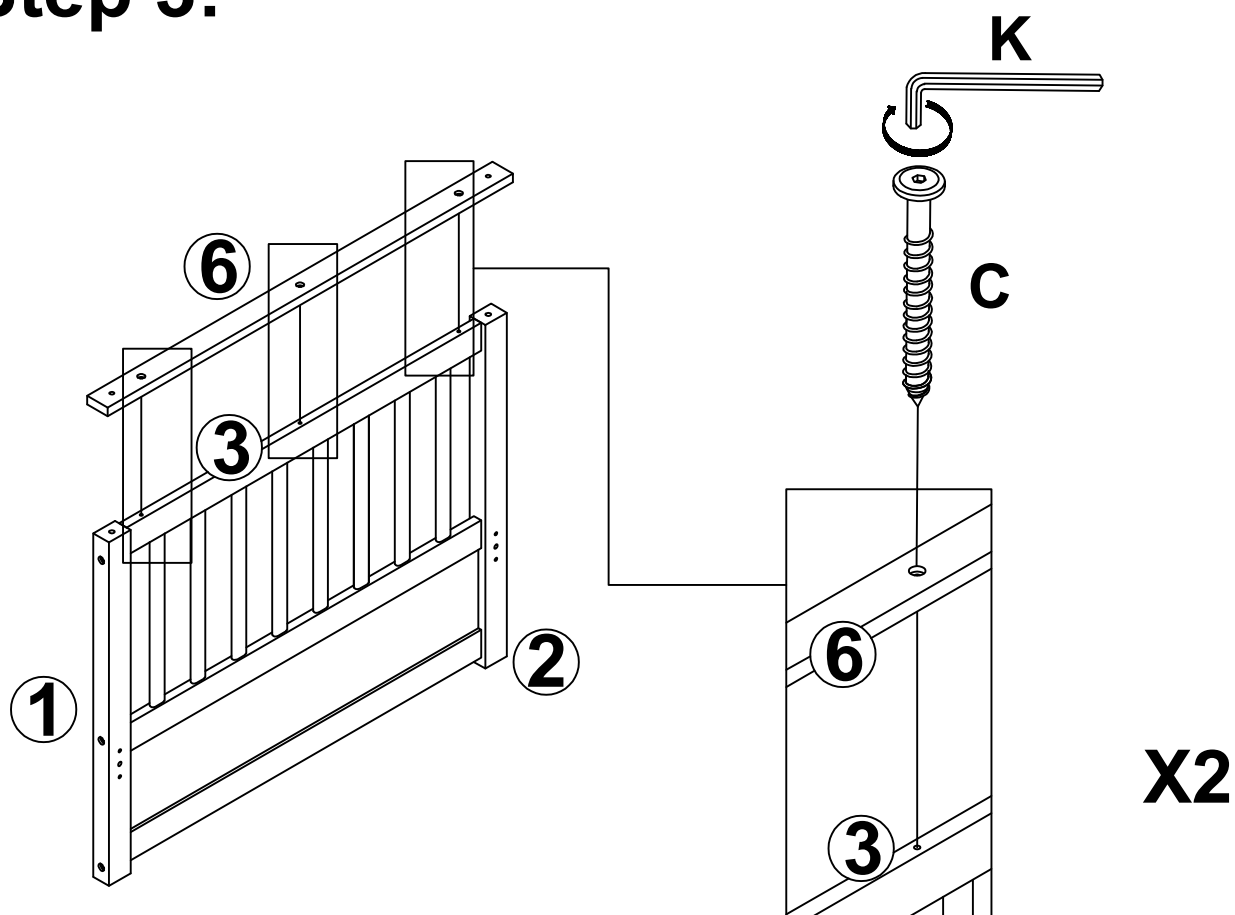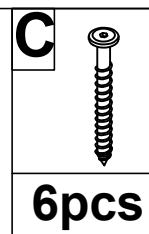
Step 3:




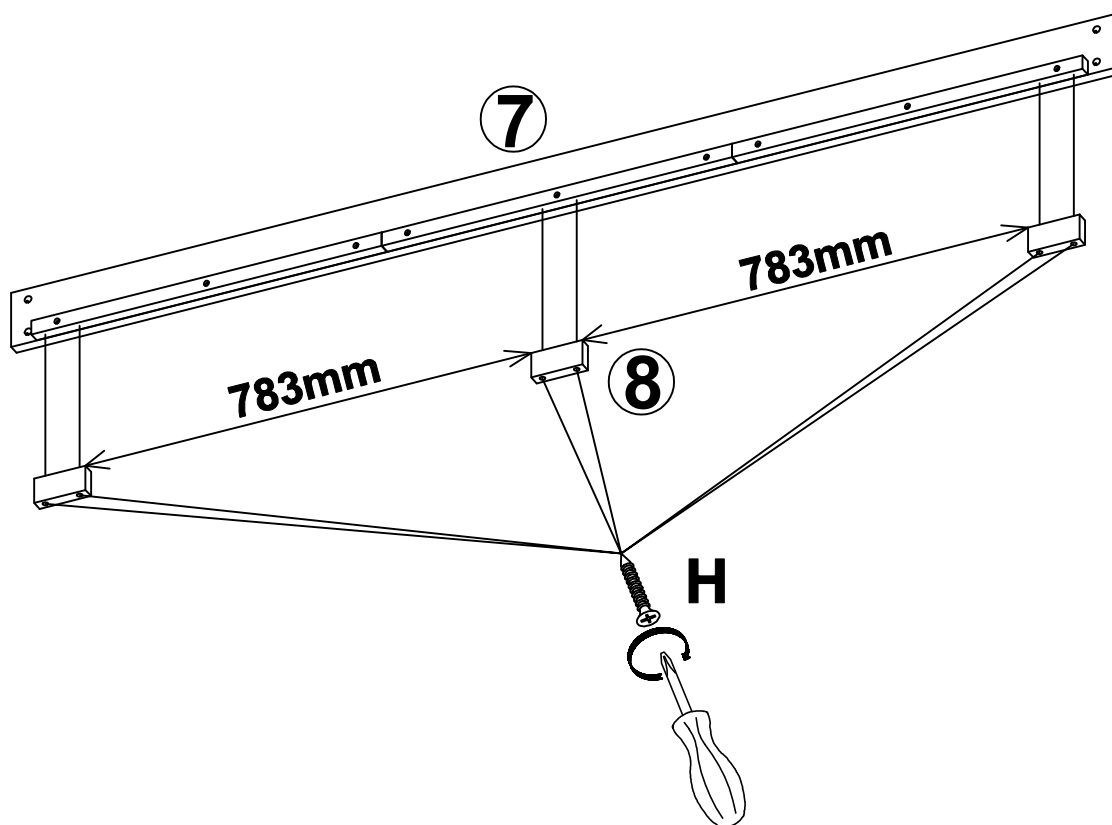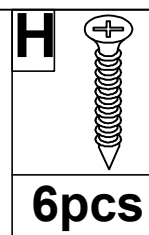Step 4:



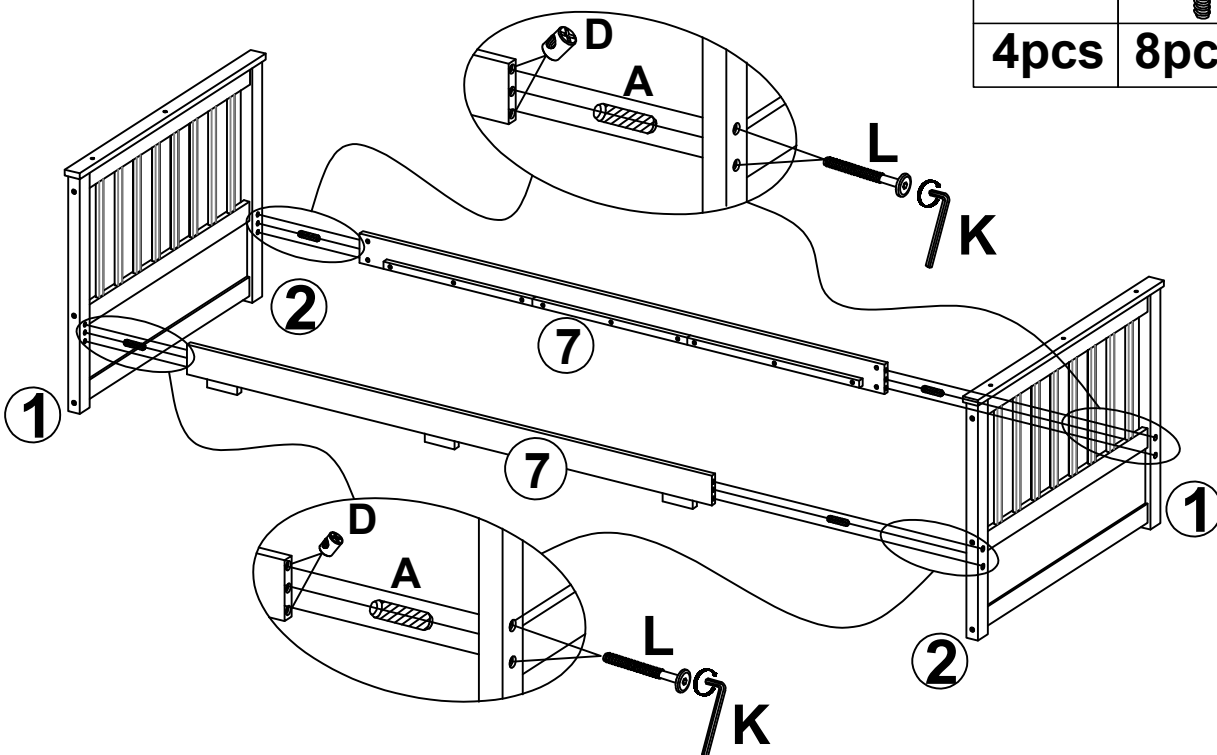
Step 5:



A	L	D
		
4pcs	8pcs	8pcs



ATTENTION: PLEASE DON'T TIGHTEN ALL BOLTS IN THIS STEP, JUST TIGHTEN 80%

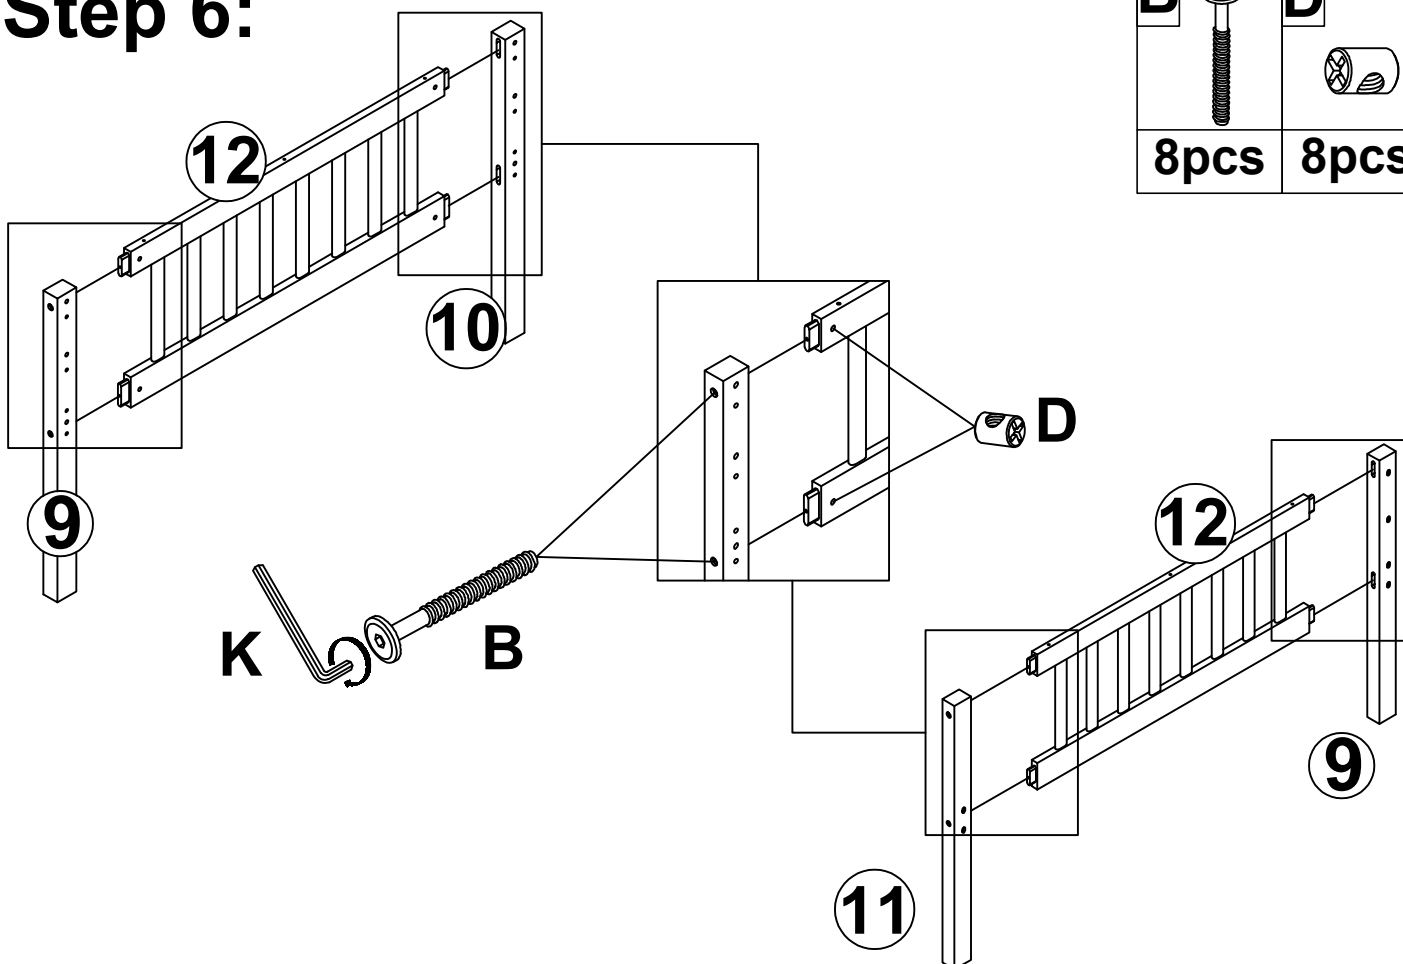Step 6:





B	D
	
8pcs	8pcs

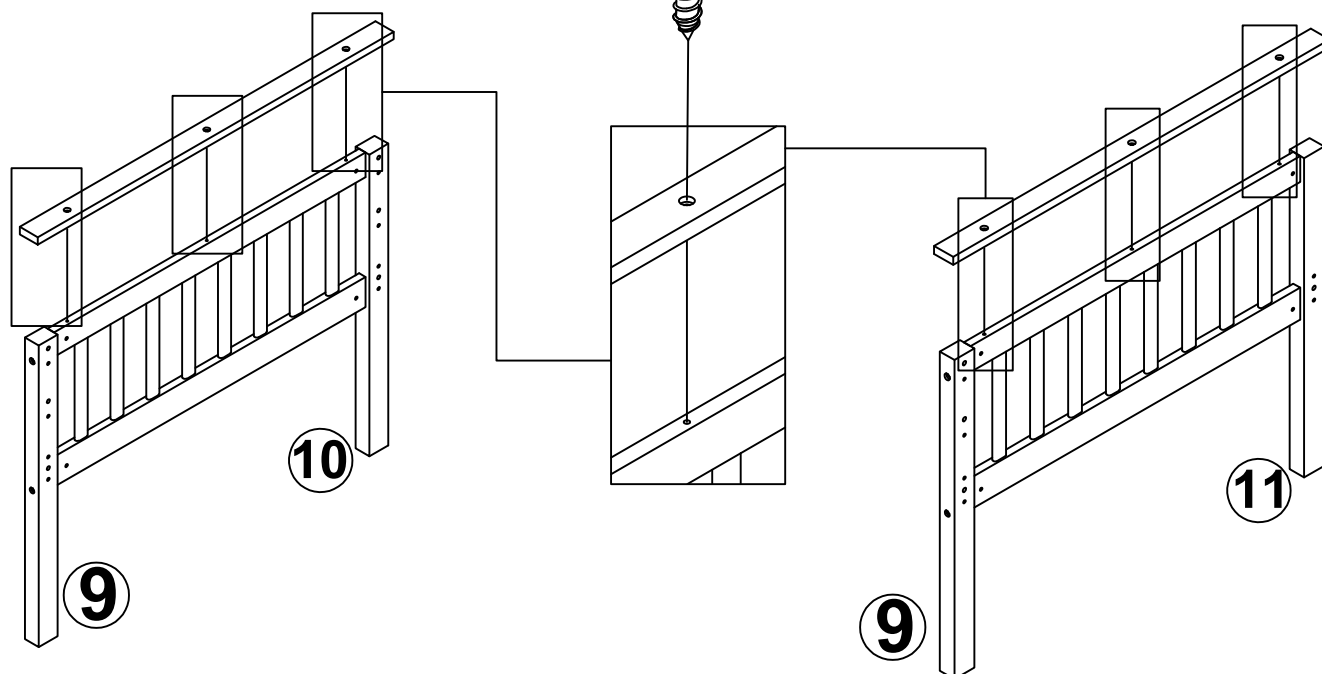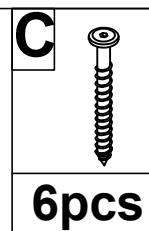Step 7:




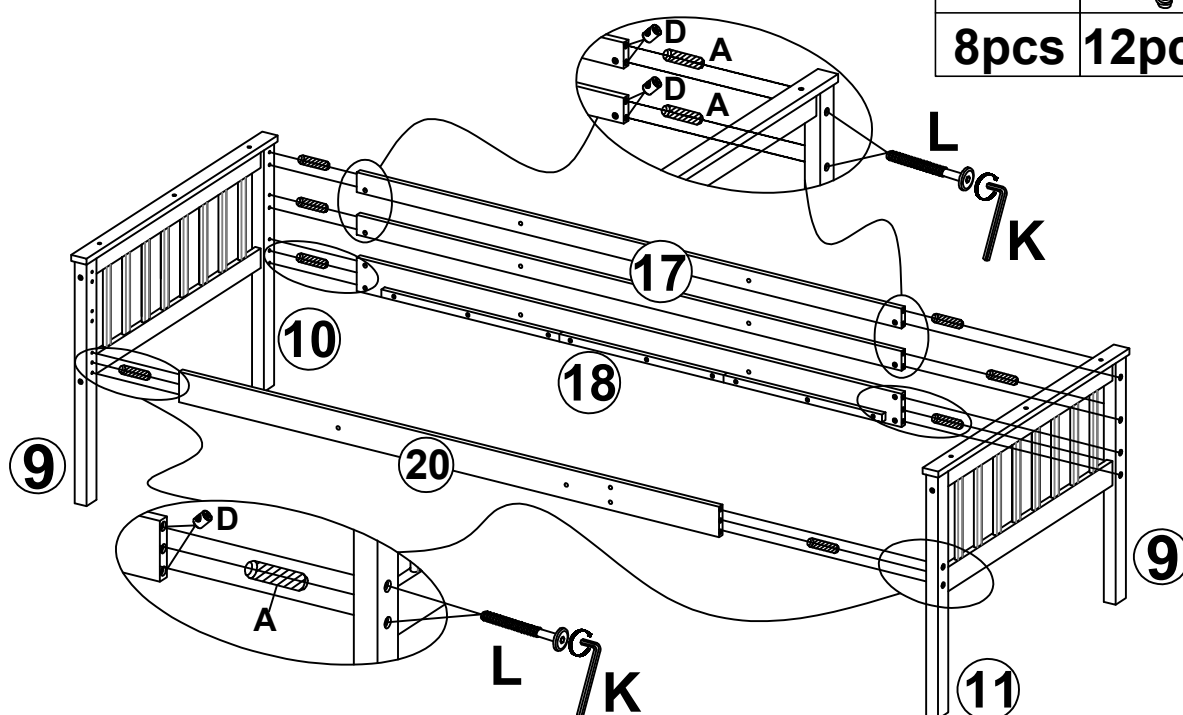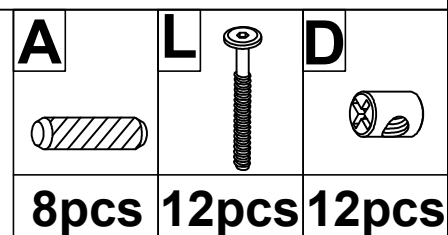
Step 8:




ATTENTION: PLEASE DON'T TIGHTEN ALL BOLTS IN THIS STEP, JUST TIGHTEN 80%


Step 9:

D	A	E
		
2pcs	2pcs	2pcs

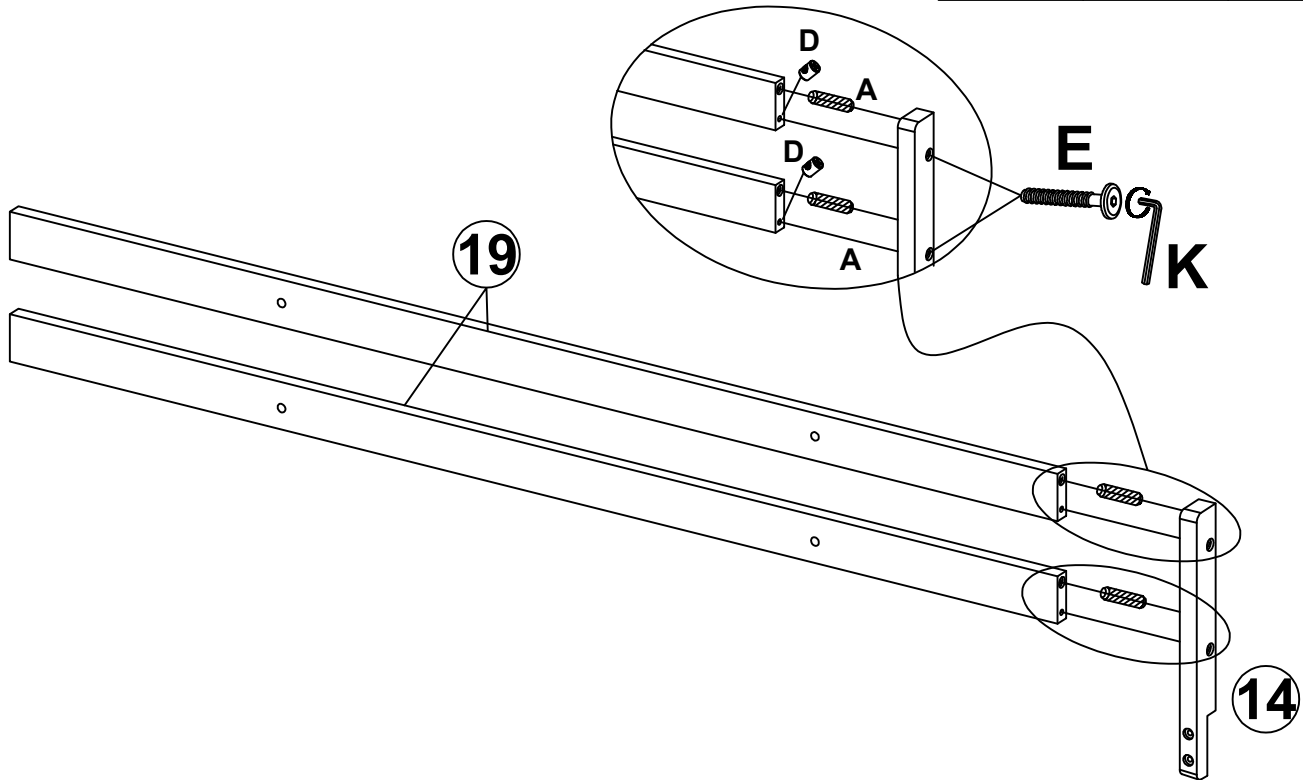


Step 10:

A	L
	
2pcs	2pcs
F	G
	
2pcs	2pcs
D	
	
2pcs	

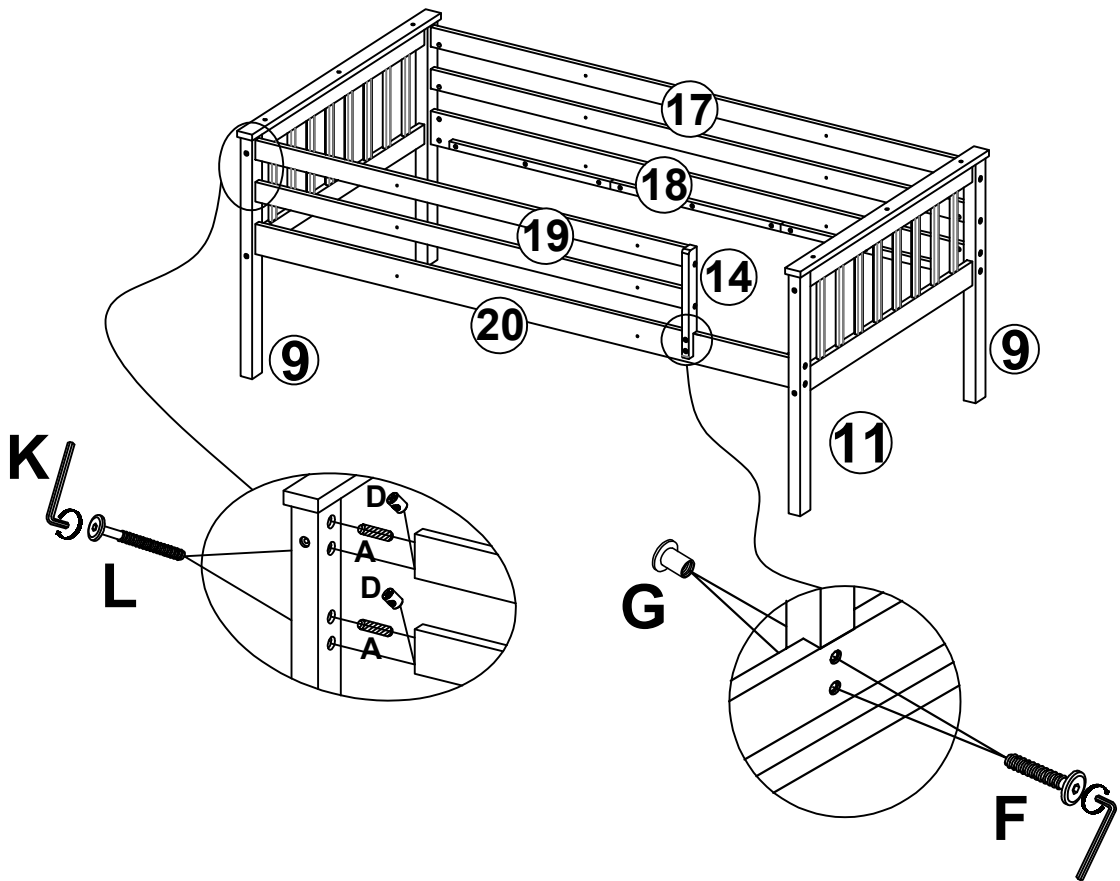



Step 11:

T	
4pcs	

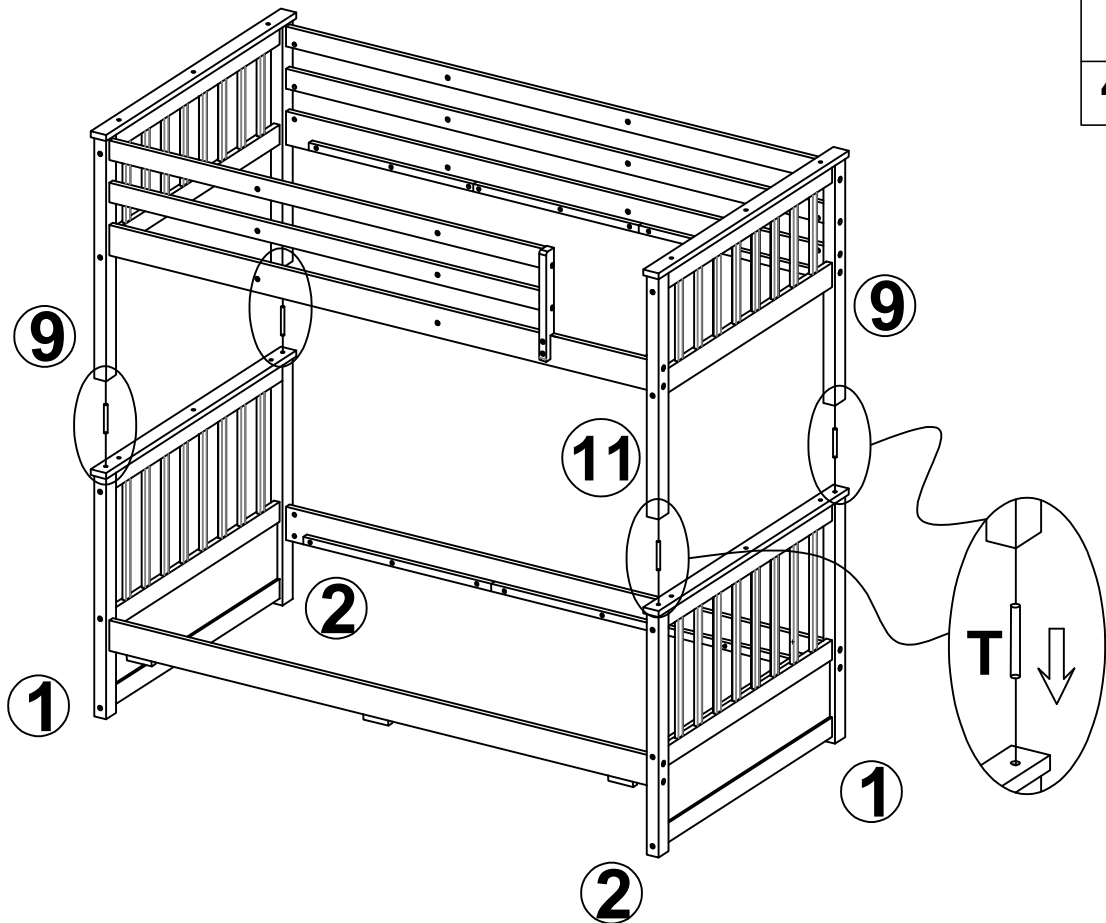



Step 12:

A	C
	
20pcs	10pcs

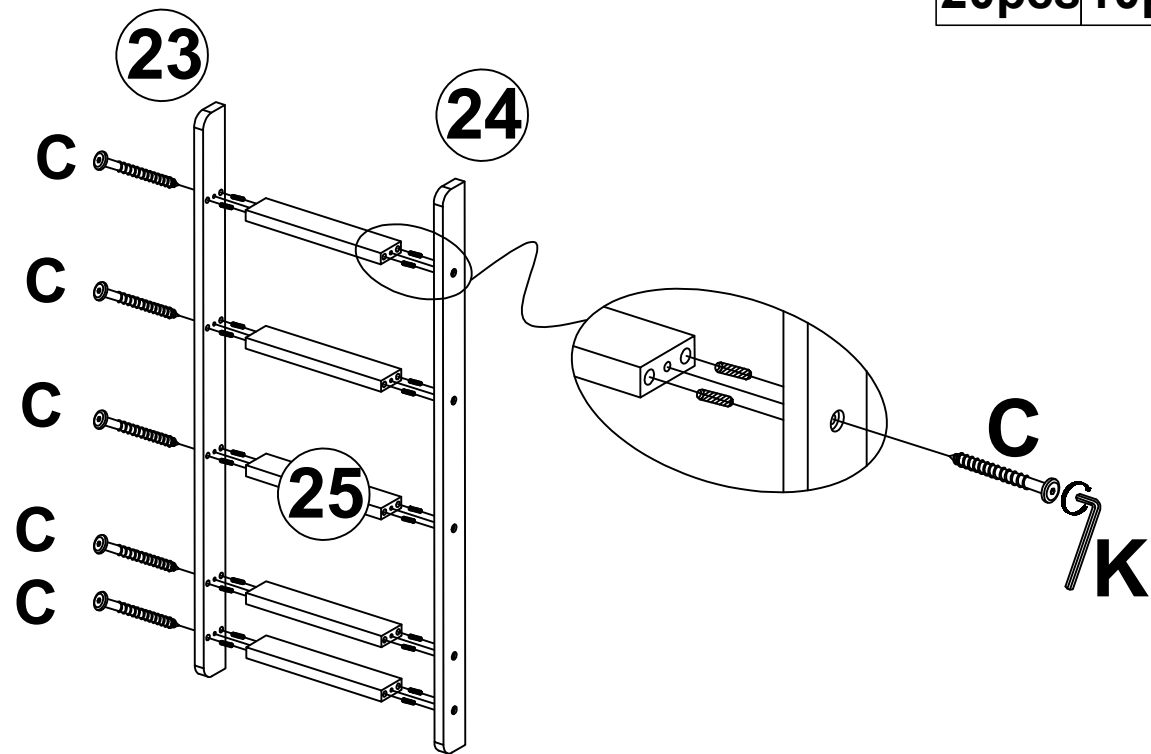


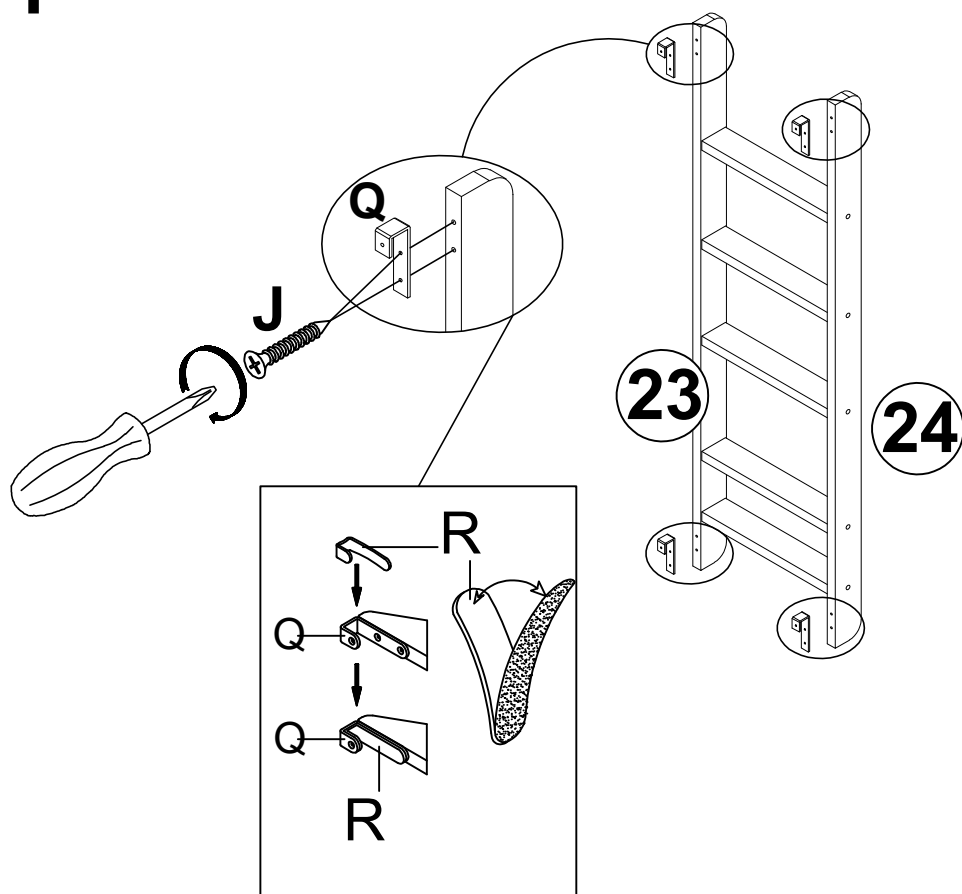Step 13:



Q	J
	
4pcs	8pcs
	R
	
	4pcs

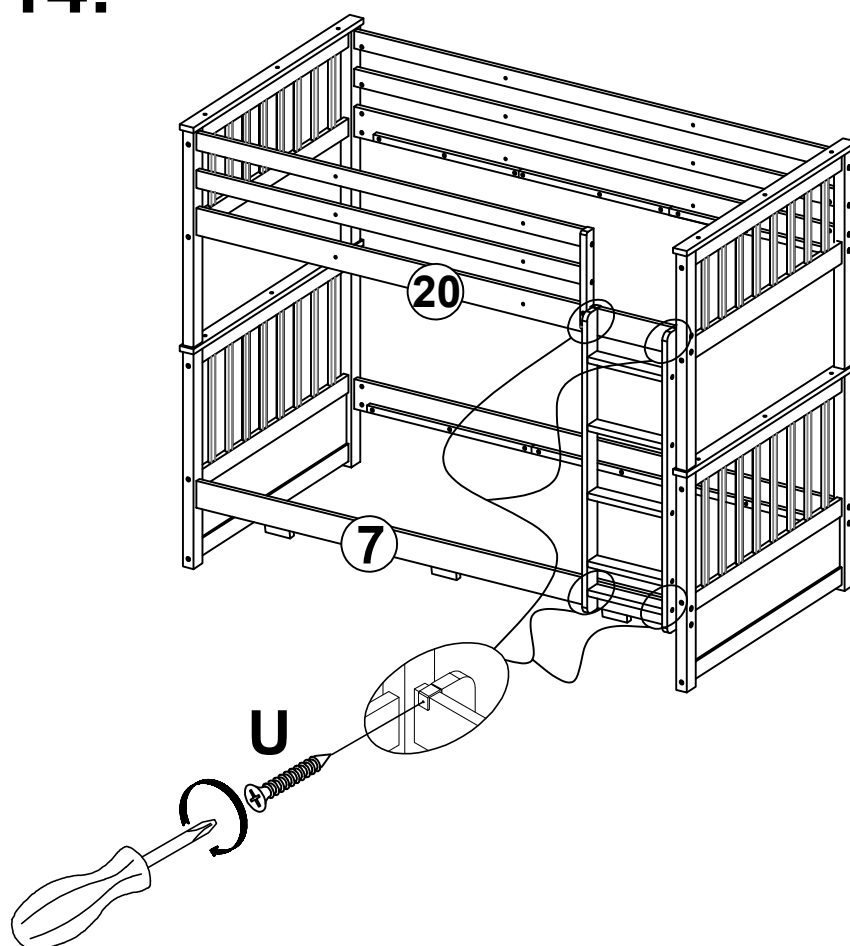Step 14:




J



4pcs

Step 15:

STEP 2: SCREW
ALL SLATS


H 
56pcs

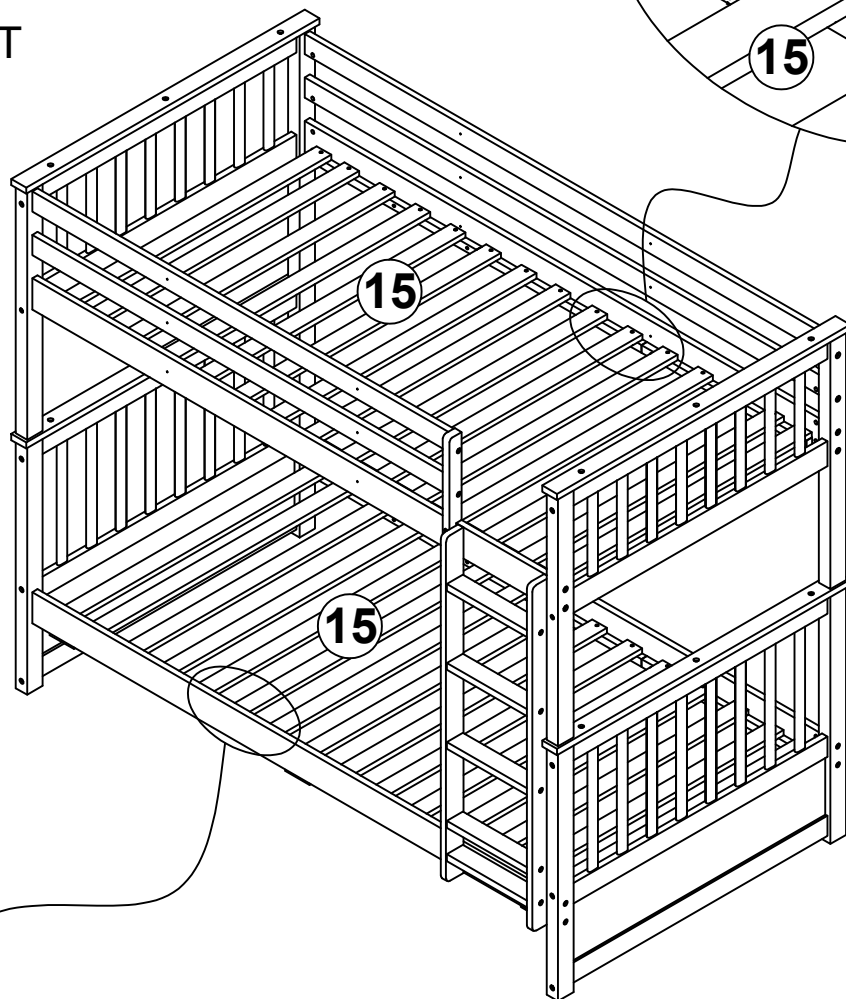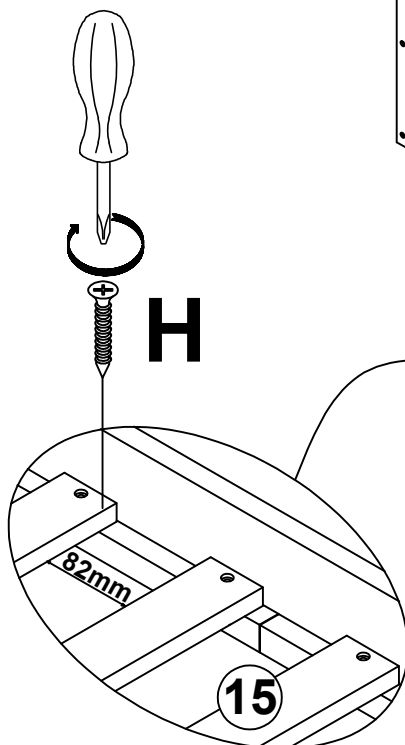STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS




STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

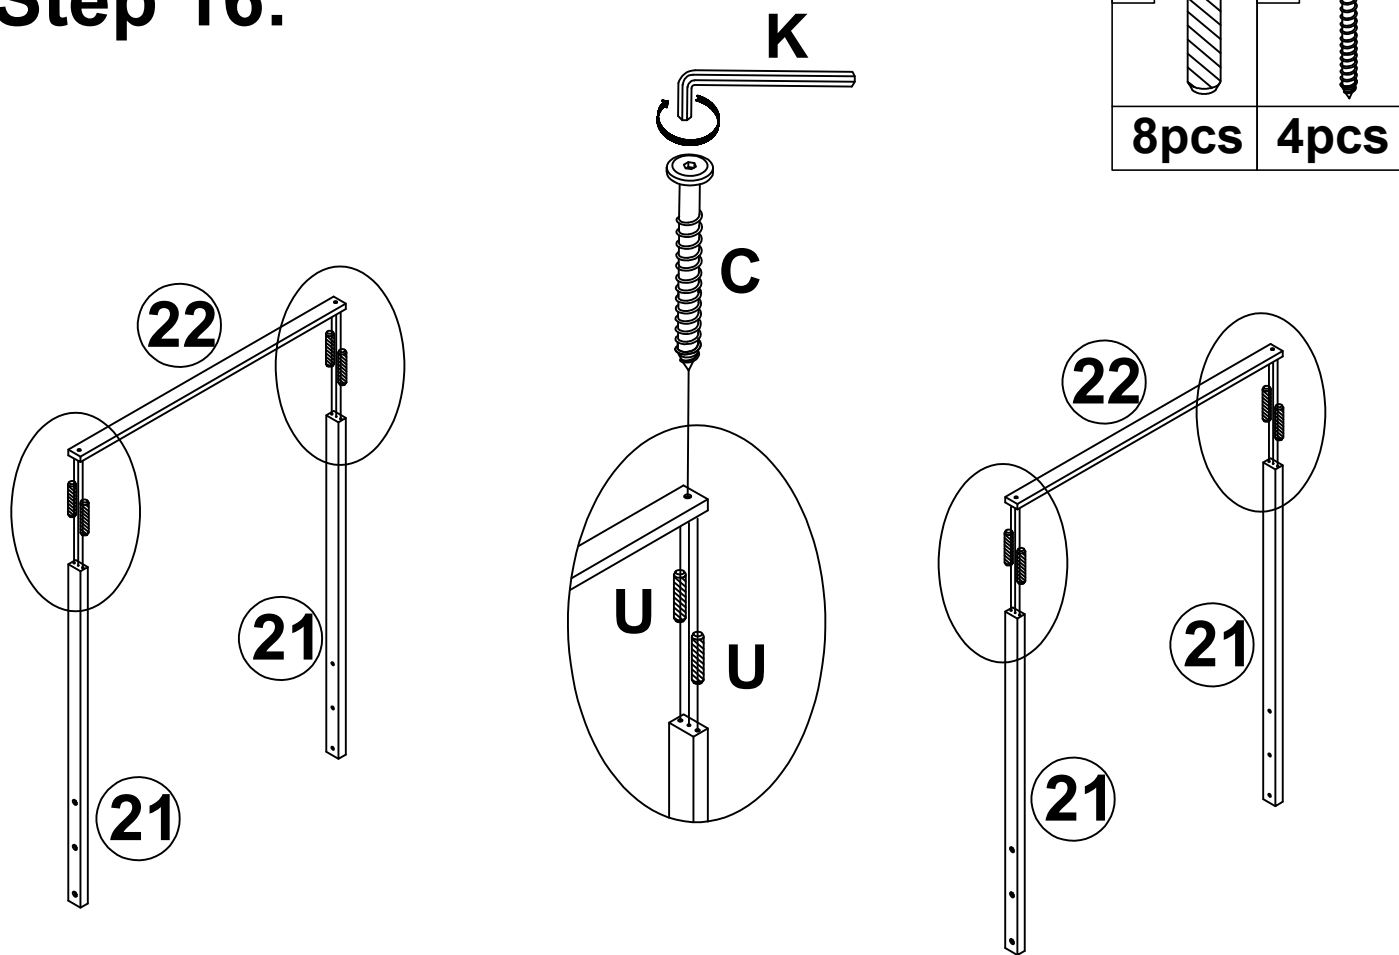
Step 16:



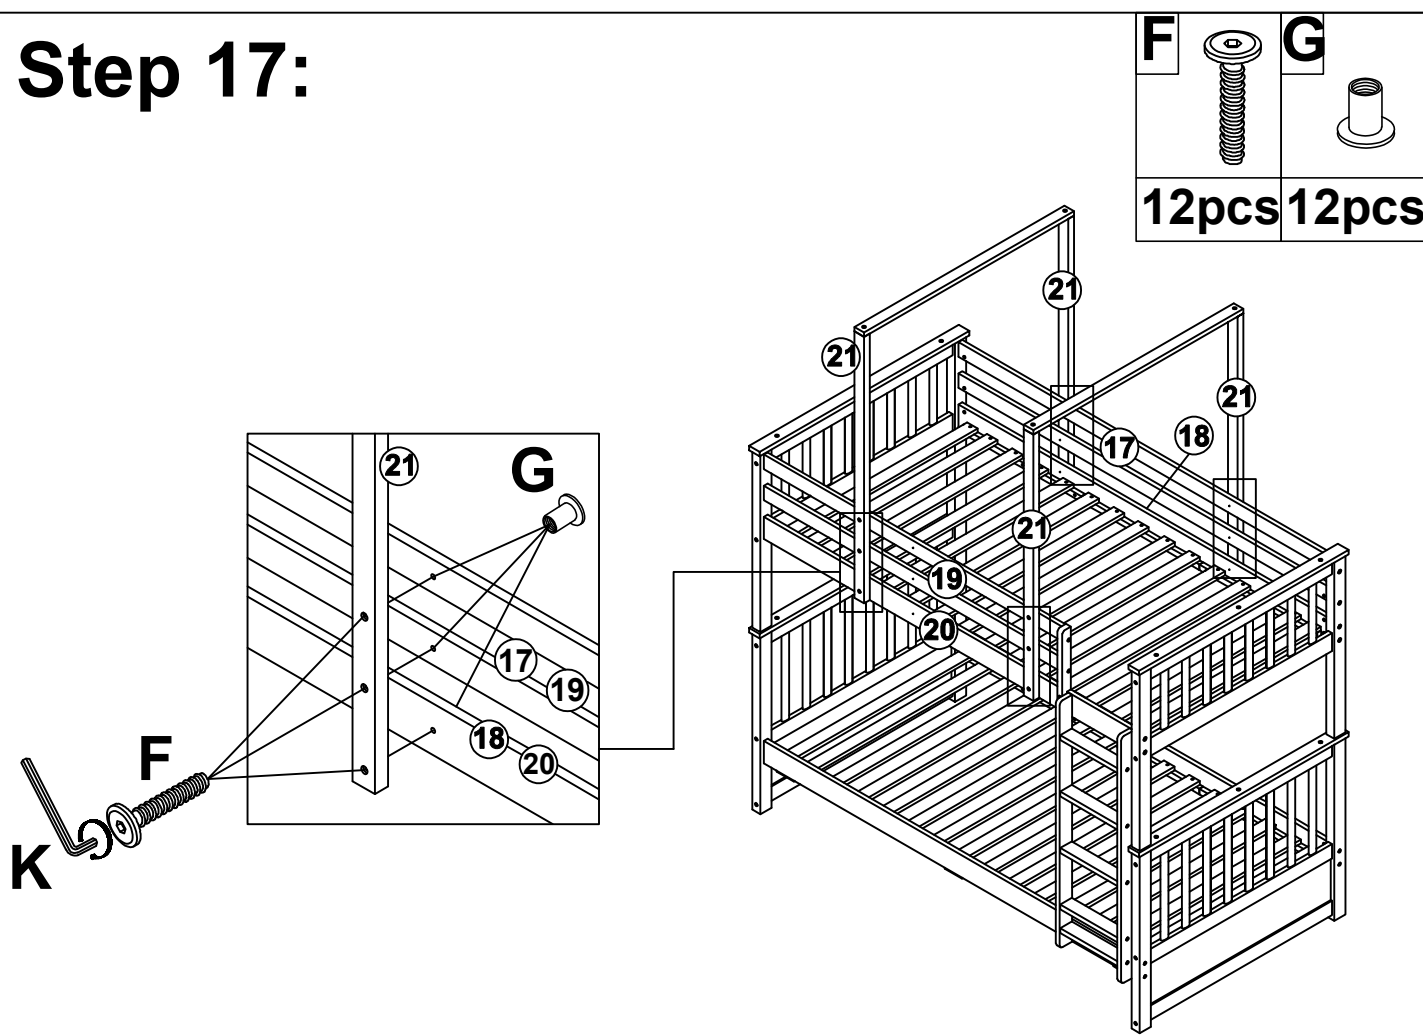Step 17:




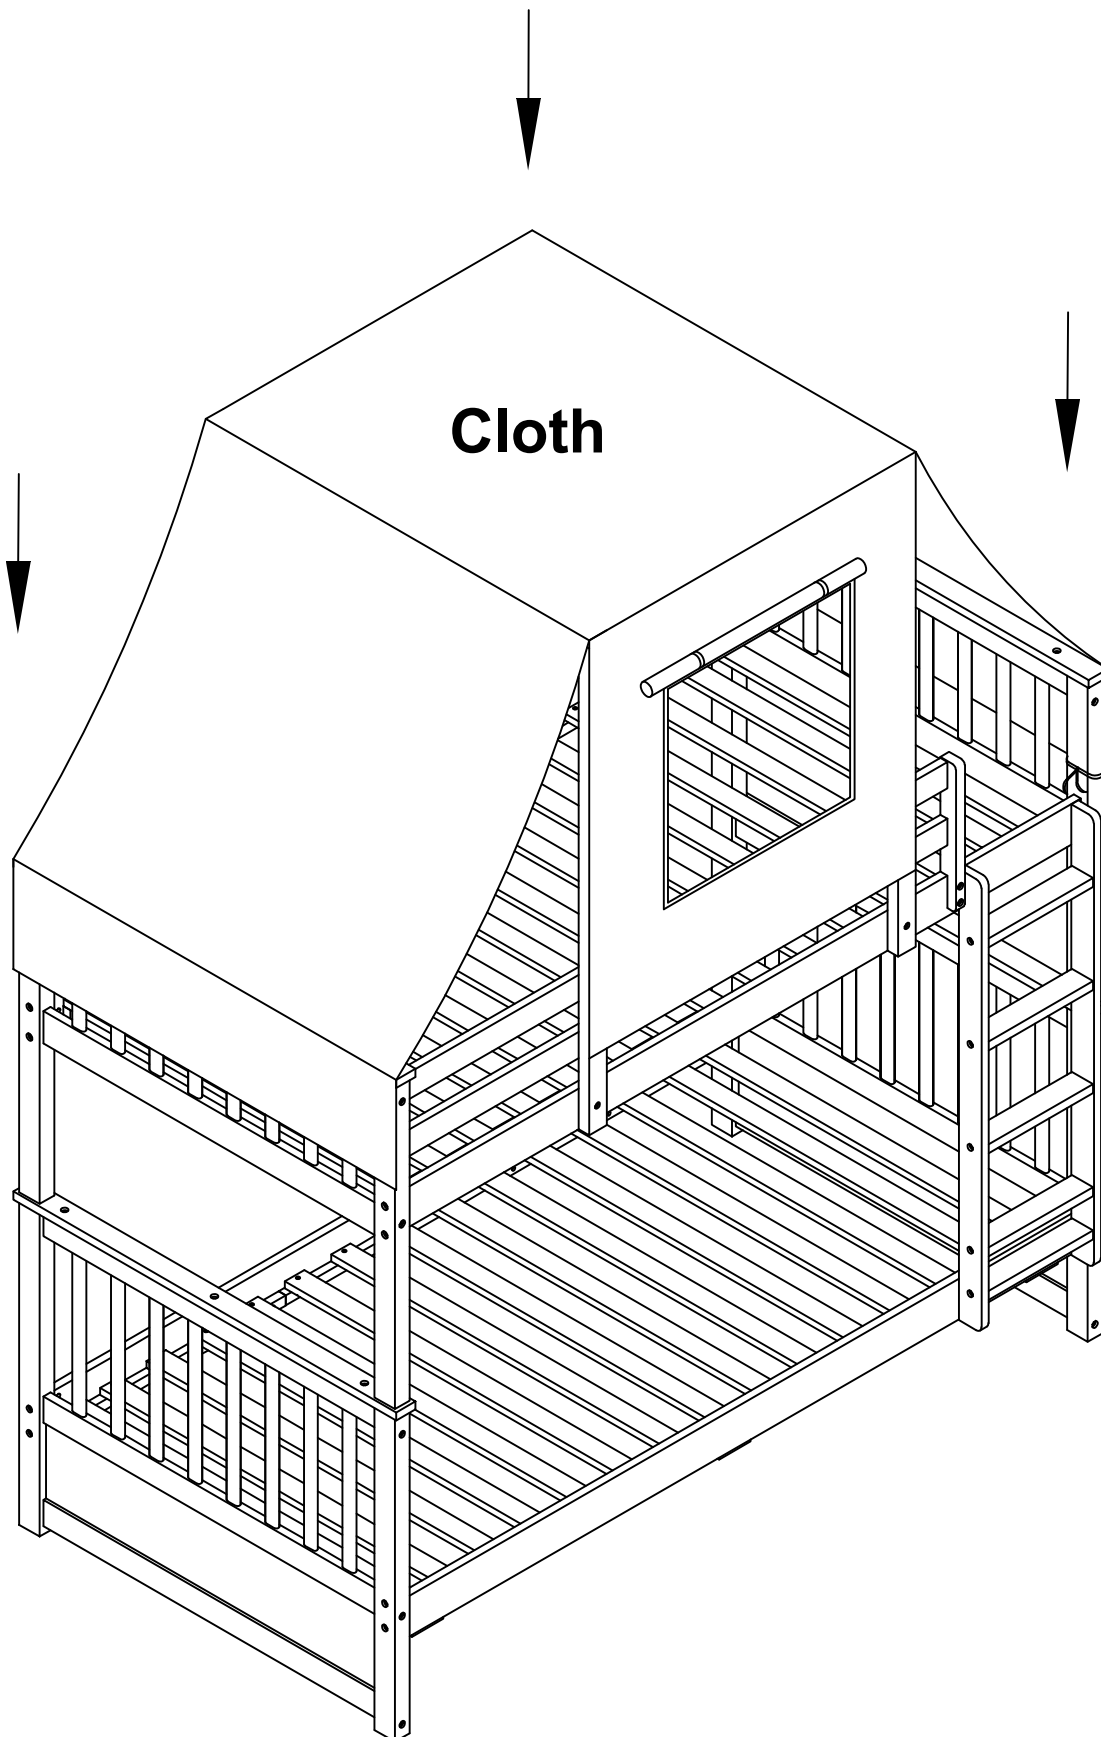Step 18:




**Note: Align both sides of the fabric
before securing with a lanyard**

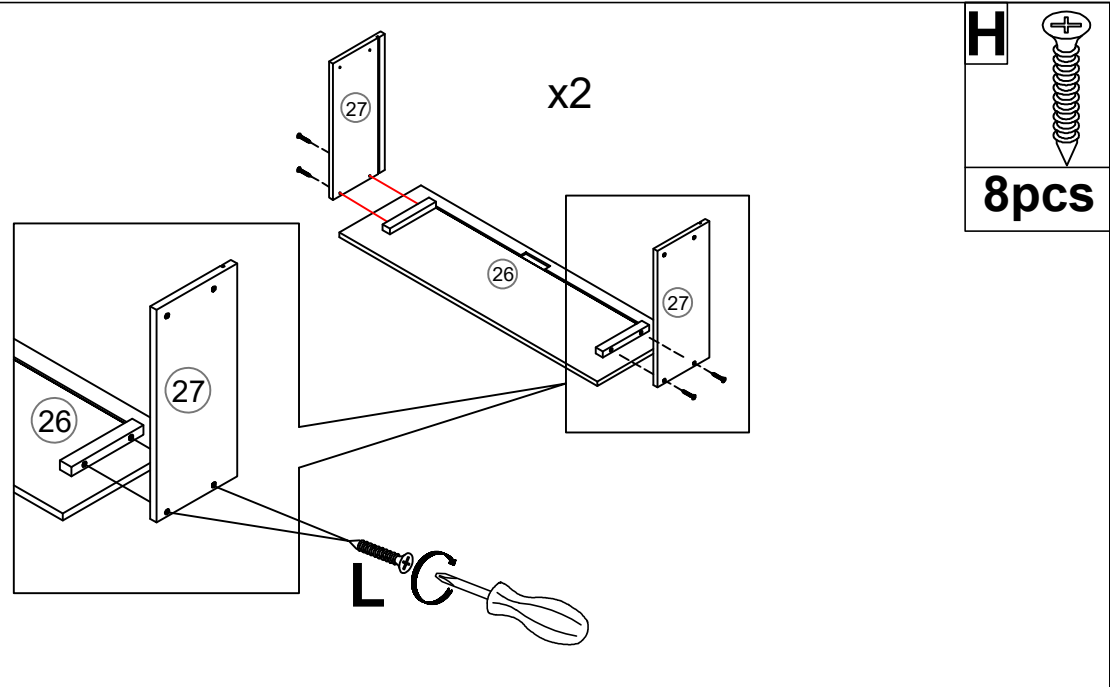
Step 19:



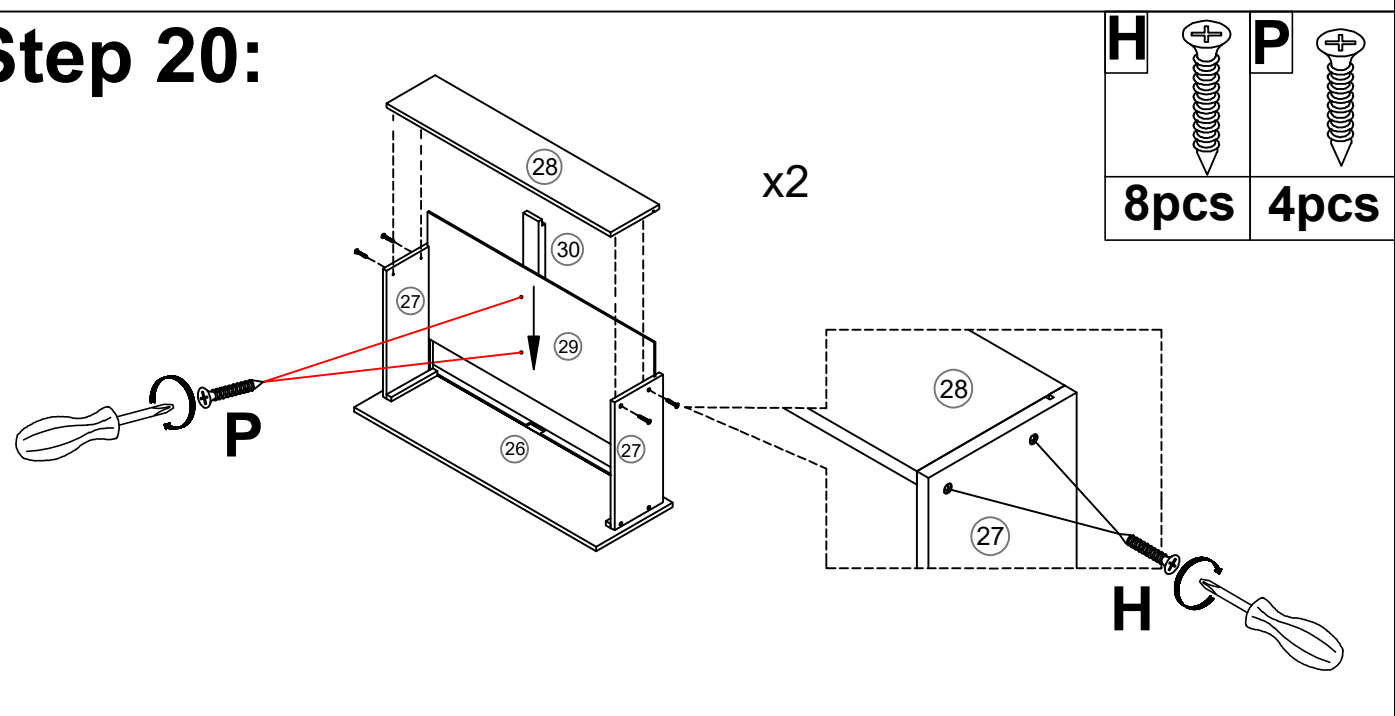
Step 20:



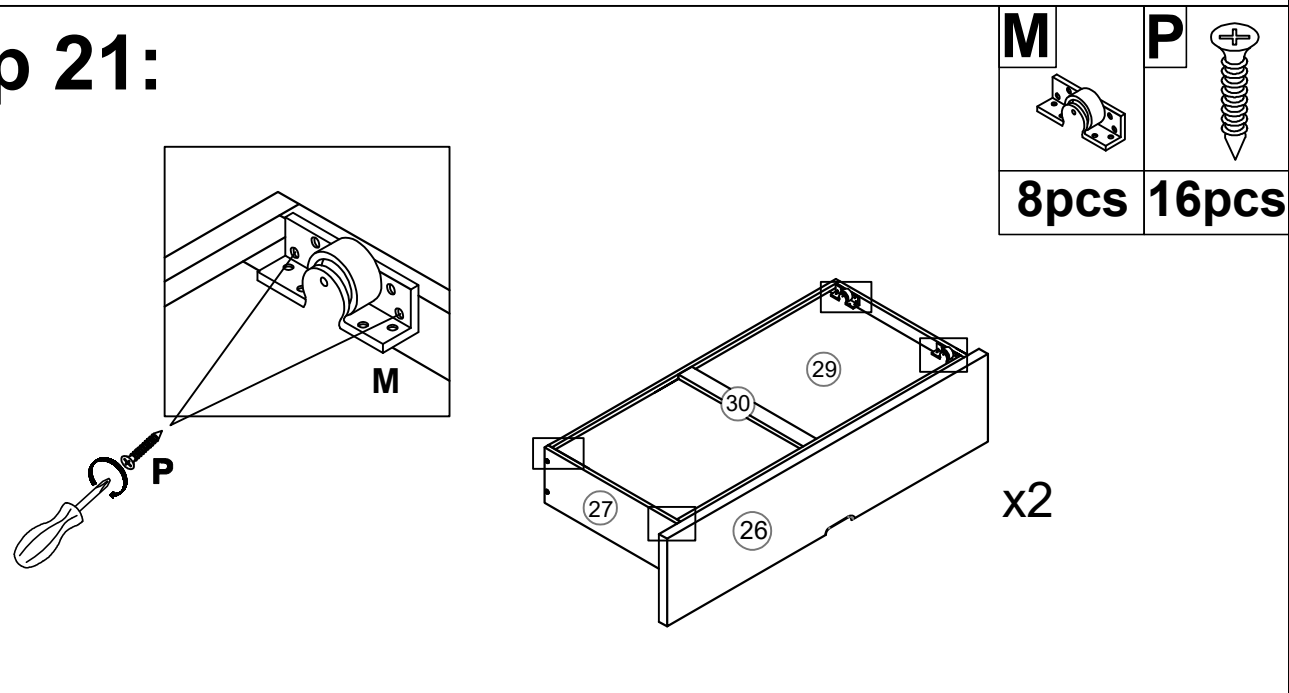Step 21:



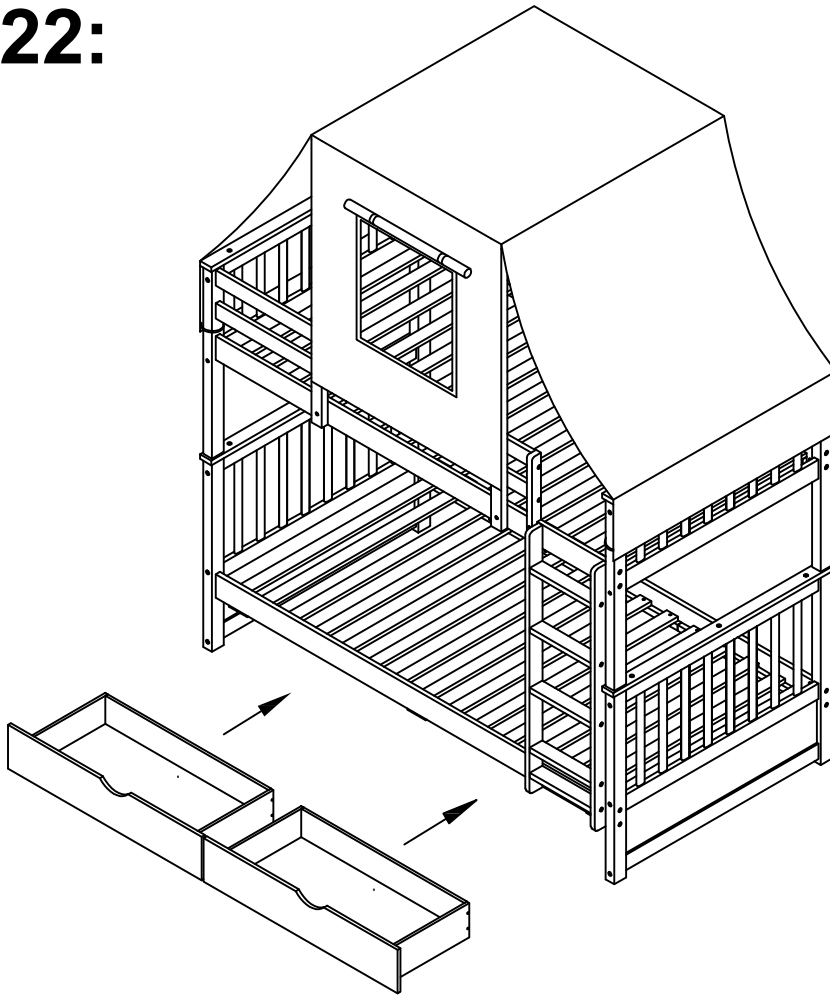Step 22:



COMPLETED

