

VICTORIAN

WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the item for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all of the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:



Plumber's Tape



Basin Wrench*



Thread Sealant*



Adjustable Wrench*



Phillips Screwdriver*



Small Bucket*

REVISED 02/22/2021

CODES: 512856, 512852, 512853, 512850
512854, 512851, 512849, 512848, 512847
512846, 512845, 508423, 508422, 508424
508425, 508426, 338387, 401981

For Warranty information, please visit: signaturehardware.com/services/warranty

VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910


INSTALLATION

1. Ensure that the water supply below your sink is completely shut off by turning the valve all the way to the right.


Tip: Place a small bucket below your workspace to catch any water that may drip during the installation process.

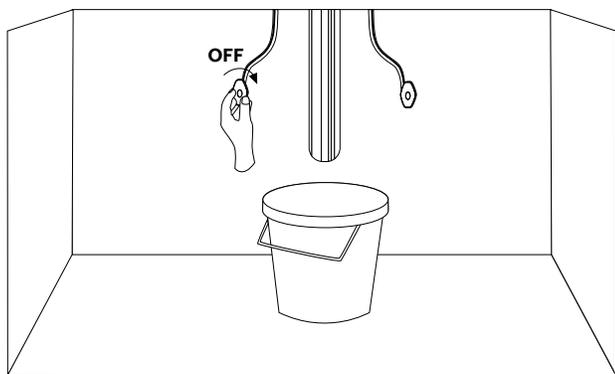

2. Remove the T-connector, lock nut, and metal washer from the spout's threaded shank.

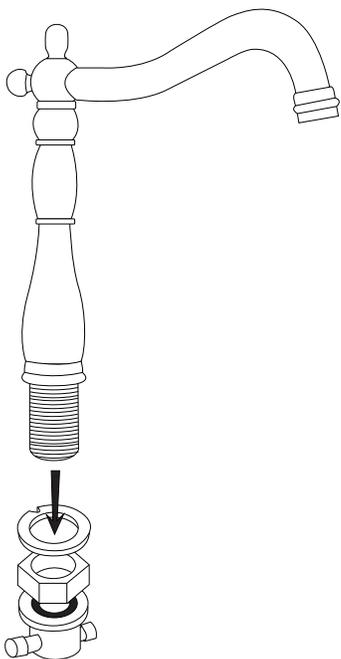


3. Set the spout into the center faucet hole. Position the decorative escutcheon so that the hole for the drain's lift rod is in the back.

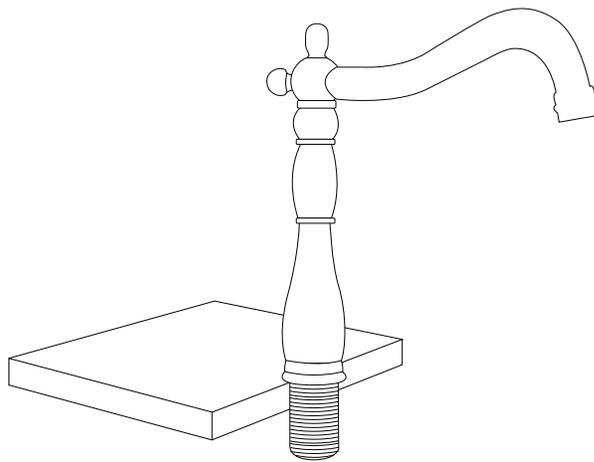

4. From beneath the countertop, slide the metal washer back onto the threaded shank. Hand tighten the lock nut, then finish tightening using an adjustable wrench.

Important: The opening on the metal washer should line up with the hole in the escutcheon reserved for the lift rod, to allow the lift rod to pass through.

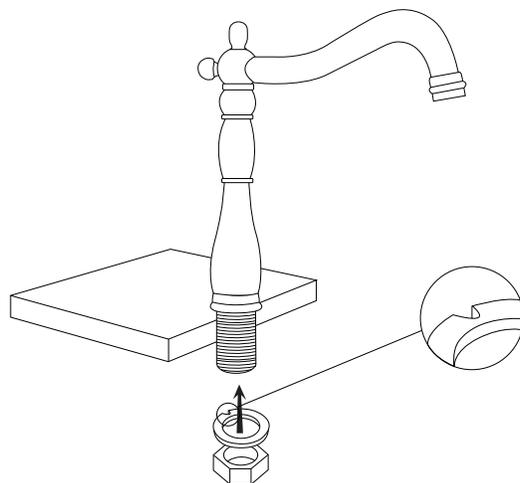


VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910


5. Reattach the T-connector to the end of the threaded shank by hand tightening. Apply plumber's tape or thread sealant to the threads before tightening. Ensure that the inlets of the T-connector are pointing left and right.

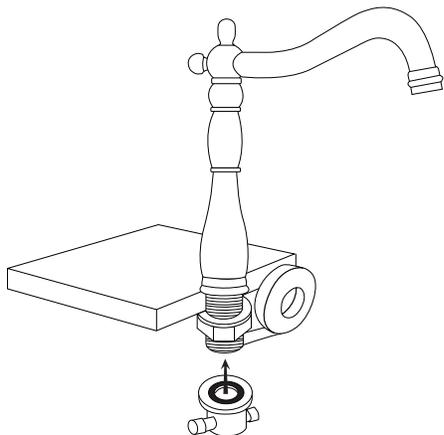


6. The faucet's valve stems are labeled by colored plastic washers - blue for 'cold' and red for 'hot.' On the 'cold' valve stem, loosen the lock nut to its furthest point at the bottom of the stem.

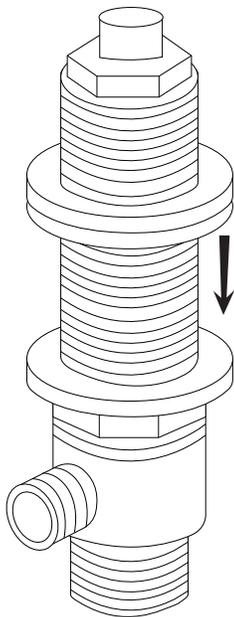

7. From under the countertop, insert the valve stem into the right-side faucet hole. From above the countertop, slide one of two decorative escutcheons onto the stem. Then, attach one of the two bell flanges to the stem by hand tightening until secure.

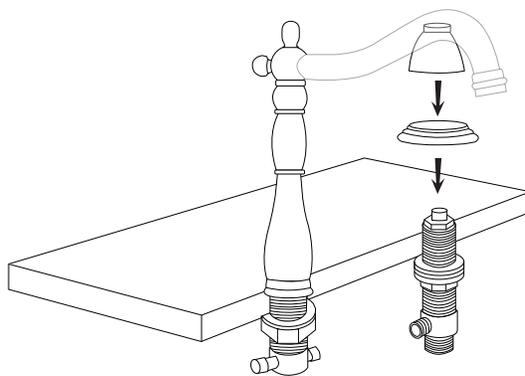

8. From beneath the sink, position the stem so that the outlet on the side of the stem is pointing inward, towards the T-connector. While holding in place, hand tighten the lock nut. Finish tightening using a basin wrench.

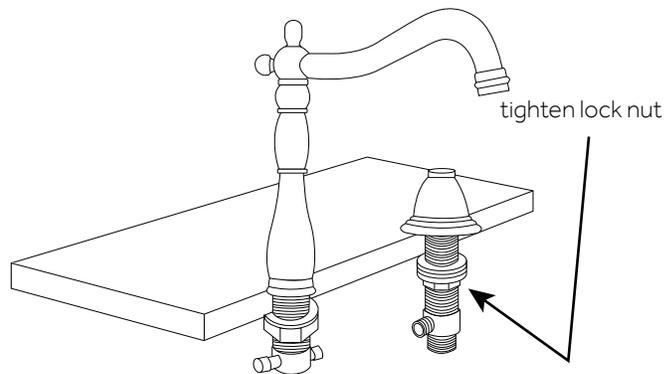


VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910


9. Repeat steps 6-8 for installing the 'hot' valve stem into the left-side faucet hole.

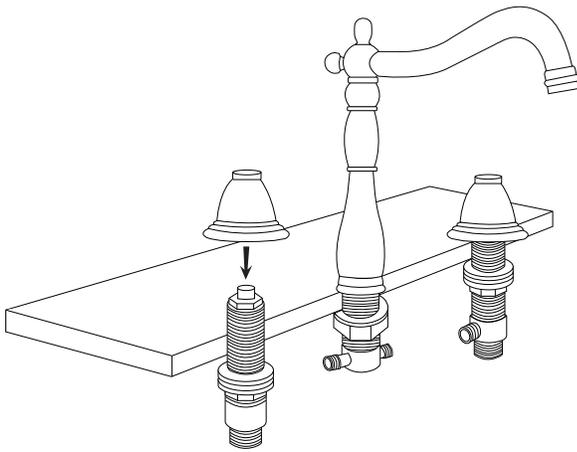


10. Use the provided water line to connect the hot and cold valve stems to the spout's T-connector. Use an adjustable wrench to tighten, but be careful not to overtighten. Apply thread sealant or plumber's tape to each threaded connection before attaching.

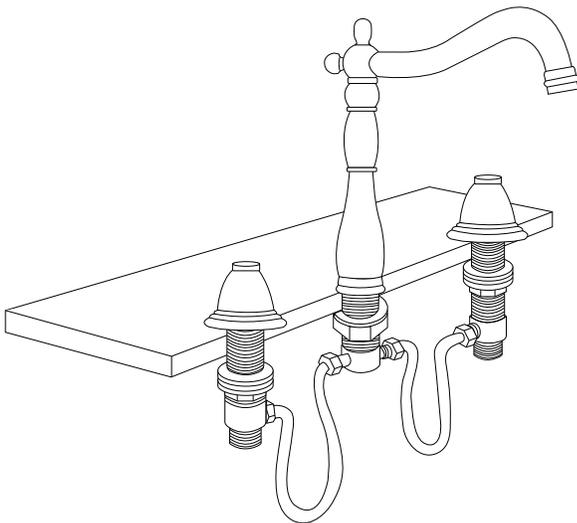

11. Attach the main water lines to the proper inlet on the bottom of each valve stem. Use an adjustable wrench to tighten, but be careful not to overtighten. Apply thread sealant or plumber's tape to each threaded connection. Ensure that you are connecting the hot and cold lines appropriately.

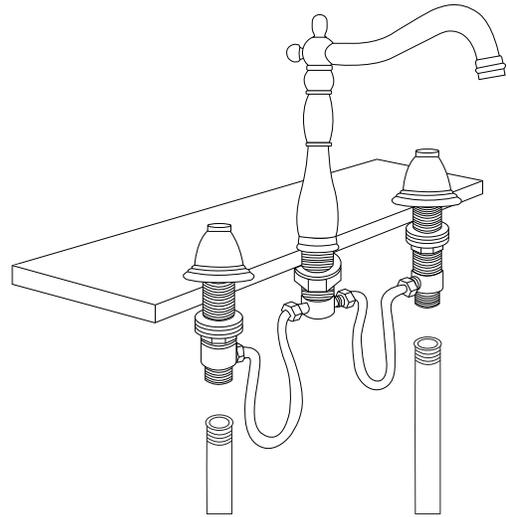

12. To complete the installation, install the faucet handles using a Philip's screwdriver.

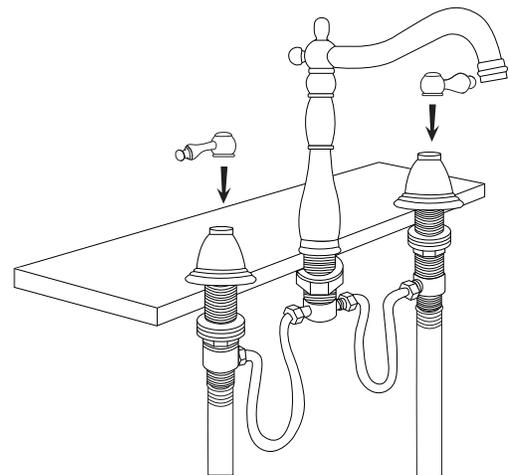

VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910

13. Once installation is complete, turn the main water supply back on from below your sink. Check for any leaks underneath.




14. Remove the aerator from the spout and turn the faucet on for approximately 60 seconds to allow any dust or loose sediment to exit the water lines. Check for any leaks. Test both hot and cold water to ensure they are running properly. Once testing is complete, reattach the aerator.

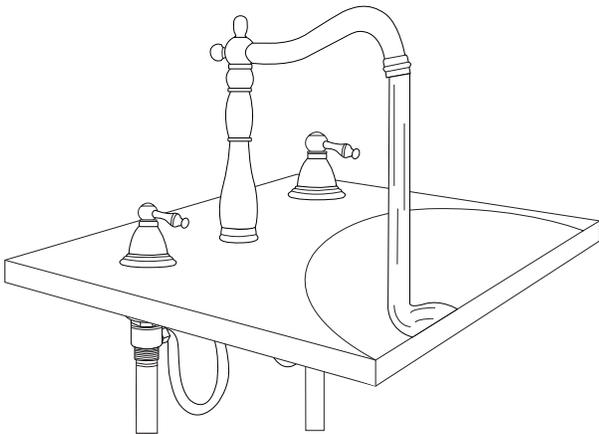


DRAIN INSTALLATION

1. Remove the flange by unthreading it from the drain body. Remove the flat rubber gasket as well.

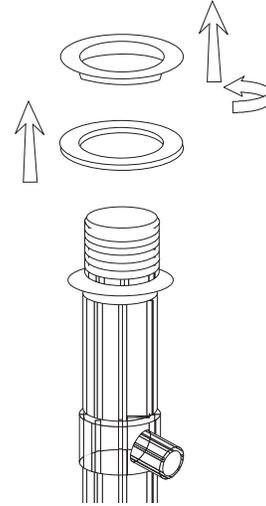

2. Set the flat rubber gasket over the drain hole in your sink, then insert the flange into the drain hole.

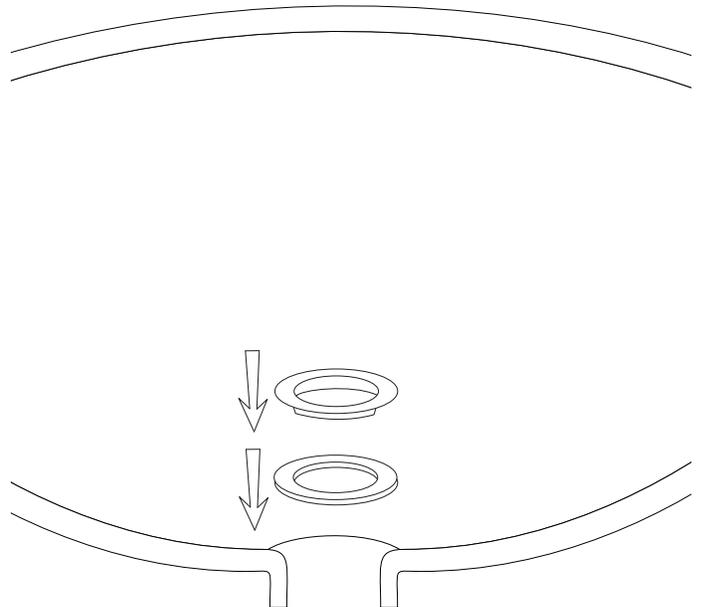


VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910


3. From beneath the sink, reattach the flange by threading it back onto the drain body.

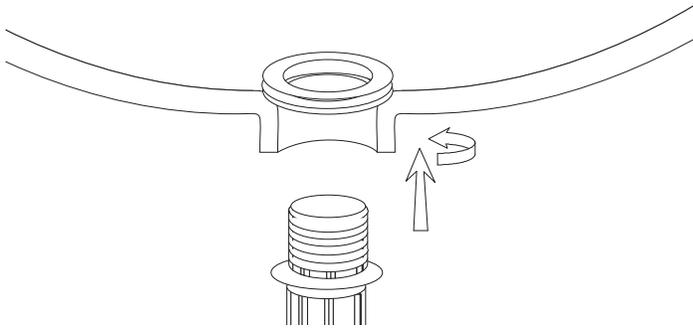

4. Connect the drain lever by threading it into the hole on the side of the drain body. The lever must pass through the hole in the stopper tailpiece to function properly. Apply a bit of thread sealant or plumber's tape to the threads before attaching.

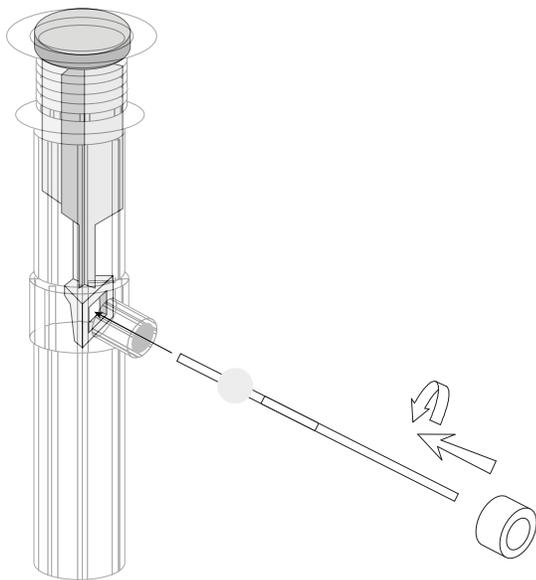

5. Position the drain so that the lever is facing the back of the fixture, in line with the faucet's lift rod. While holding in place, hand tighten the lock nut until secure then finish tightening with a basin wrench. Be careful not to overtighten, which can crack a fragile sink.

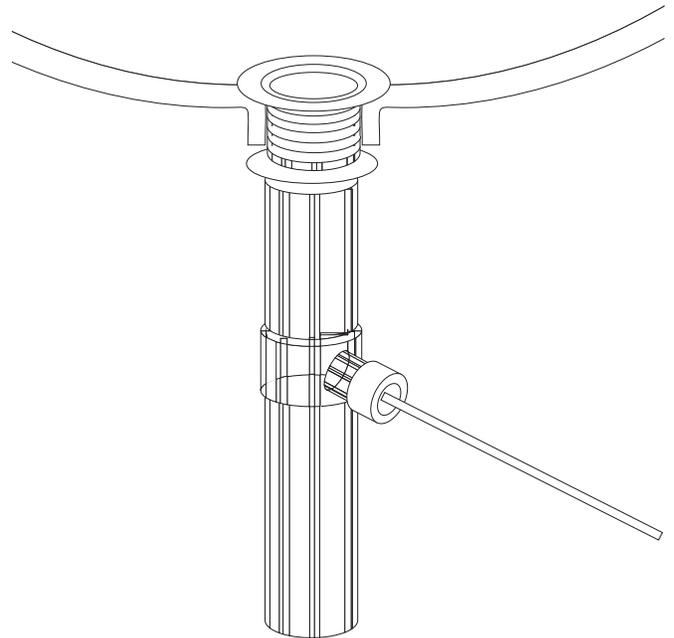


VICTORIAN


WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910


6. If not already installed, insert the faucet's lift rod into its designated hole on the back of the faucet.

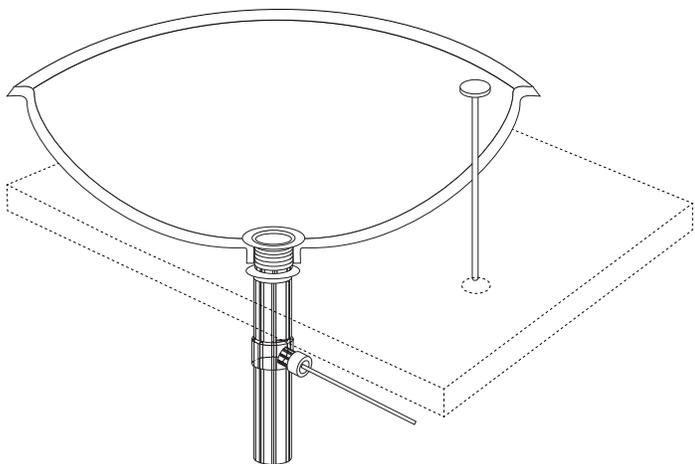

7. Use the link to attach the faucet's lift rod to the drain lever. Pinch the metal clip located on the drain lever to remove. Slide one end of the clip back onto the lever, followed by the link, then the second end of the clip to secure.

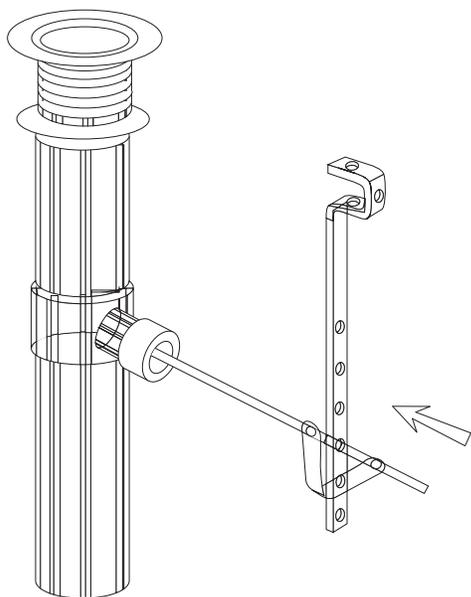

8. Attach the lift rod to the top of the link and secure it by tightening the thumb screw.


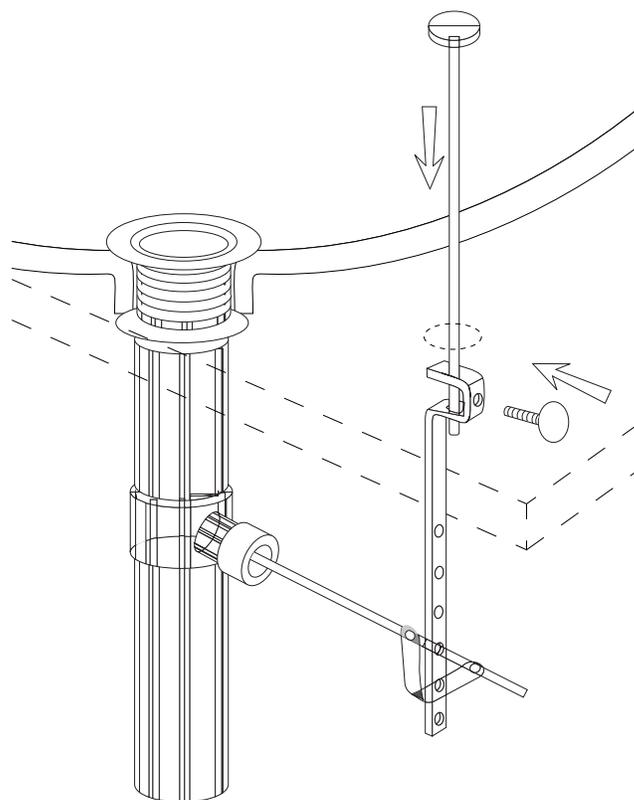


VICTORIAN

WIDESPREAD BATHROOM FAUCET

SKU: 900889, 900890, 900907, 903778, 918910

9. Make any final adjustments to the positioning of the link and drain lever as needed. Adjust until the drain fully opens and closes.

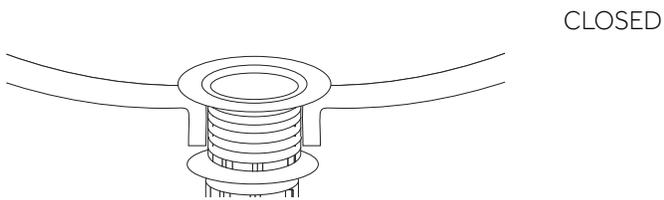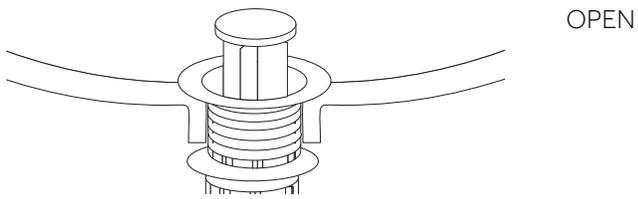

10. Fill your sink to check for any leaks and to ensure that the drain is functioning properly.

