



ASSEMBLY INSTRUCTION

UPHOLSTERED PLATFORM BED - QUEEN SIZE

















- IMPORTANT NOTE *
- PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE
 - * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO PREVENT SCRATHES.
 - * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

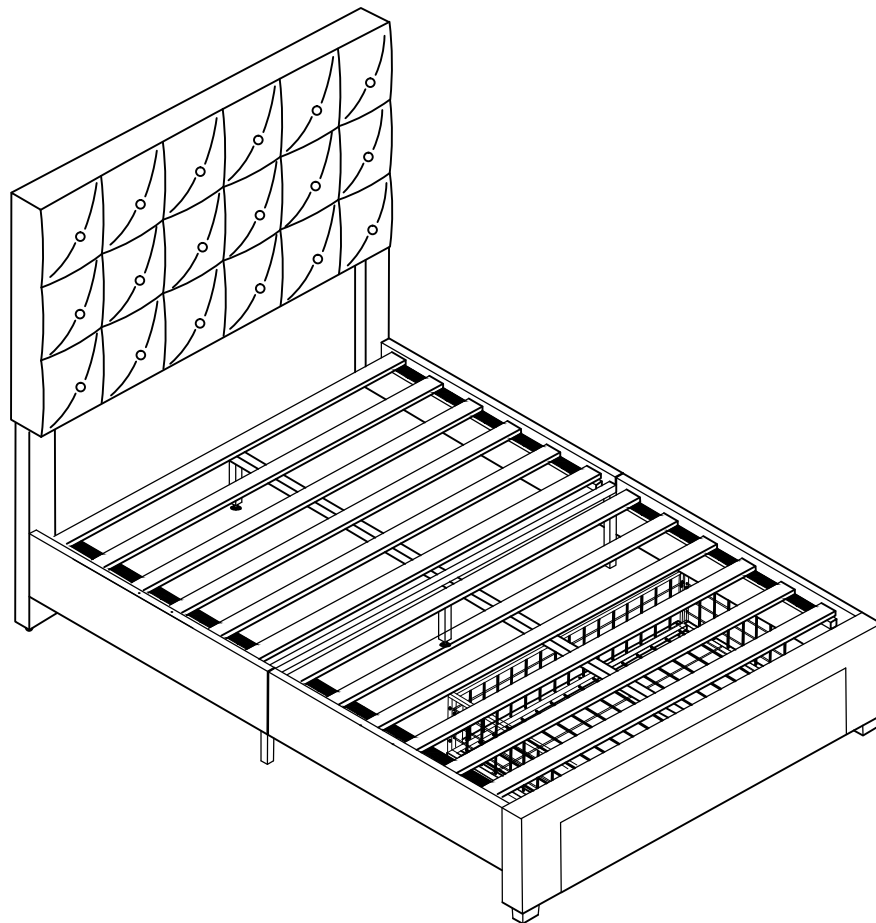






Parts


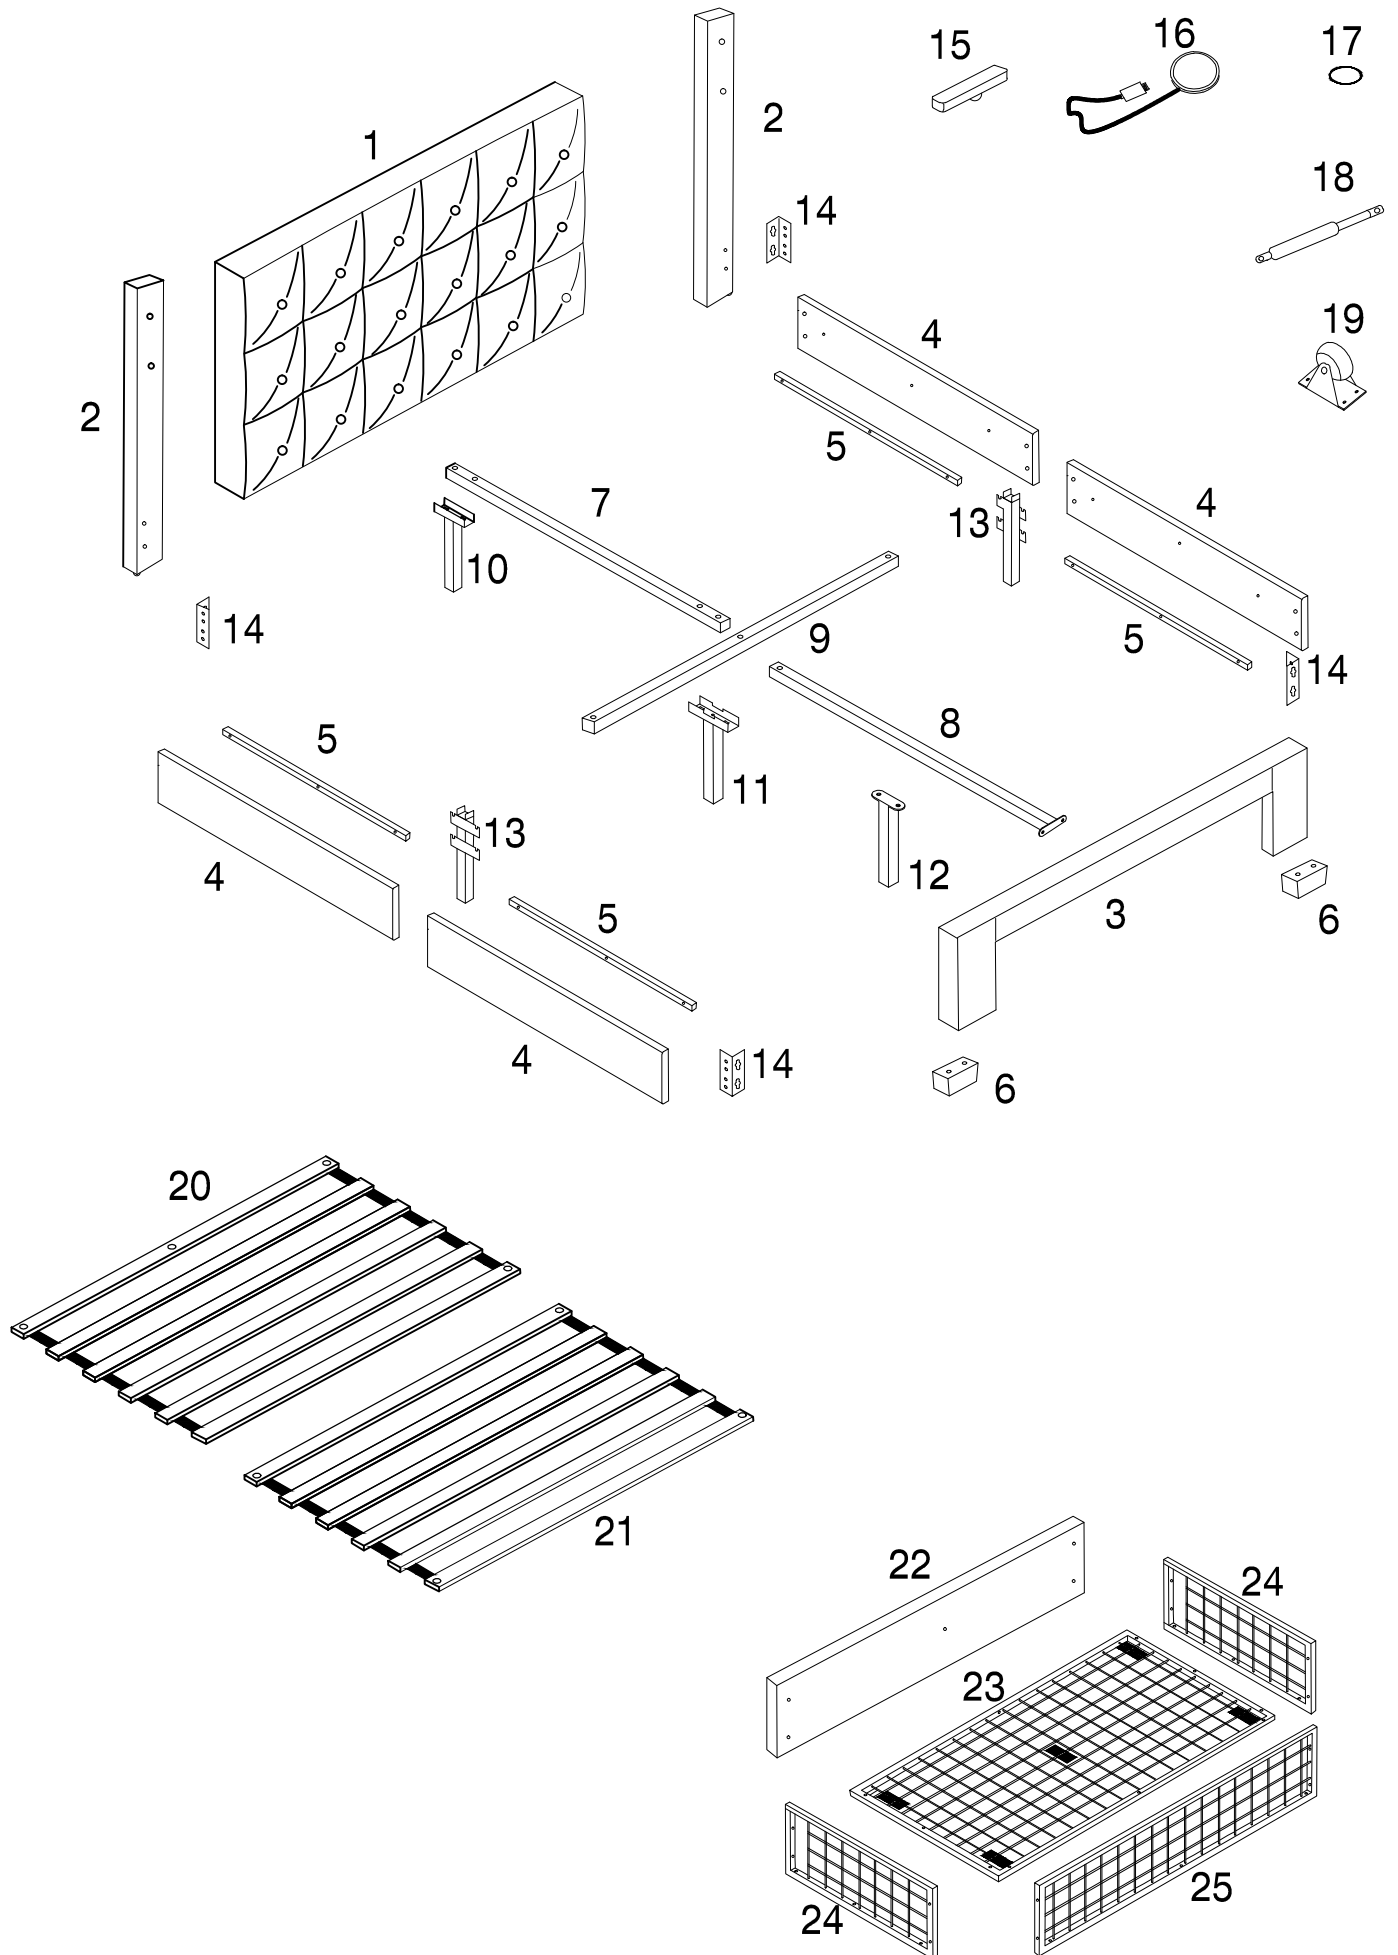


Parts

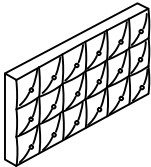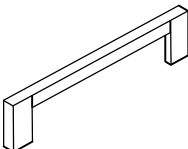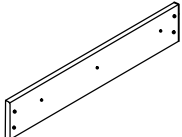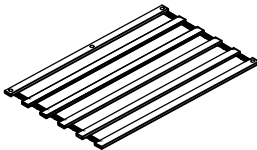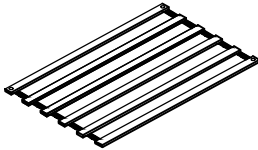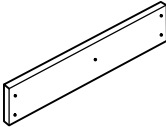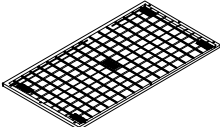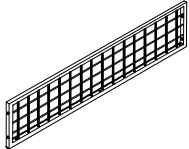
 1. headboard x1	 2. headboard wooden x2	 3. footboard x1
 4. side rails x4	 5. side rails wooden x4	 6. feet x2
 7. metal support bar x1	 8. metal support bar i x1	 9. metal support cross bar x1
 10. support leg x1	 11. support leg i x1	 12. support leg ii x1
 13. side rails metal connector x2	 14. connection plate x4	 15. led light x2
 16. wireless charger x2	 17. double sided tape x2	 18. gas strut x2
 19. Wheel x5	 20. slats x1	 21. slats i x1
 22. drawer front panel x1	 23. drawer bottom panel x1	 24. drawer side panel x2
 25. drawer back panel x1		

Fittings

Code	Description		Qty
A	Bolt (M8x20mm)		x18
B	Bolt (M8x30mm)		x10
C	Bolt (M8x40mm)		x5
D	Bolt (M8x55mm)		x6
E	Bolt (M6x40mm)		x12
F	Screw (M4x30mm)		x8
G	Screw (M4x50mm)		x4
H	Flat Washer 22mm		x4
I	Nut M8		x4

Code	Description		Qty
J	Support feet		x3
K	Bolt (M4x16mm)		x10
L	Bolt (M5x20mm)		x18
M	Nut M4		x10
N	Spanner M7		x1
O	Spanner M14		x1
P	Allen Key M4		x1
Q	Allen Key M5		x1

Additional Tools Required




Assembly requires two persons.




1.5 HOUR

Approximate time to assemble this product


1 fix headbard wooden (2) to the headboard (1).

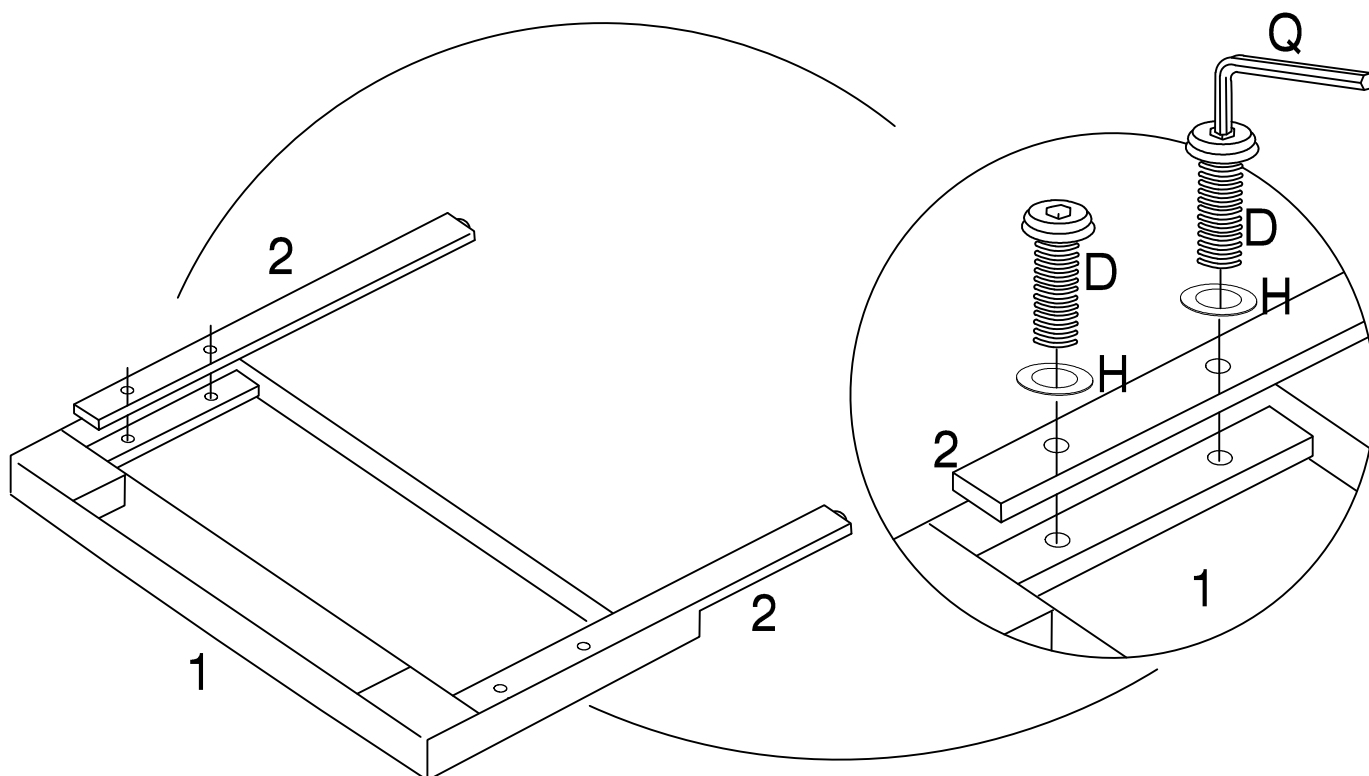


2 fix footboard feet (6) to the footboard (3) .

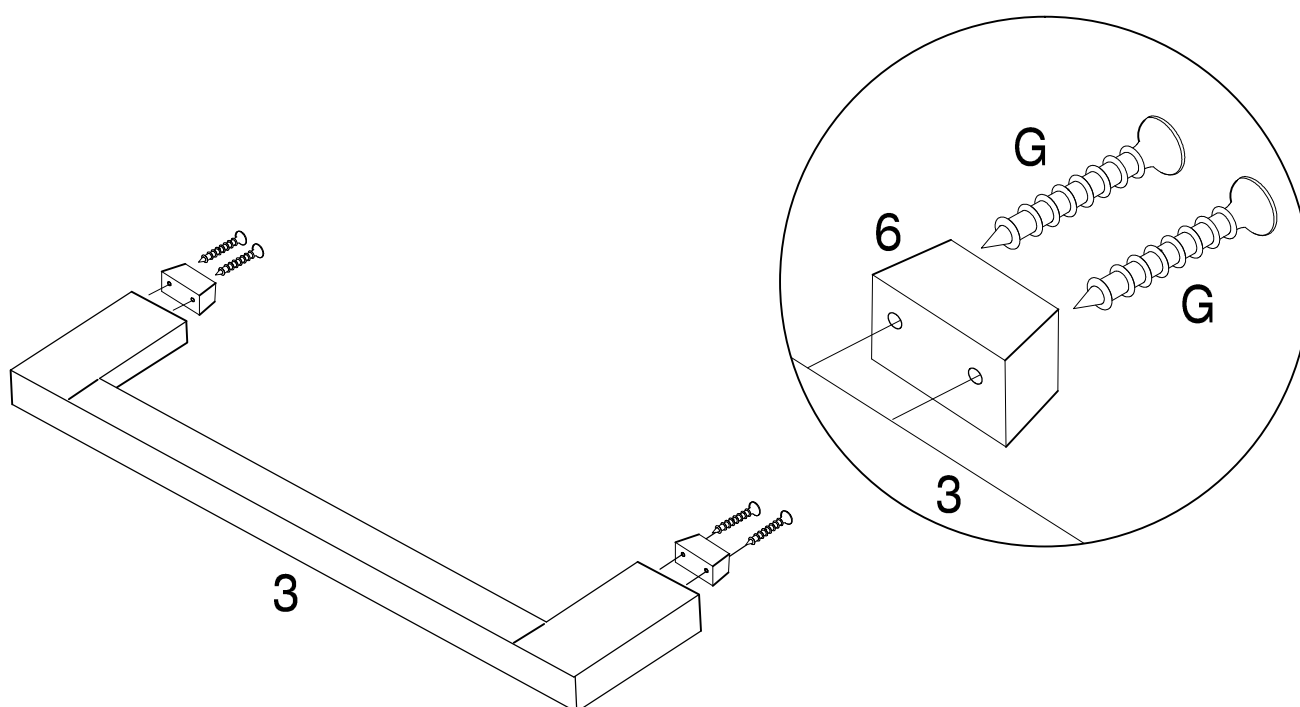


3 fix the side rails wooden (5) to the side rails (4).

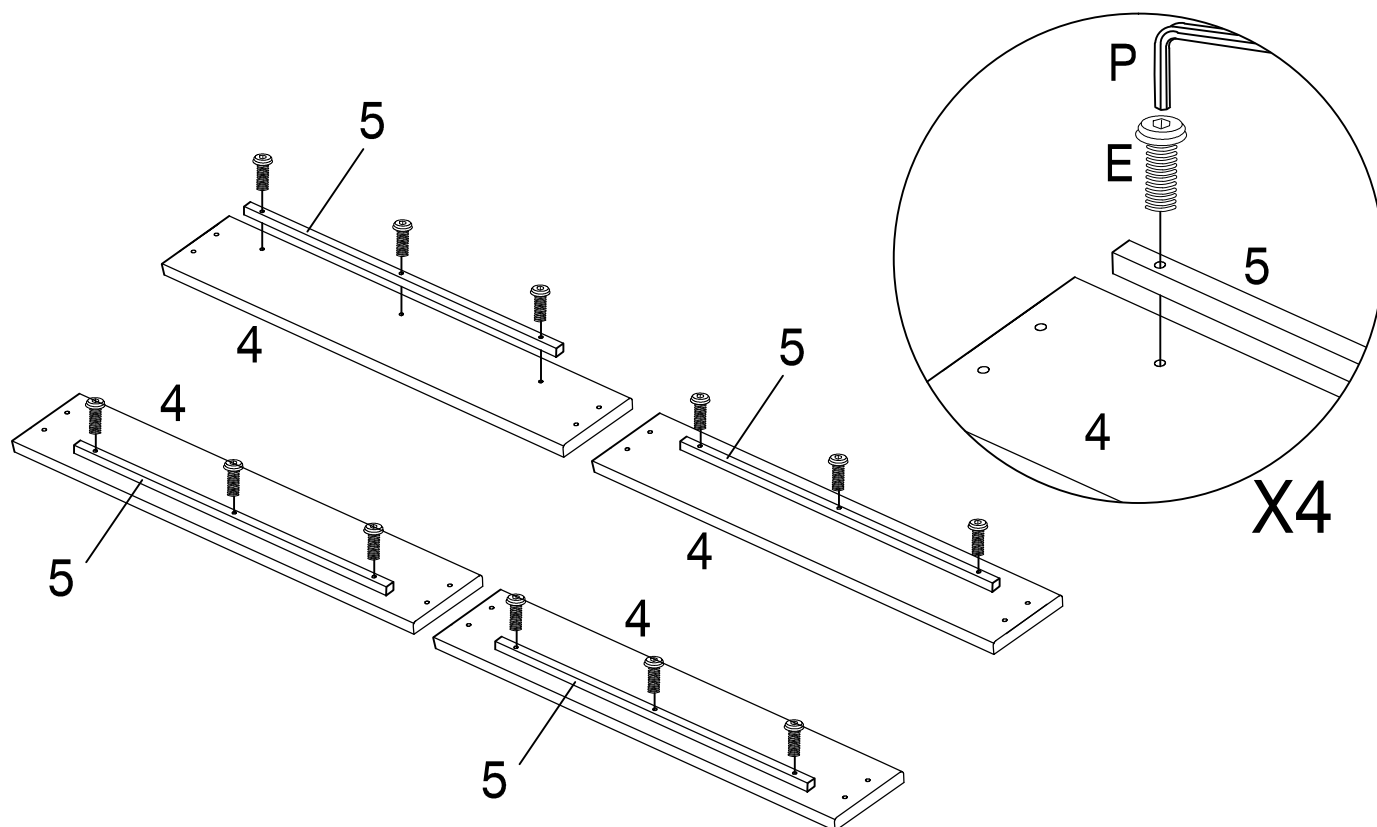


4 fix connection plate (14) to the side rails (4) .

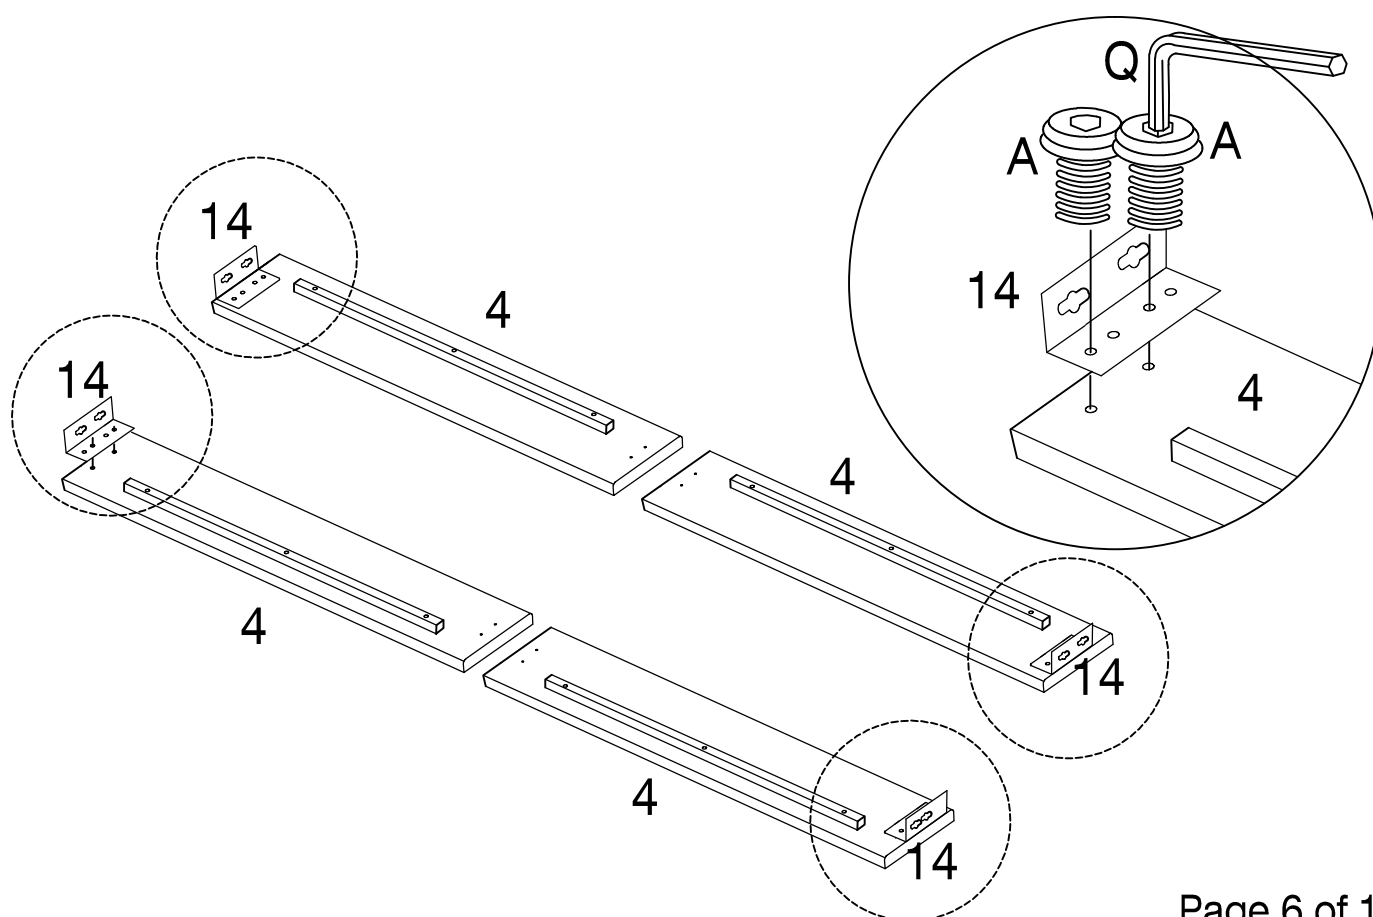


5 fix side rails metal connector (13) to the side rails (4).

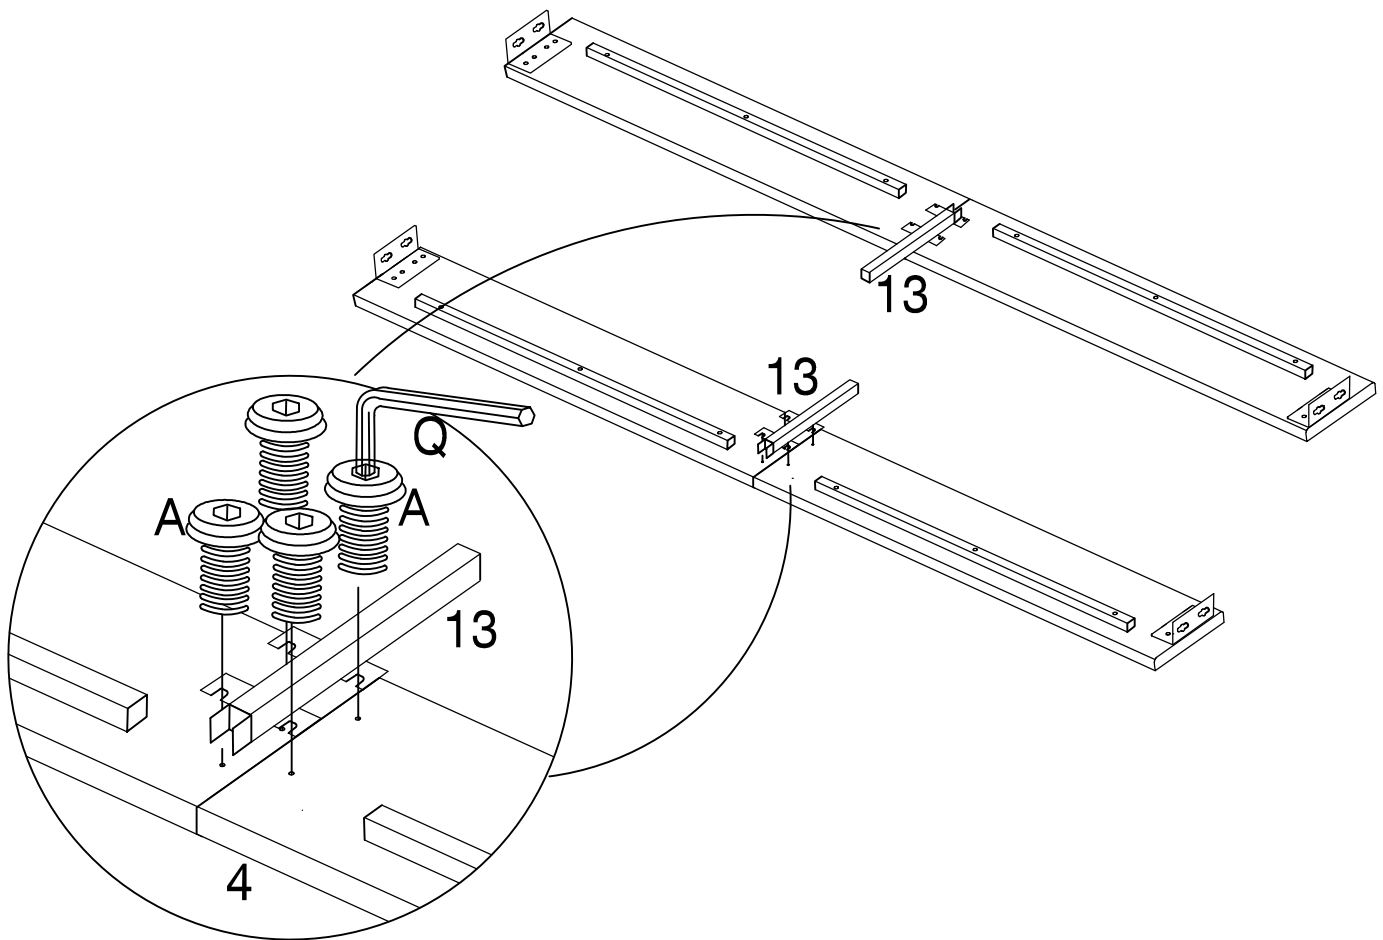


6 fix side rails (4) to the headboard wooden (2) and footboard (3).

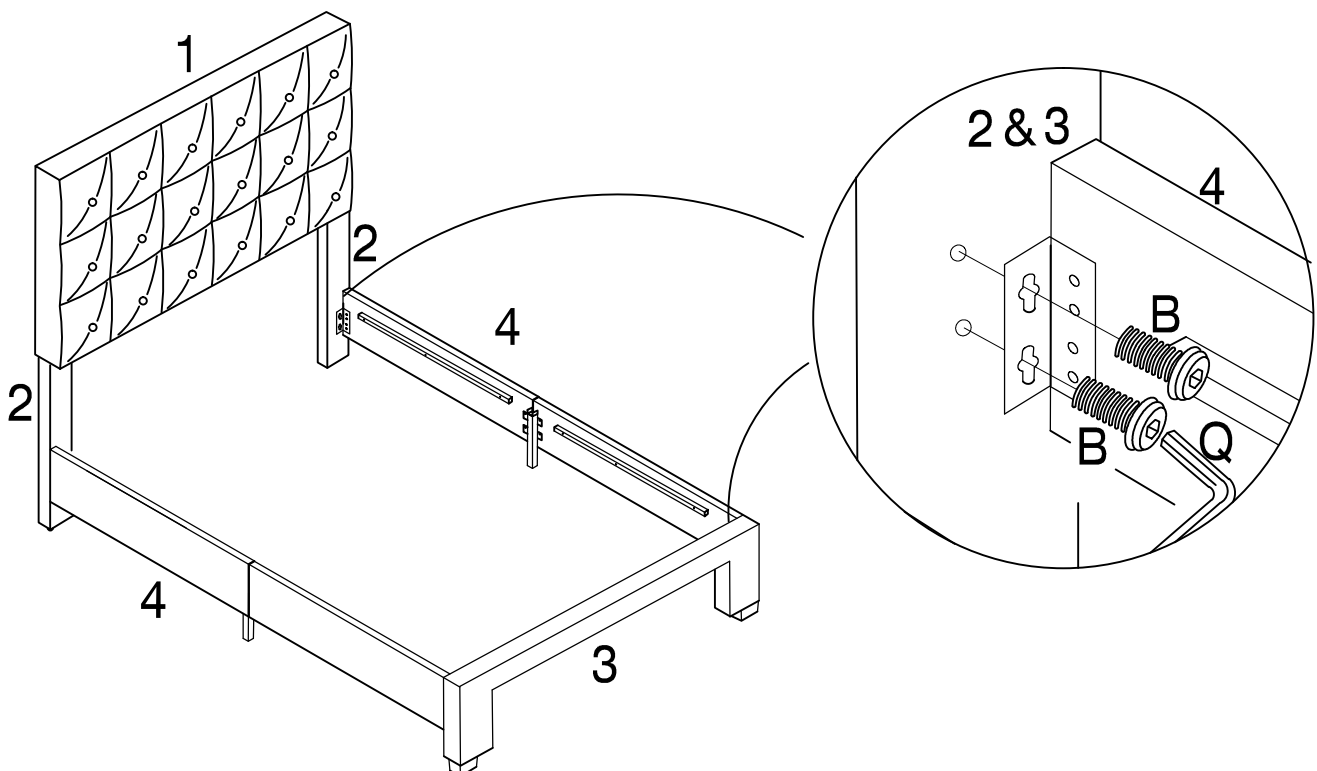


7 fix metal support cross bar (9) to the side rails metal connector connector (13).

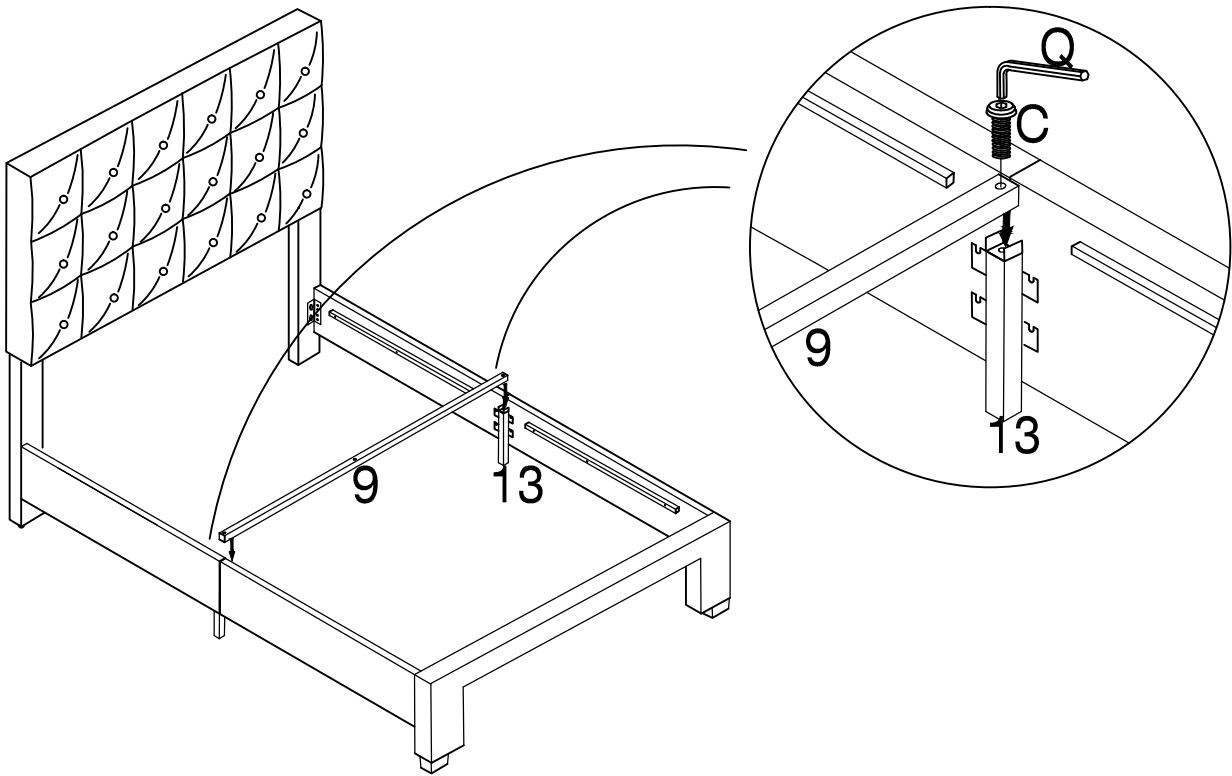


8 fix support leg ii (12) to the metal support bar i (8).

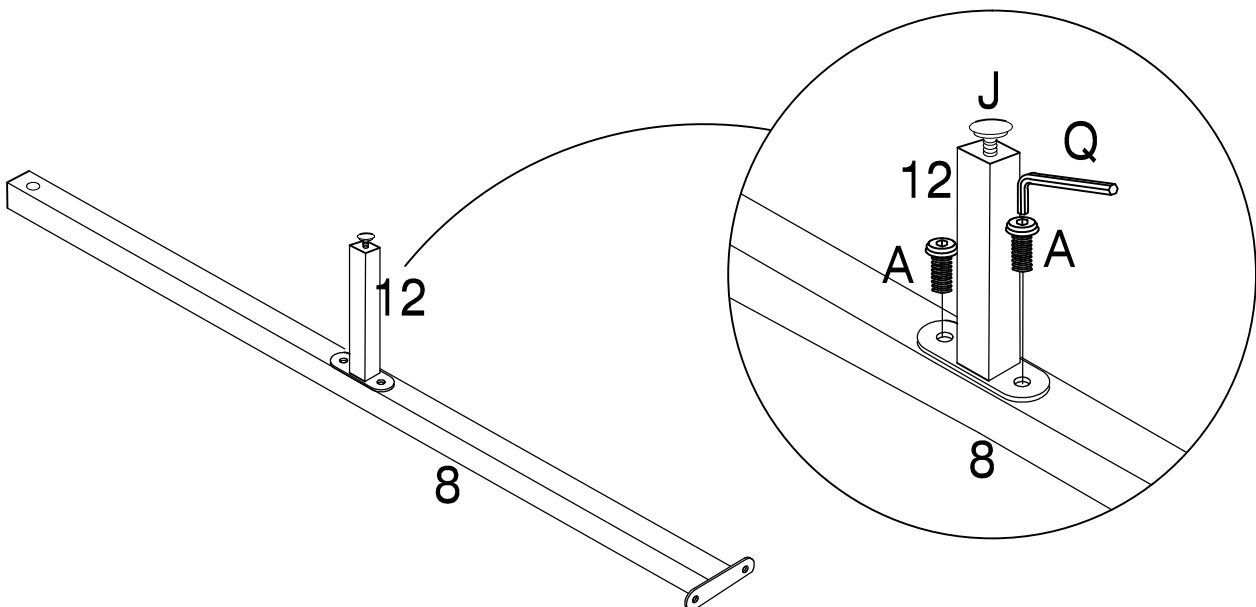


9 fix metal support bar i (8) to the footboard (3).

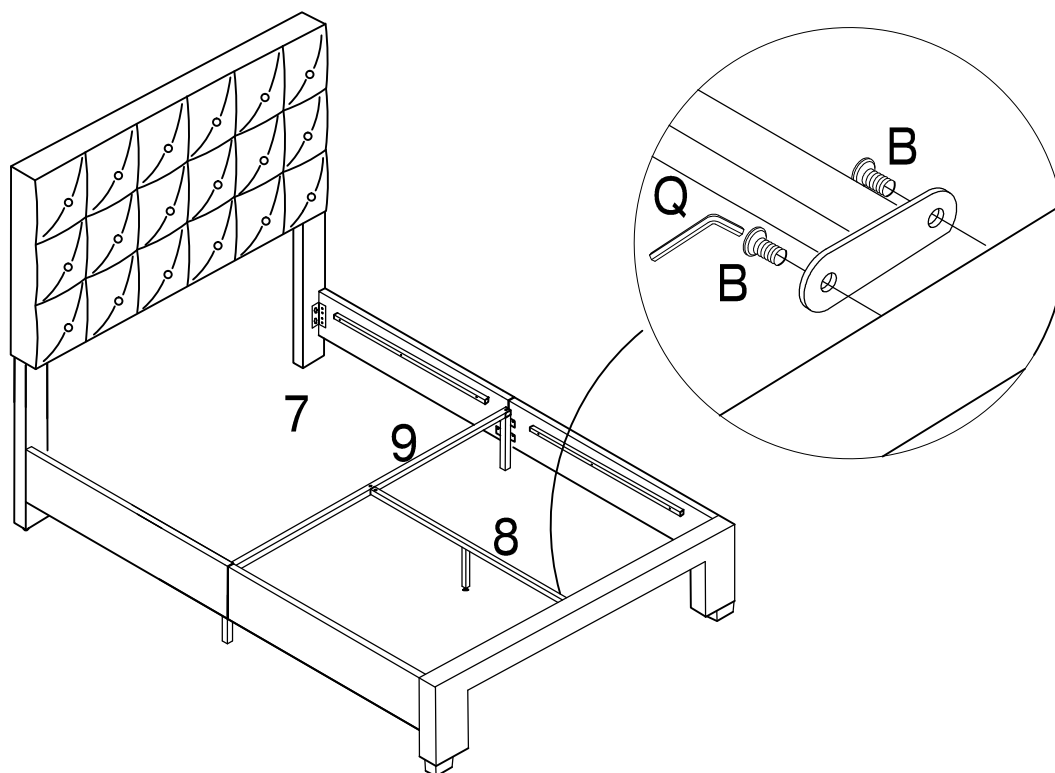


10 fix support leg i (11) to the metal support bar (7), metal support bar i (8) and metal support cross bar (9).
fix support leg (10) to the metal support bar (7).

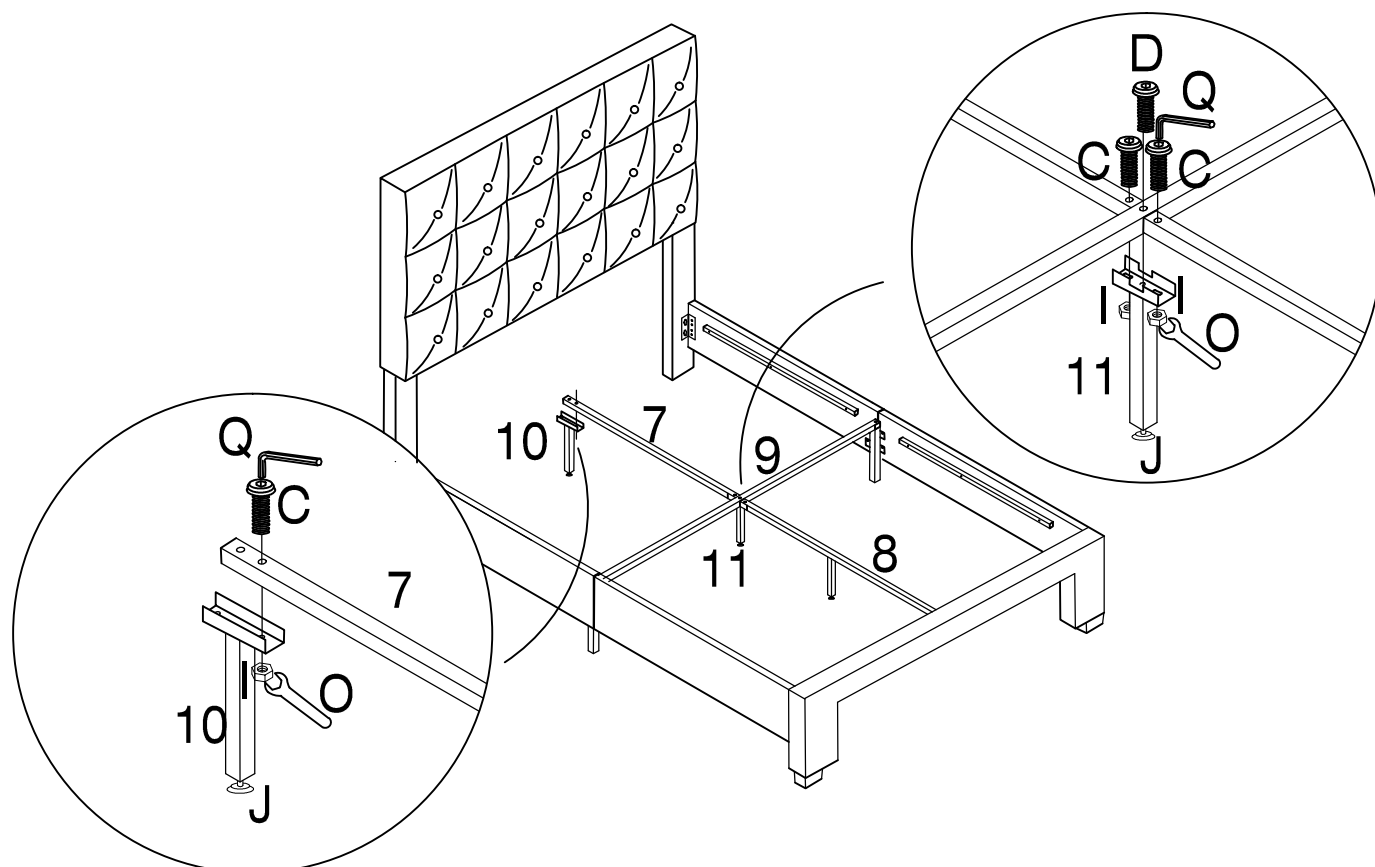


- 11** fix slats (20) and slats i (21) to the side rails wooden (5).
fix the slats (20) to the support leg (7) and support leg (10) .

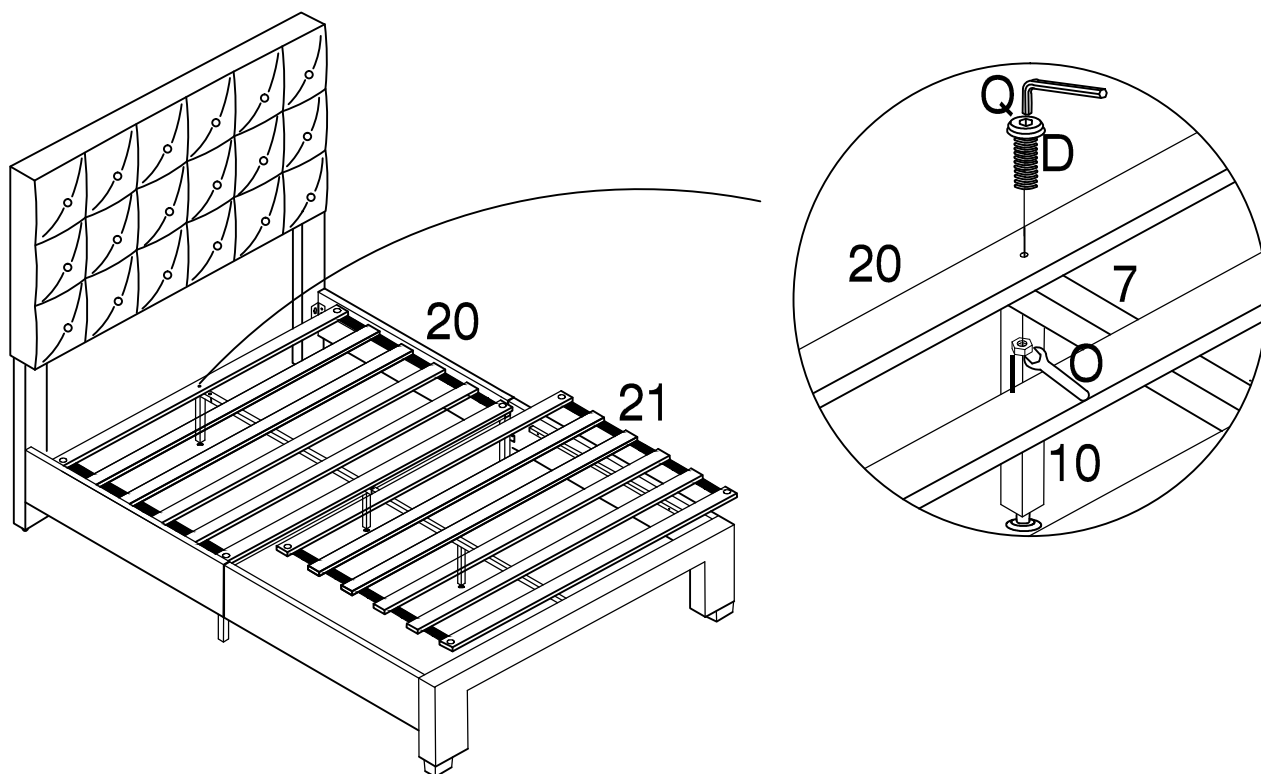


- 12** using screw.

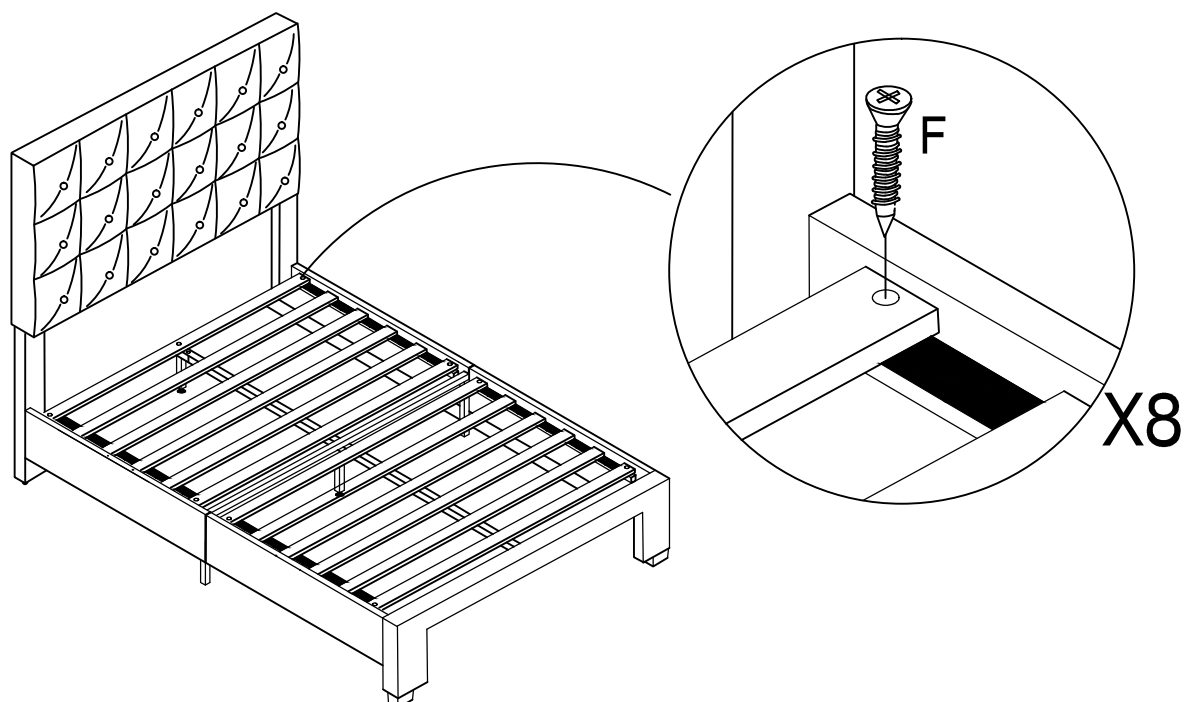



13 fix the drawer side panel (24) to the drawer back panel (25).

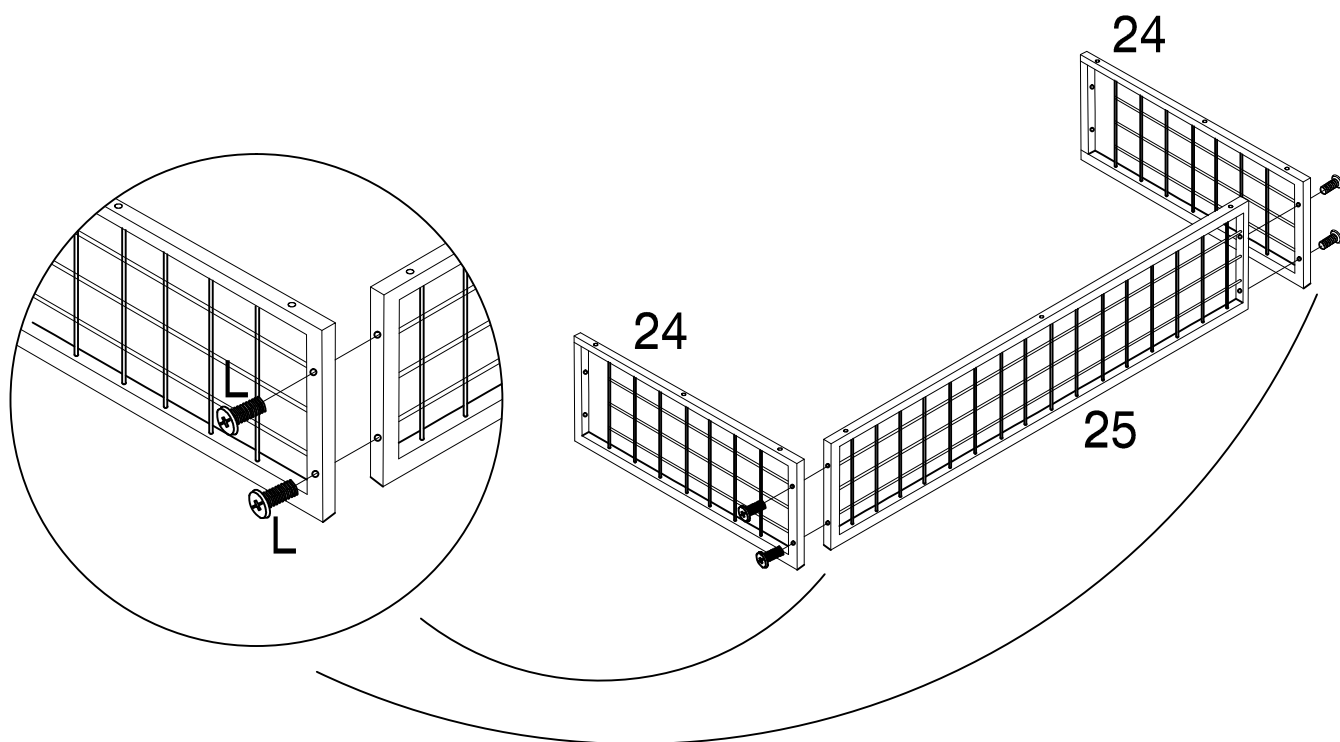



14 fix the Wheel (19) to the drawer bottom panel (23).

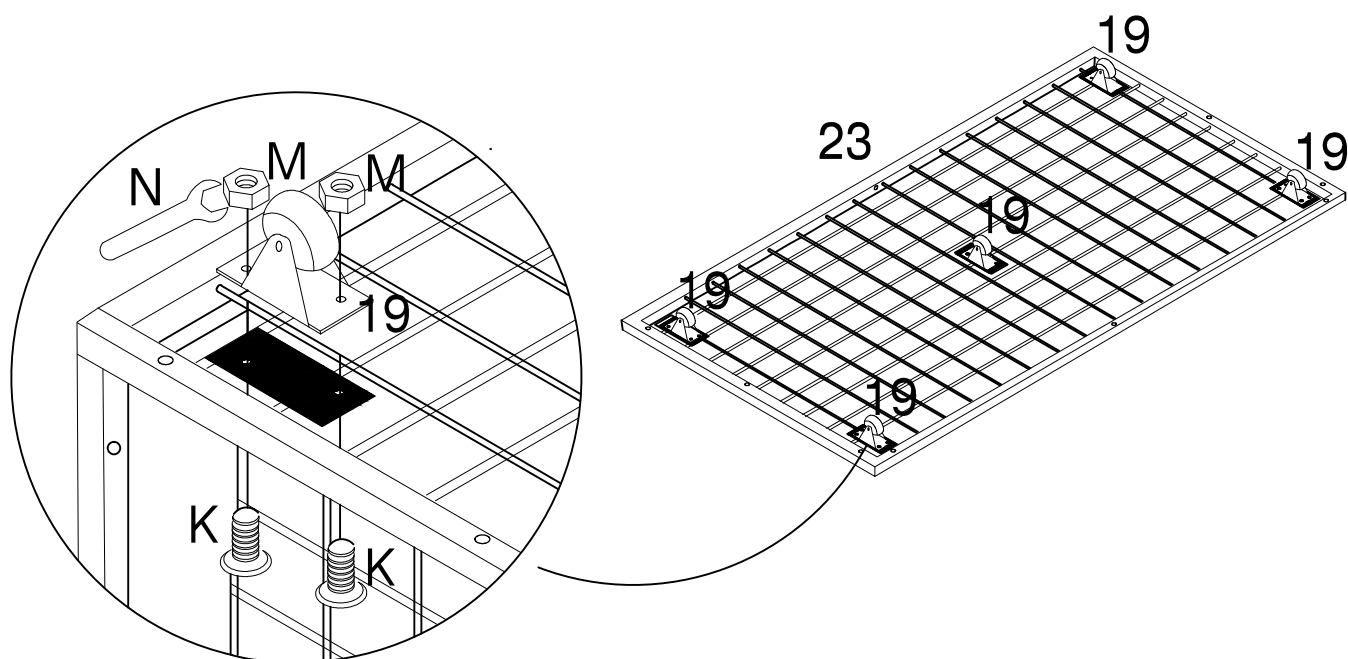


15 fix the drawer bottom panel (23) to the drawer side panel (24) and drawer back panel (25).

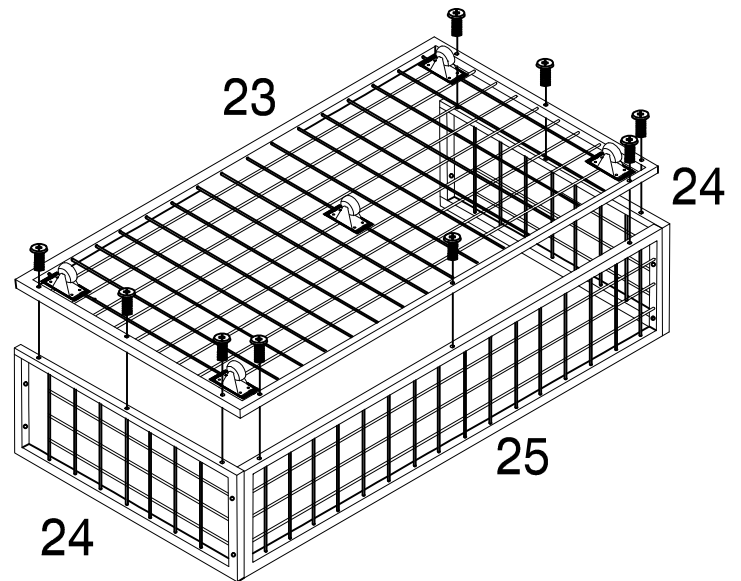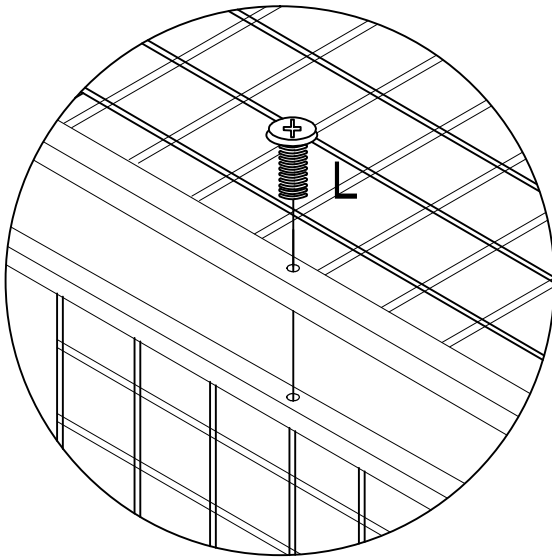


16 fix the drawer front panel (22) to the drawer bottom panel (23) and drawer side panel (24).

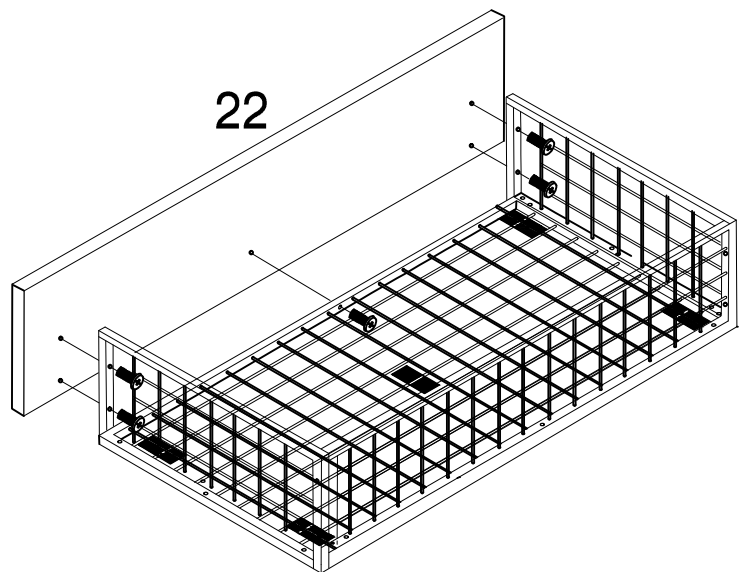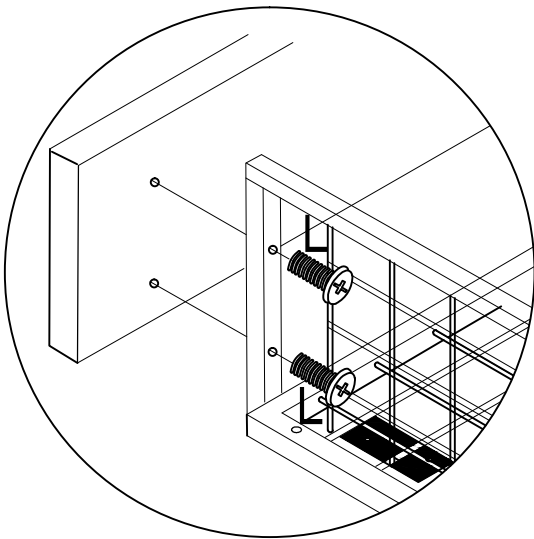


17 fix the drawer to the bed.

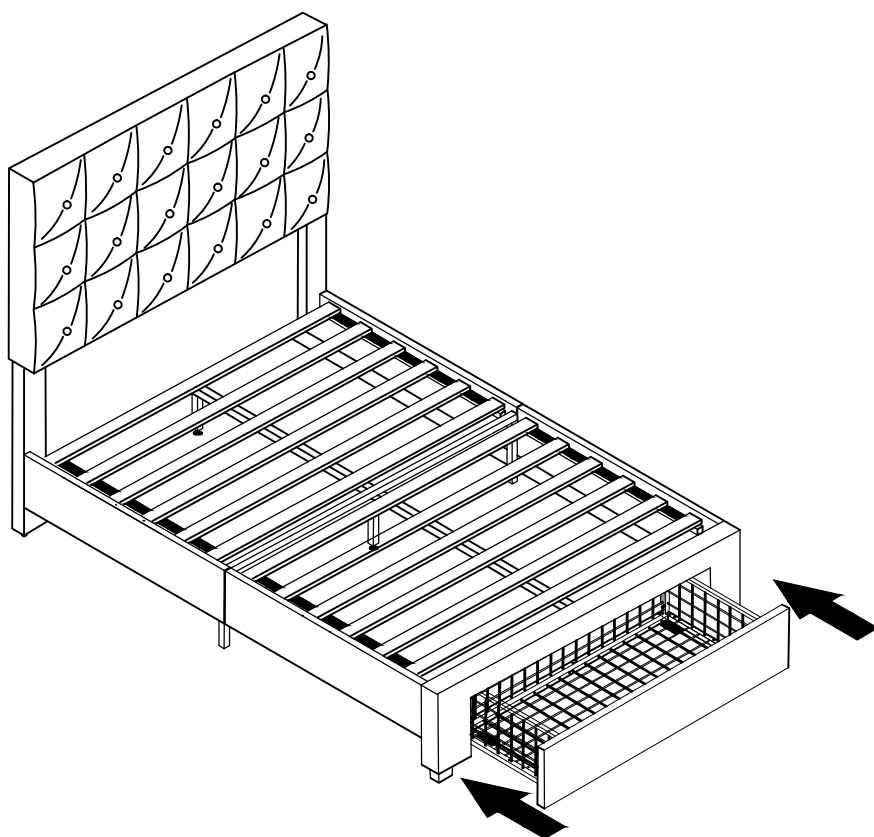


18 fix the gas strut (18) to the headbard (1).
using bolt, bolt already pre-fixed on the joints.

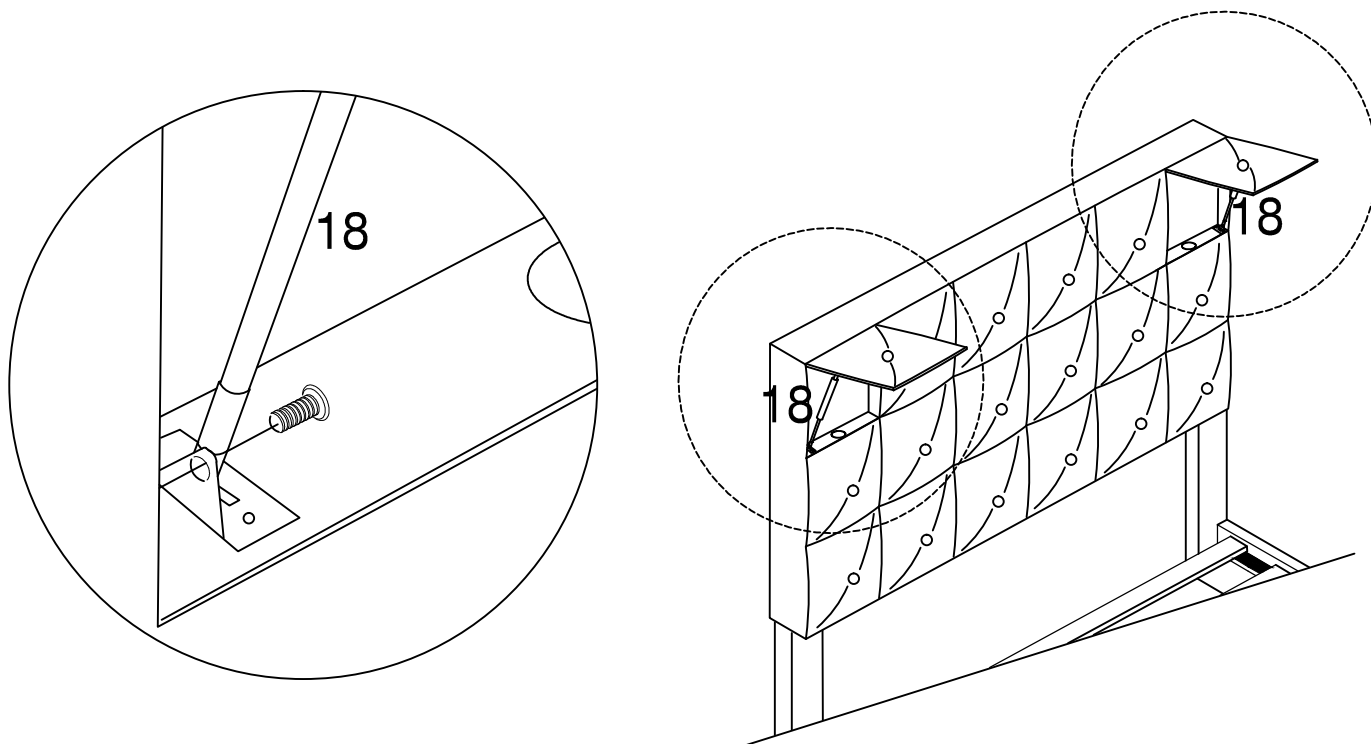

19 fix the led light (15) to the headbard (1).

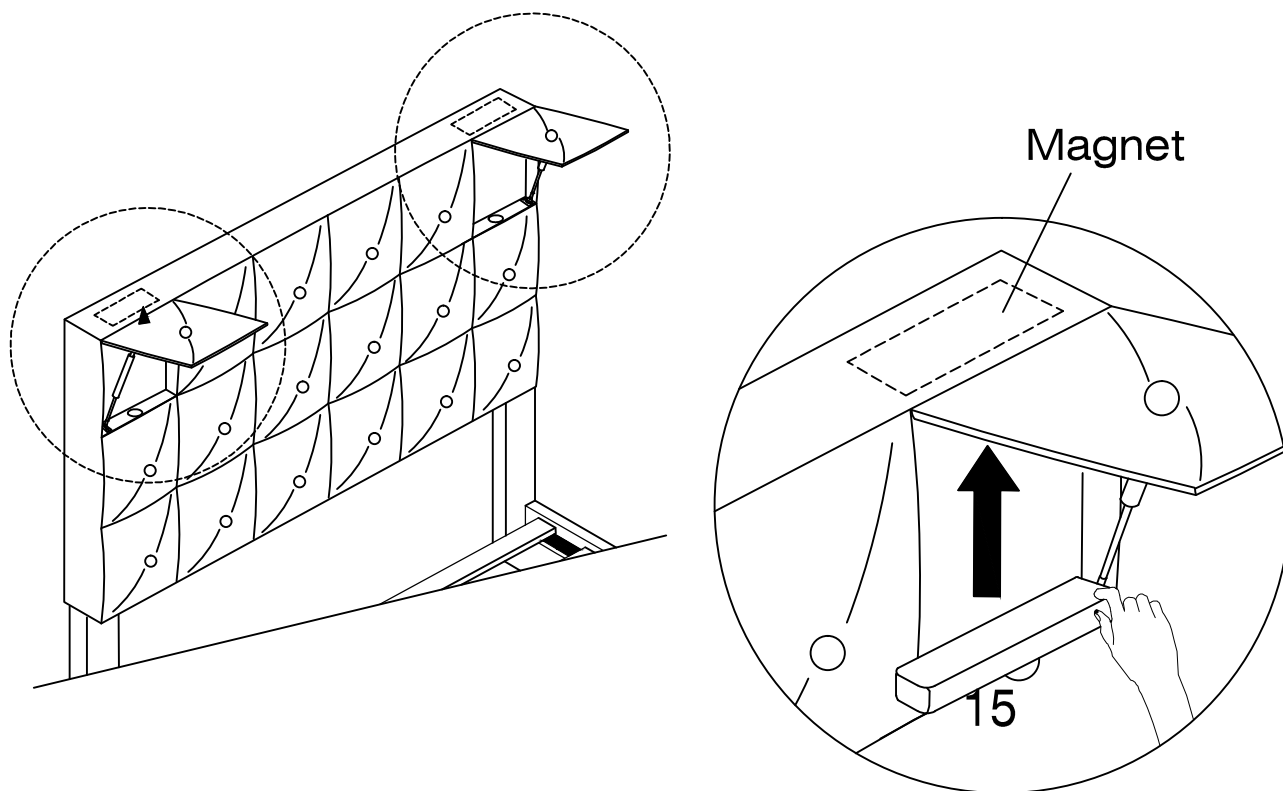

20 fix the double sided tape (17) to the wireless charger (16) .

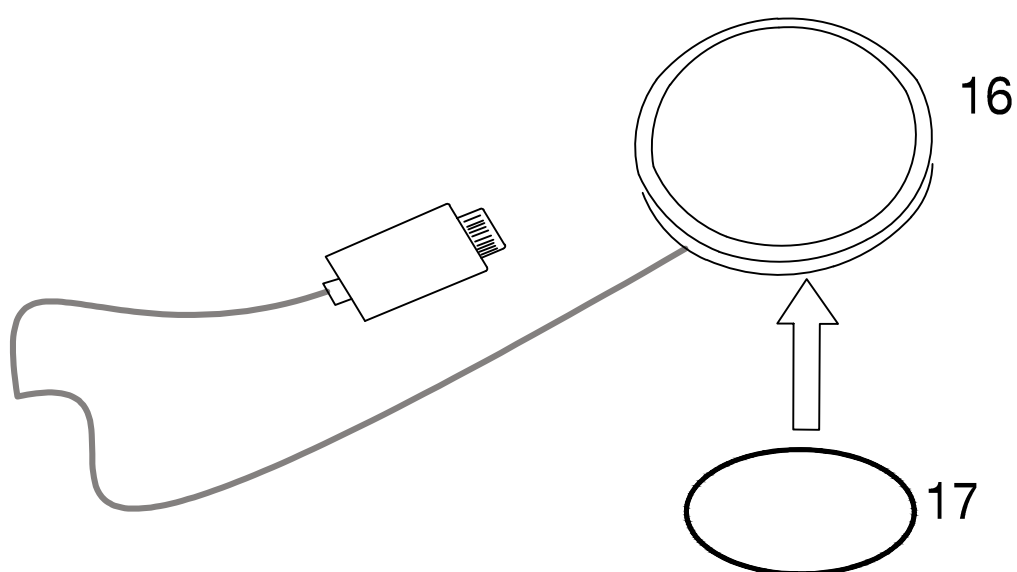

21 fix the wireless charger (16) to the headbard (1).

