



ASSEMBLY INSTRUCTIONS

FULL TENT BED WITH FENCE AND DOOR











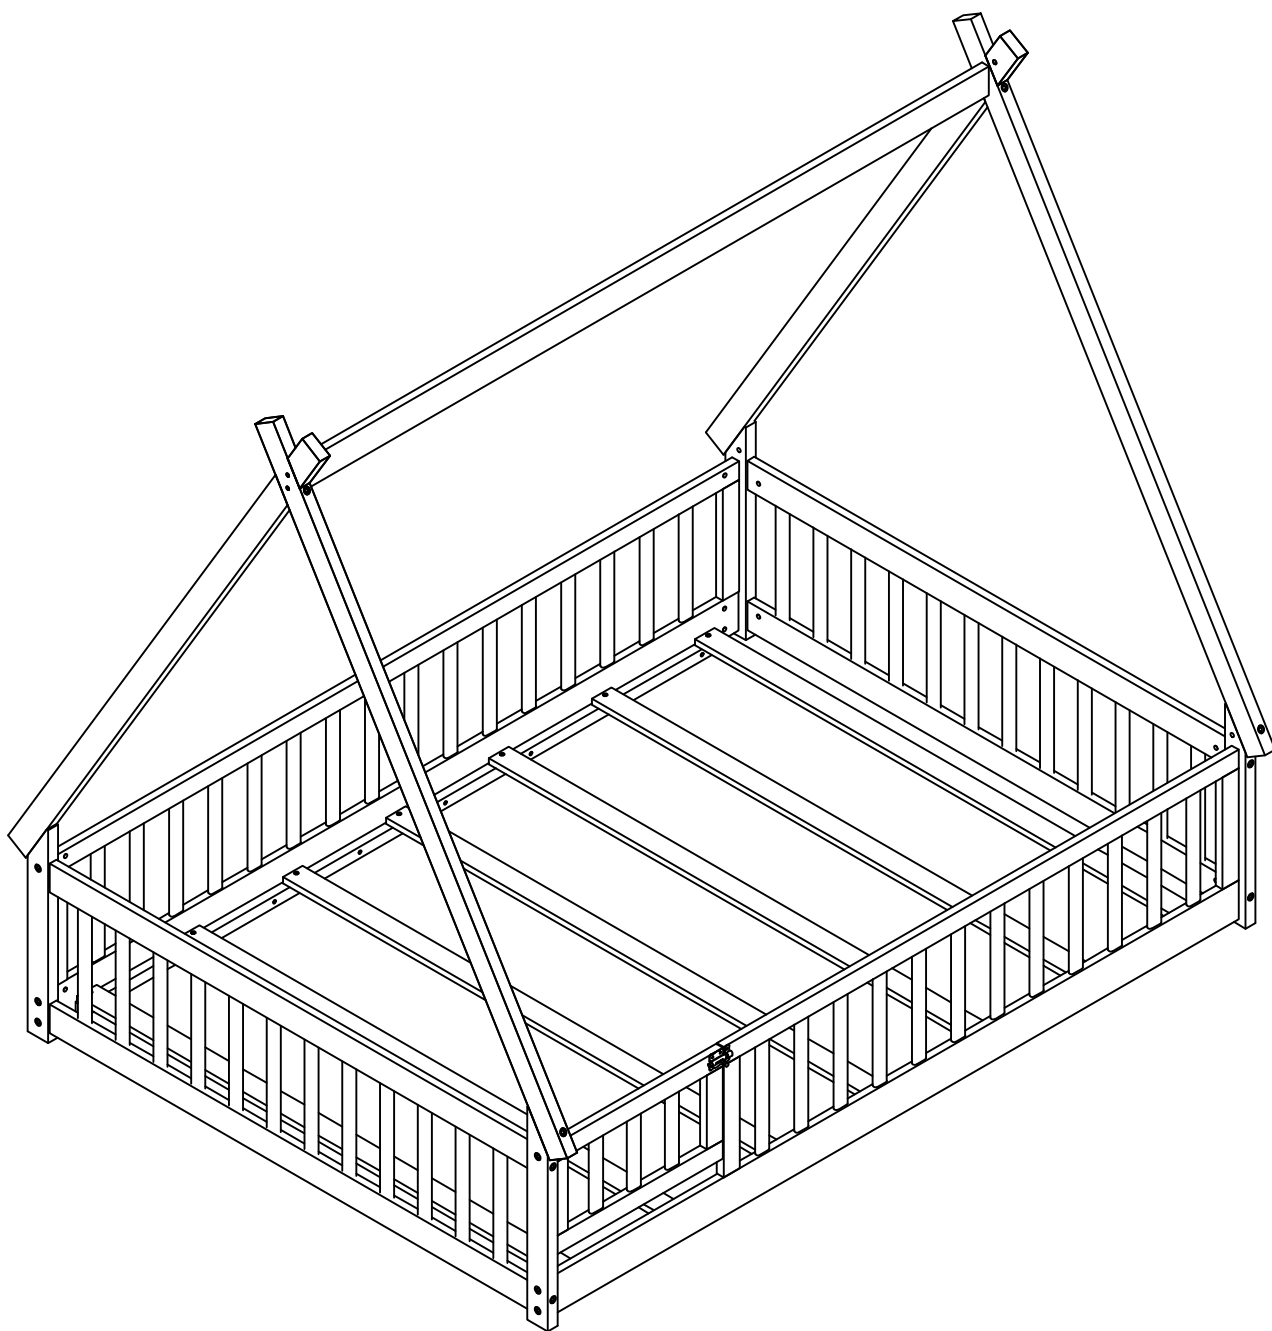


SA33789






Detail View

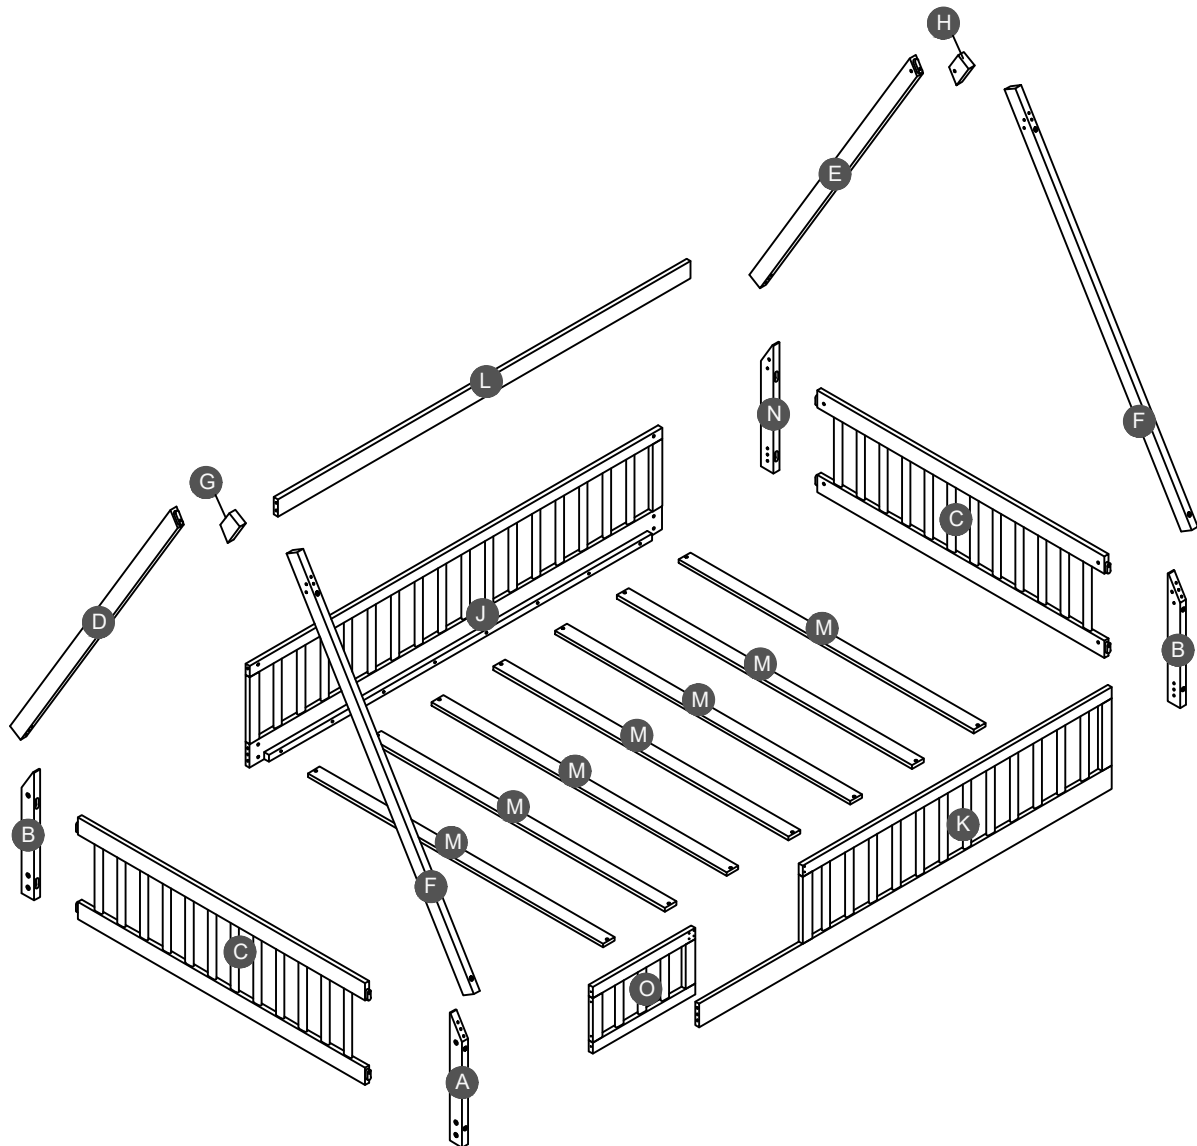


Part List

A  Leg (Left front) - 1pc	B  Leg (Left back/ Right front) - 2pcs	C  Frame (HB /FB) - 2pcs
D  Upper (Left back) - 1pc	E  Upper (Right back) - 1pc	F  Upper Front (Left /Right) - 2pcs
G  Left upper link - 1pc	H  Right upper link - 1pc	J  Side rail back - 1pc
K  Side rail front - 1pc	L  Upper horizontal - 1pc	M  Slat - 7pcs
N  Leg (Right back) - 1pc	O  Door - 1pc	

Hardware List


1  Ø8*30mm Wood dowel (14pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (23pcs)
4  1/4"*15 (9.5mm) Horizontal-Hole bolts (31pcs)	5  Ø4*30mm Wood screws (14pcs)	6  (1/4")4.5*58mm Allen key (1pc)
7  55*24*6mm(135°) Hinges (2pcs)	8  60*40*10mm Lock (1pc)	9  Ø3.5*15mm Wood screws (14pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

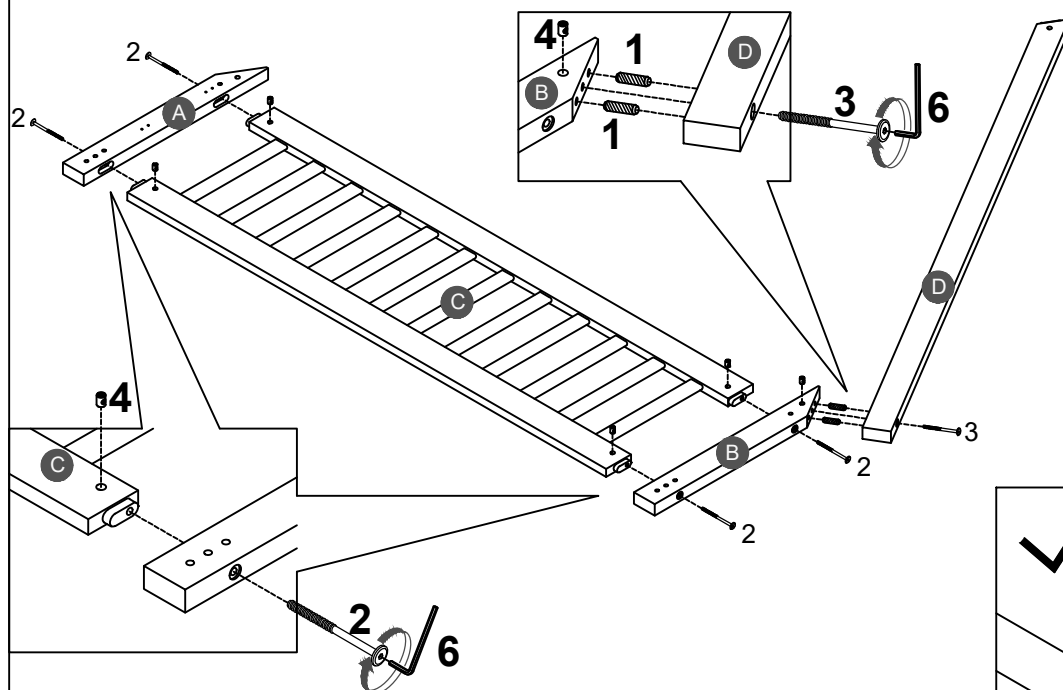


1		2		3	
2PCS		4PCS		1PC	
					4
					5PCS

Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

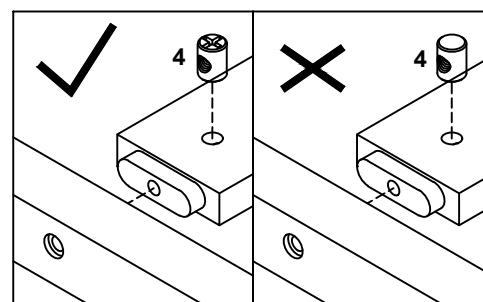



STEP 2:

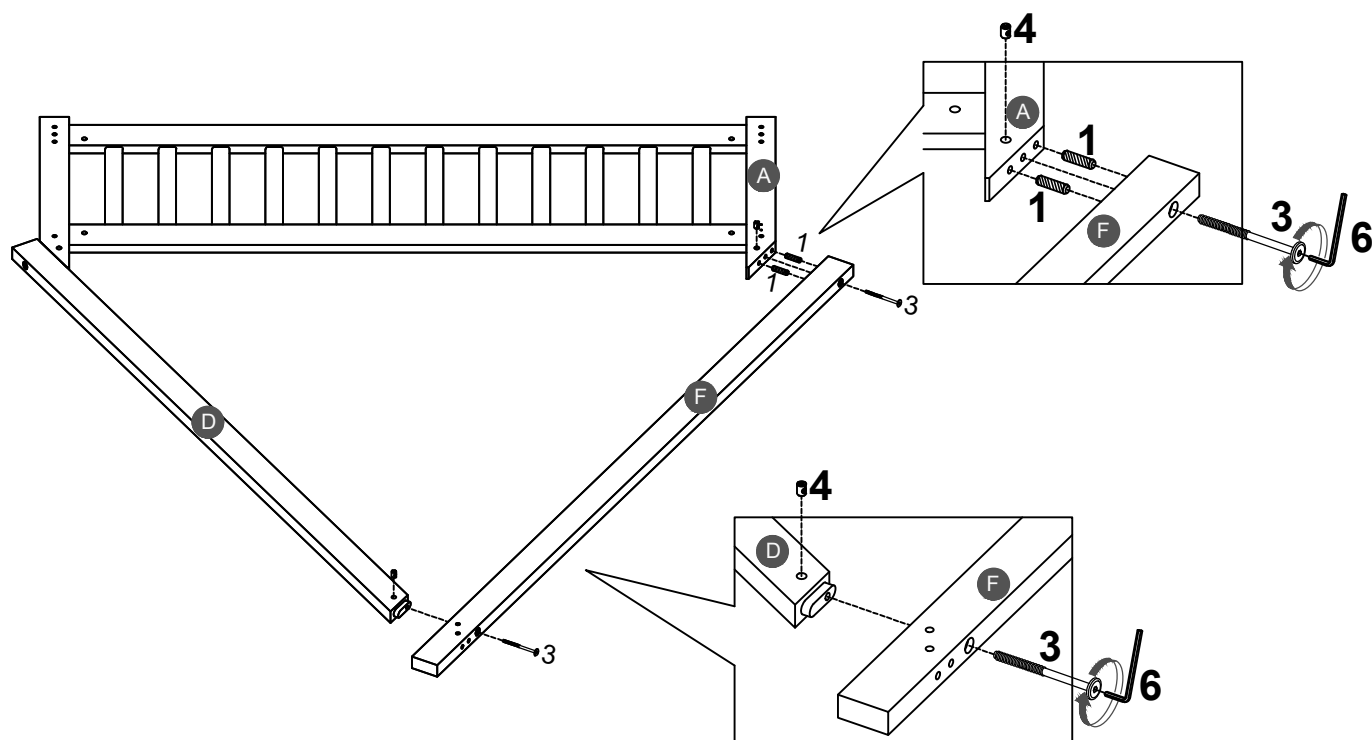


1		3		4	
2PCS		2PCS		2PCS	


STEP 3:

1		3		4	
1PC		1PC		1PC	

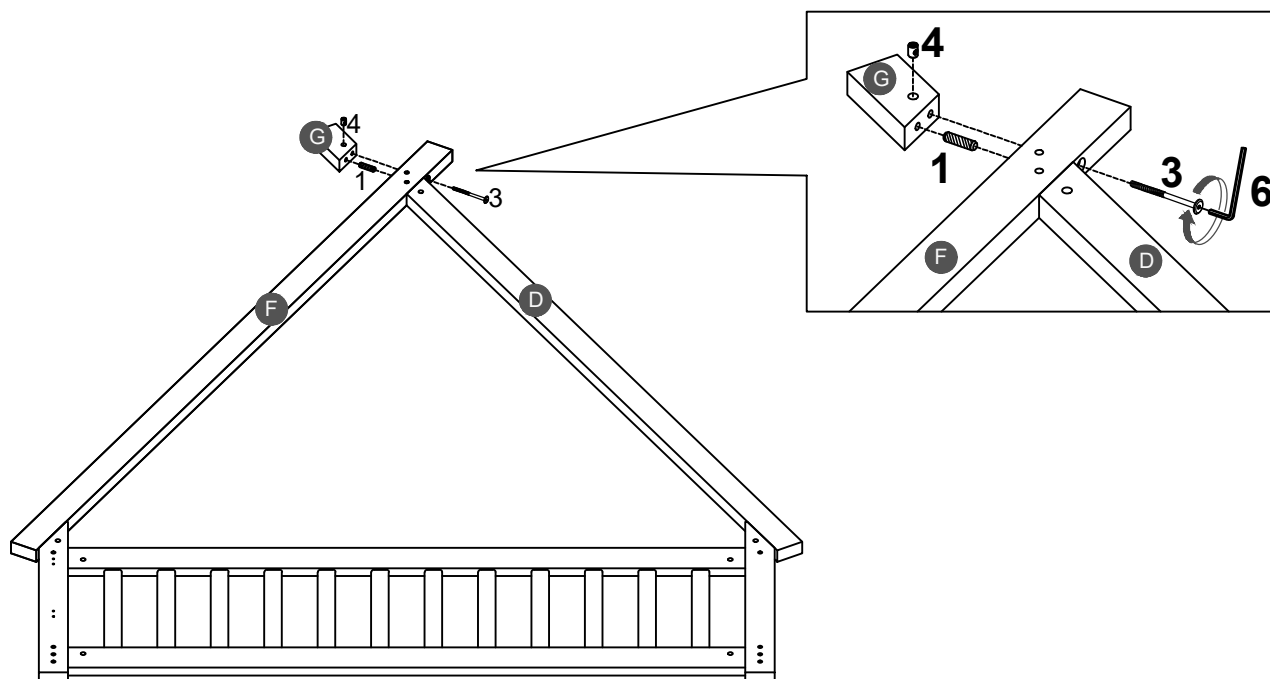


STEP 4:

1		2		3		4	
2PCS		4PCS		1PC		5PCS	

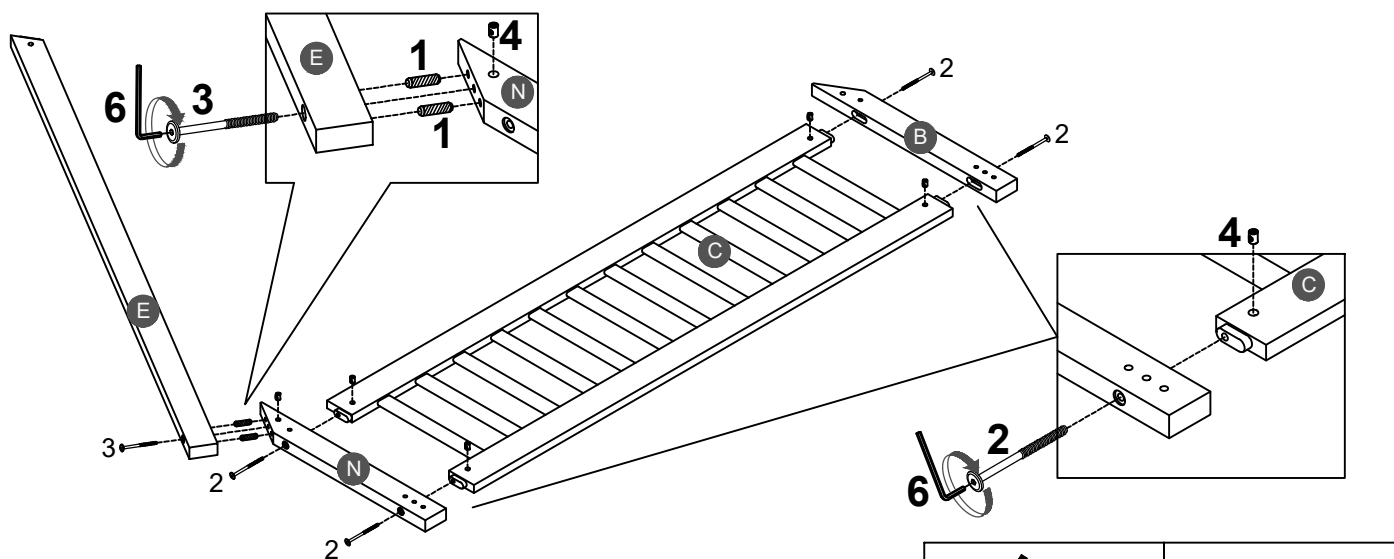


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

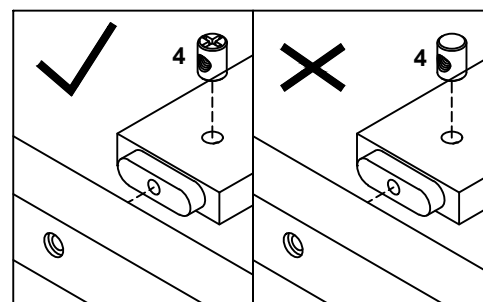


STEP 5:

1		3		4	
2PCS		2PCS		2PCS	

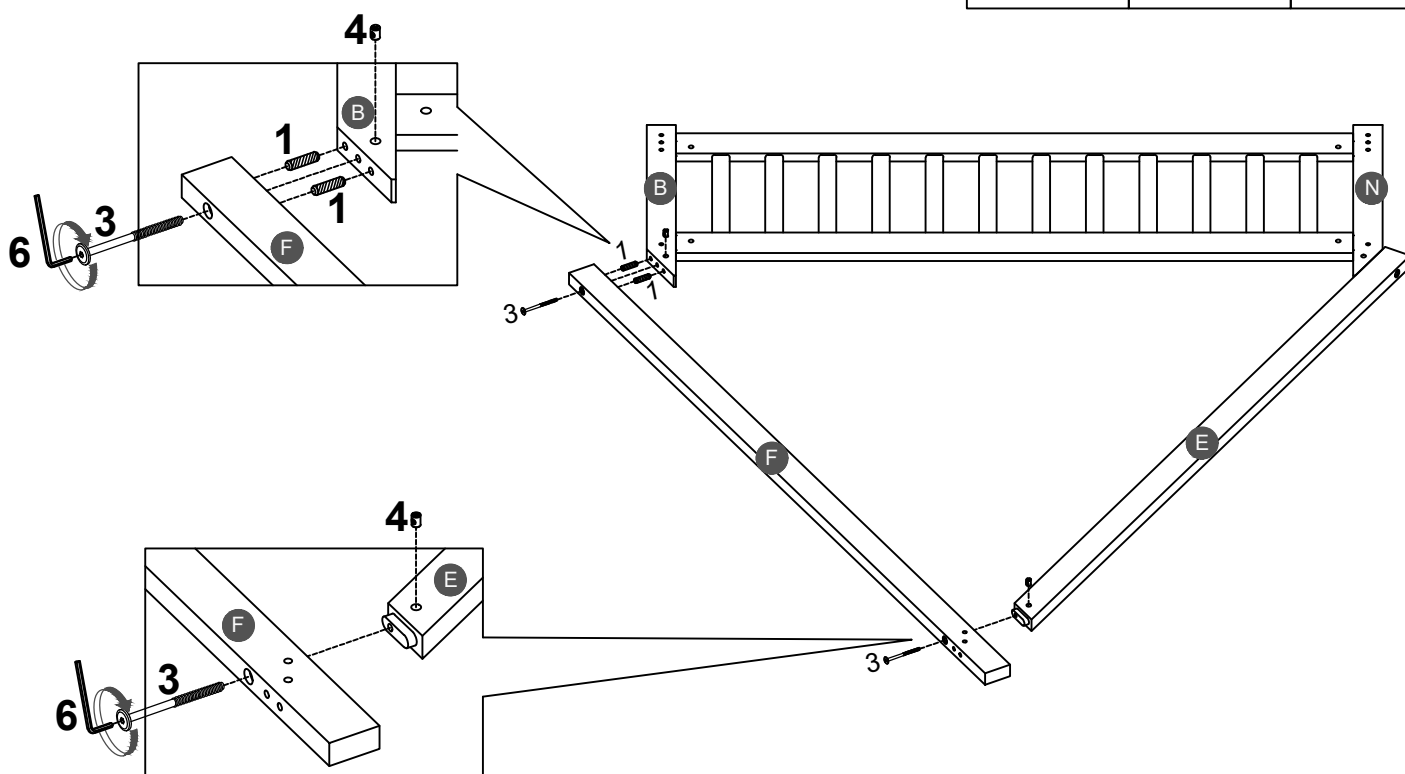


STEP 6:


1		3		4	
1PC		1PC		1PC	

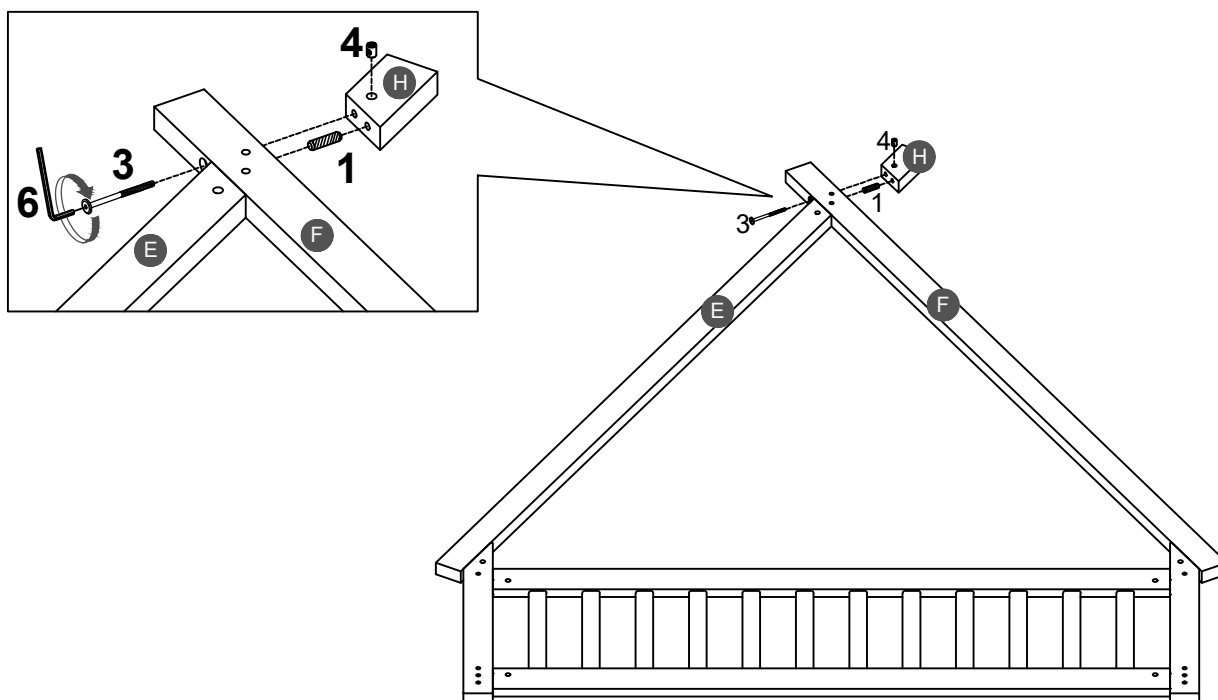

STEP 7:

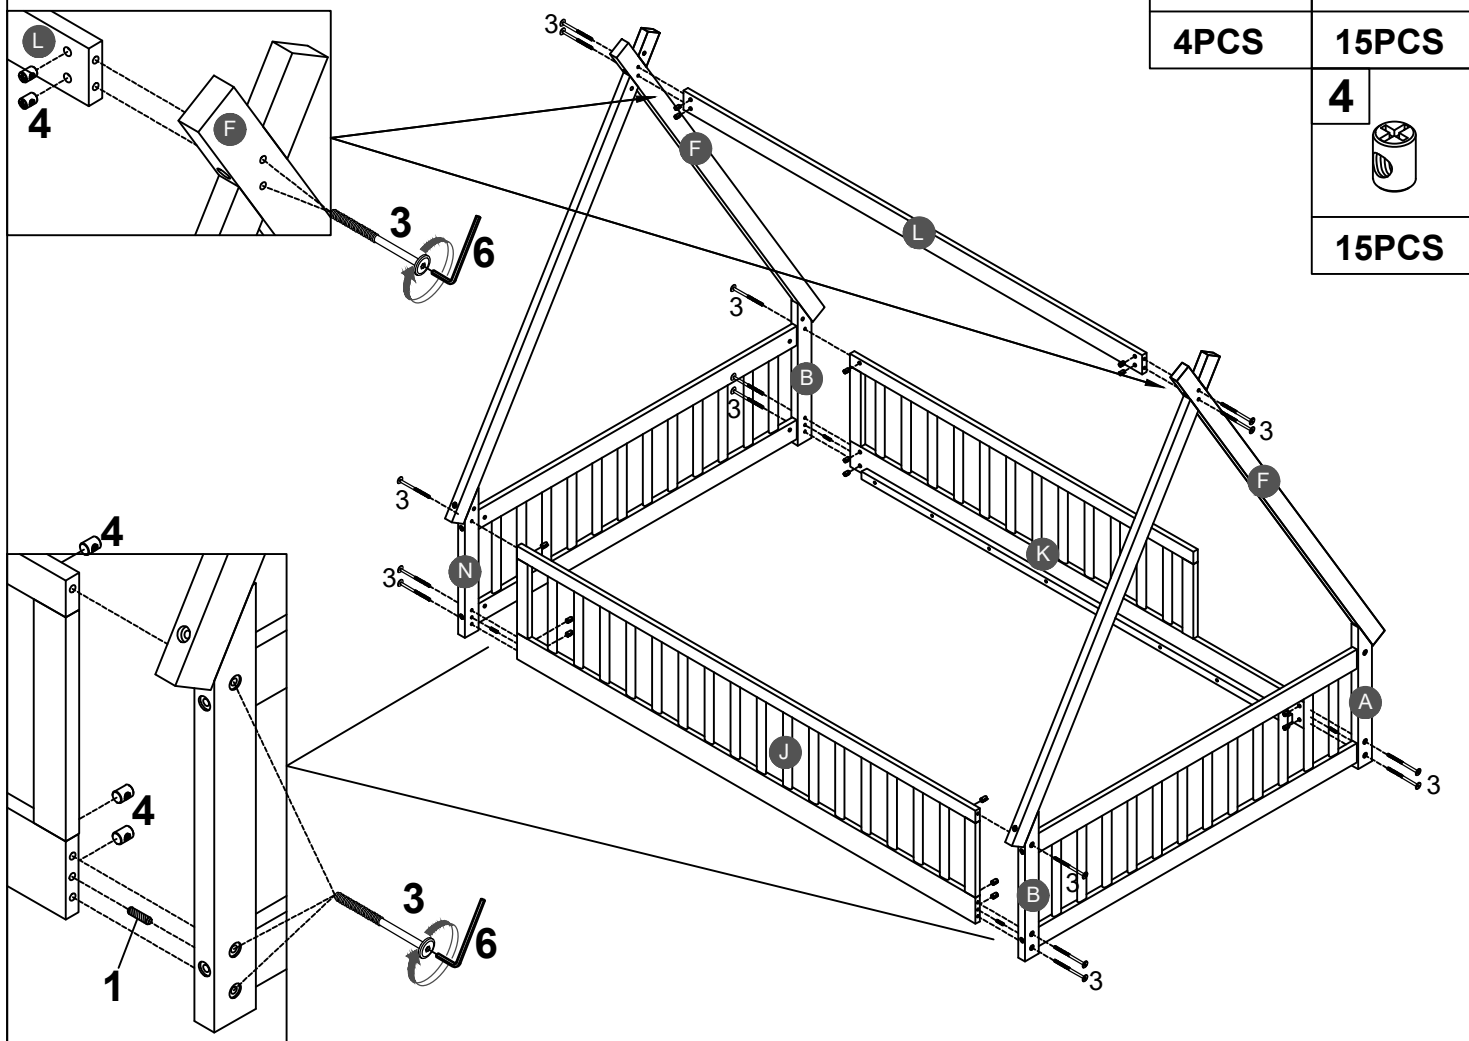

STEP 8:

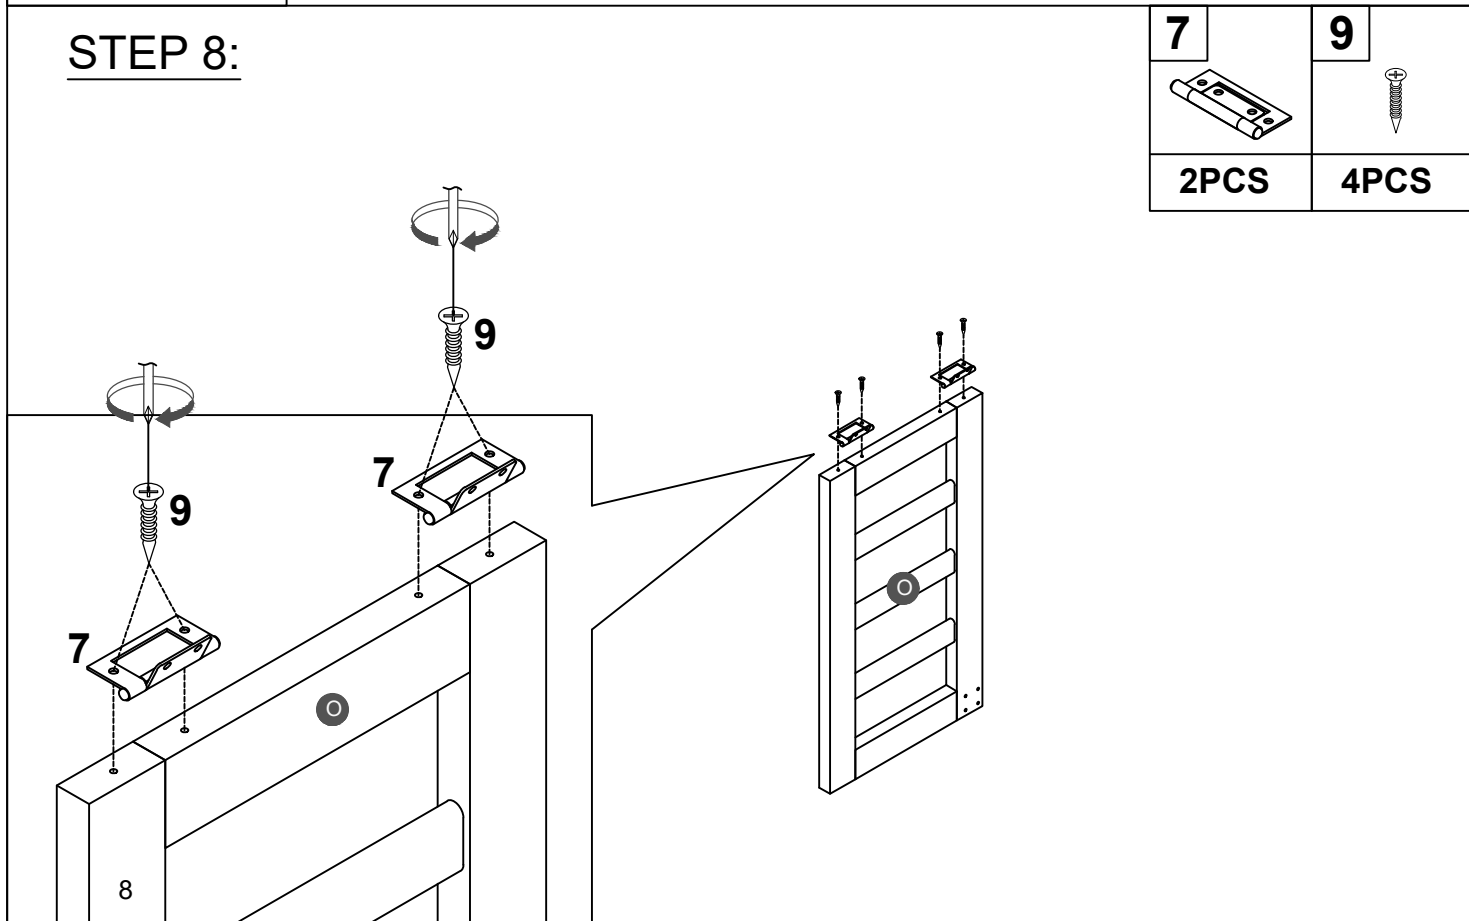


STEP 9:

9



4PCS

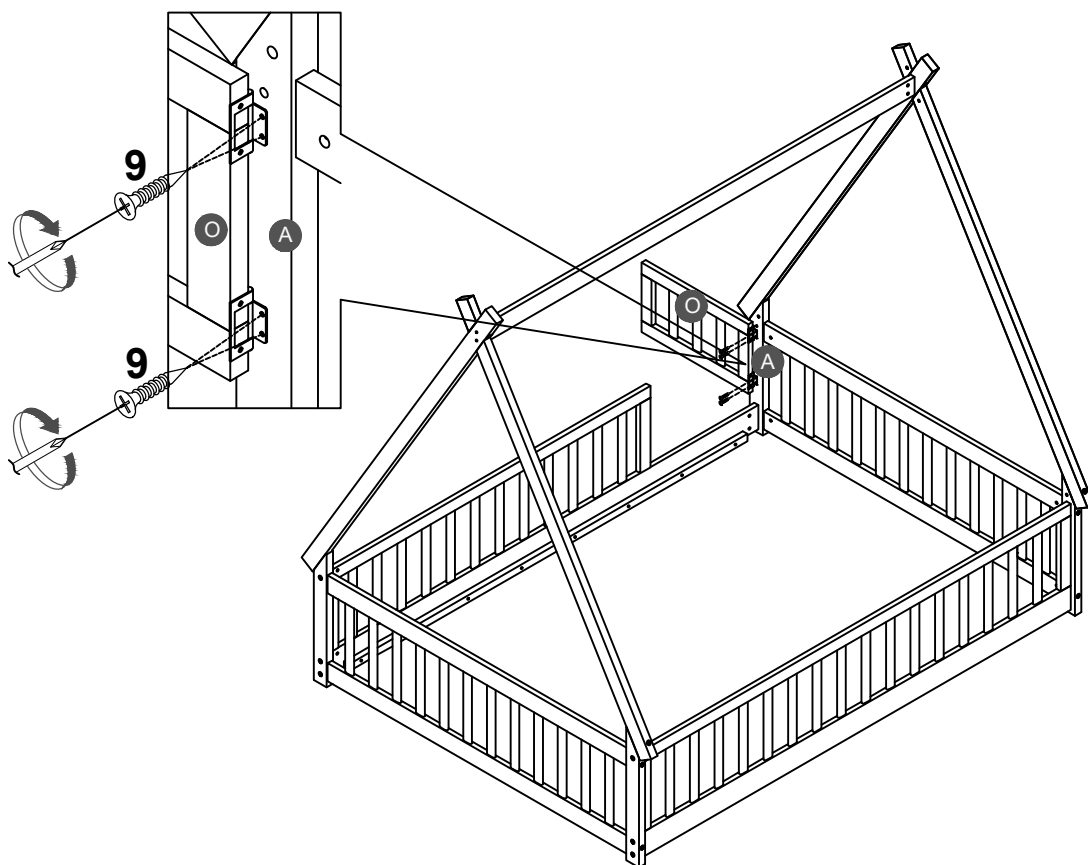


STEP 10:

9



6PCS


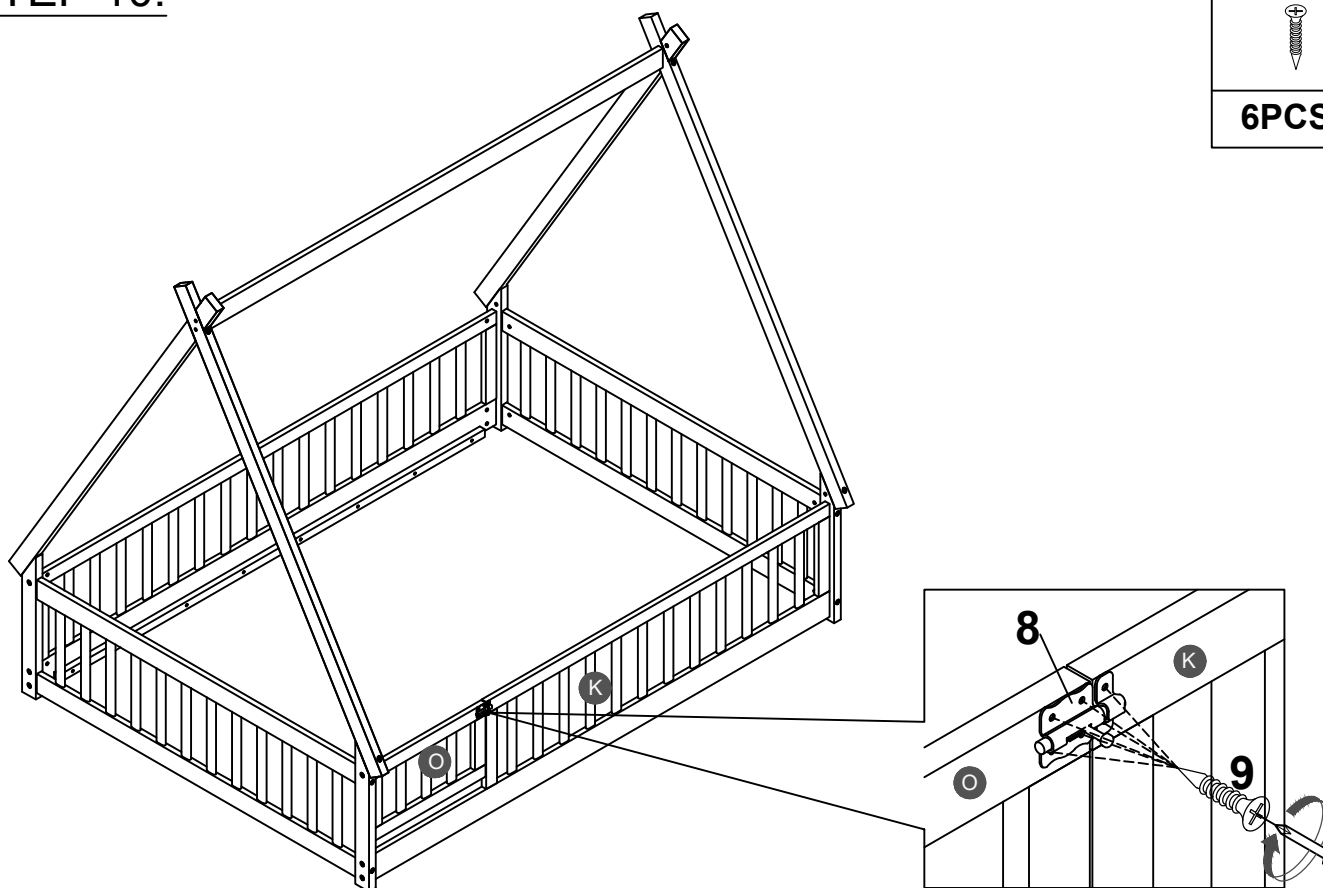


STEP 11:


5



14PCS

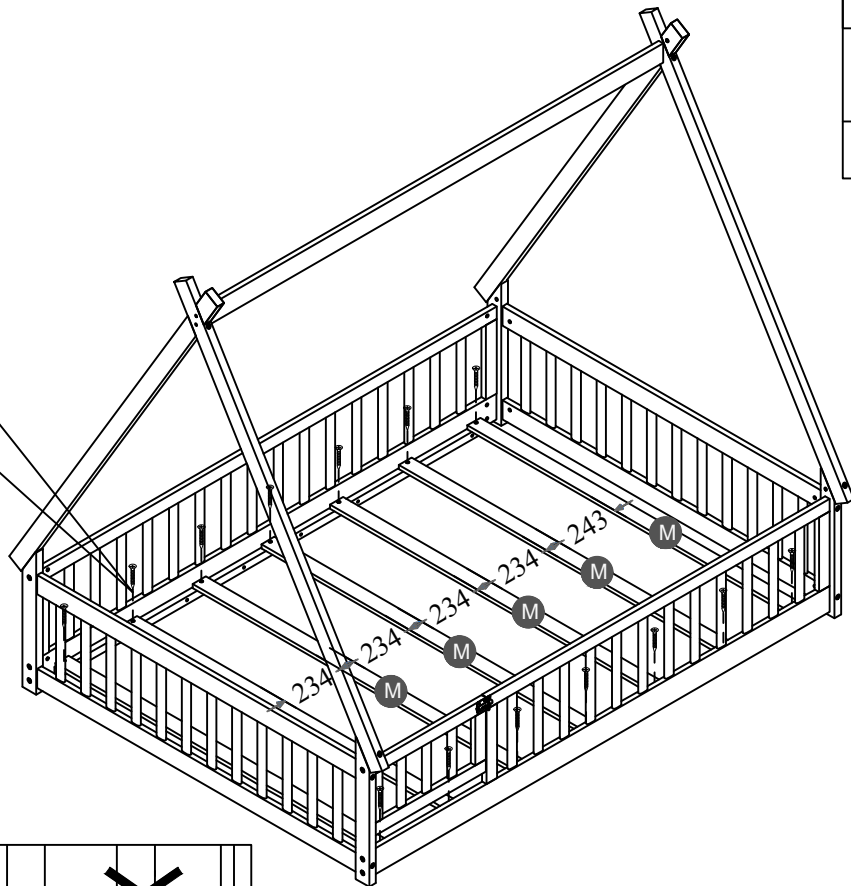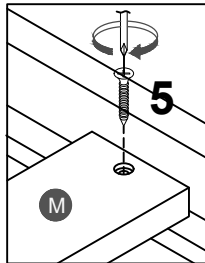

(9.2") 234mm (9.6") 243mm (2.4") 61mm

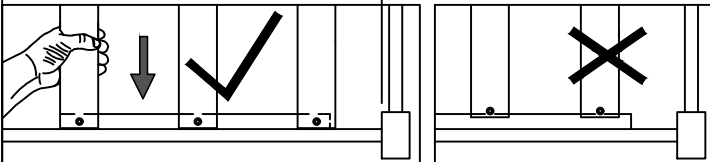

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

