

Metal Fence Privacy Screen Assembly Instruction

Assembling options

Pages



Before Assembling.....P1---P2

Vertically Assembling.....P3---P5

Single Panel Assembling.....P6---P8

Vertically Assembling..... P9---P12

Hi there, we appreciate your purchasing,
any questions or concerns please feel free
to contact us at jeffsundl@gmail.com, we
are glad to assist you any questions,
Thank you.

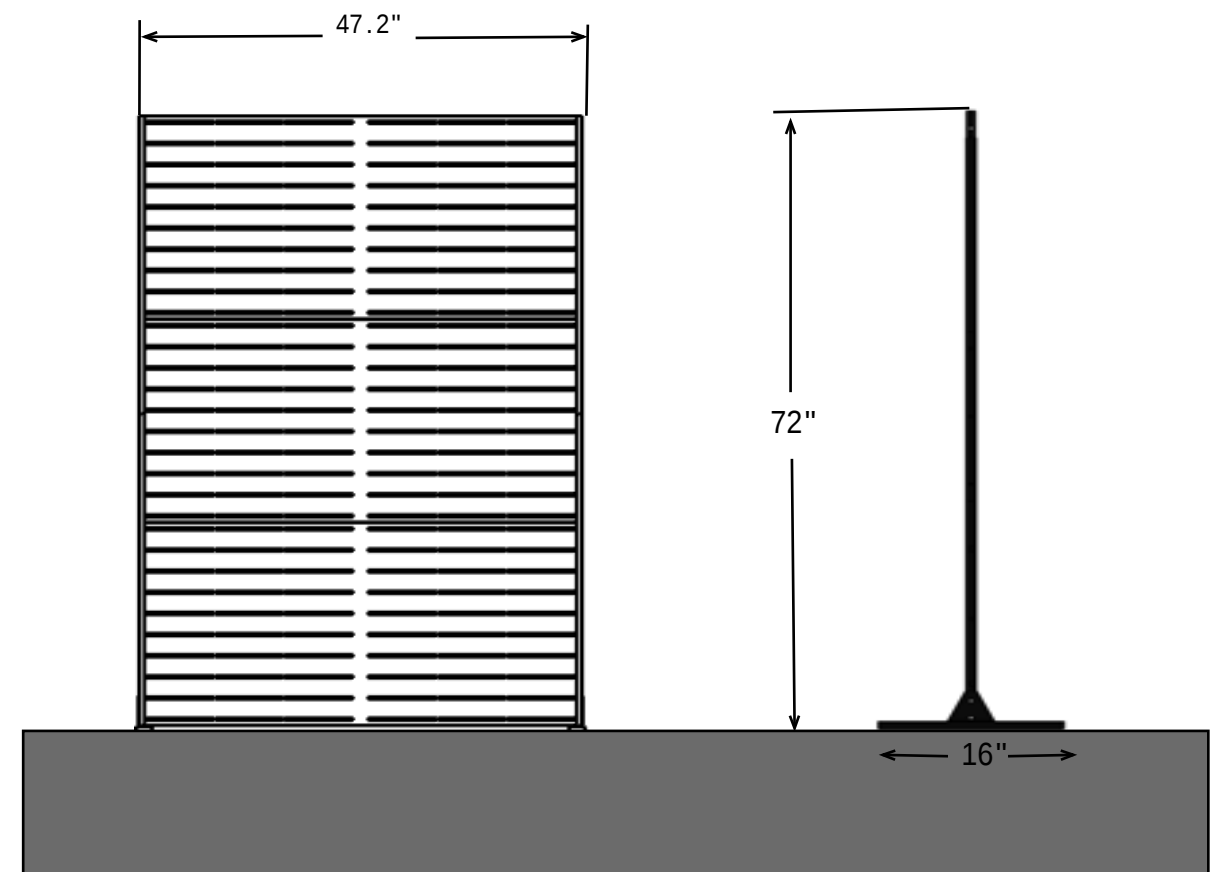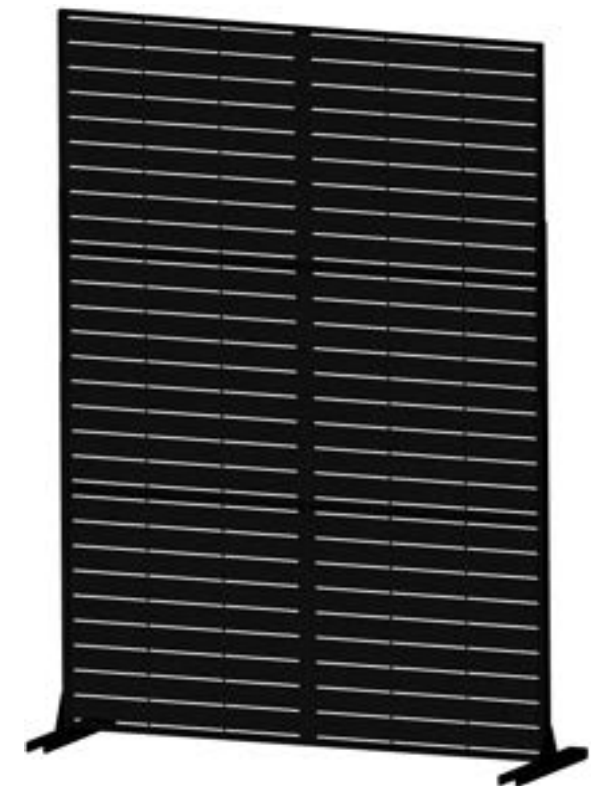

Before Assembling


If the privacy screen will be used in a strong wind area, we highly recommend you using four Hex-Head Sleeve Anchors to fix the privacy screen on solid ground.

Before assembling, we recommend:


1. Wear Gloves.





2. Assembling on a soft mat to prevent from scratch and scuf marks.

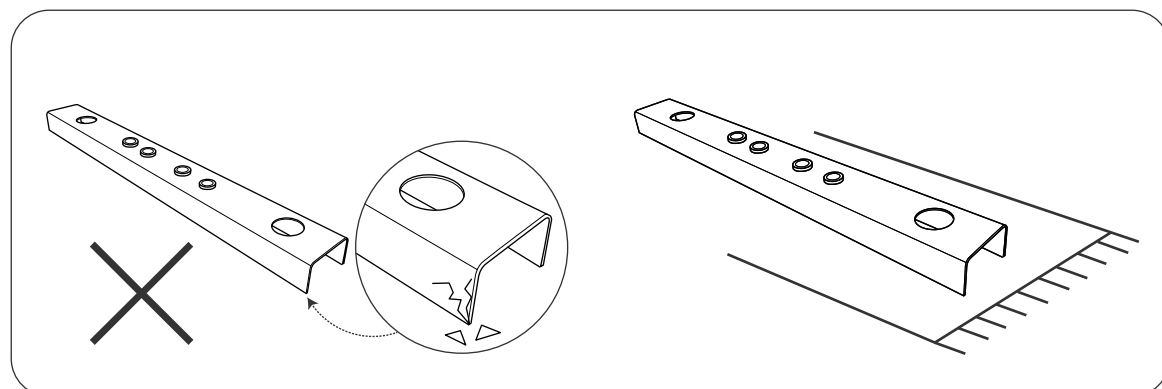

3. Ask for a Helping Hand.

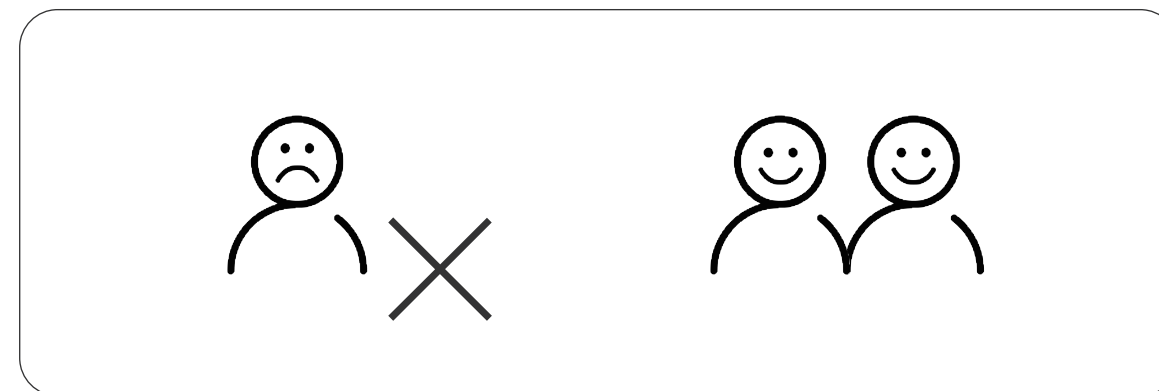


4. Use Hex-Head Sleeve Anchors to fix the privacy screen on solid ground if necessary.

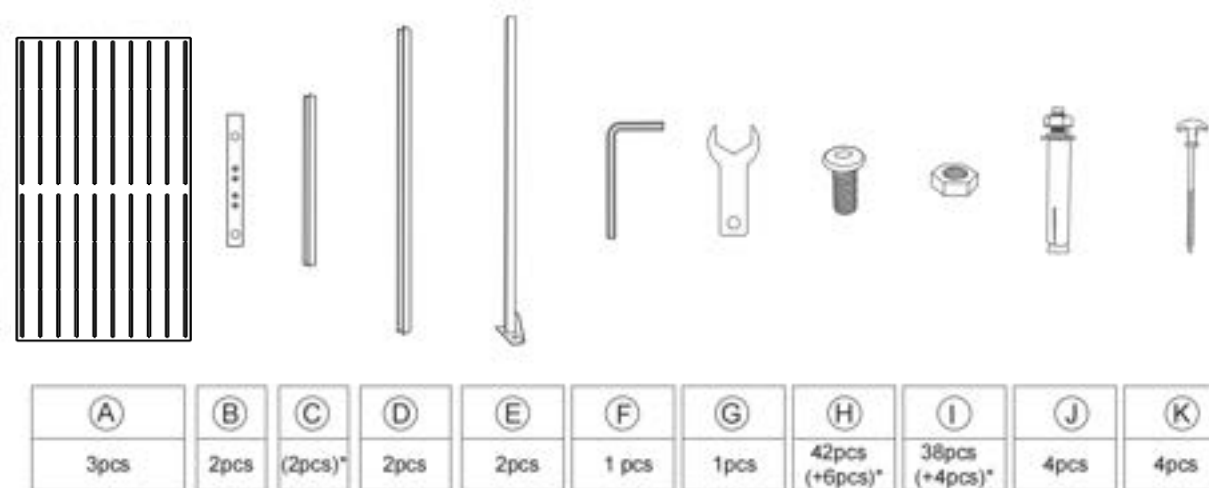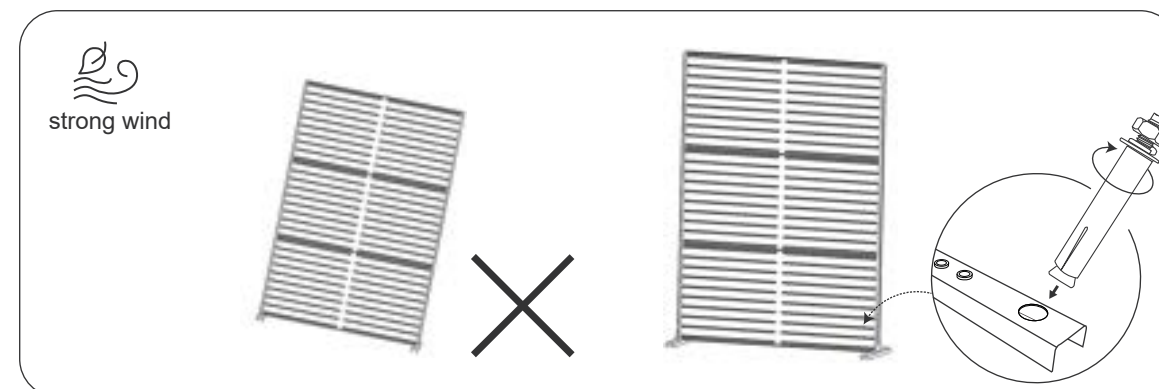


Vertically Assembling


1.

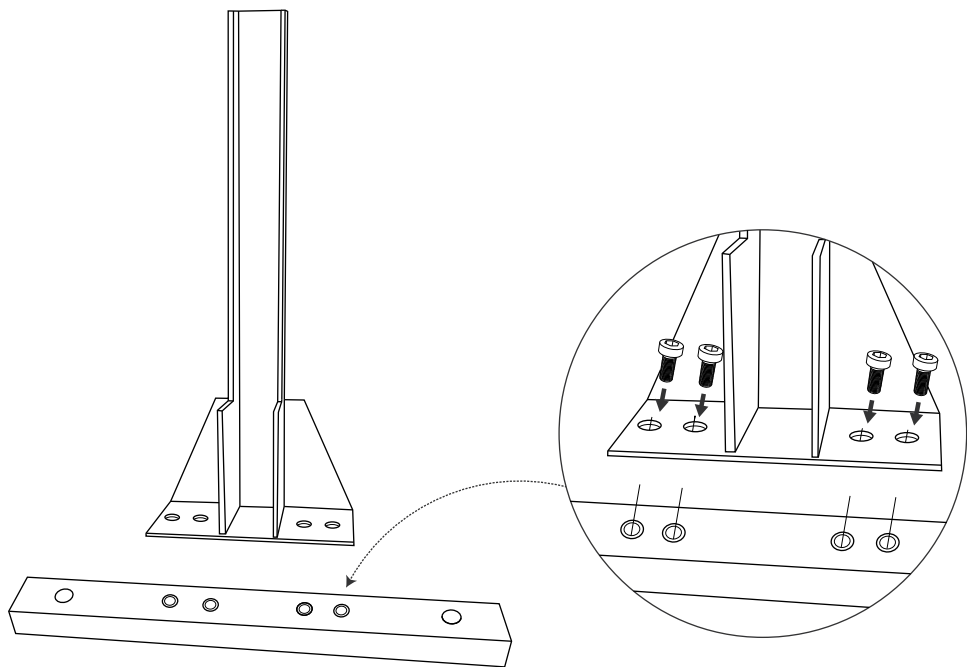


2.

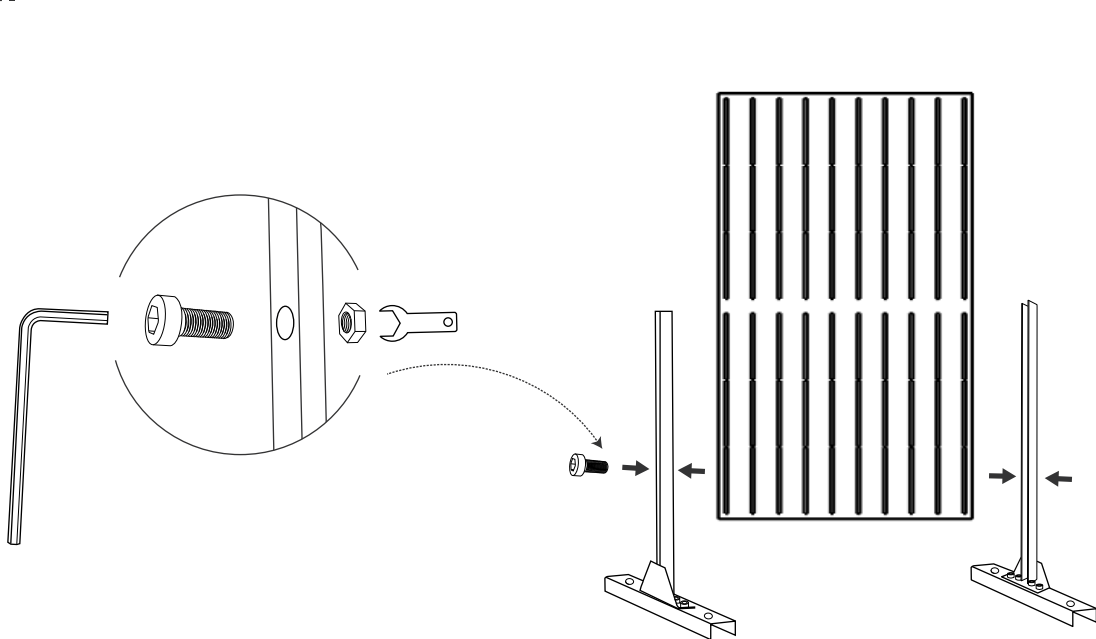

3.

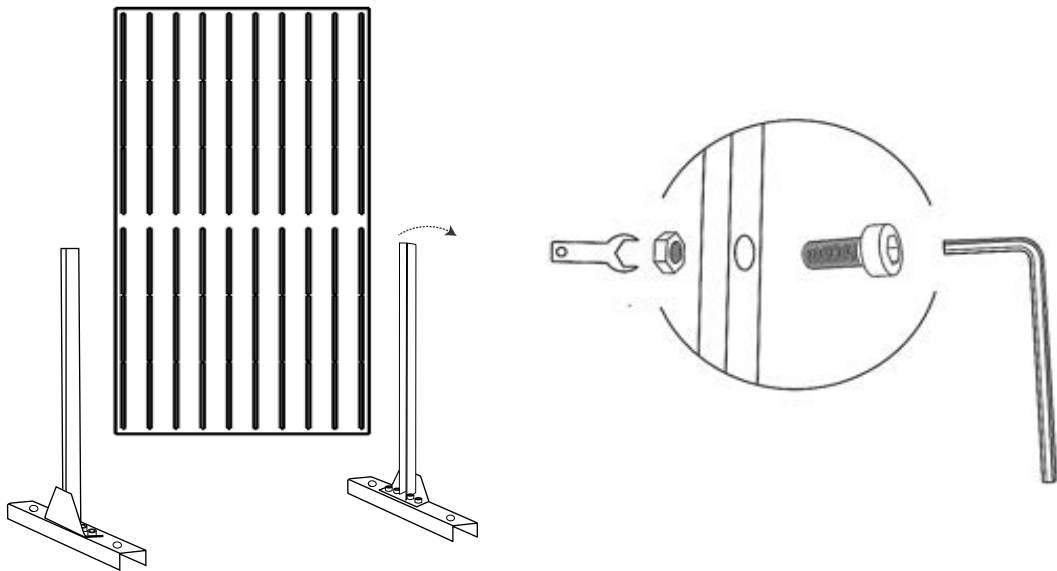


4.

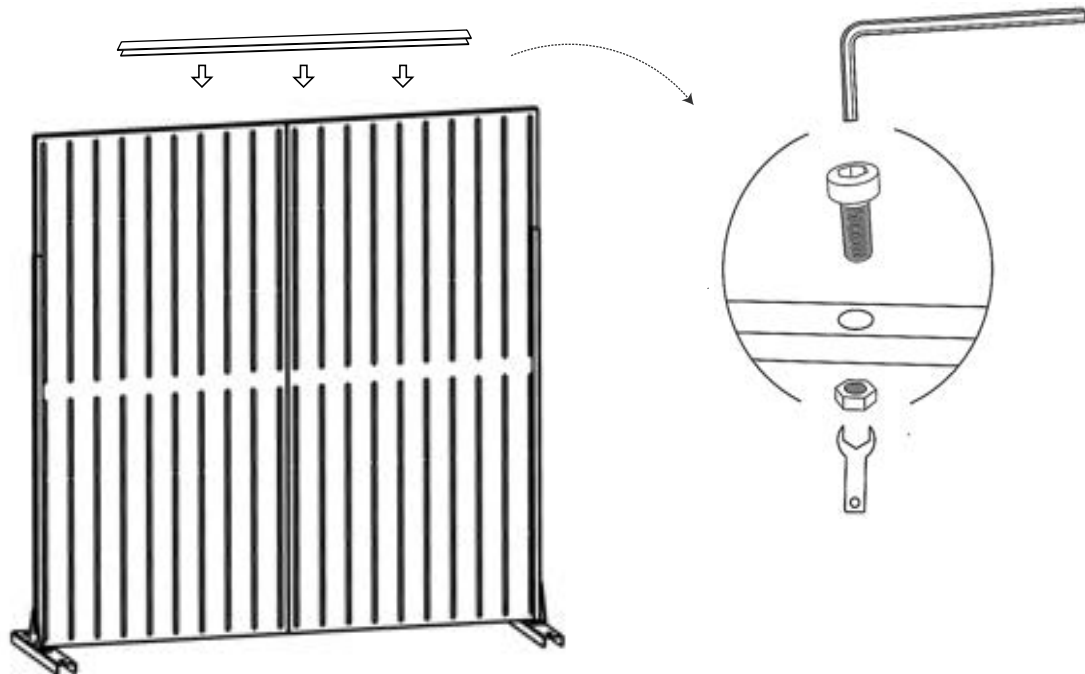


Single Panel Assembling


1.

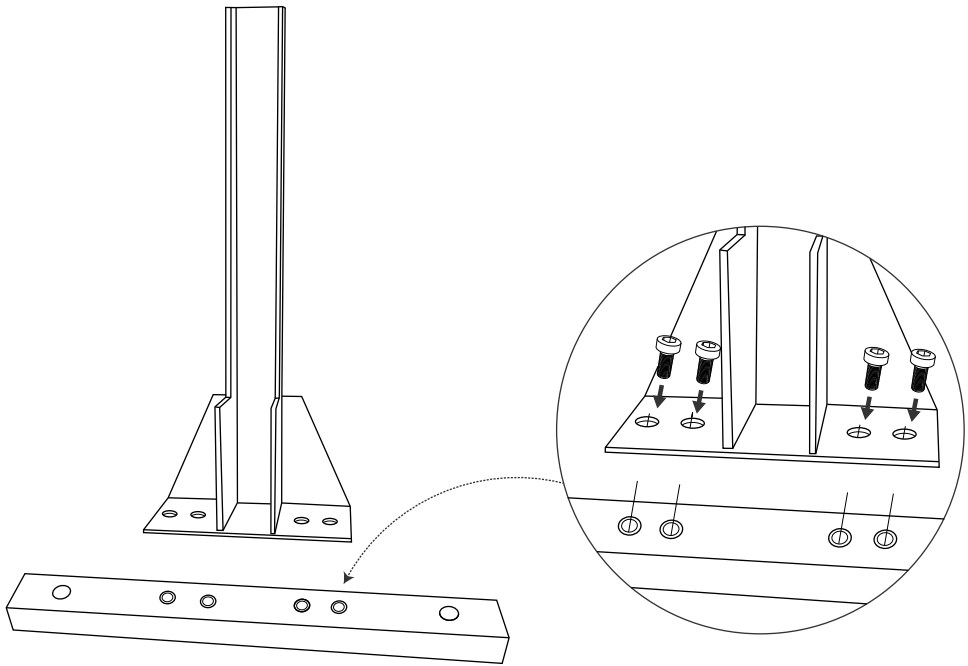


2.

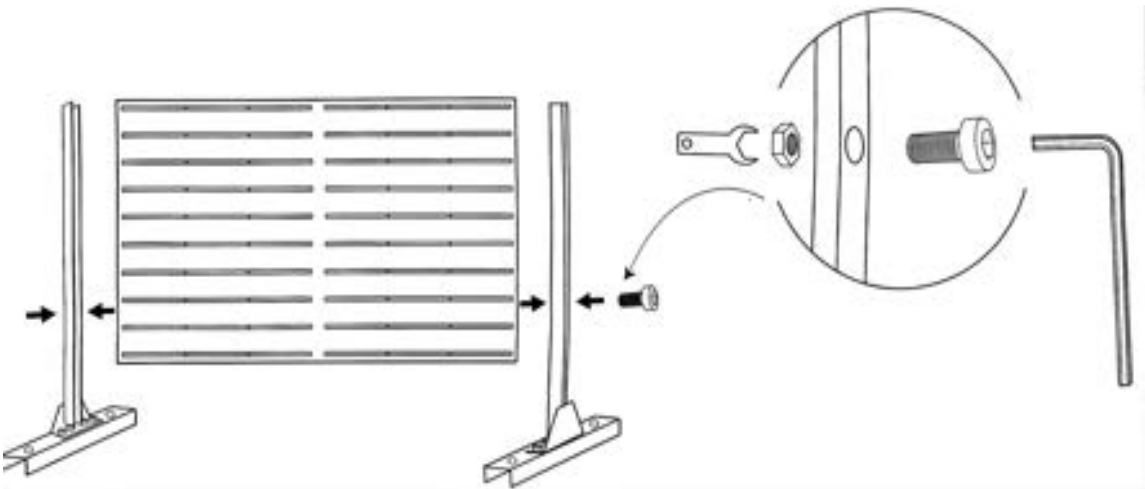


5.

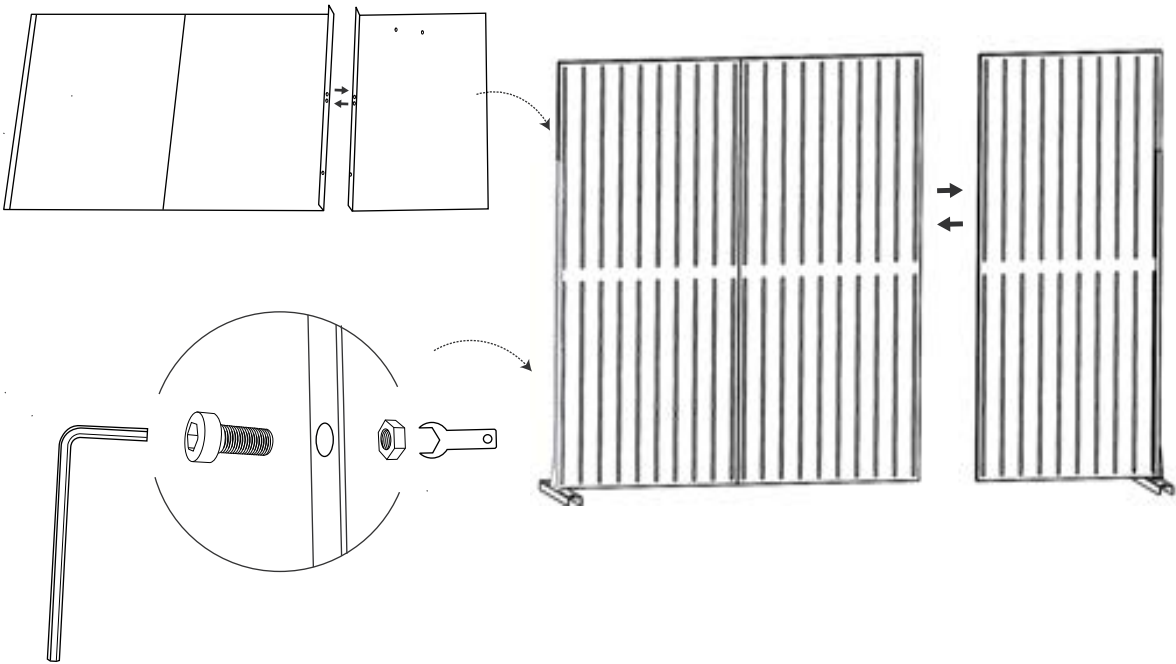


6.

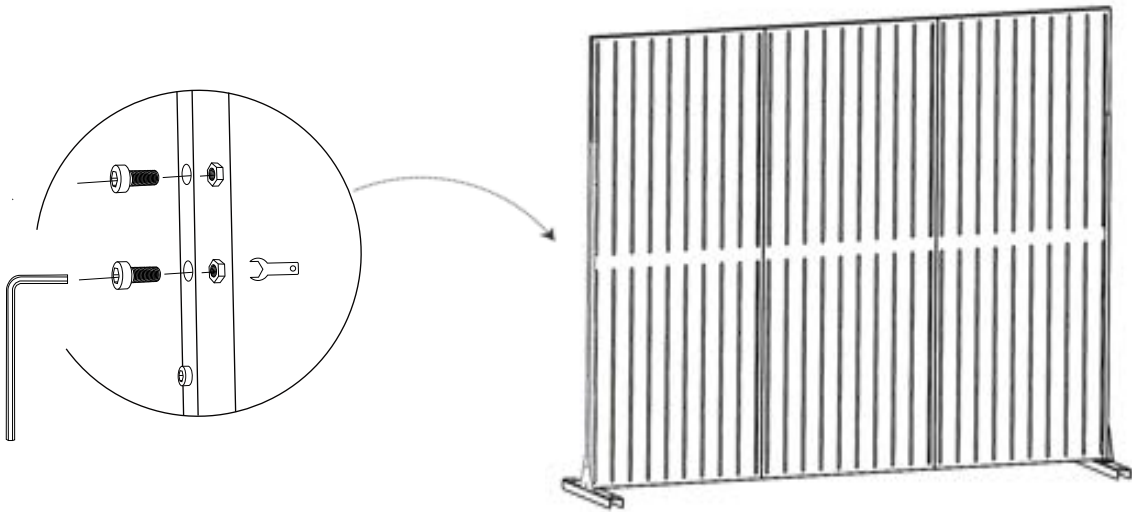


3.

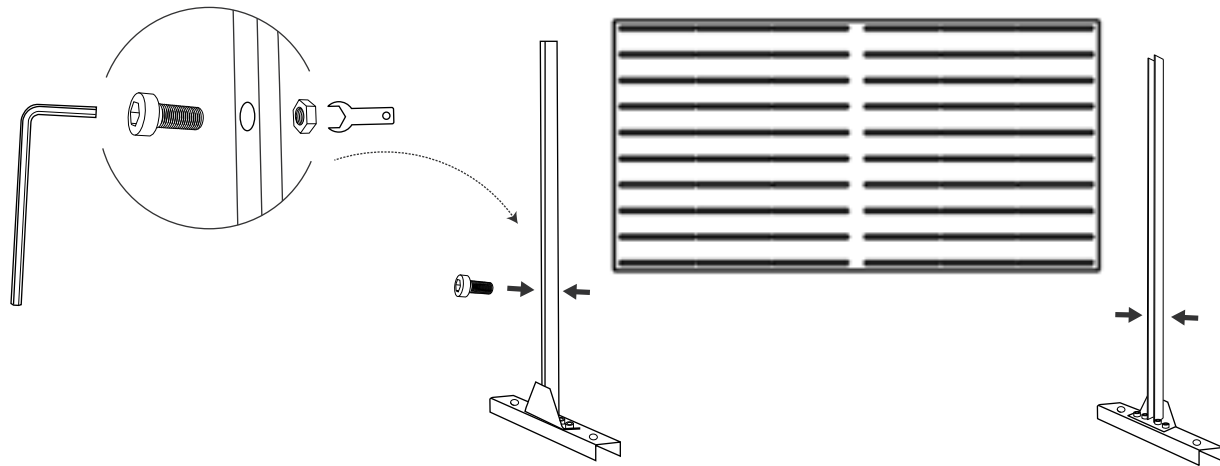


4.

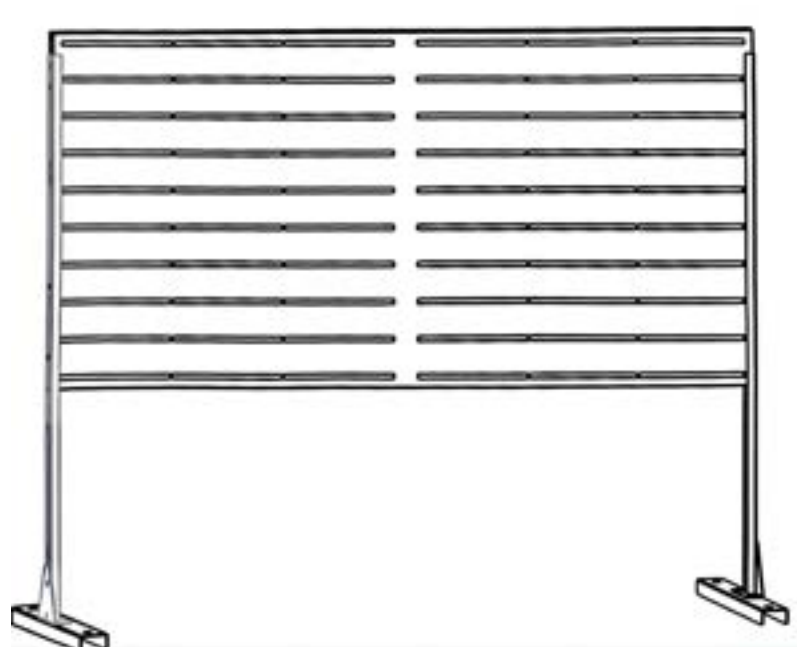

5.

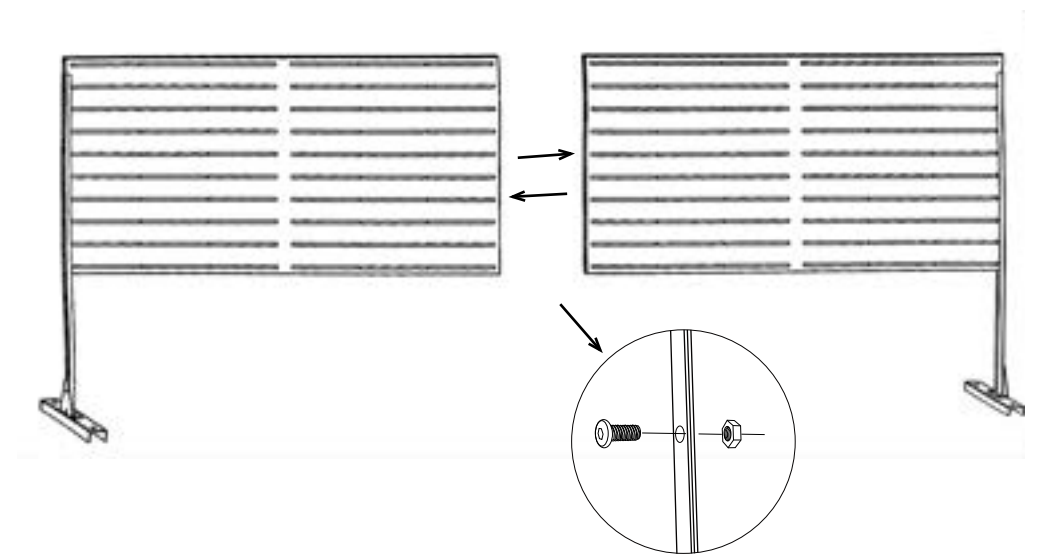


6.

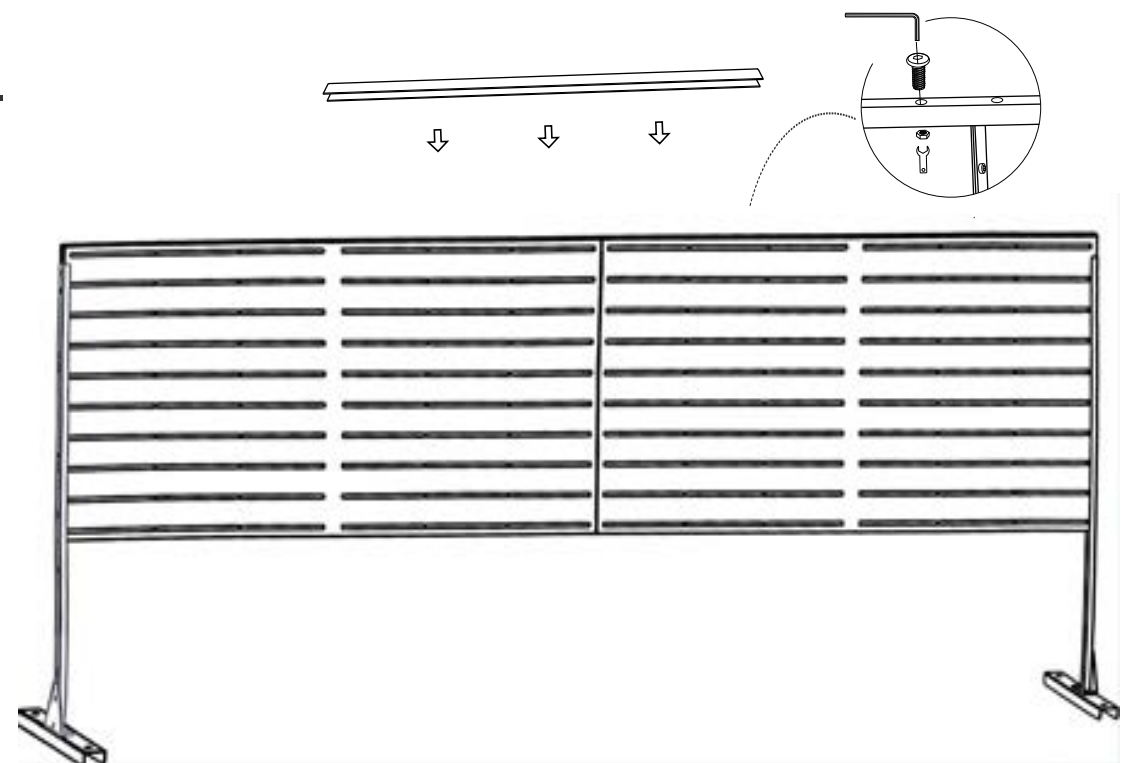


Vertically Assembling


1.

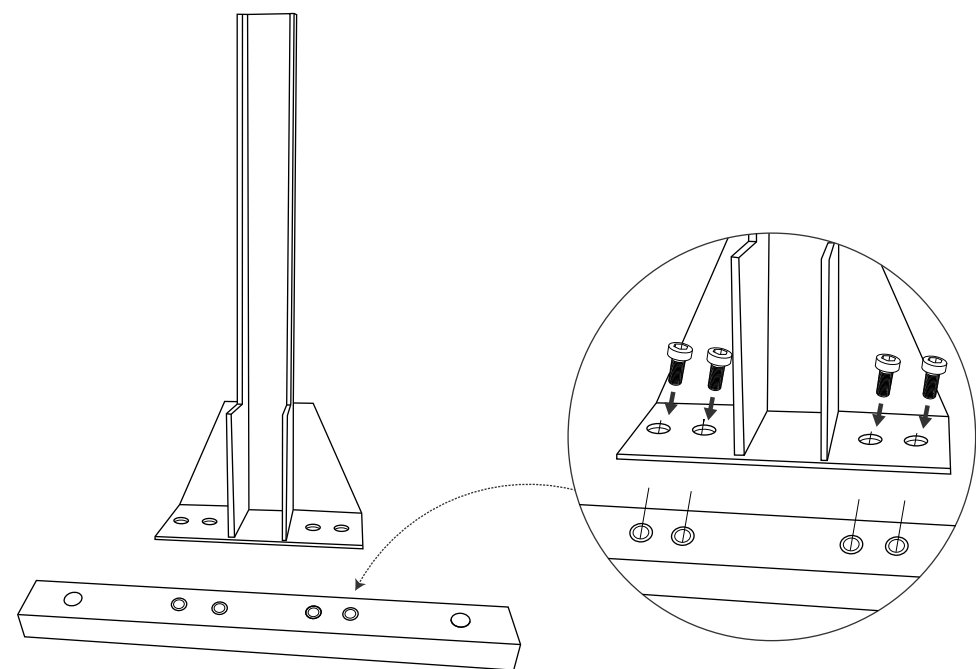


2.

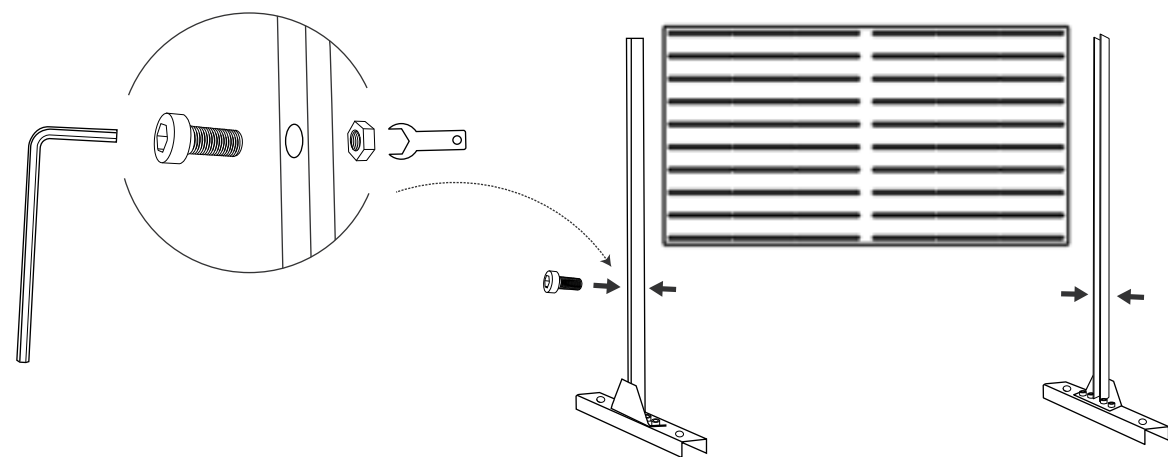


3.

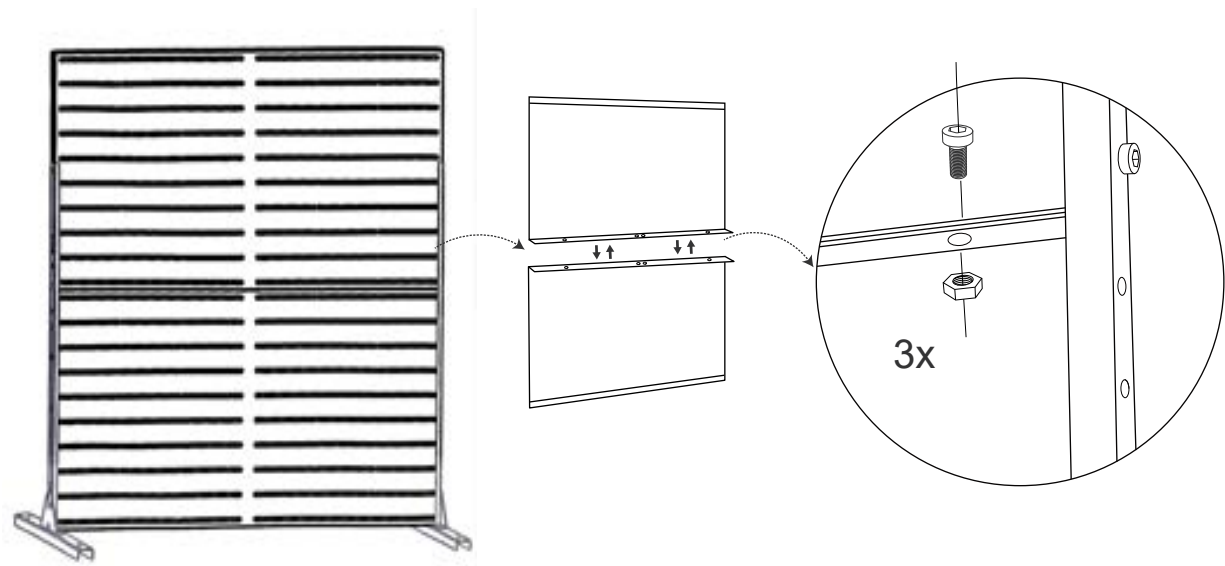


4.

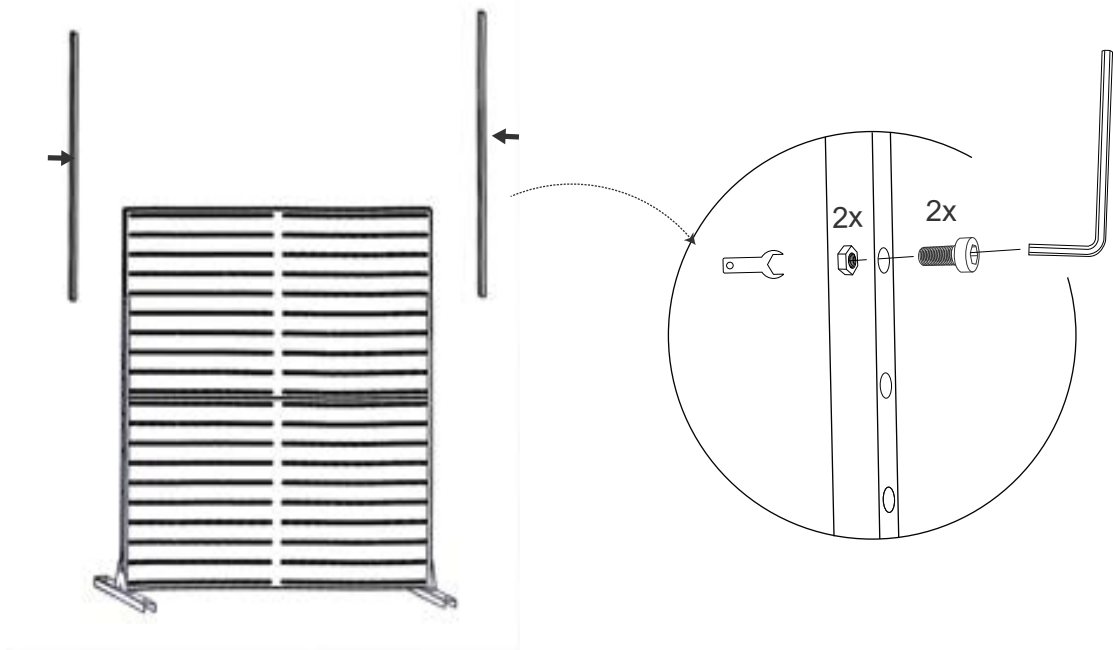


5.

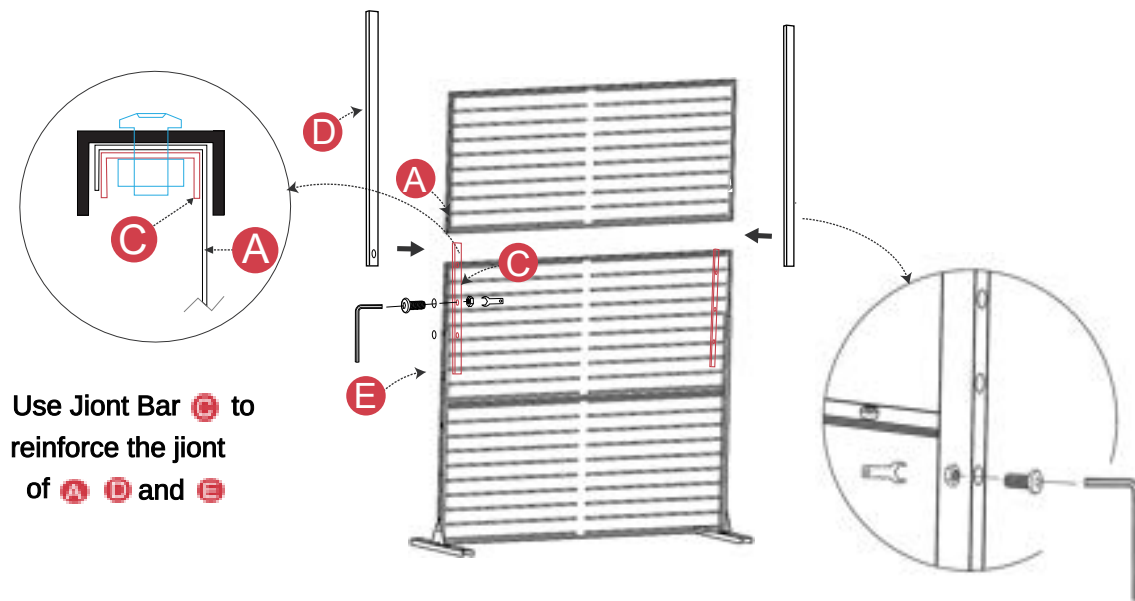


6.

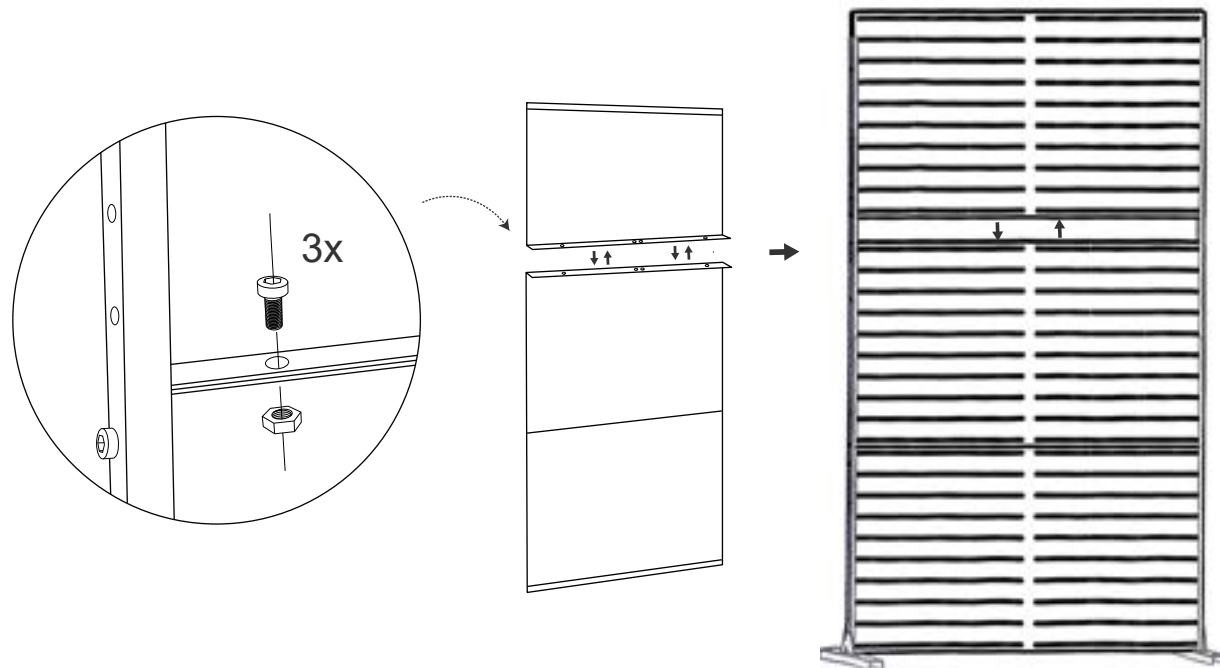

7.

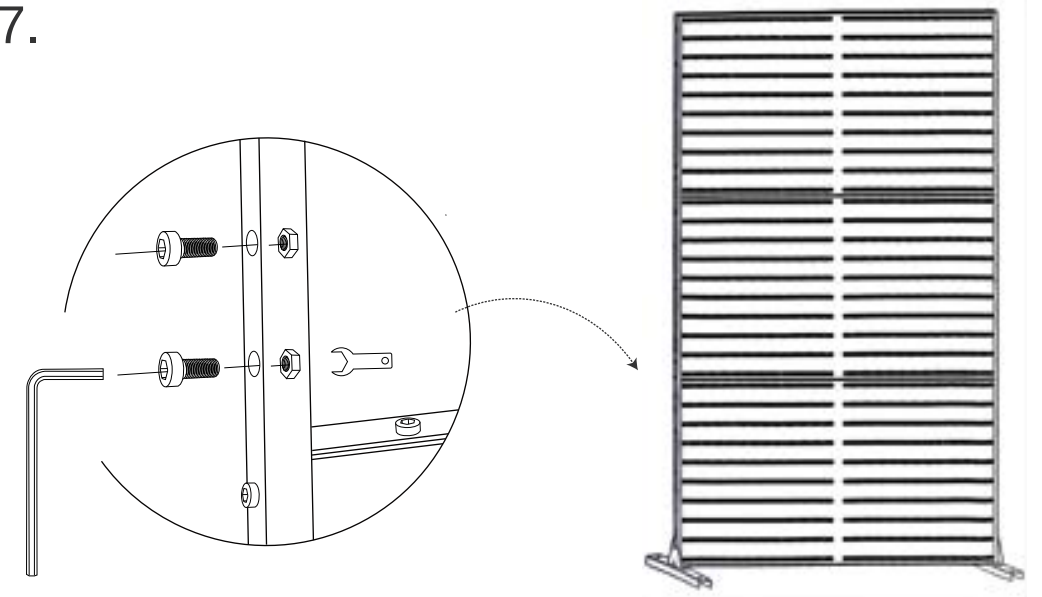

8.

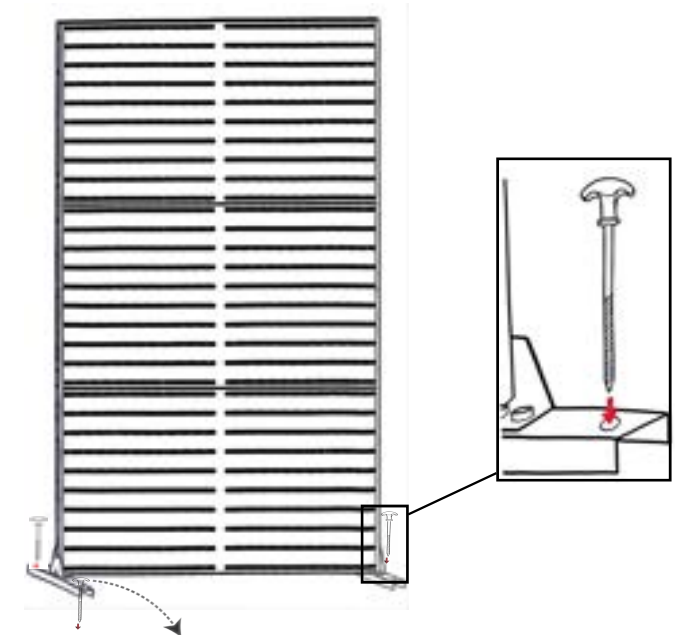

Use these ground pegs to secure the metal privacy screen in the soil