





ASSEMBLY INSTRUCTIONS

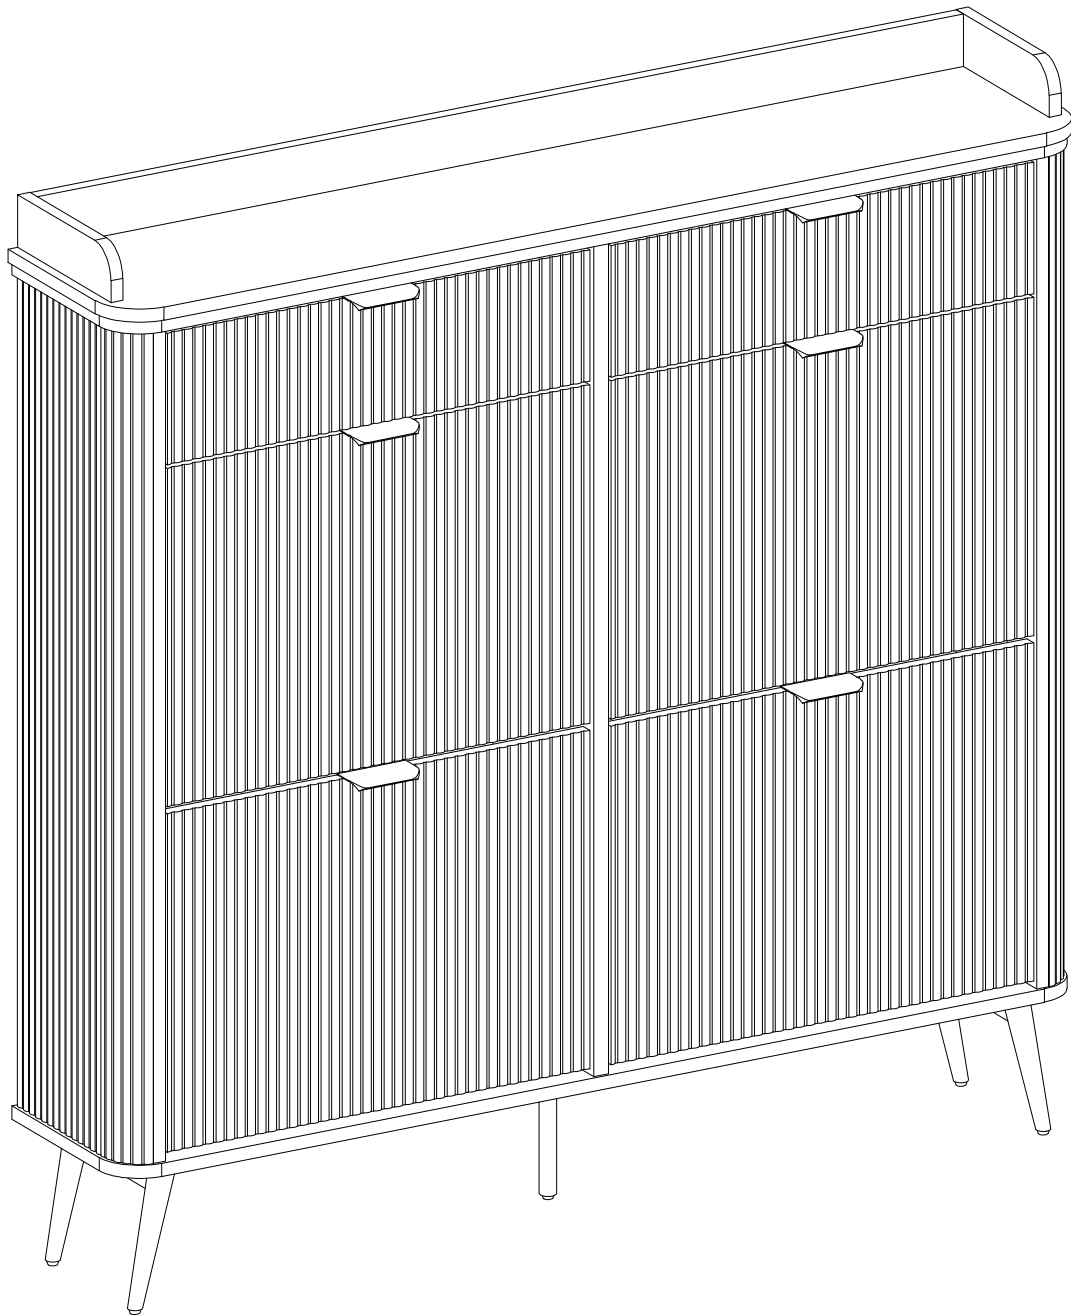

SAFETY TIPS: Static charge may cause dust on foam – clean with a dry or damp cloth. Small foam strands may be present – handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.

Before You Start


1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

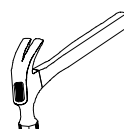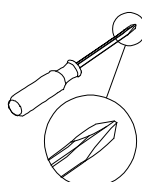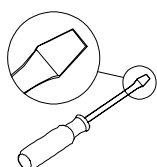


8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS










1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

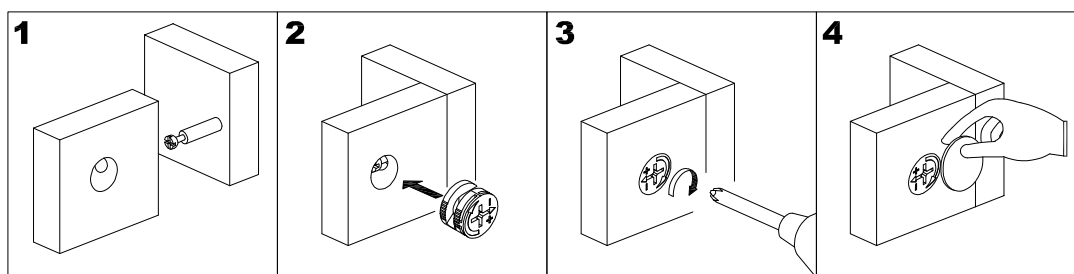


PARTS LIST

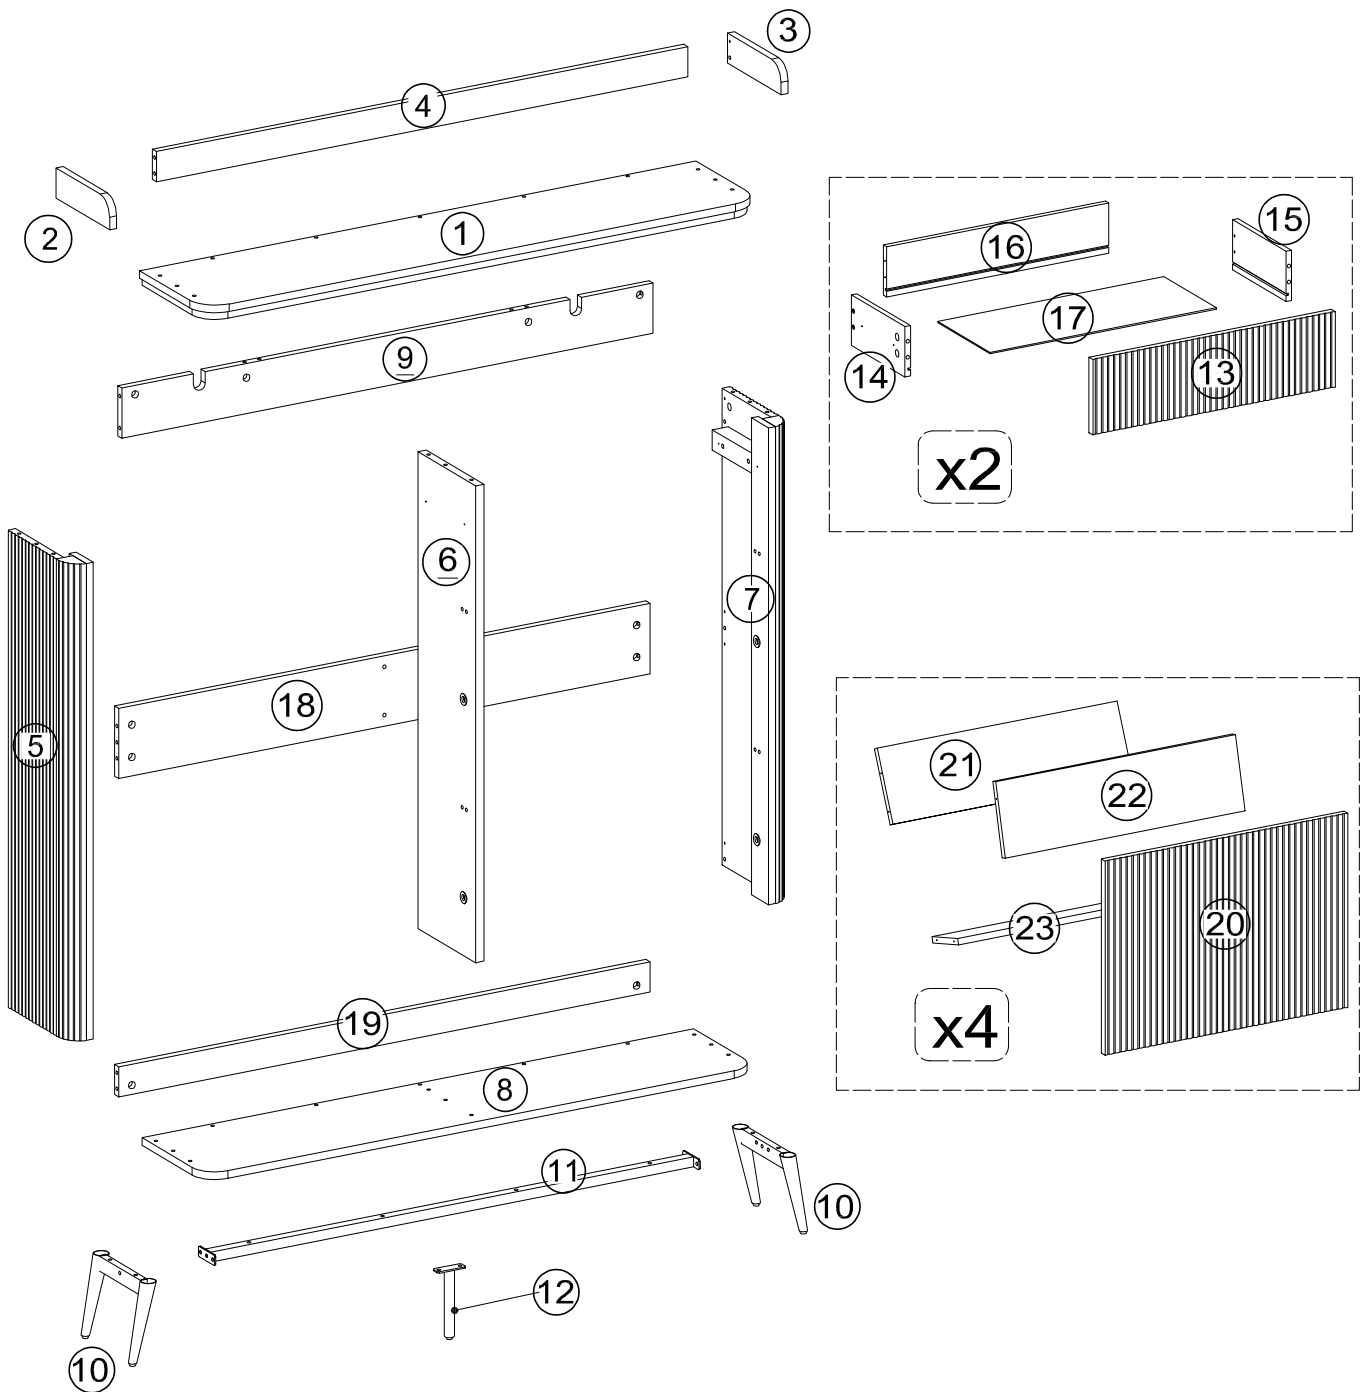



HARDWARE LIST

A		Ø6x35mm	Cam bolt	26 pcs
B		Ø15x9mm	Cam lock	26 pcs
C		Ø30mm	Cam cover	24 pcs
D		Ø8x30mm	Wooden dowel	22 pcs
E			Pull	6 pcs
F		Ø3.5x12mm	Pull screw	12 pcs
G		Ø4x38mm	Screw	8 pcs
H		M 4	Hex key	1 pc
I			Glue tube	1 pc
J		Ø6x50mm	Screw	18 pcs
K		200mm	Drawer slider	2 set
L			Left shoe cubby bracket	4 pcs
M			Right shoe cubby bracket	4 pcs
N		Ø3.5x16mm	Screw	64 pcs
O		Ø6x13mm	Bolt	6 pcs
P		Ø6x40mm	Bolt	6 pcs
Q		Ø6x30mm	Bolt	4 pcs
R			Tipping restraint	2 set
S			Stopper	8 pcs
T			Spacer	8 pcs
U		M4x8.5mm	Screw	8 pcs
V		Ø3.5x12mm	Screw	16 pcs


STEP 1



Ax18

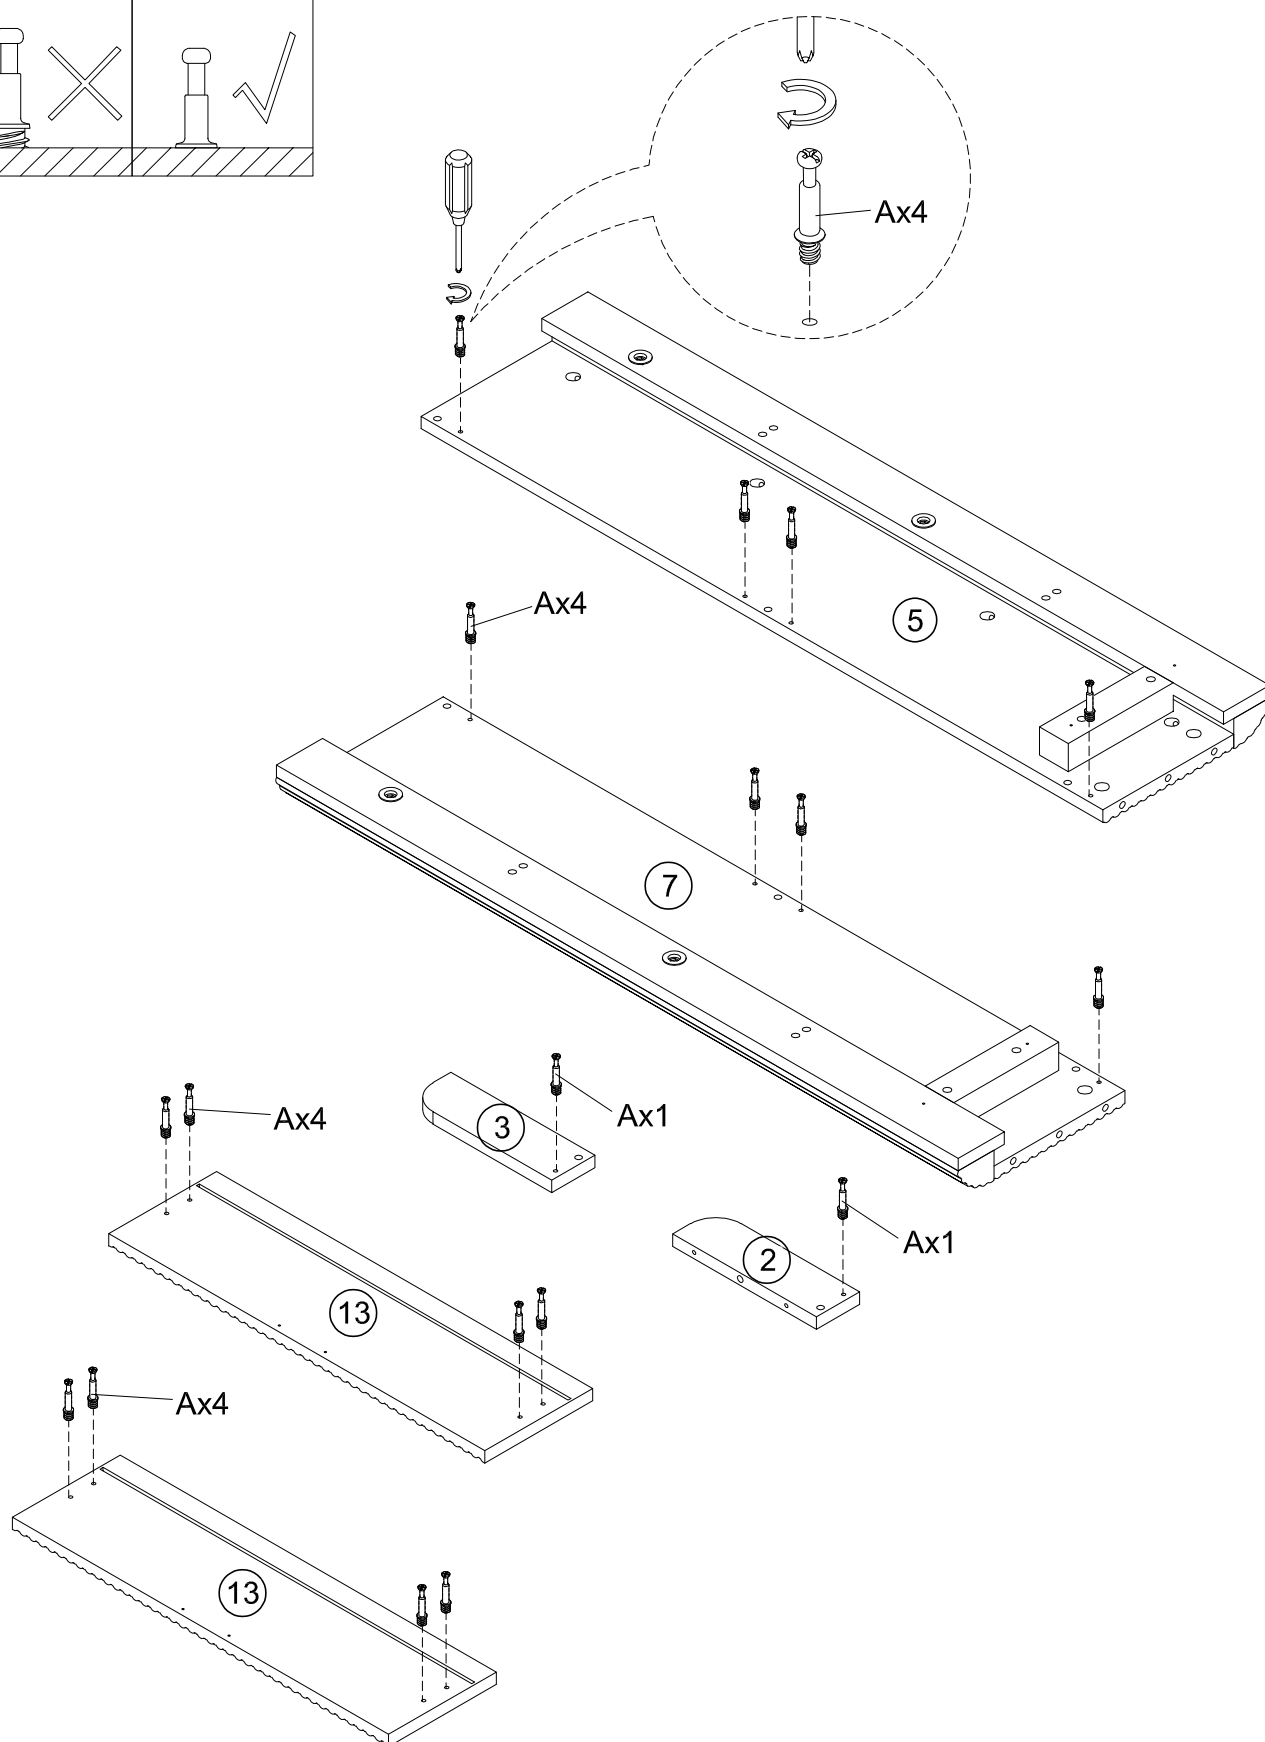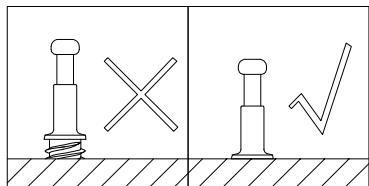


STEP 2

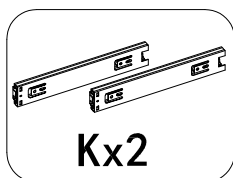

x4




Slider arm

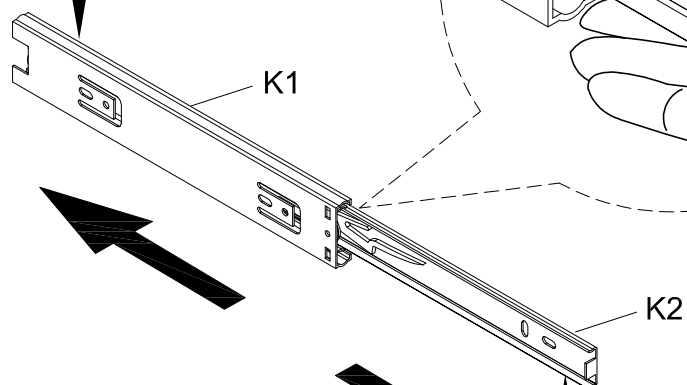

Slider bracket

Sperate the side runners by extending the slide runner all the way forward. Press the plastic release lever of the ball bearing slides up pull the slide runner complete out.

STEP 3

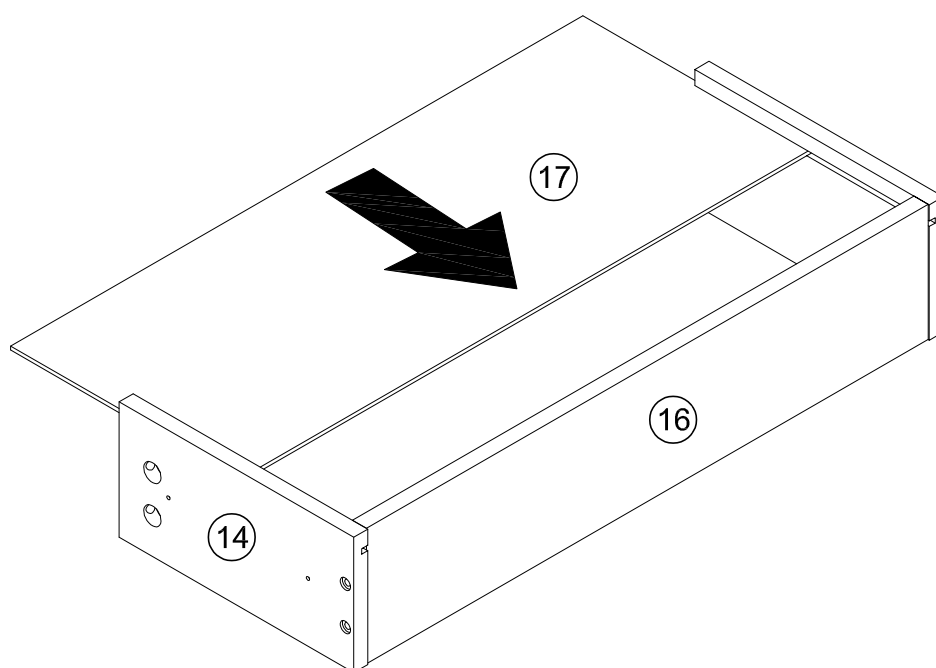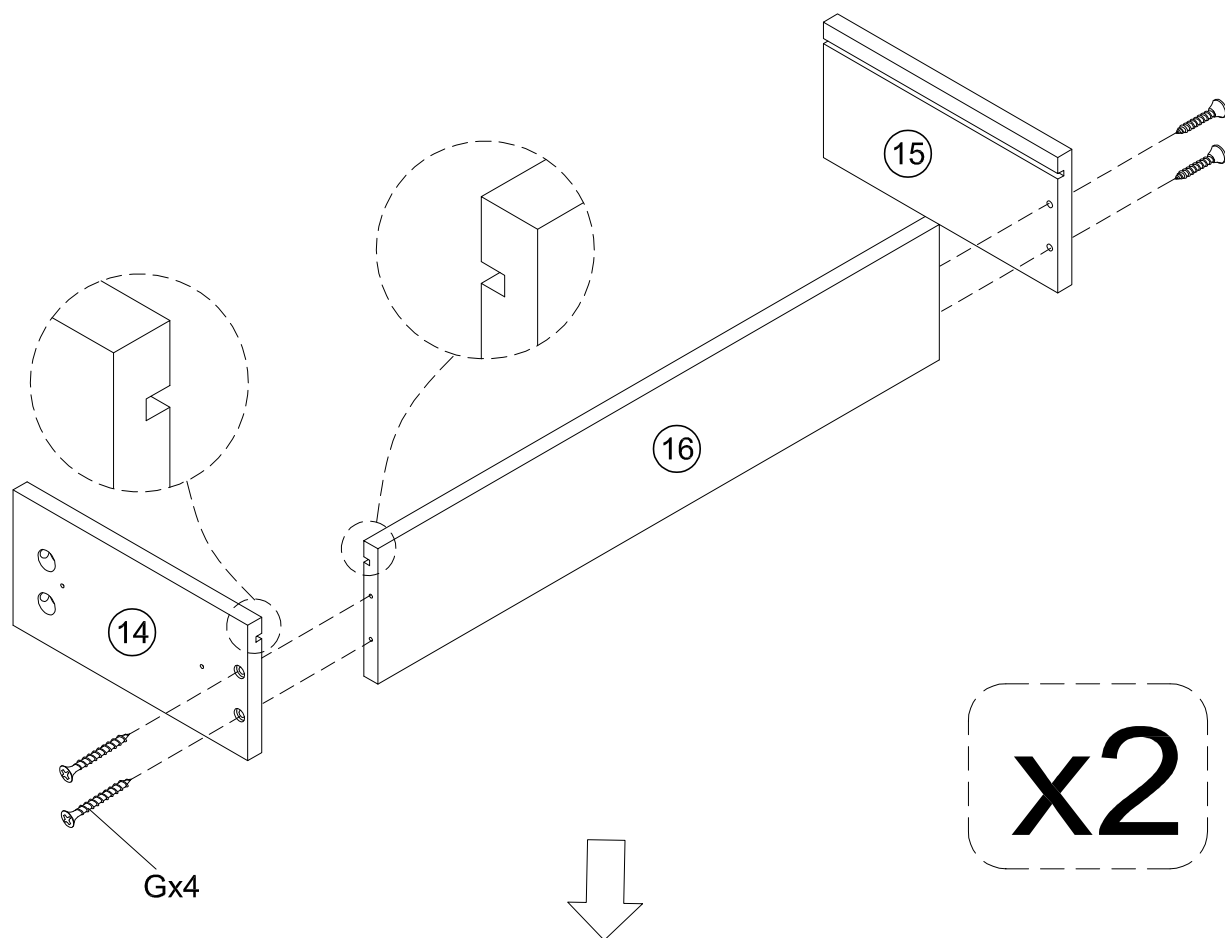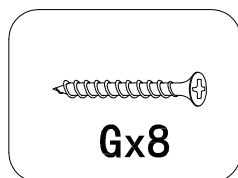

STEP 4




Bx8


Ex2



Fx4


K2x4


Vx8

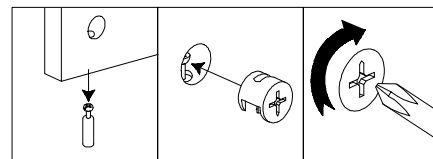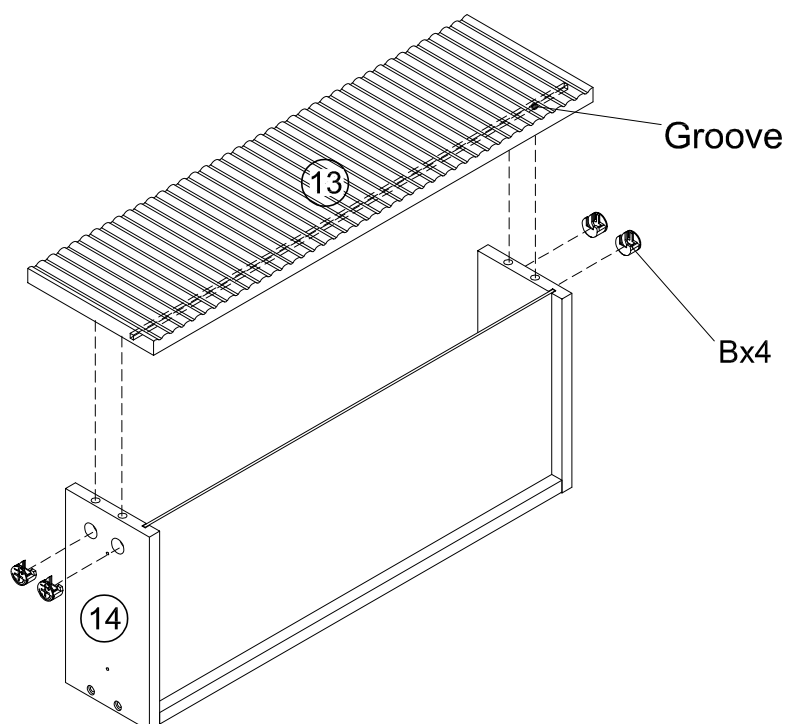

x2

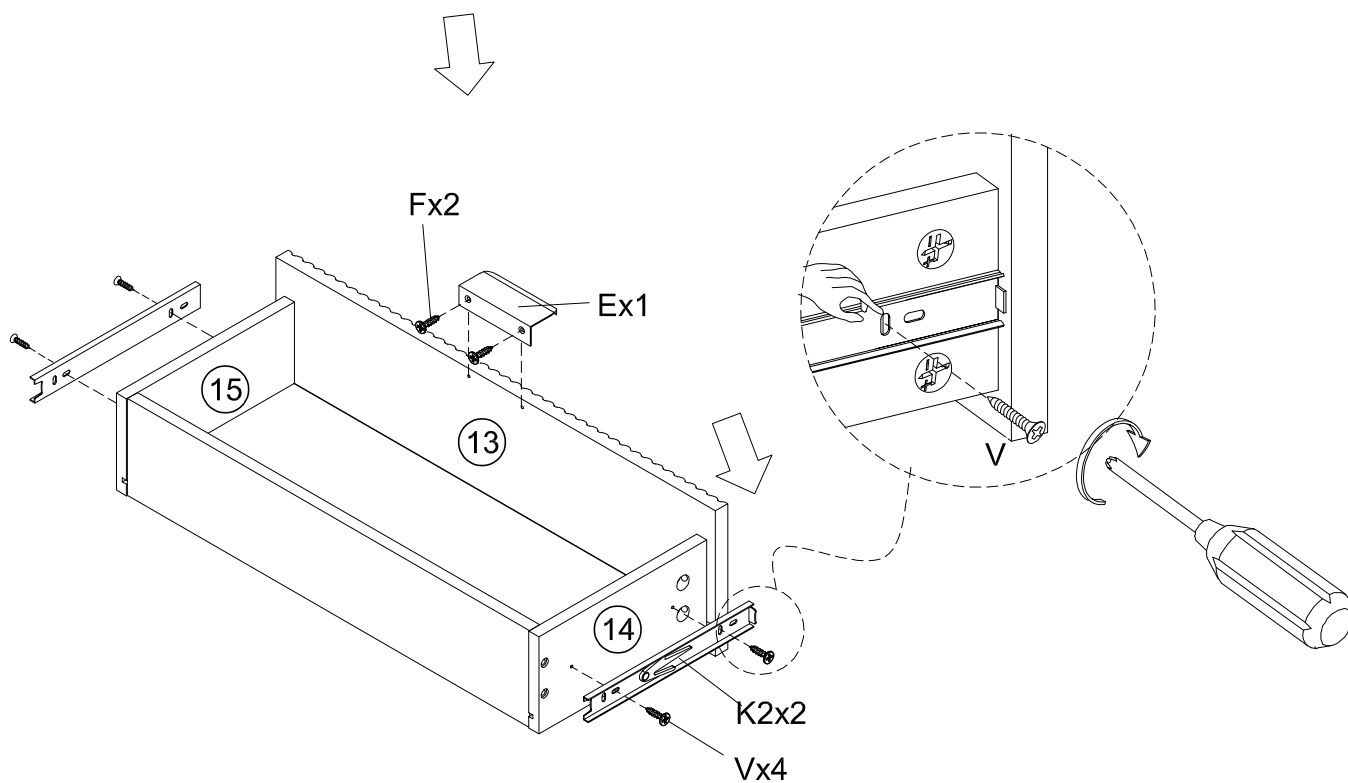

STEP 5




K1x2



Sx4





Vx4


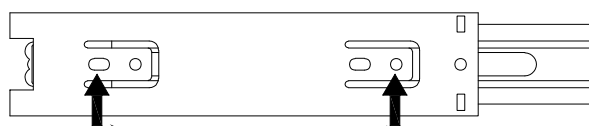


Mounting holes


OPEN

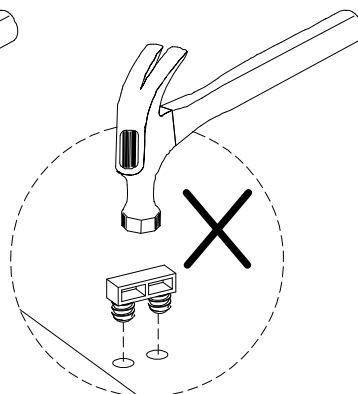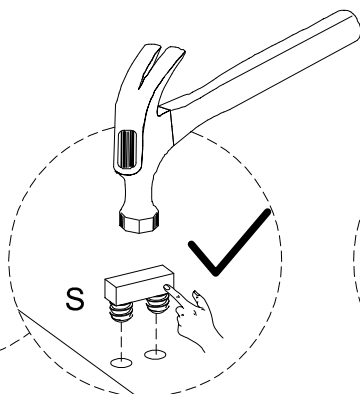

Note the stopper direction.

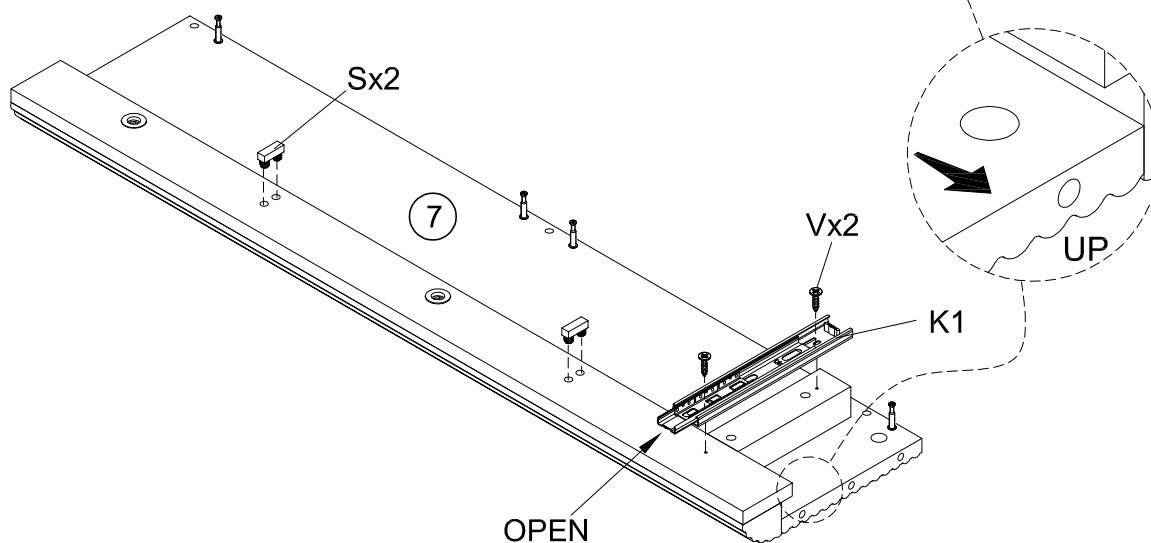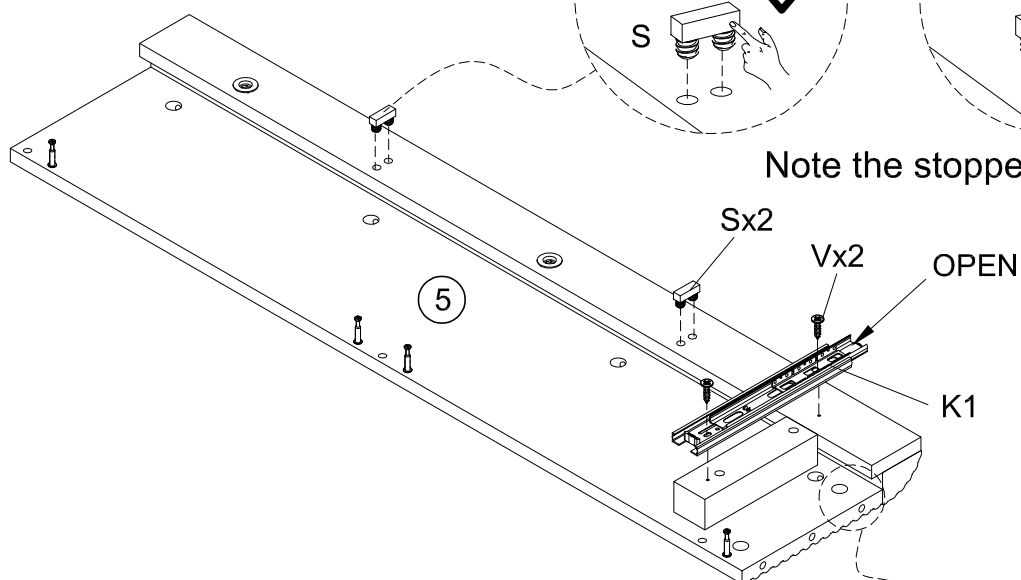

STEP 6




K1x2




Sx4




Vx4

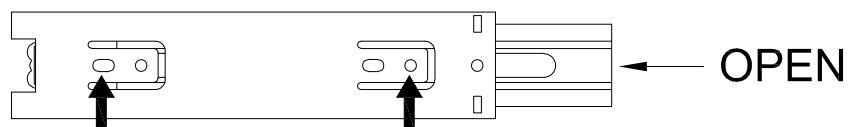

Mounting holes

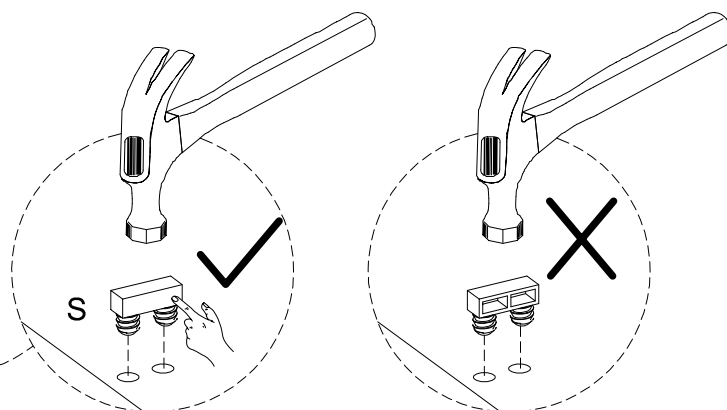


Note the stopper direction.

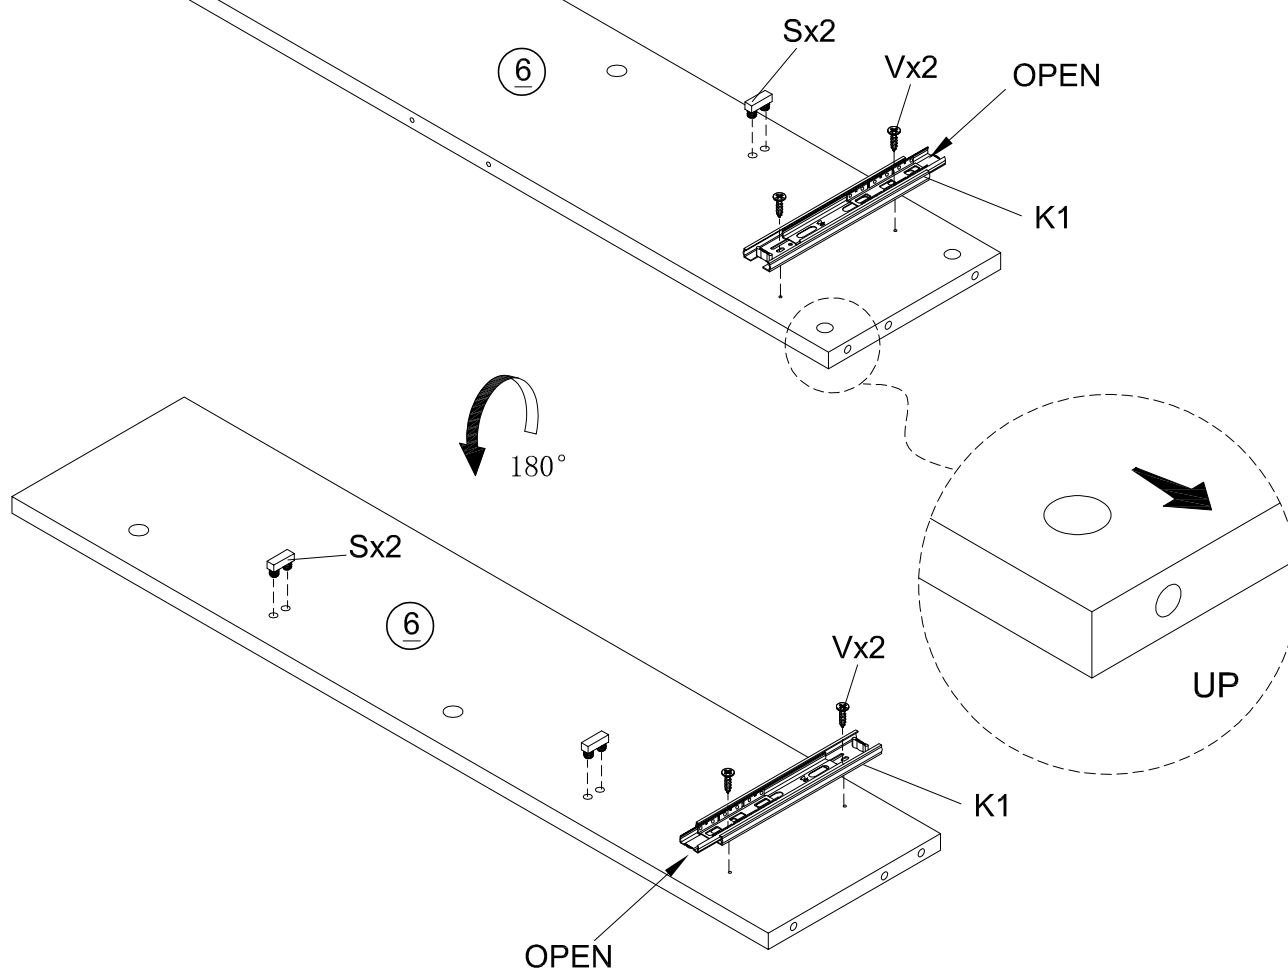

STEP 7



Dx3






Jx2



Hx1





Bx4

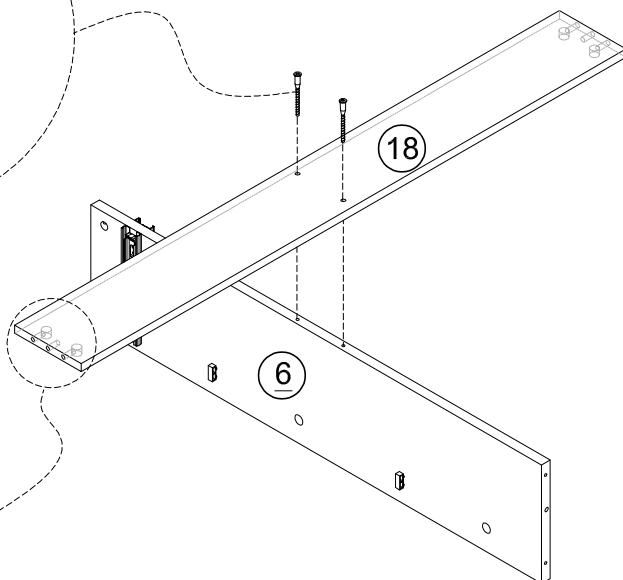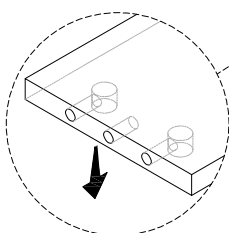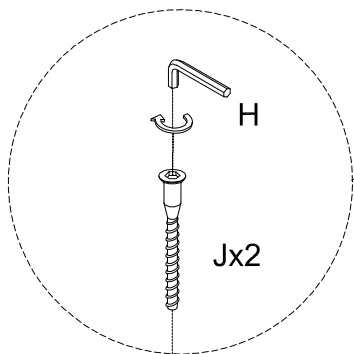

An assistance is required with this step.


The holes for cam lock should be downward.

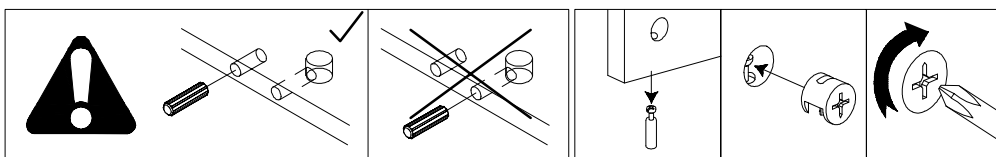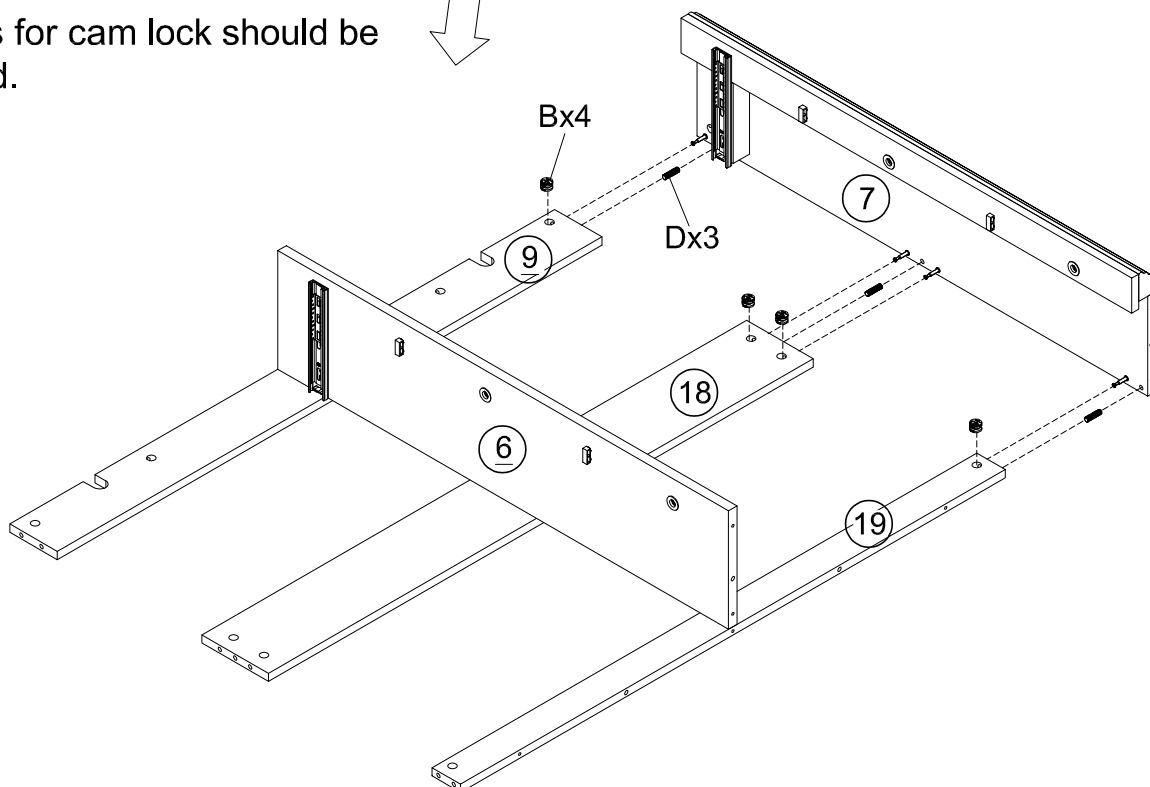

STEP 8



Dx8









Jx9




Hx1



Bx4

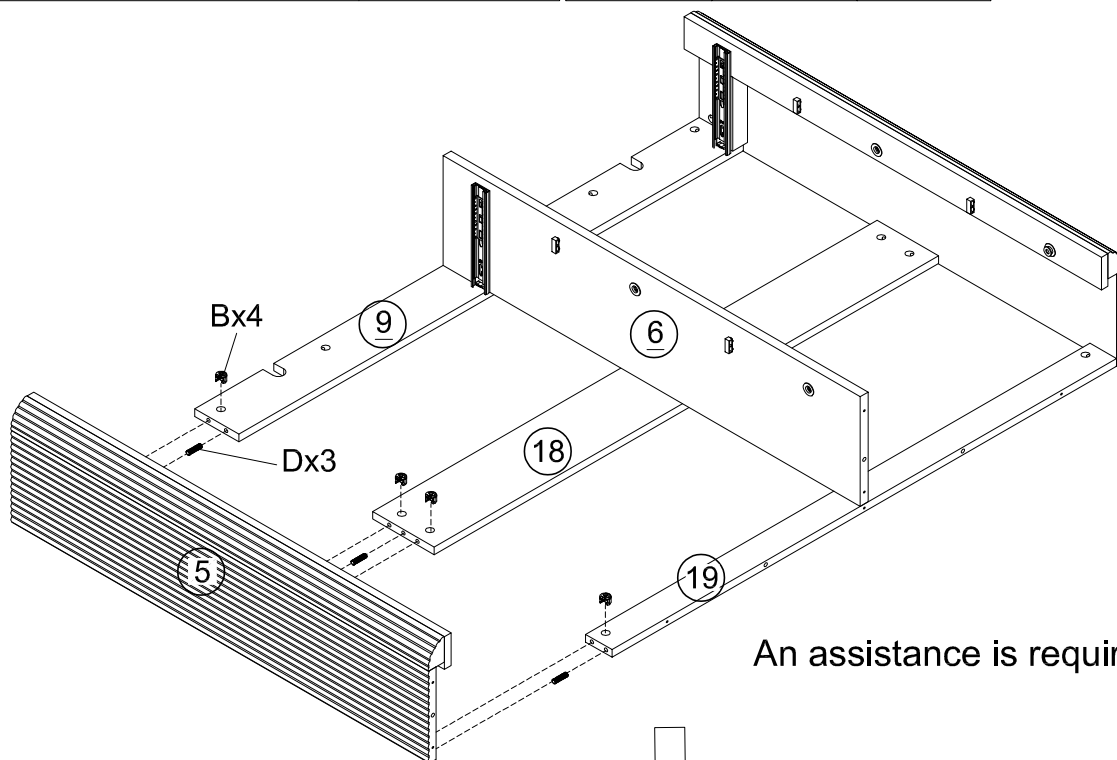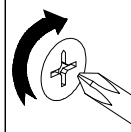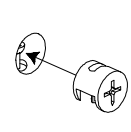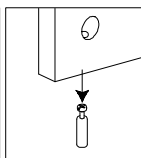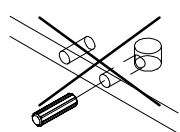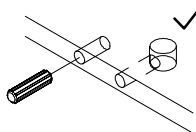

An assistance is required with this step.

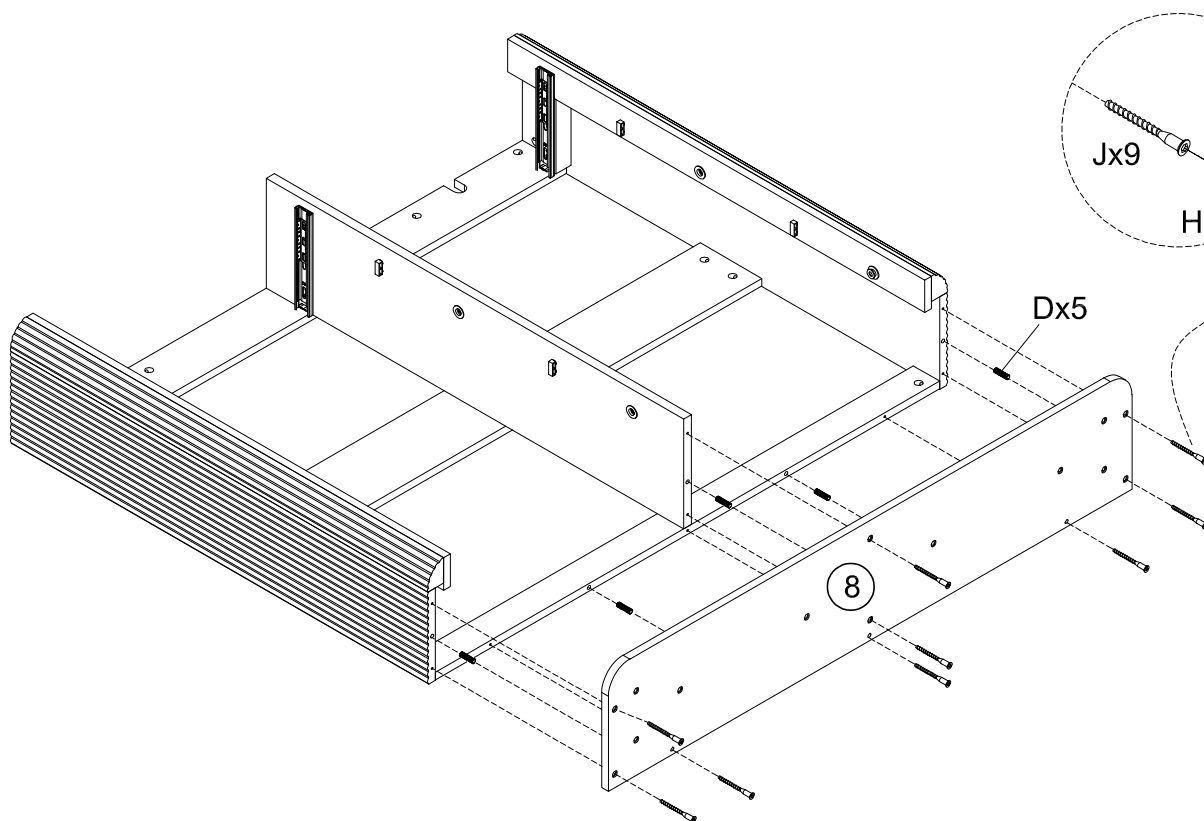


STEP 9

Qx4


Px6

Ox6

Hx1

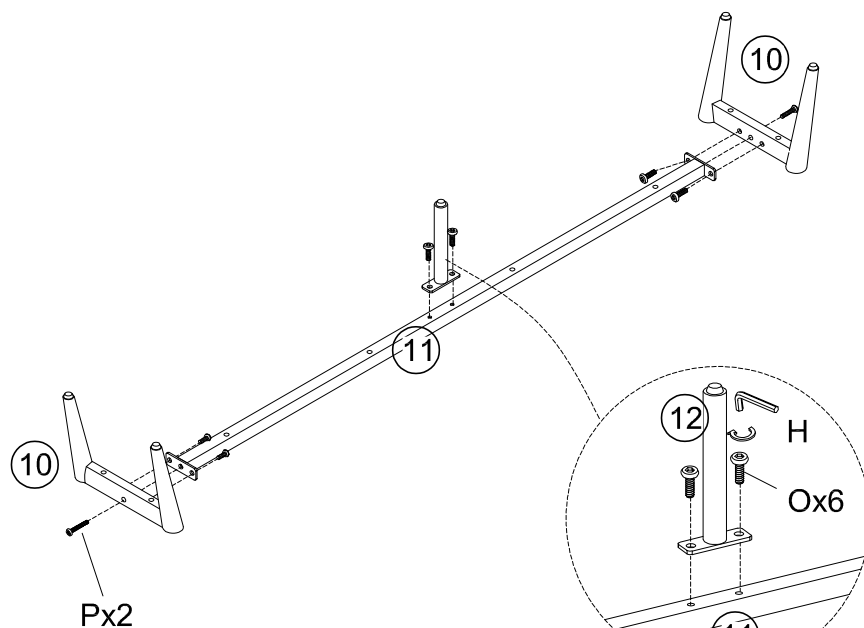

Noted: **DO NOT** Tighten those bolts to secure the assembly successfully in this step.

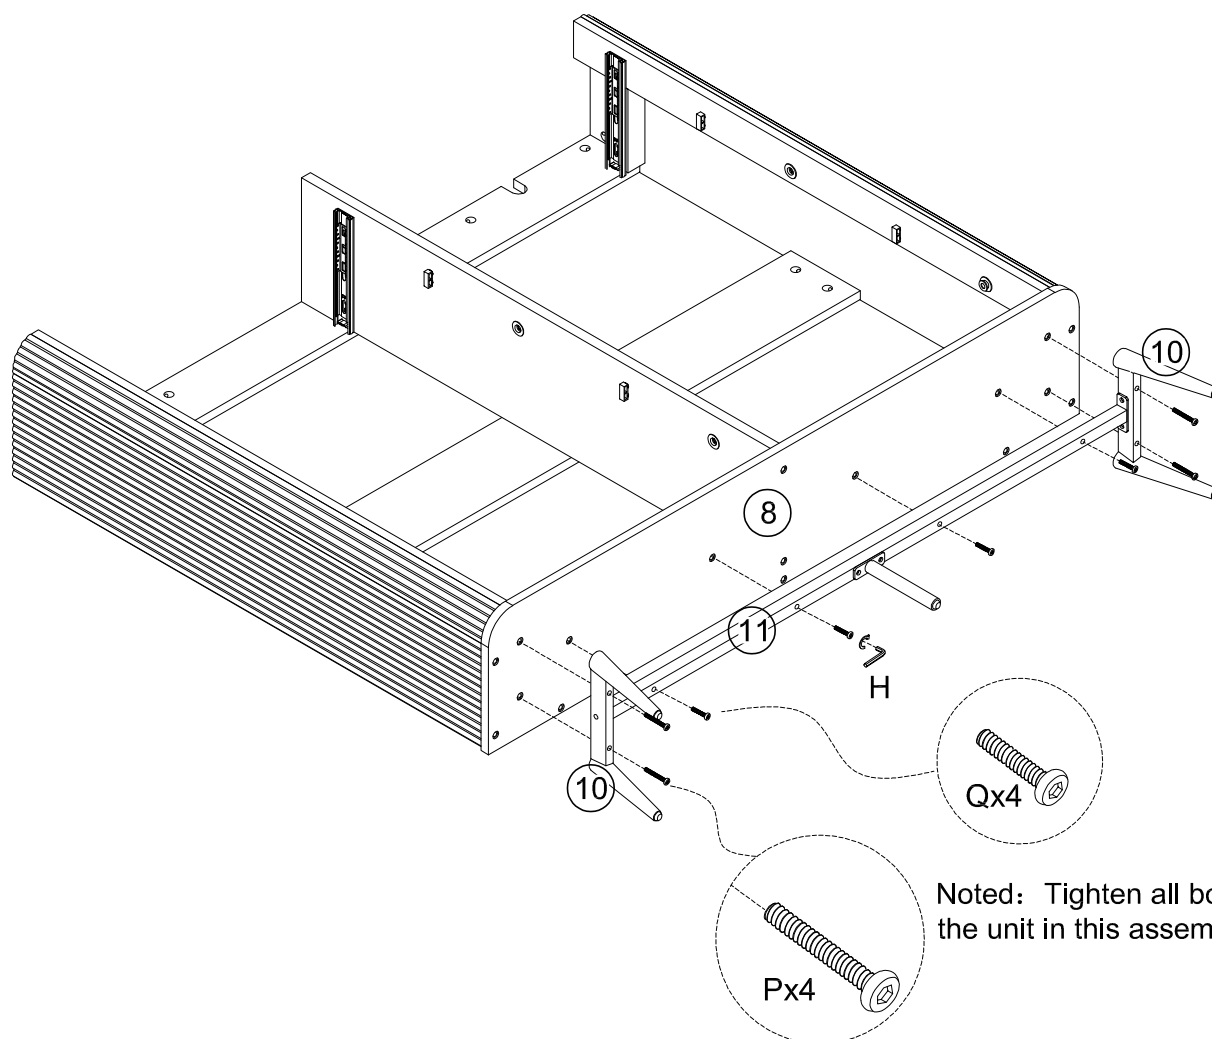


Noted: Tighten all bolts to secure the unit in this assembly step.

STEP 10




Dx6




Jx7




Bx2




Ax8



Hx1




Rx2

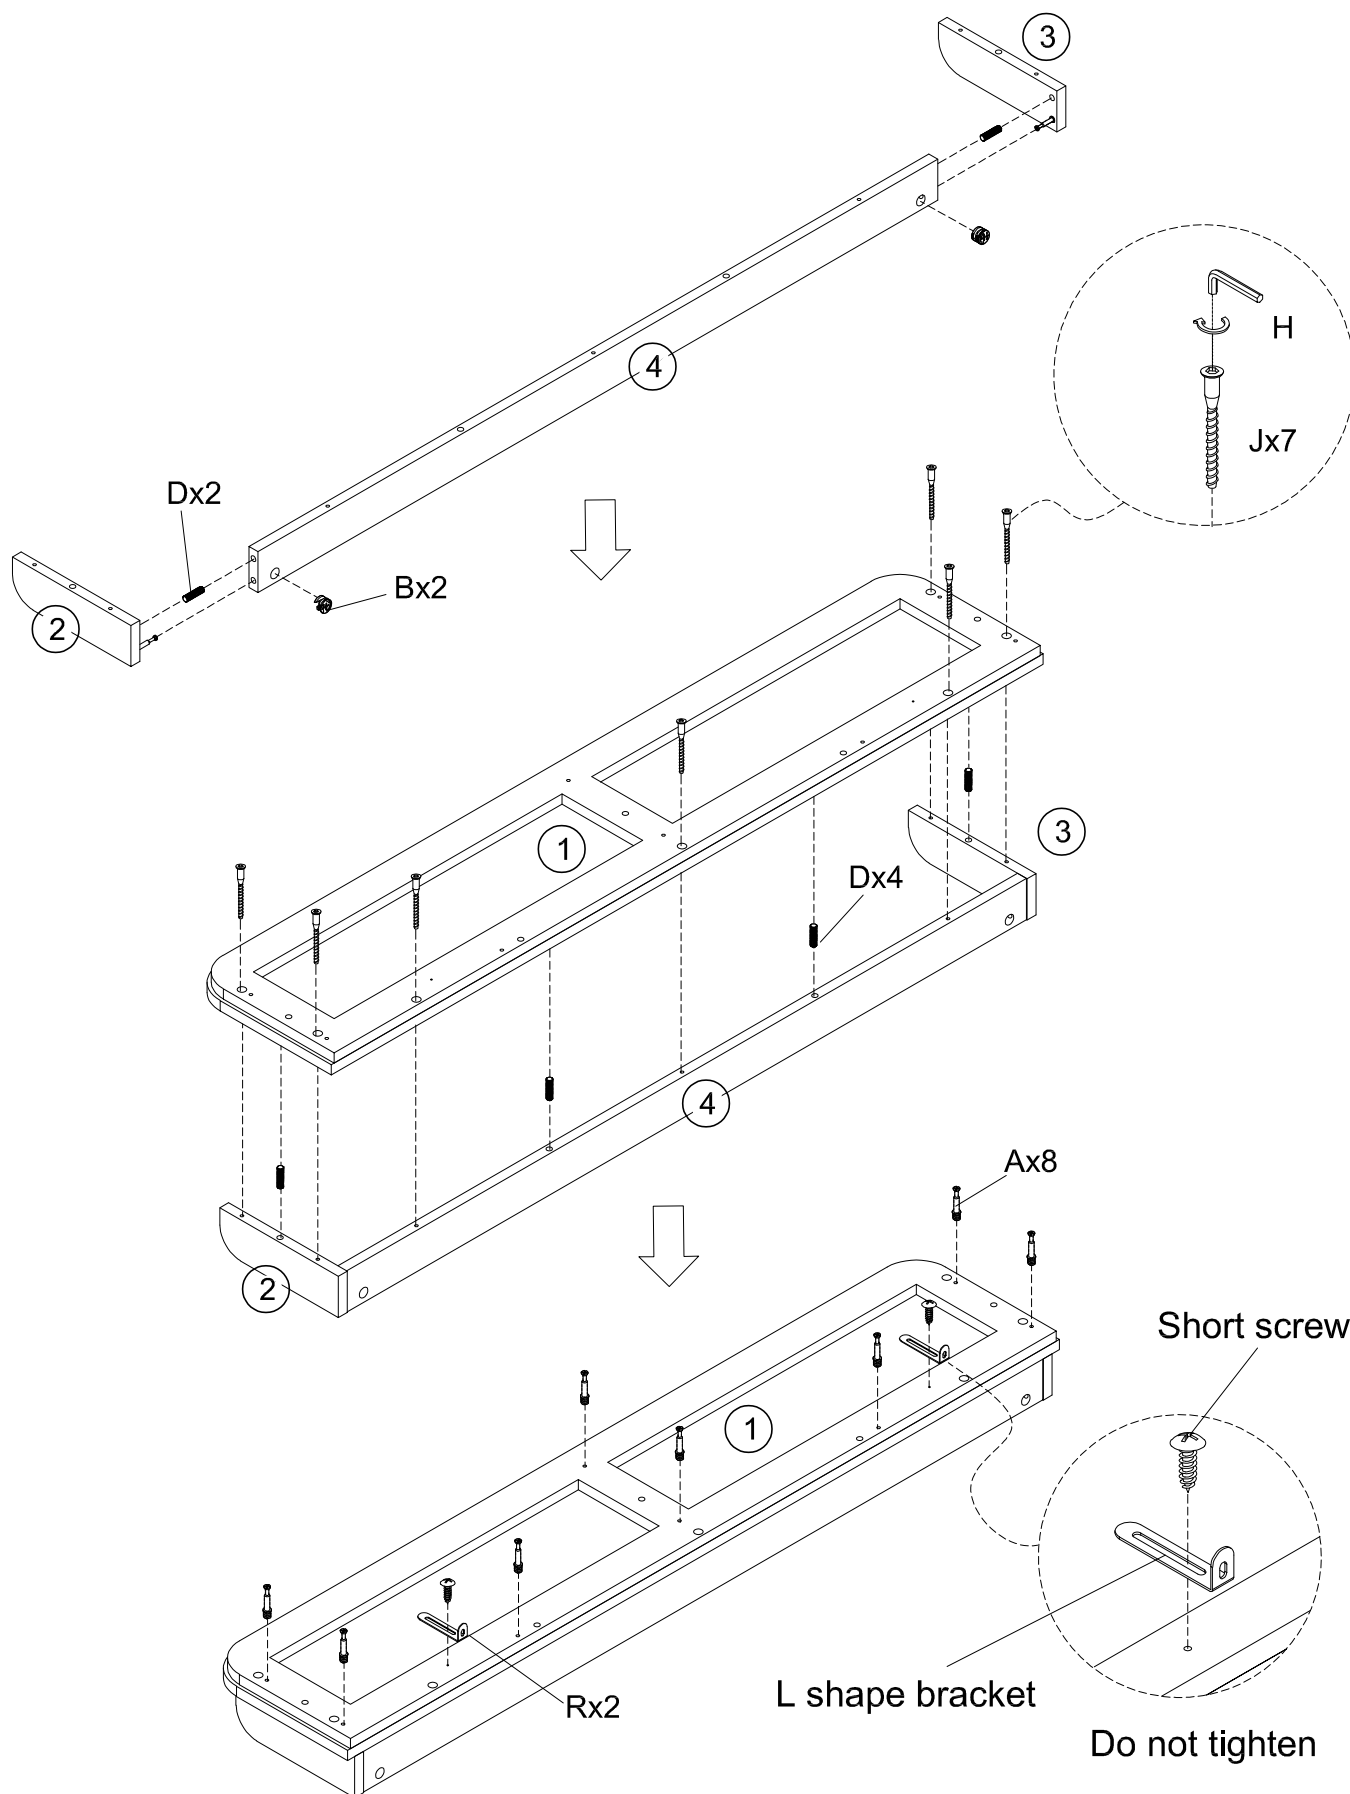


STEP 11


Dx5



Bx8

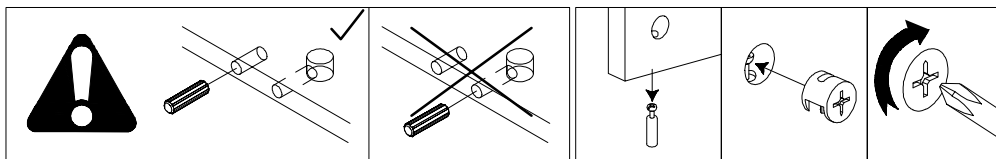

An assistance is required with this step.

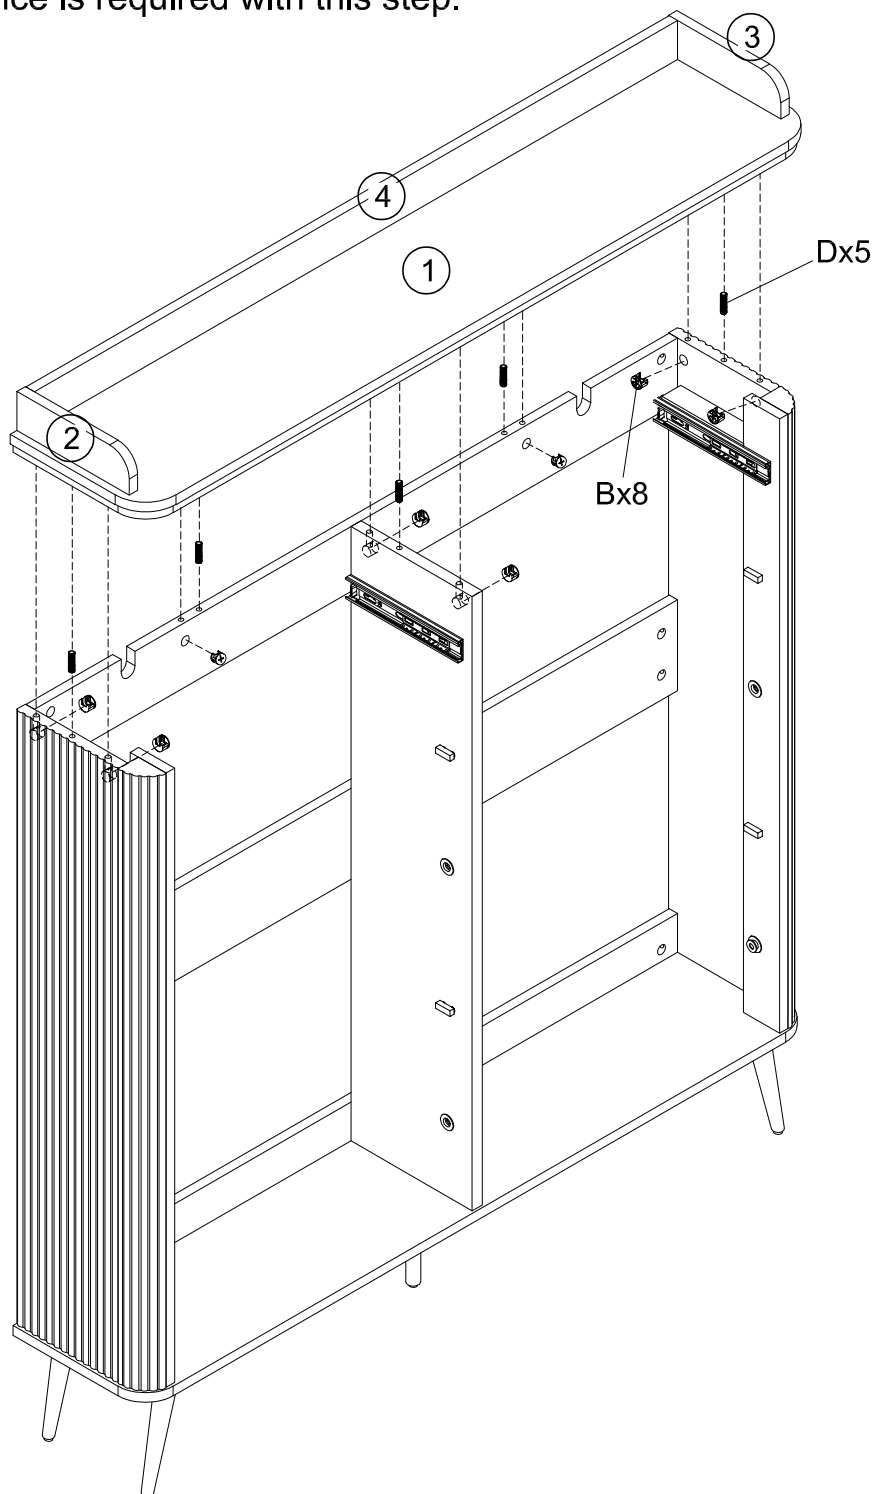




STEP 12



Rx2


WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

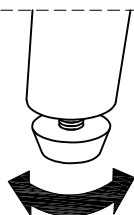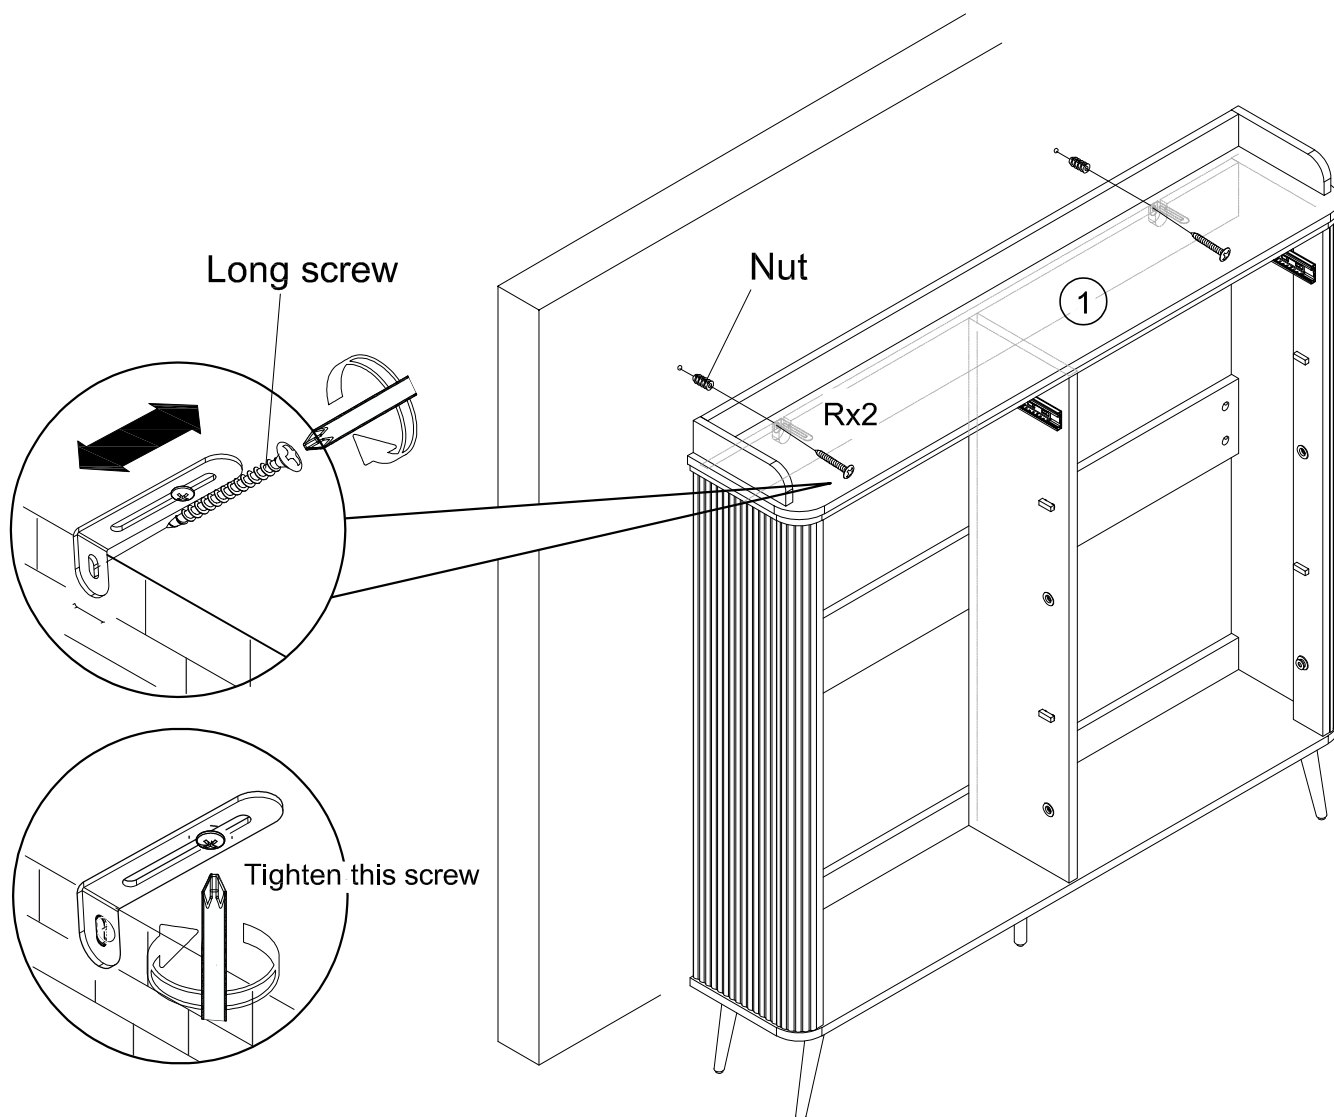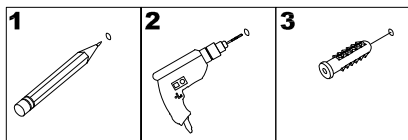


If the ground or foot is uneven, adjust the foot levelers by rotating them to your preferred height. Once the unit is standing and the levelers are adjusted, make sure the unit does not wobble.

STEP 13





Lx4



Mx4



Nx40

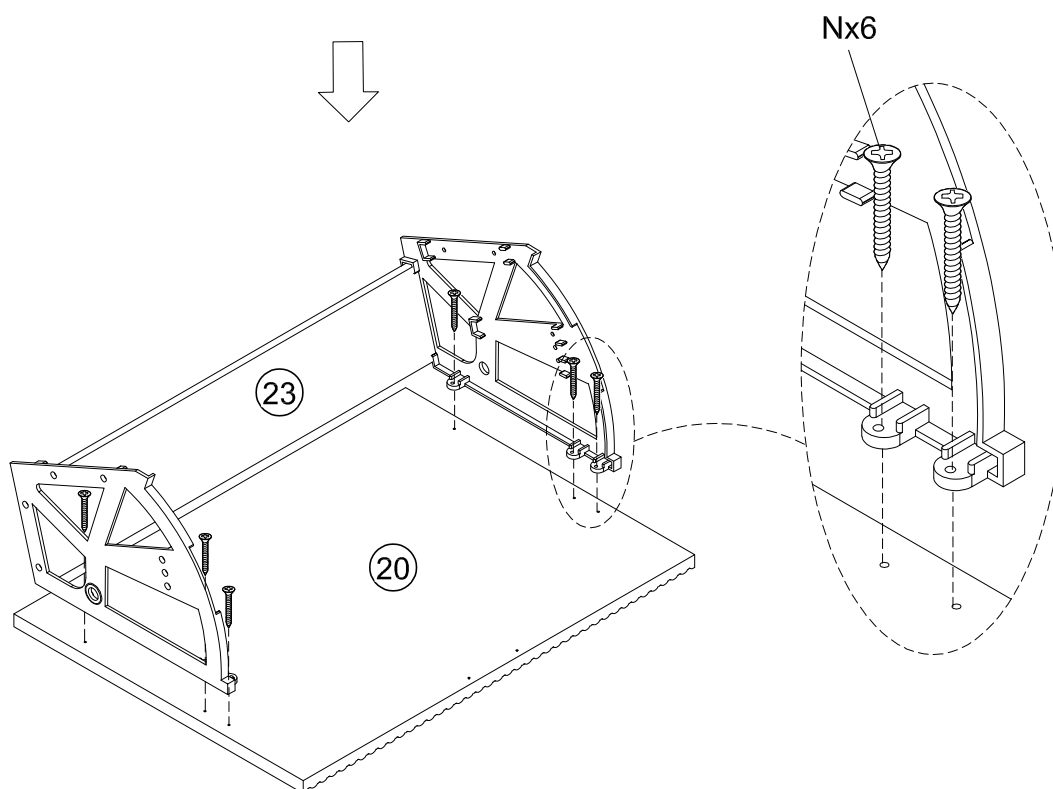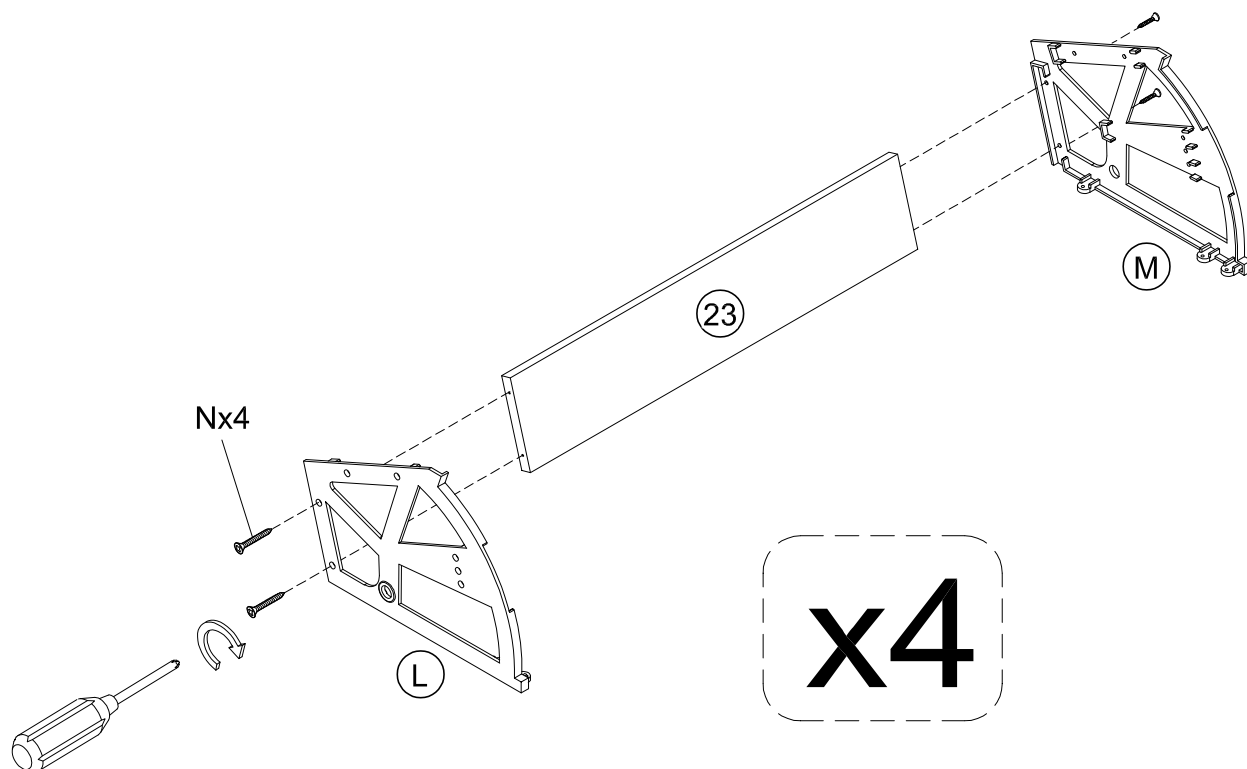

STEP 14




Ex4




Fx8



Nx16

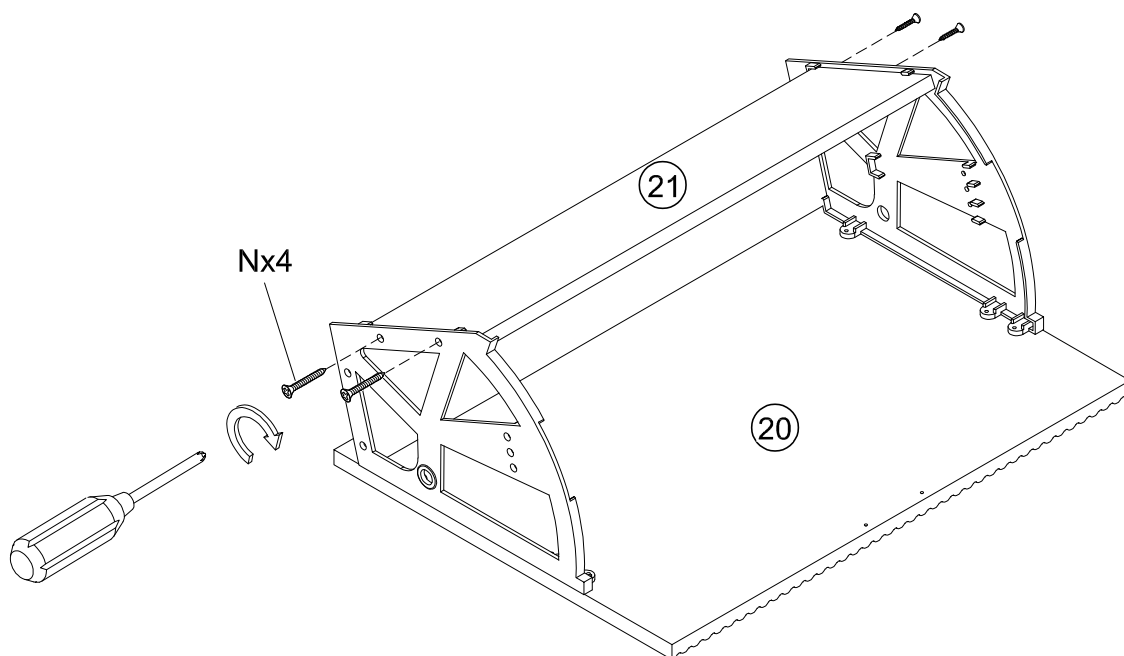

x4

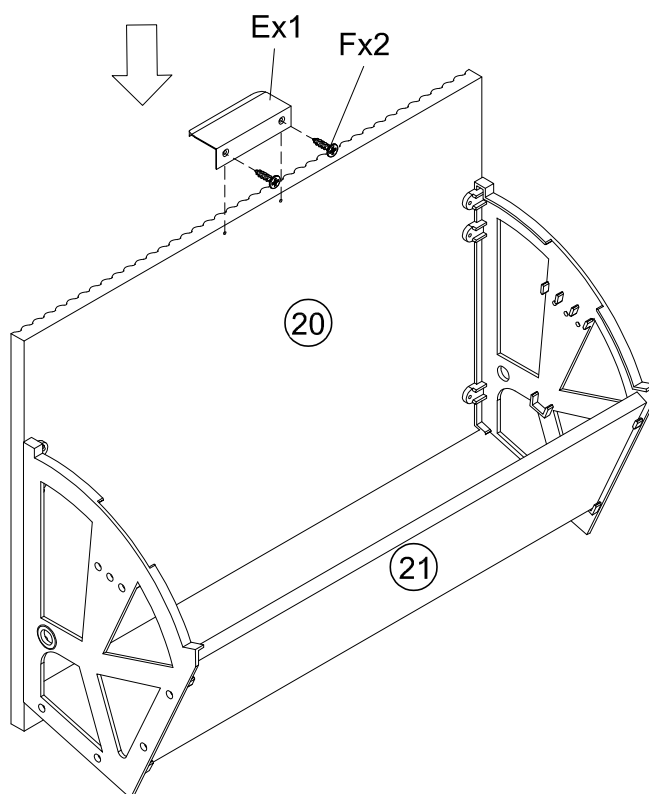

STEP 15




Tx4




Ux4

An assistance is required with this step.

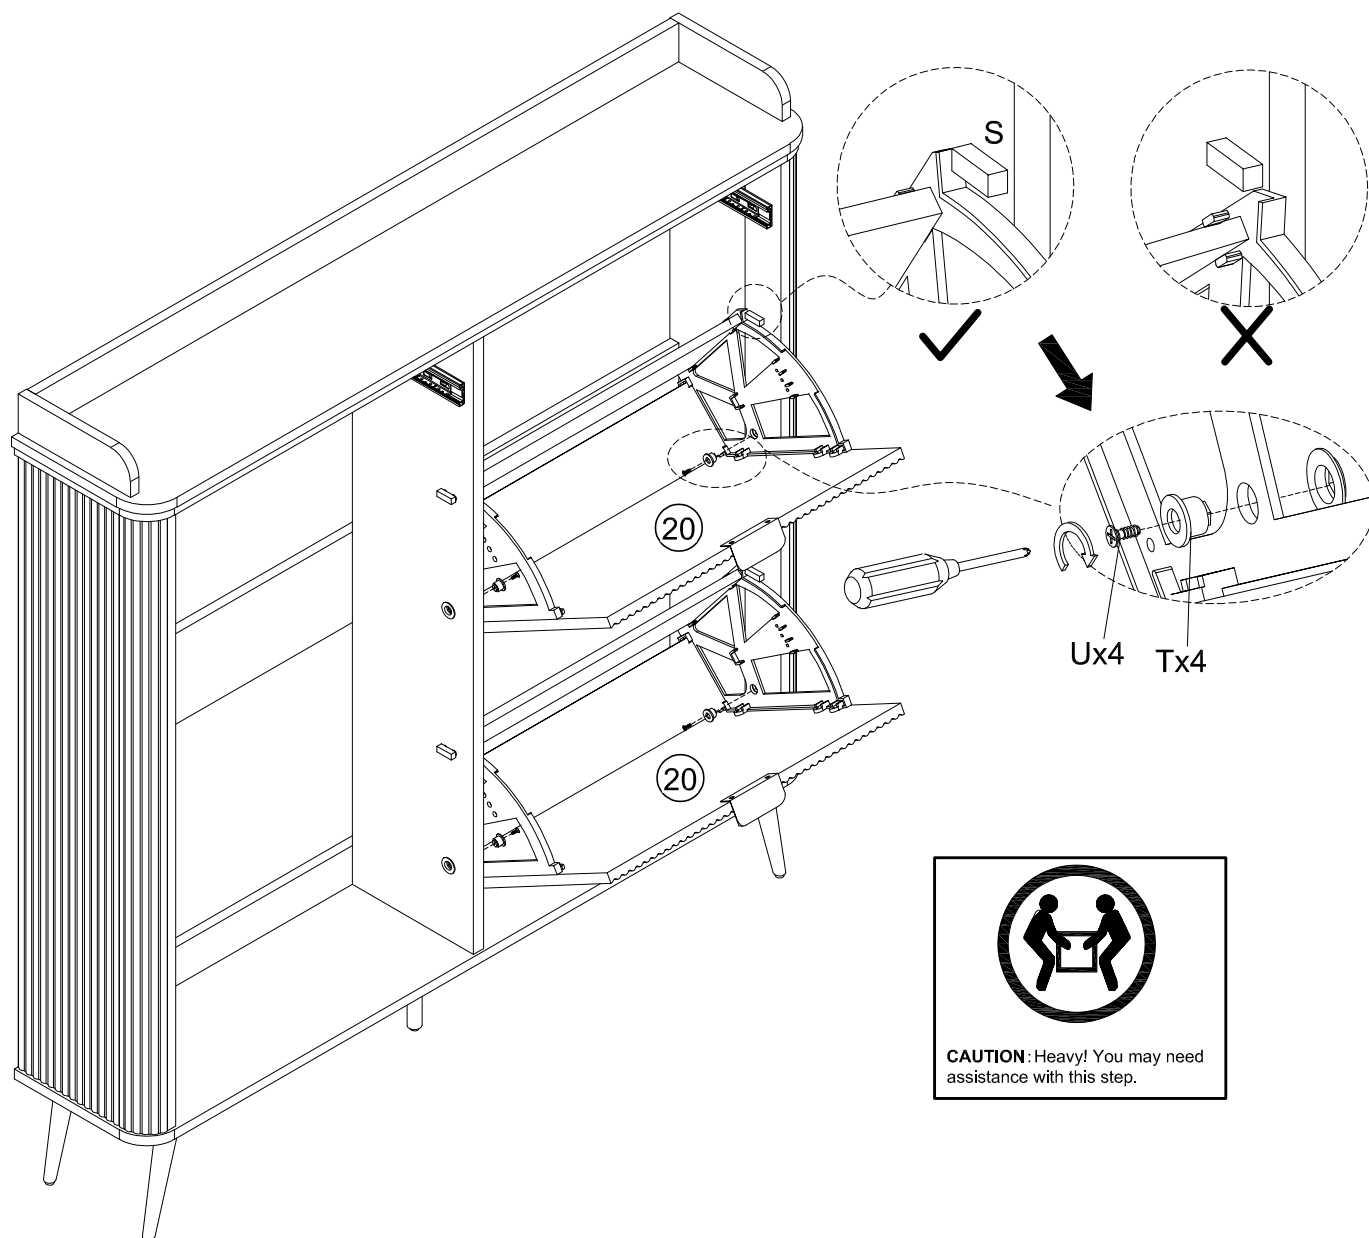


CAUTION : Heavy! You may need assistance with this step.



STEP 16




Nx4

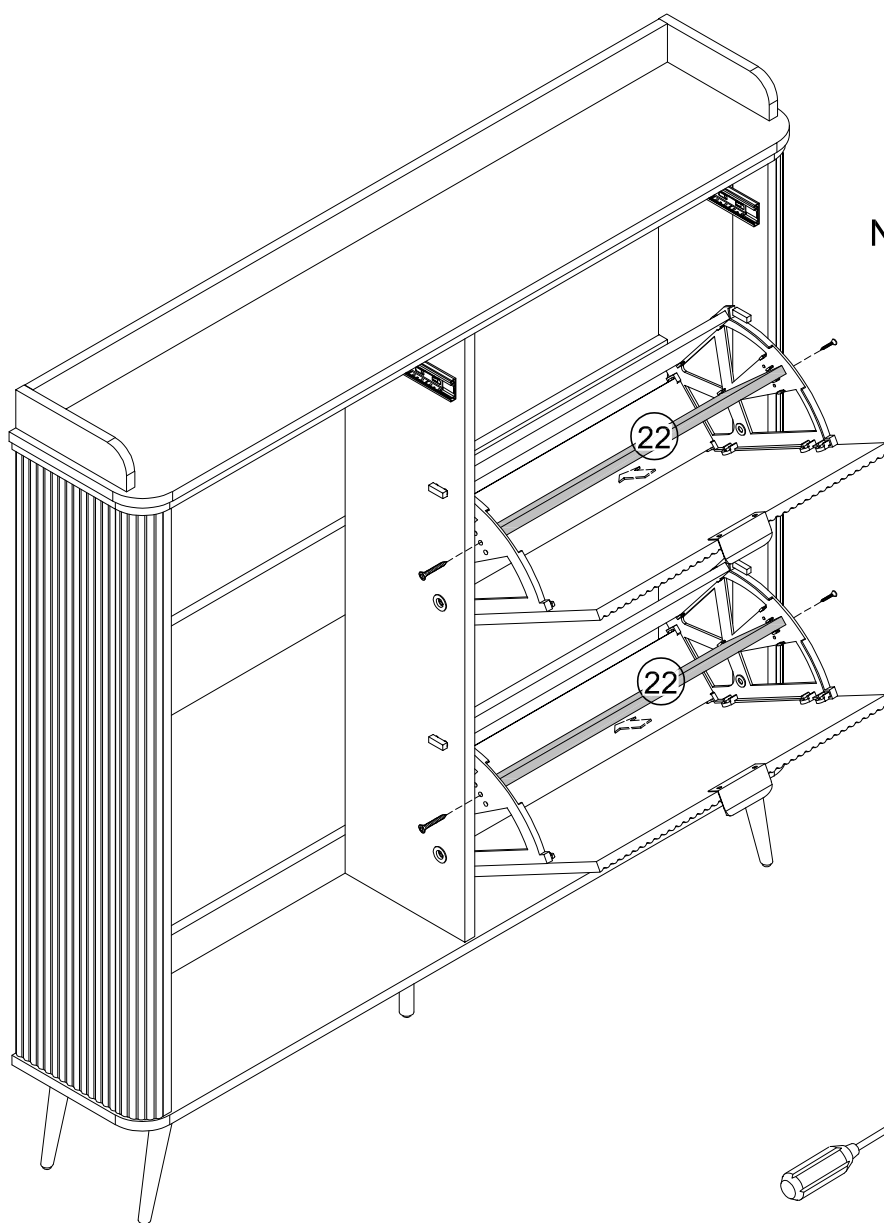

Note the pilot holes direction.

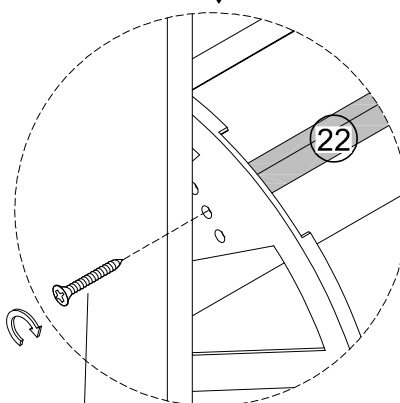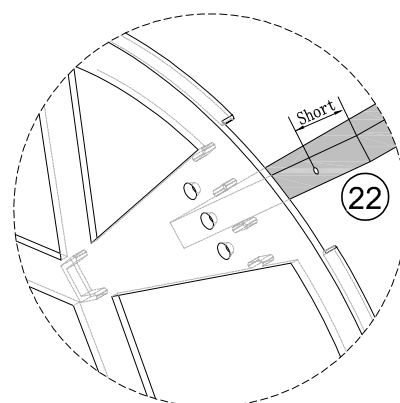

Nx4

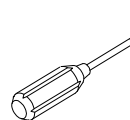

STEP 17




Tx4




Ux4

An assistance is required with this step.

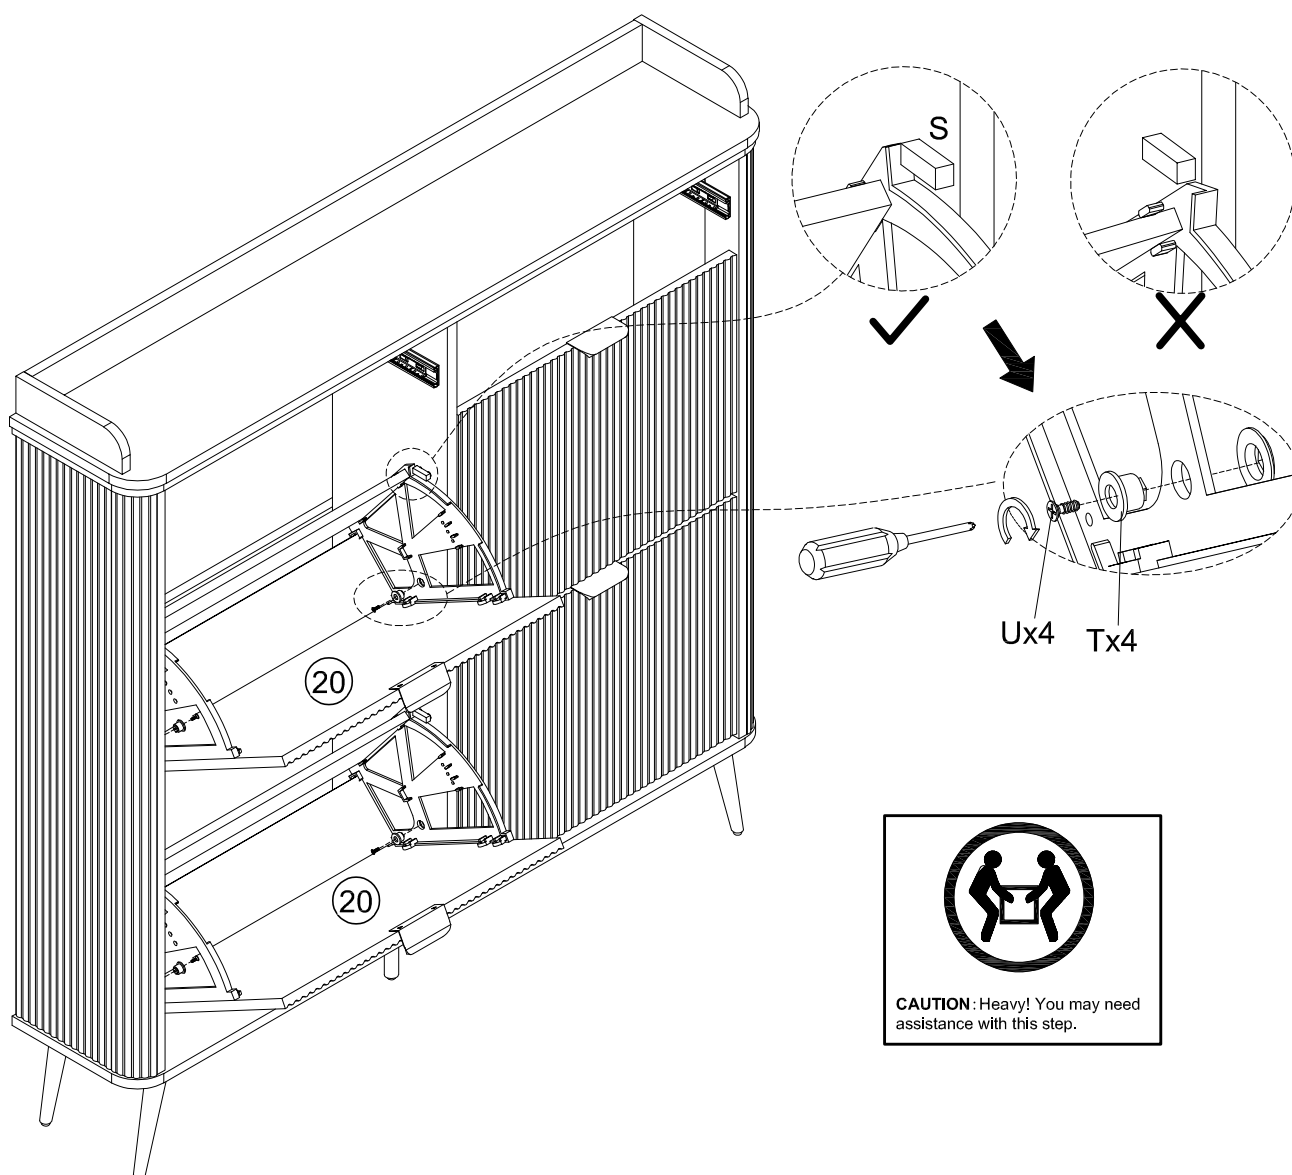


CAUTION: Heavy! You may need assistance with this step.




STEP 18



Nx4

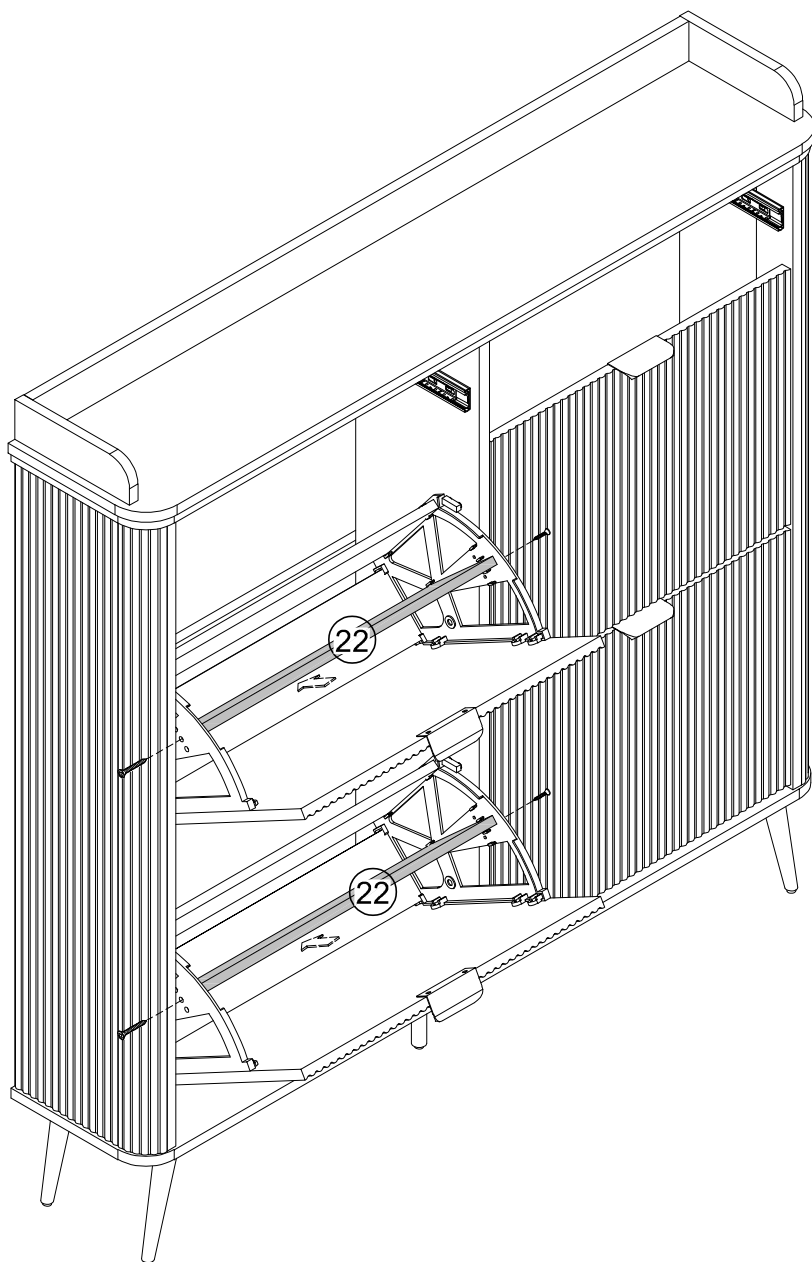


Note the pilot holes direction.

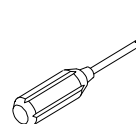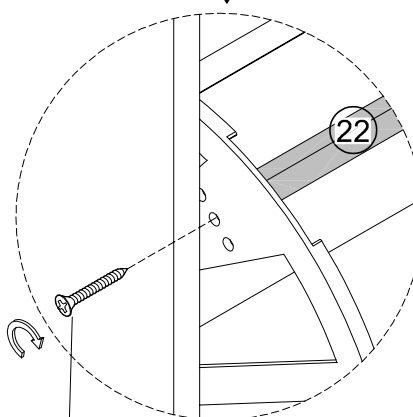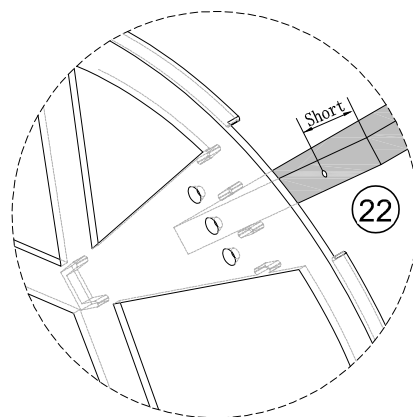



Nx4

STEP 19

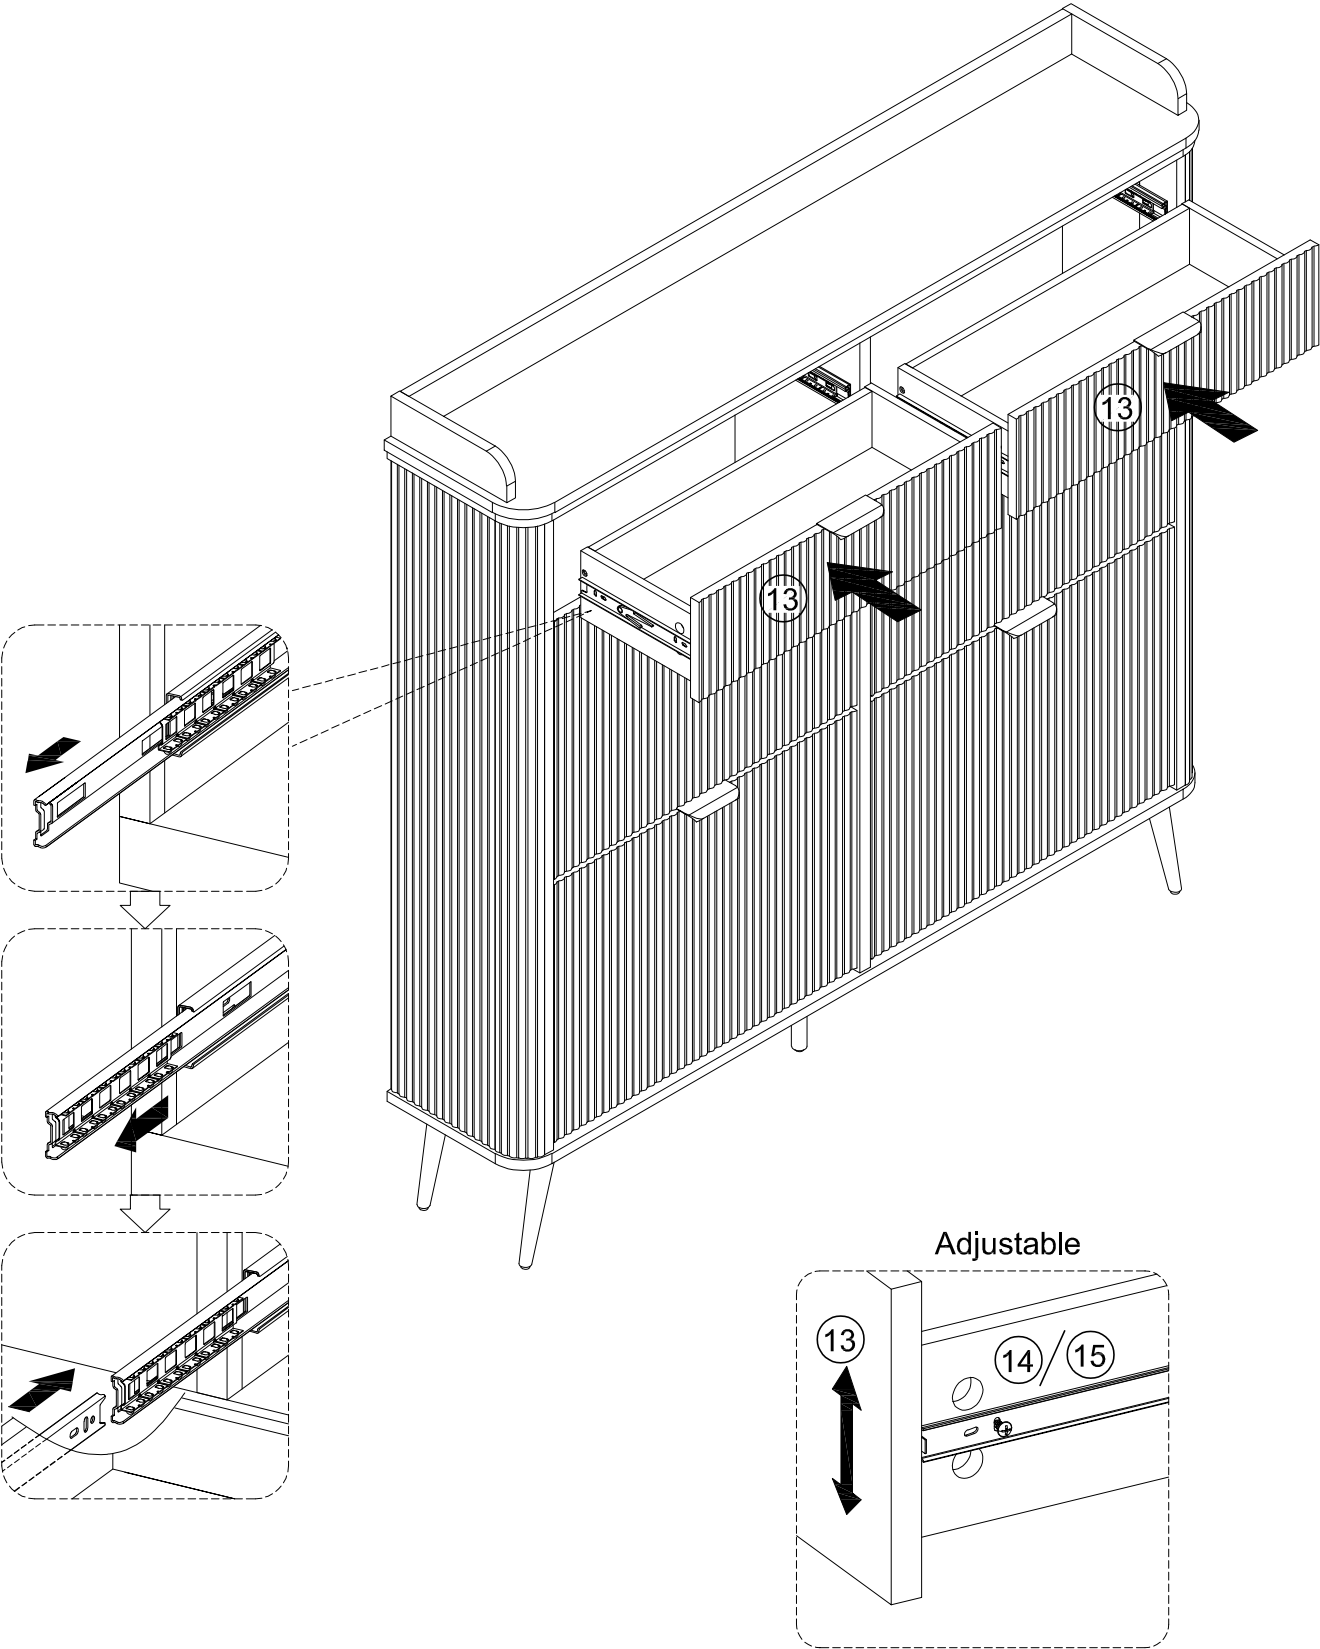

STEP 20


Cx24

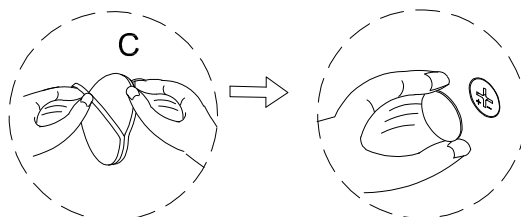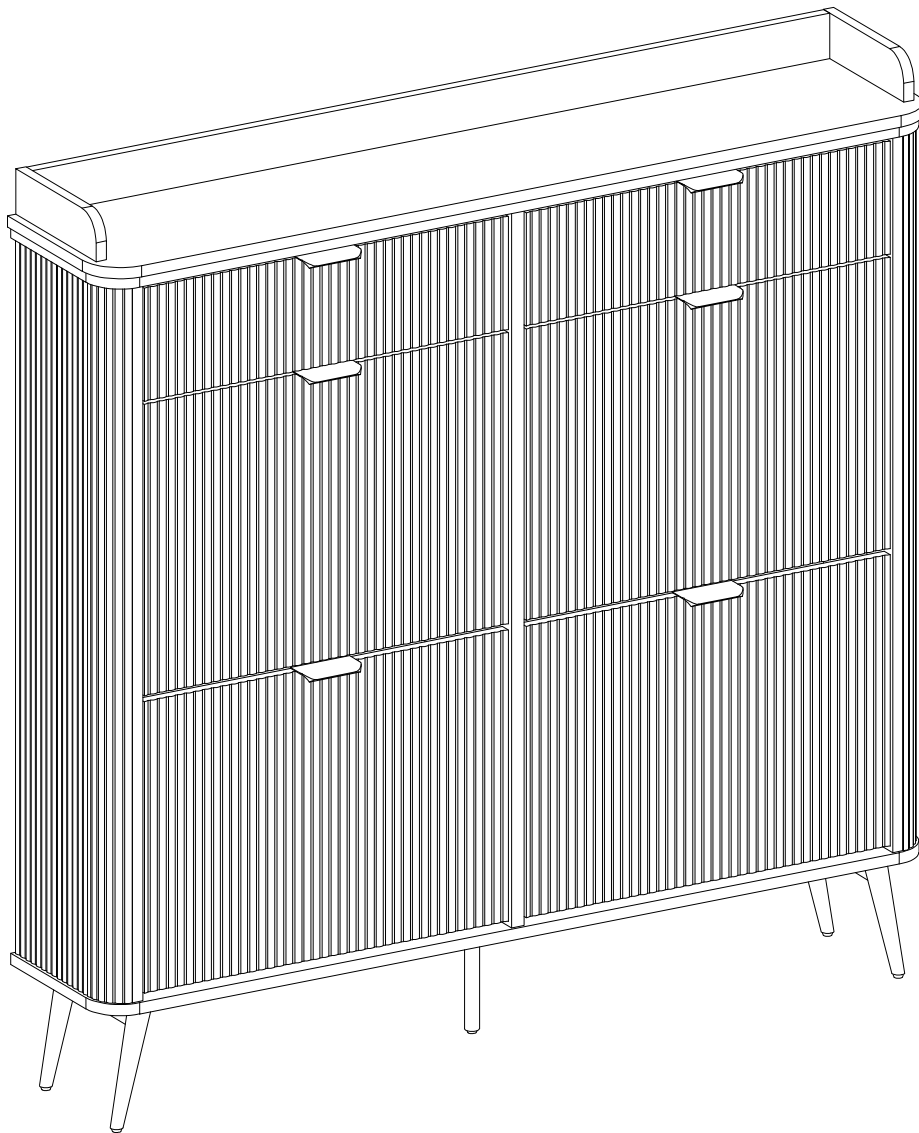

· Stick stickers (C) on cam locks (B).

Final Assembly