



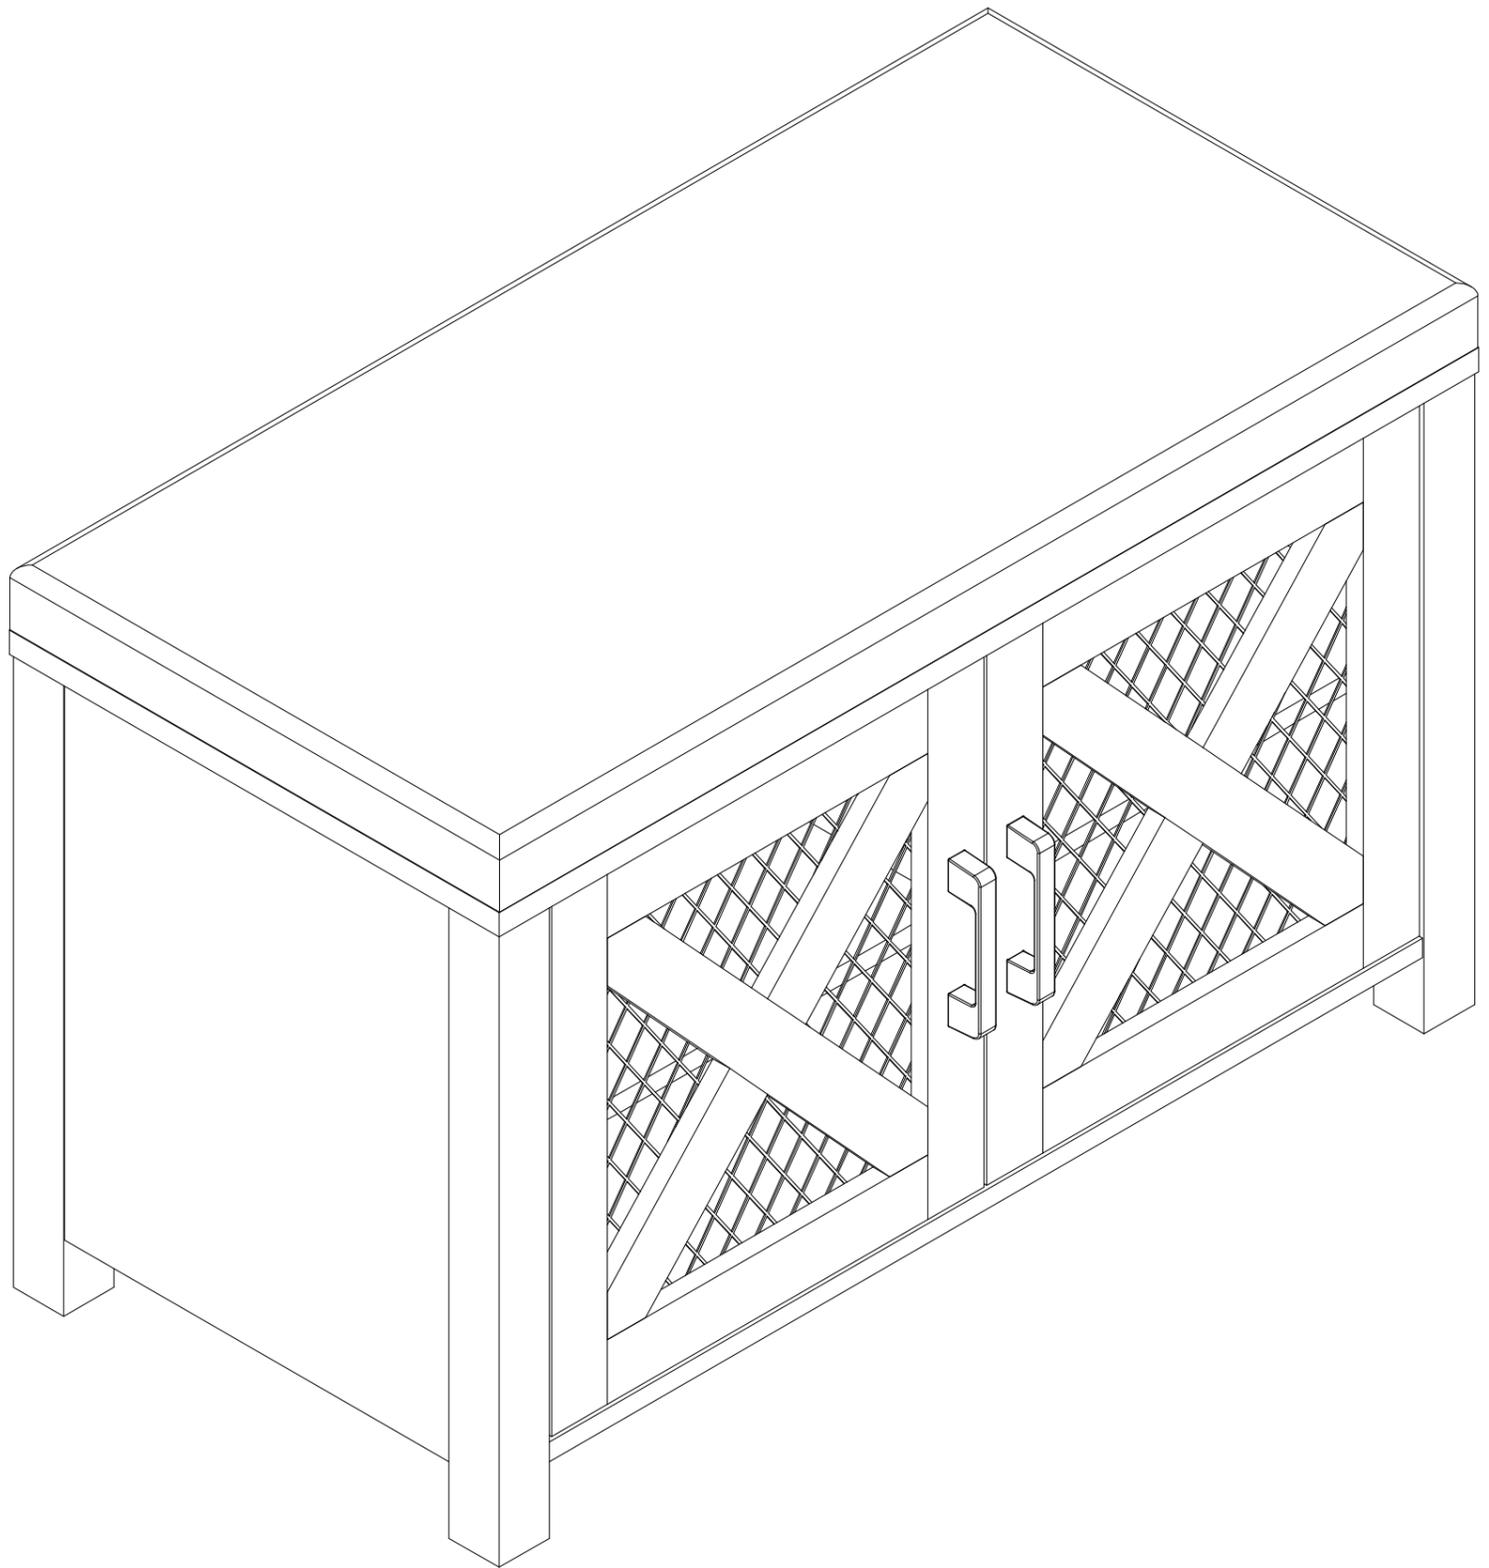


INSTRUCTIONMANUAL




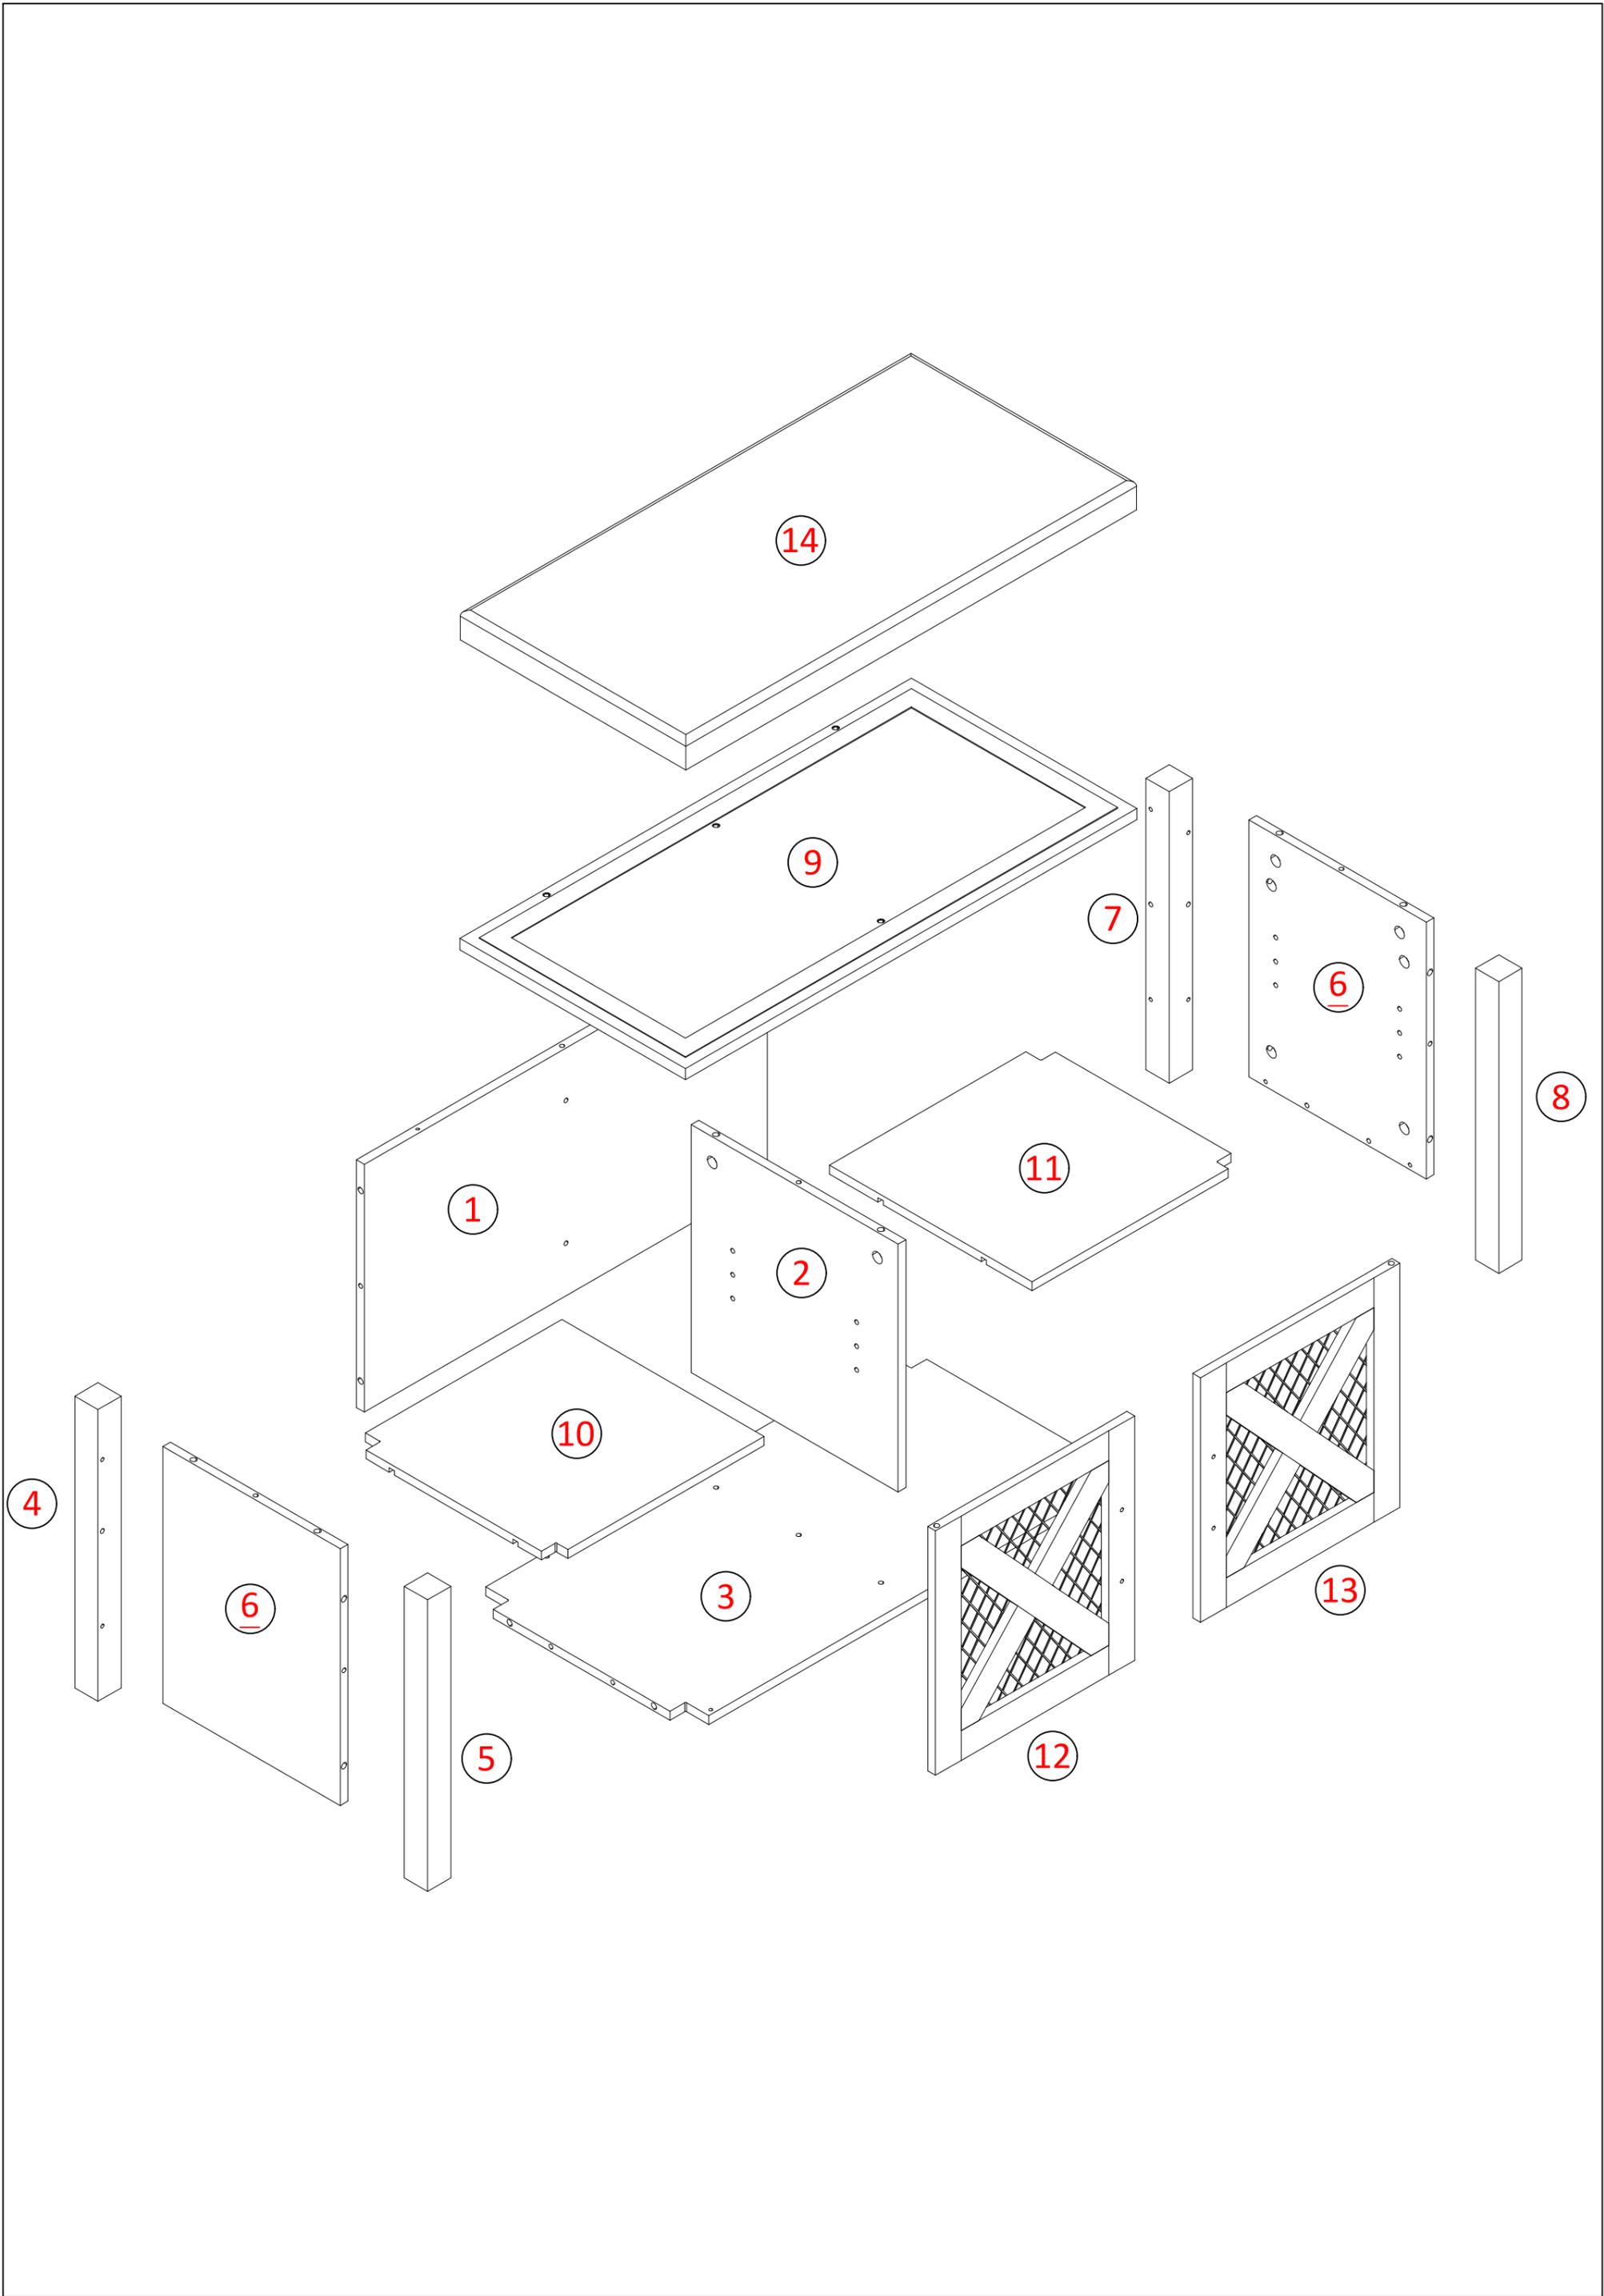


1

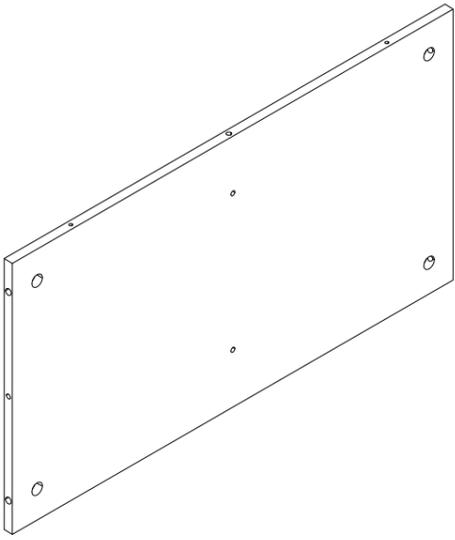


2

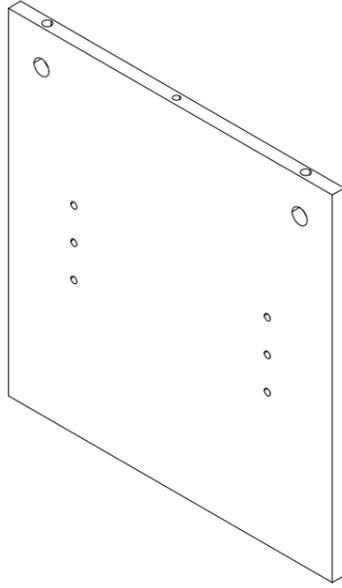

3

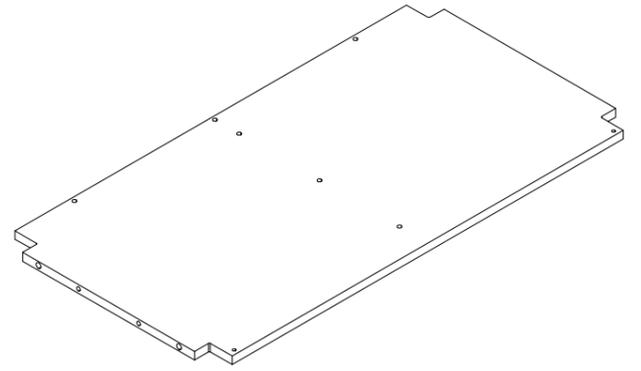


4



5




6

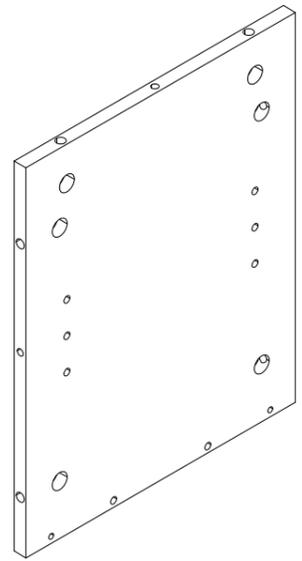


x 2


7




8




9

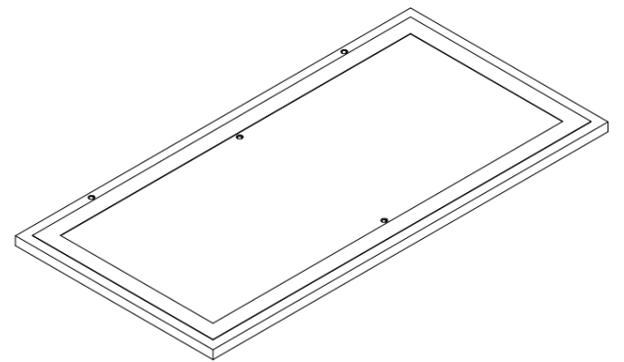


10

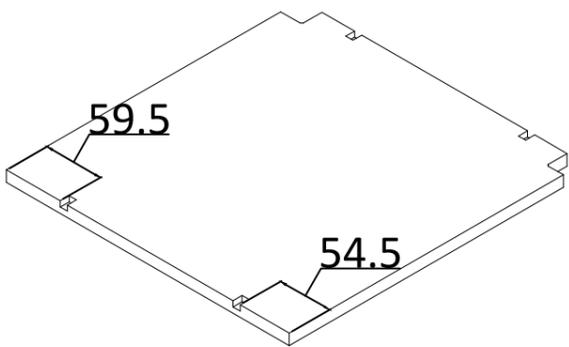


11

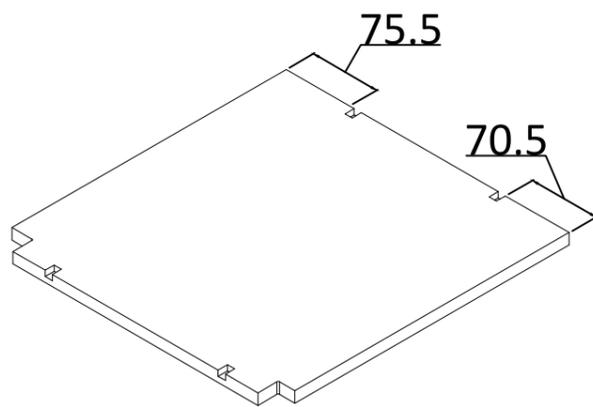


12

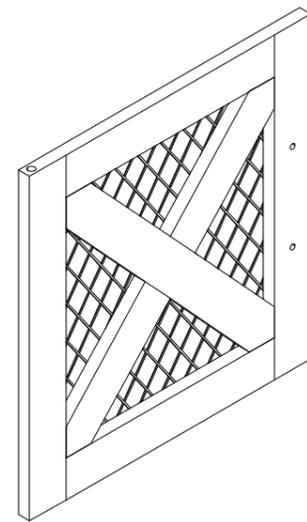


13

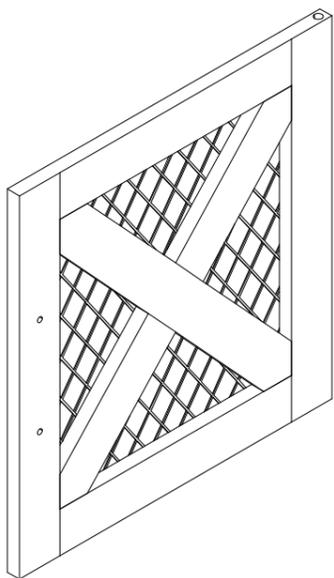


14


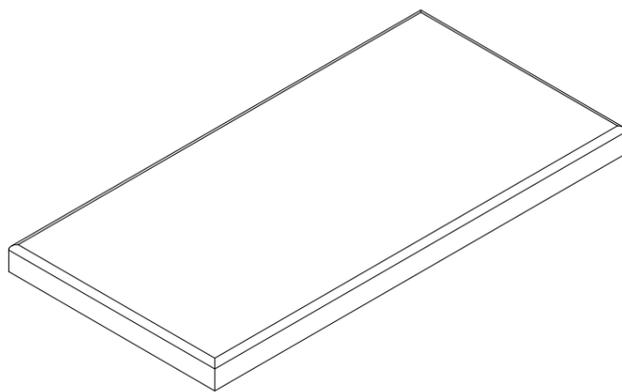



Step: 1

C	 M5x40	2
		


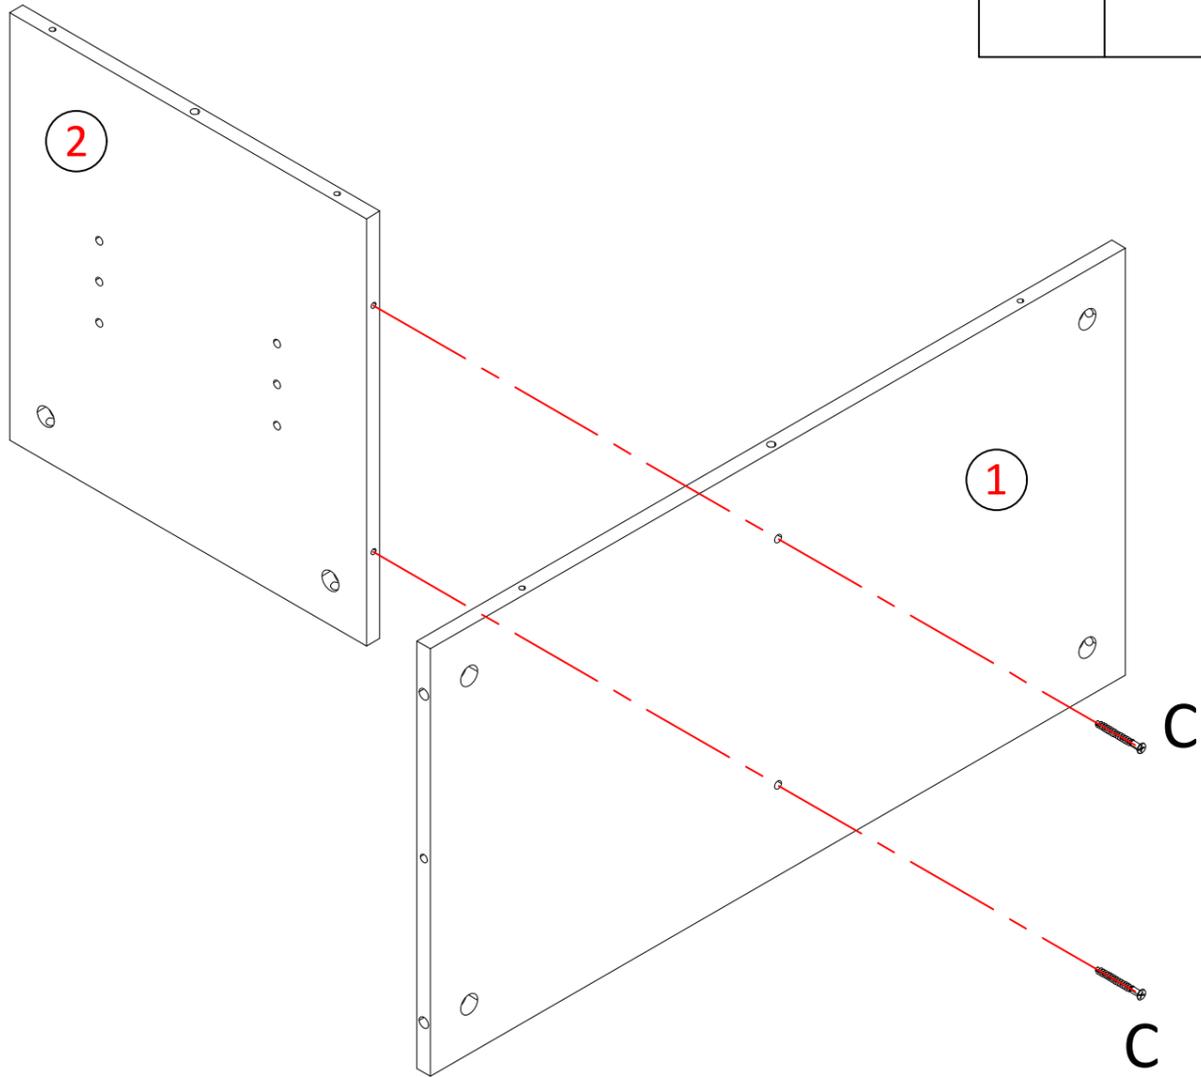



Step: 2

C	 M5x40	4
H	 Ø6x40	2
		


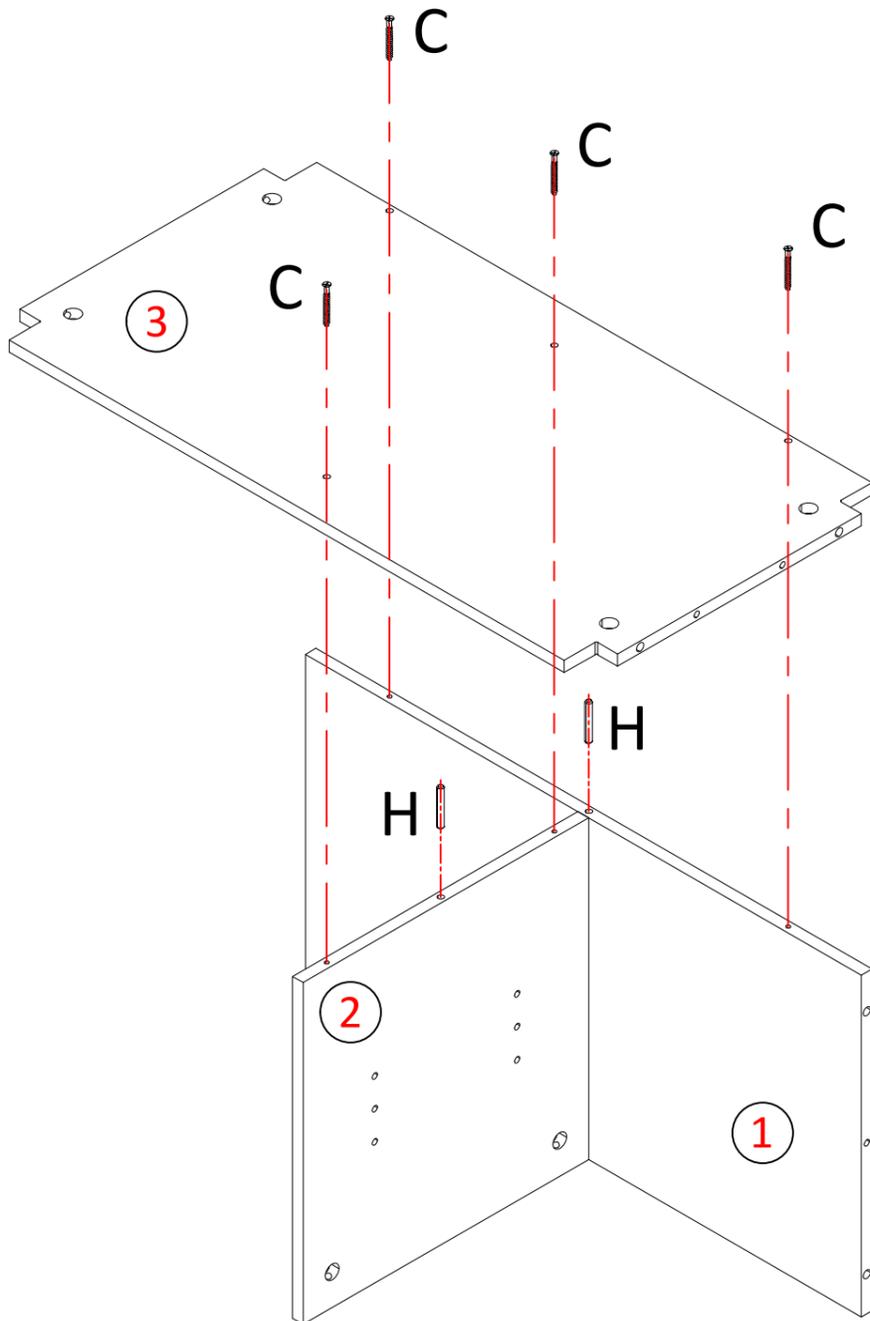




Step: 3

A	 M5x42	10
		


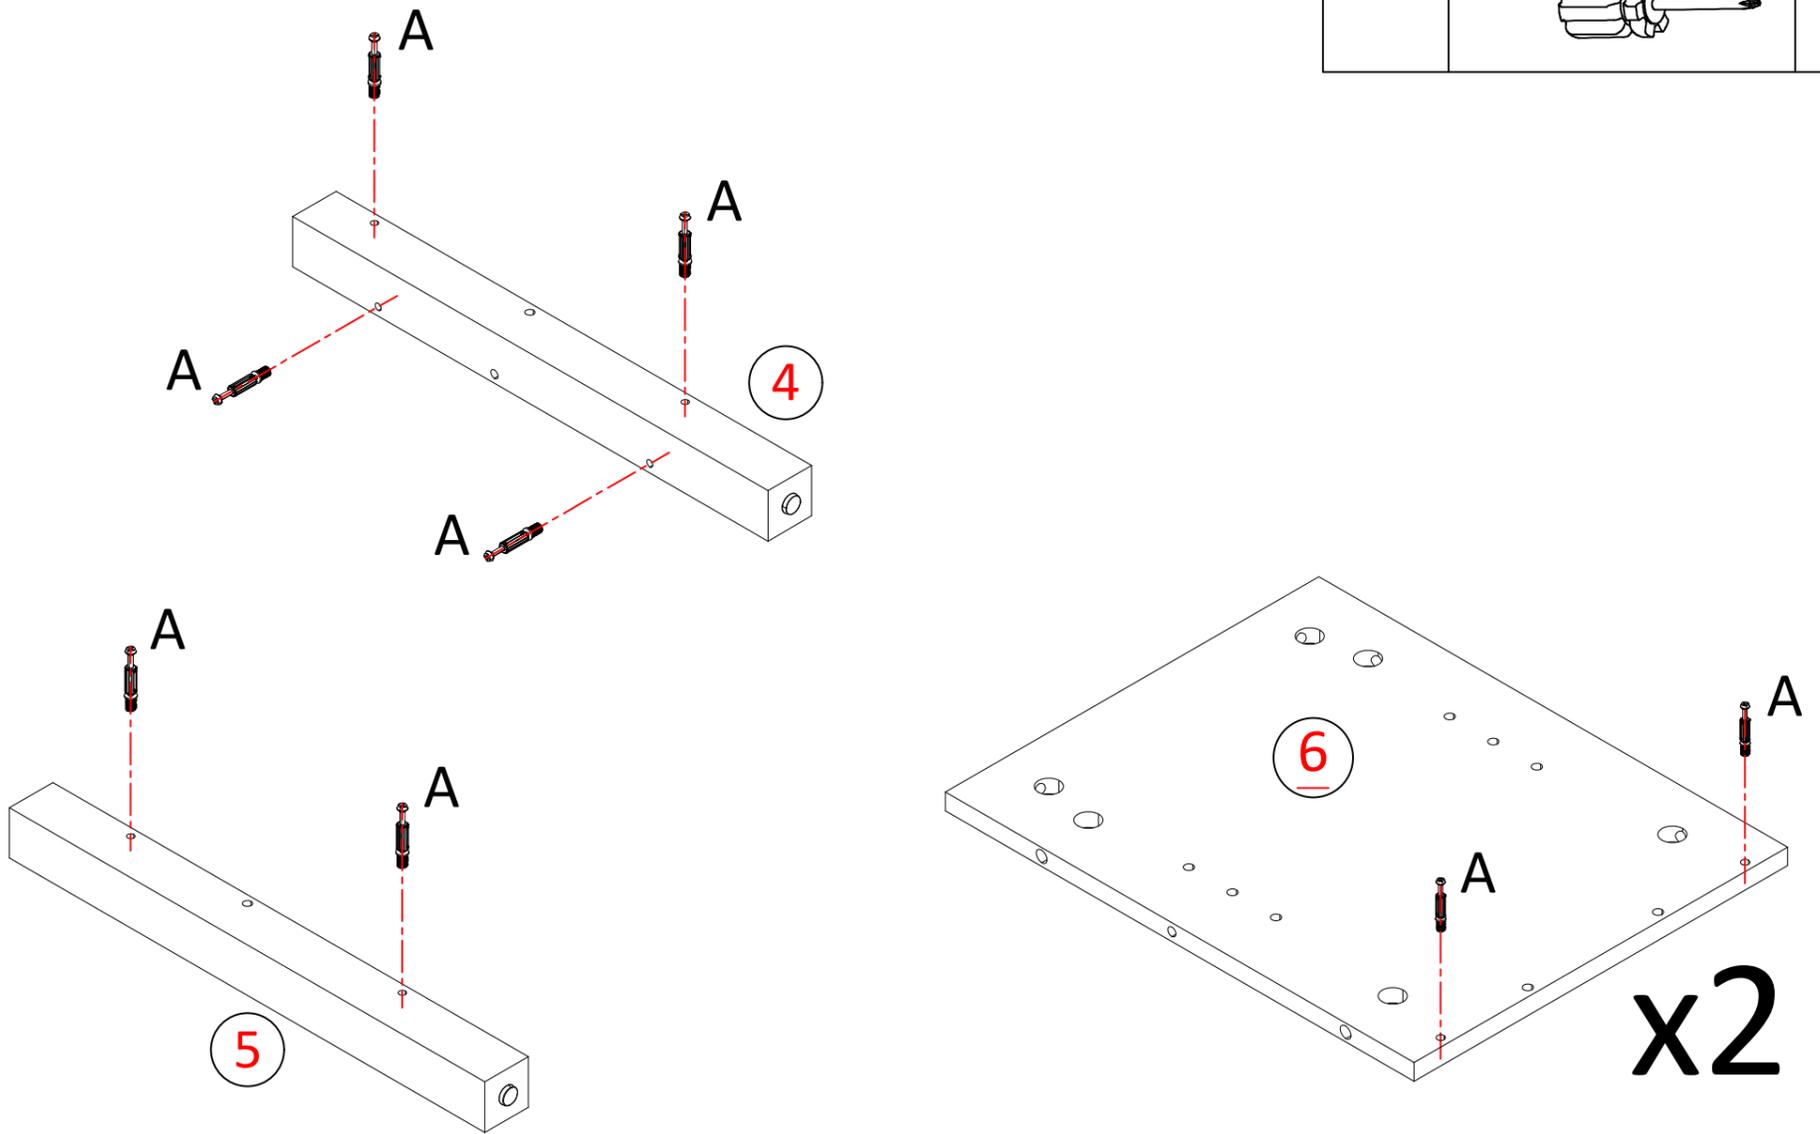



Step: 4

H	 Ø6x40	2
B	 Ø15x10	4
		

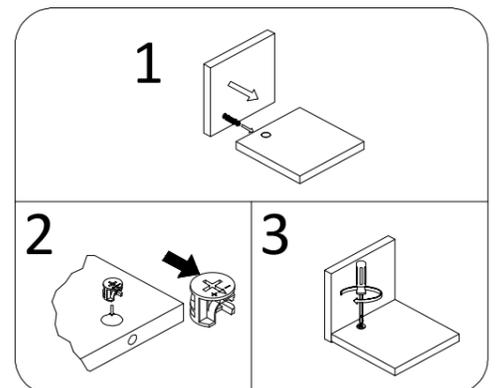
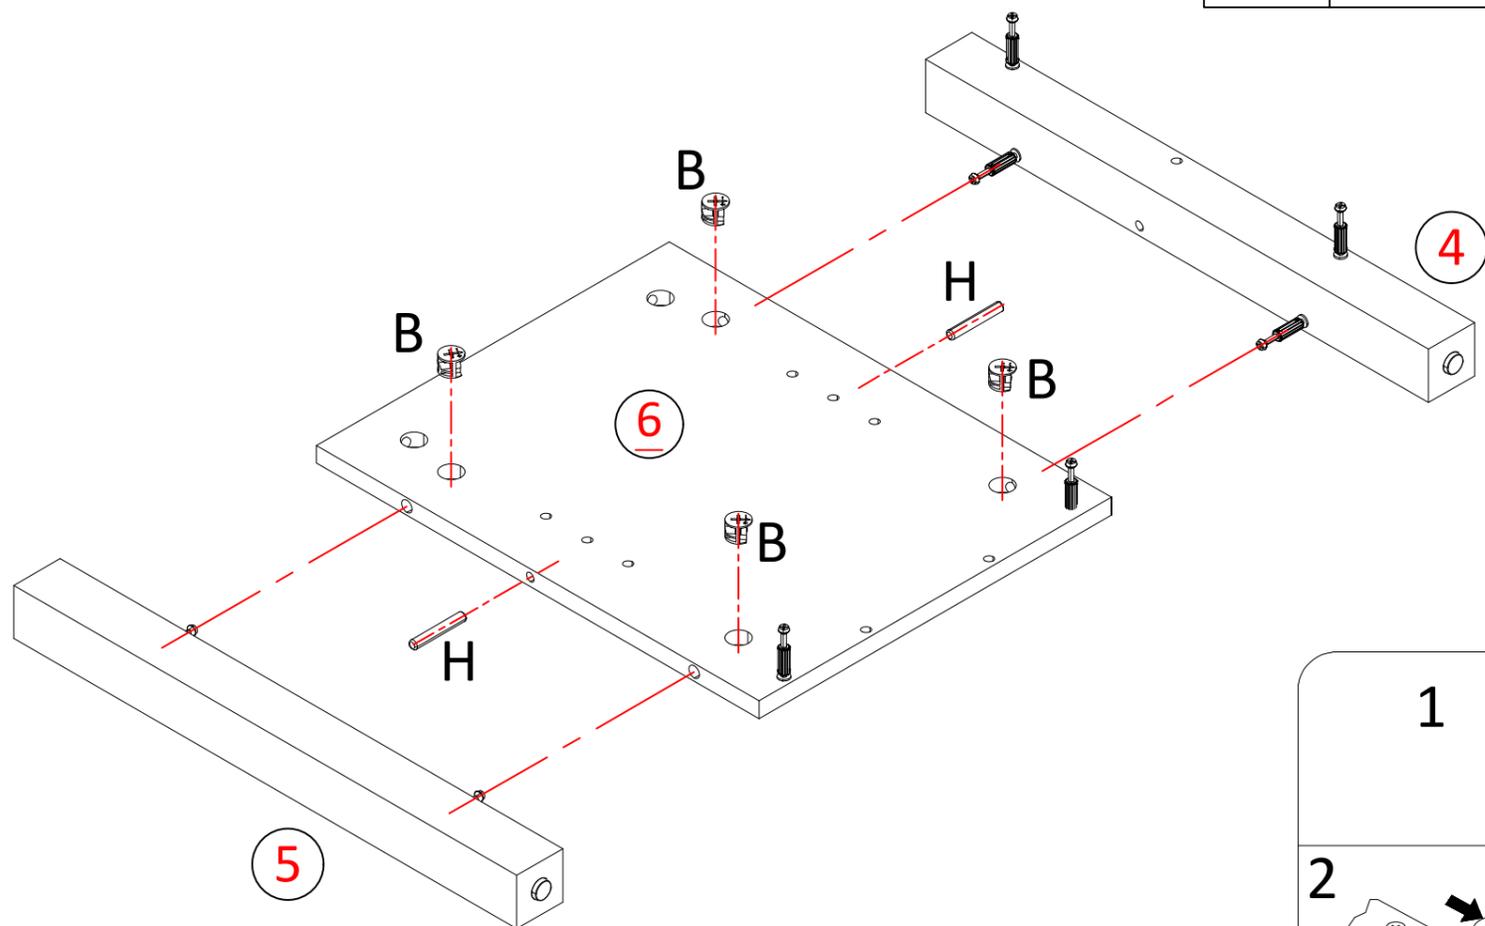




Step: 5

A	 M5x42	6
		

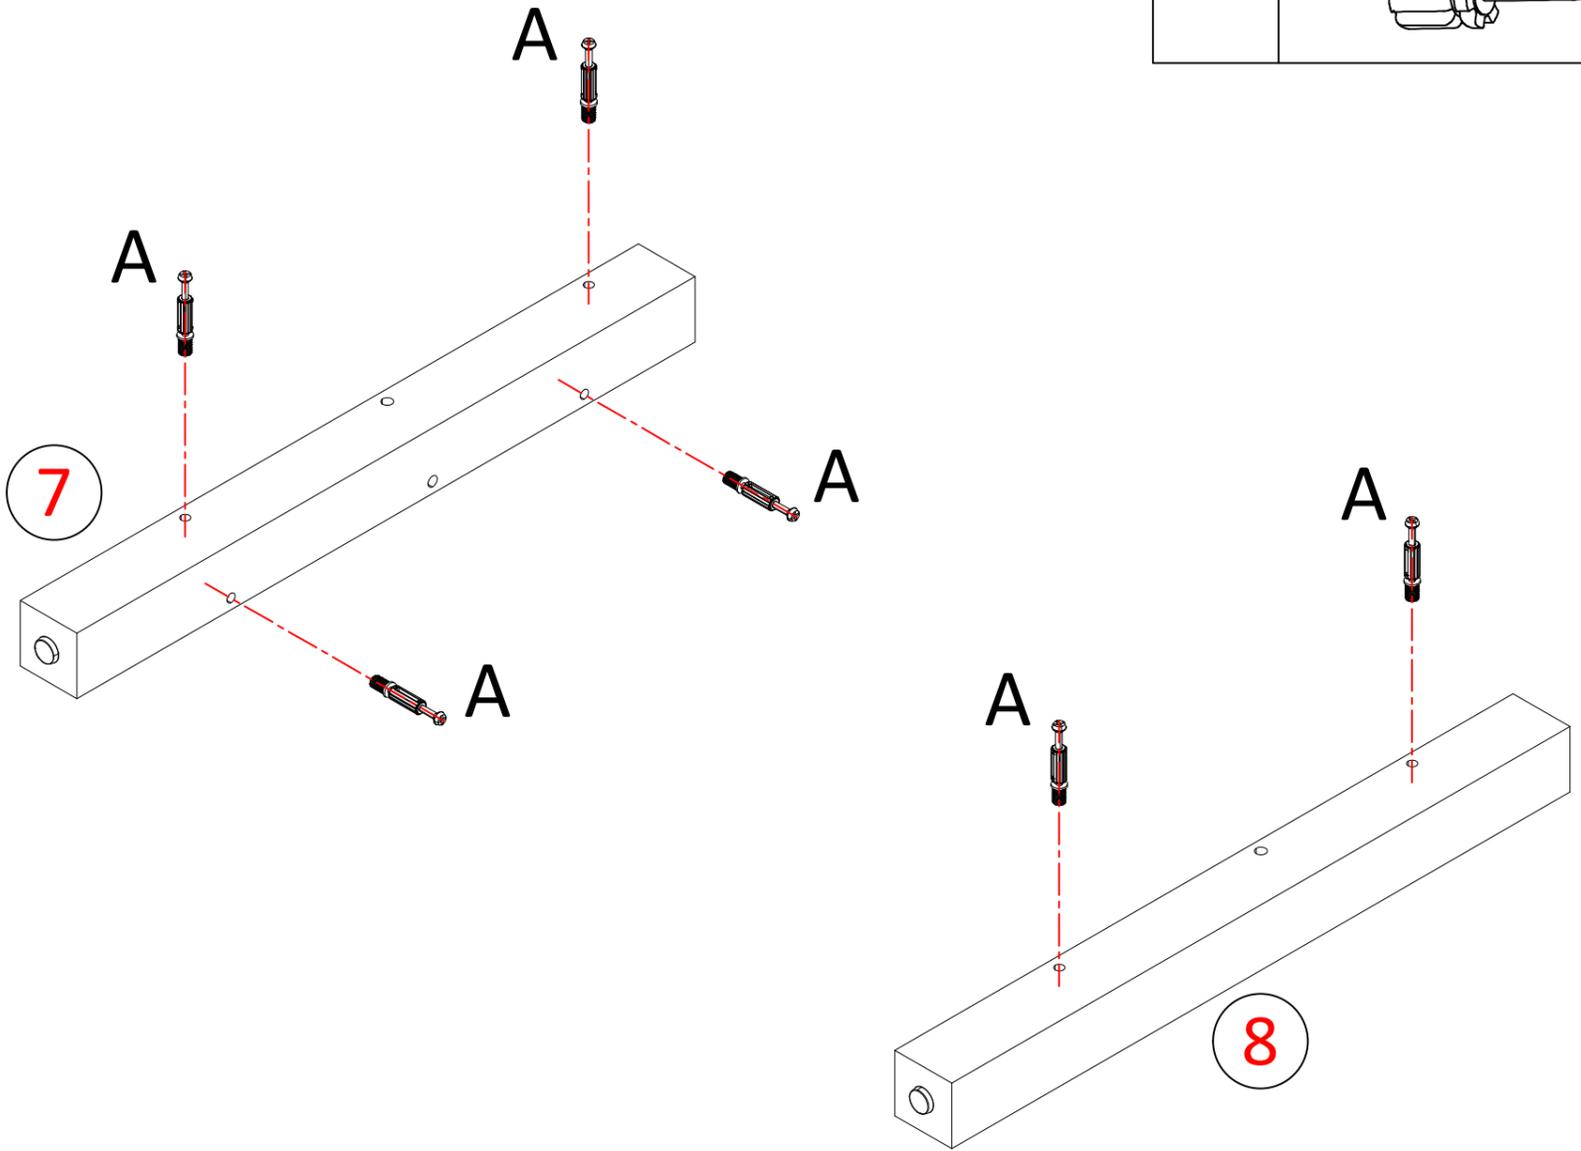


Step: 6

H	 Ø6x40	2
B	 Ø15x10	4
		

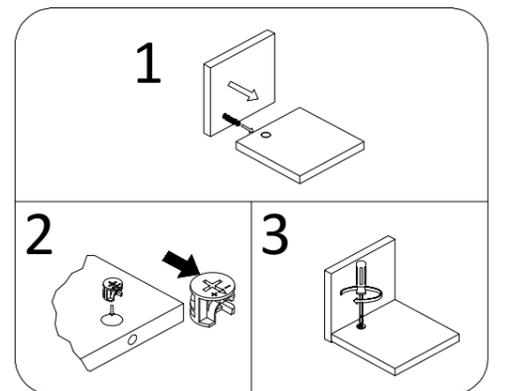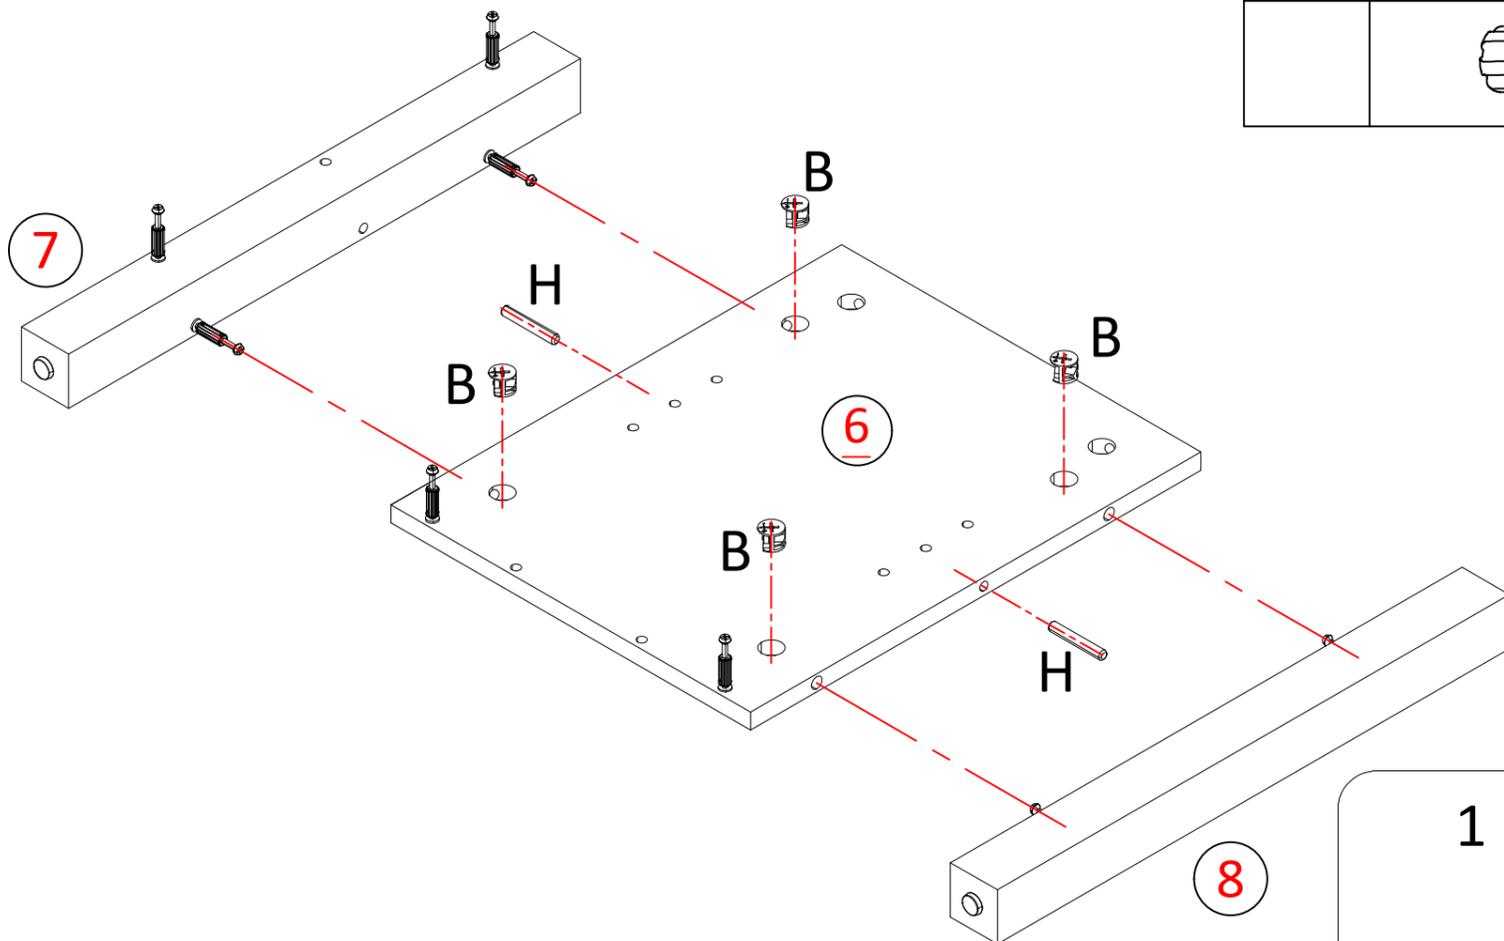


Step: 7

H



6


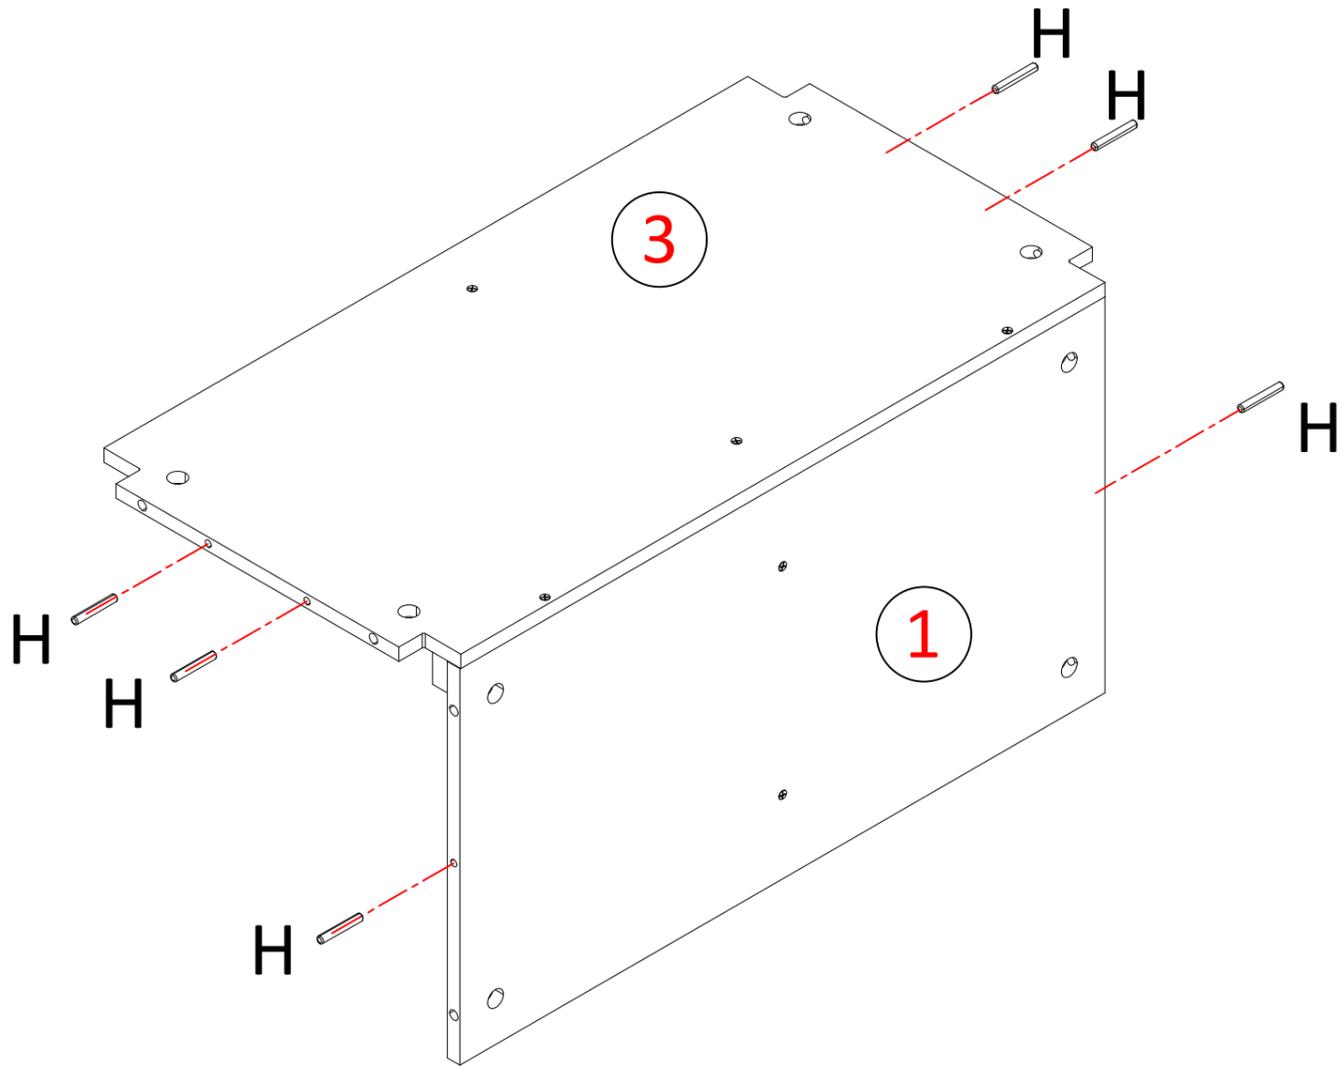


Step: 8


B





4



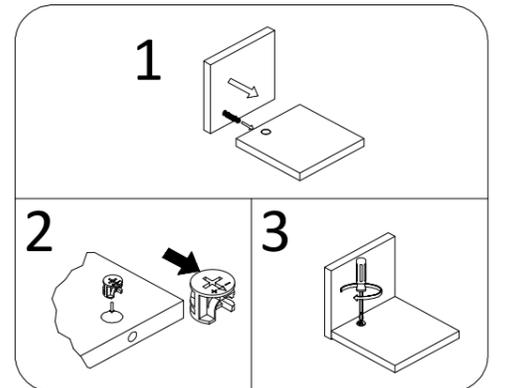
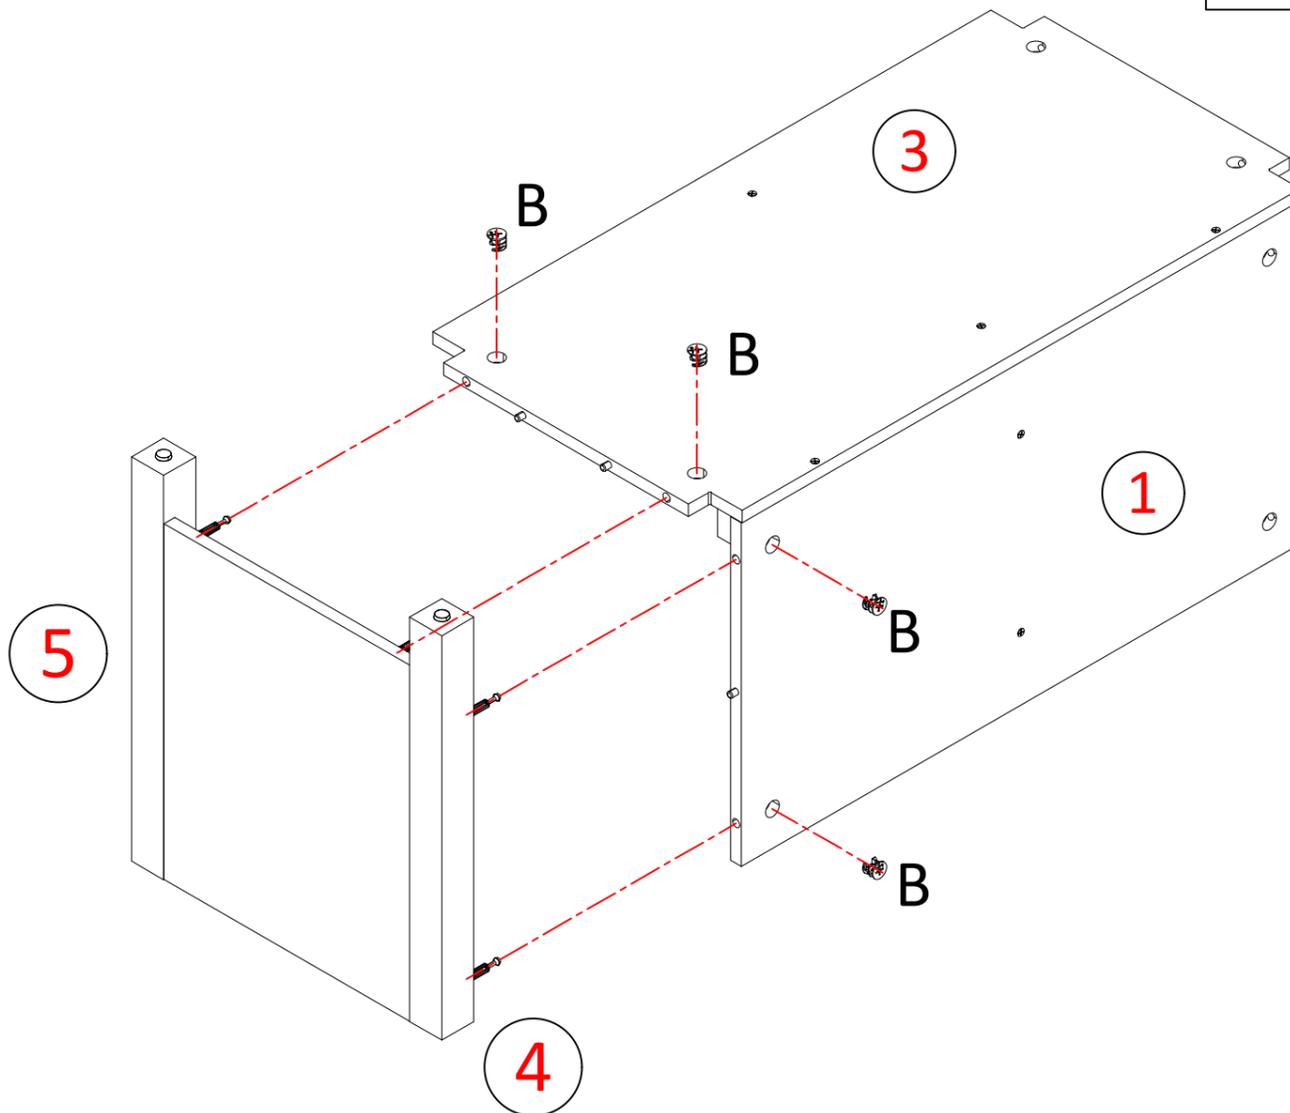



Step: 9

B	 Ø15x10	4
		

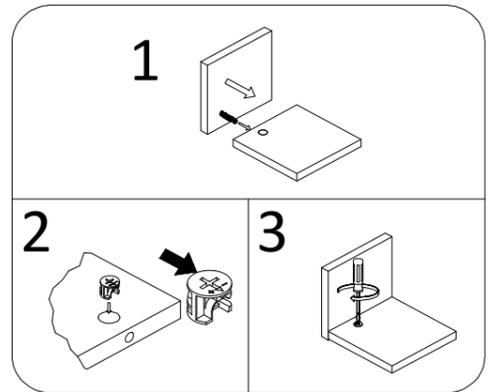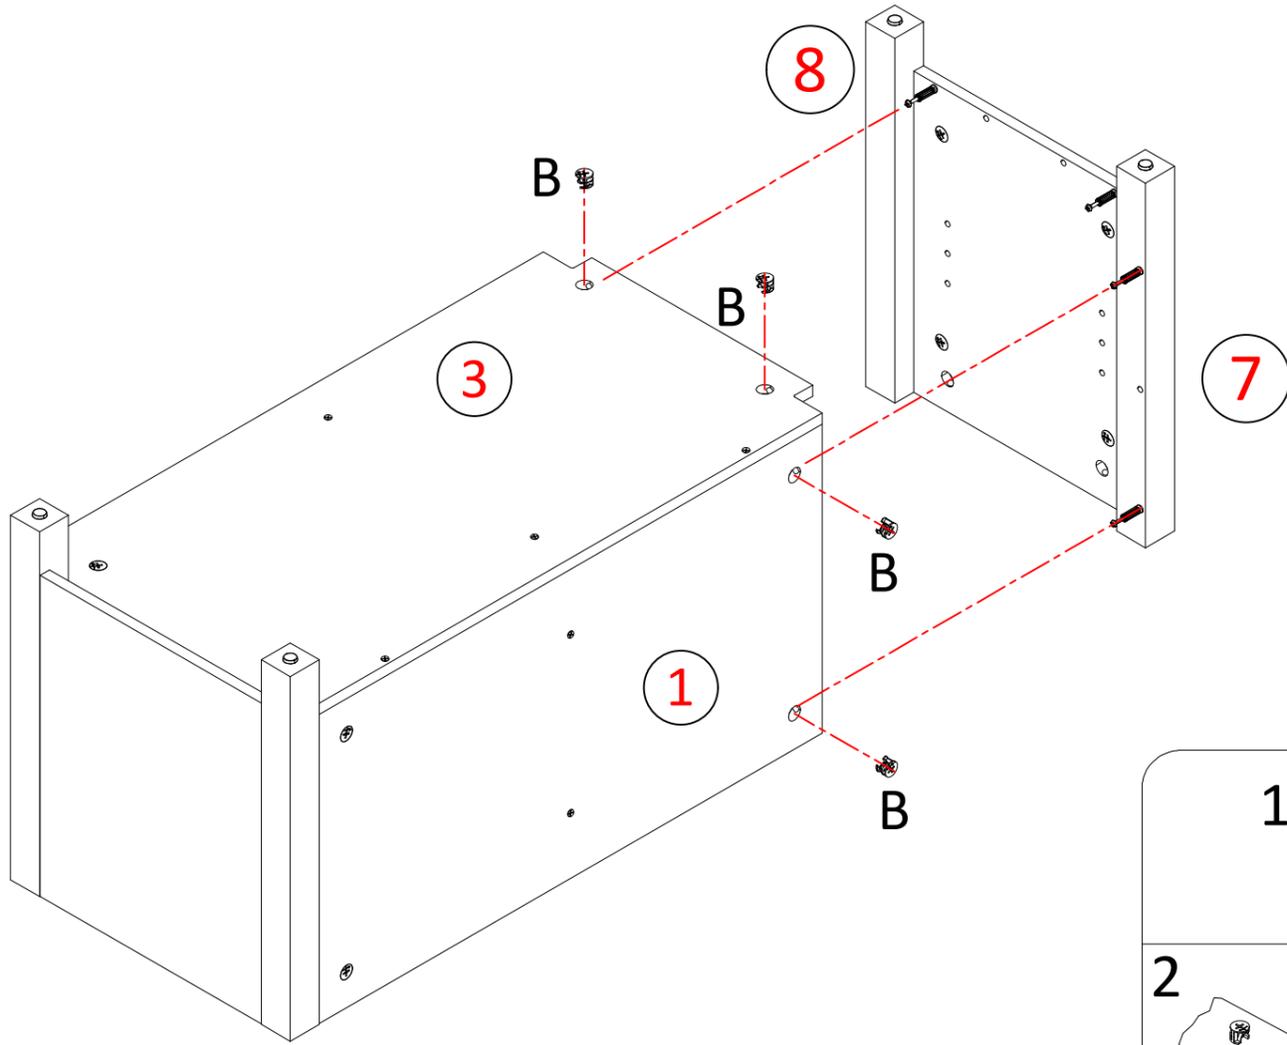


Step: 10

A	 M5x42	6
D	 M3x14	4
E		2
		

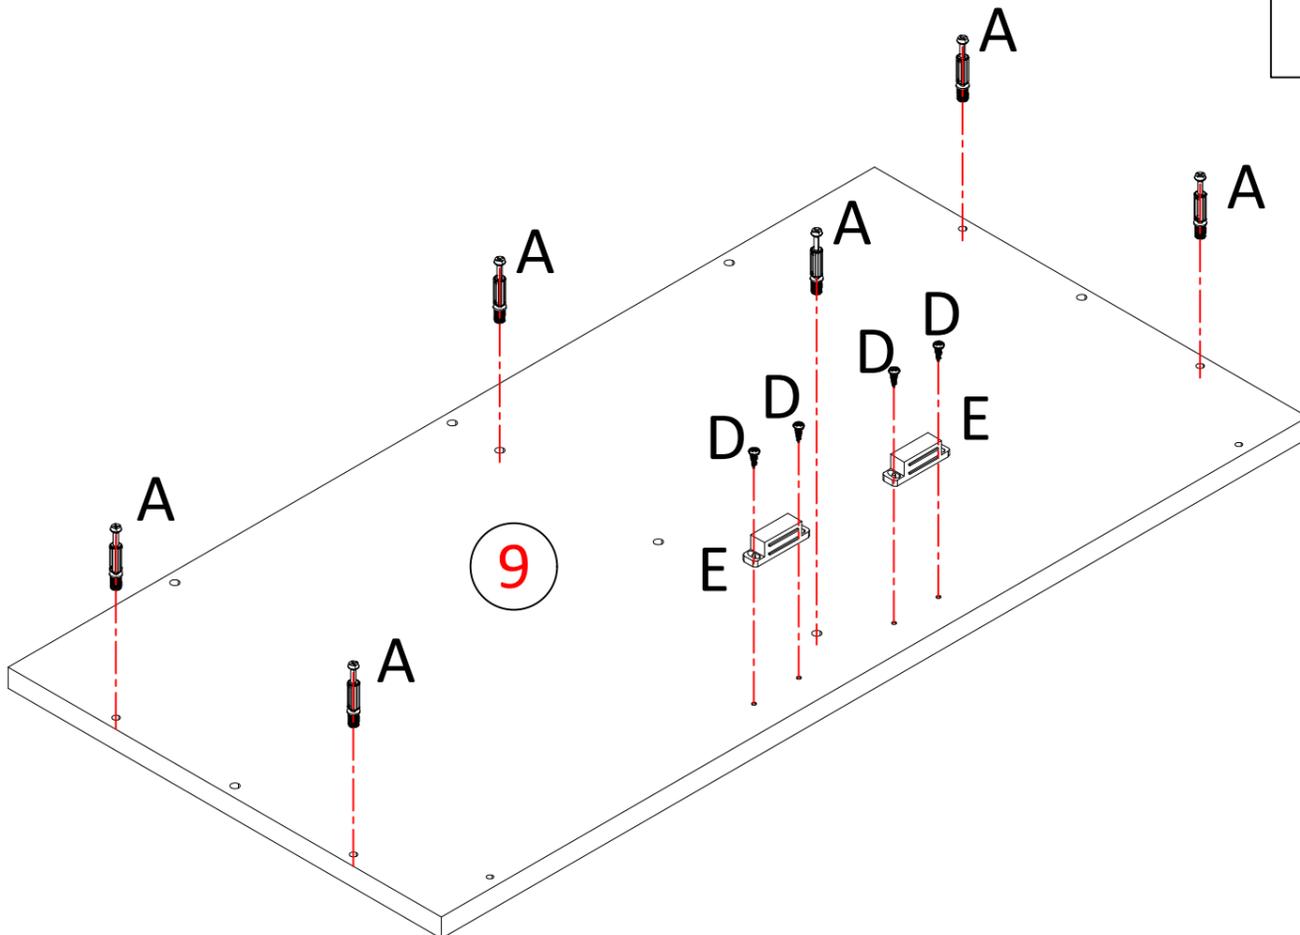




Step: 11

H	 Ø6x40	4
---	---	---

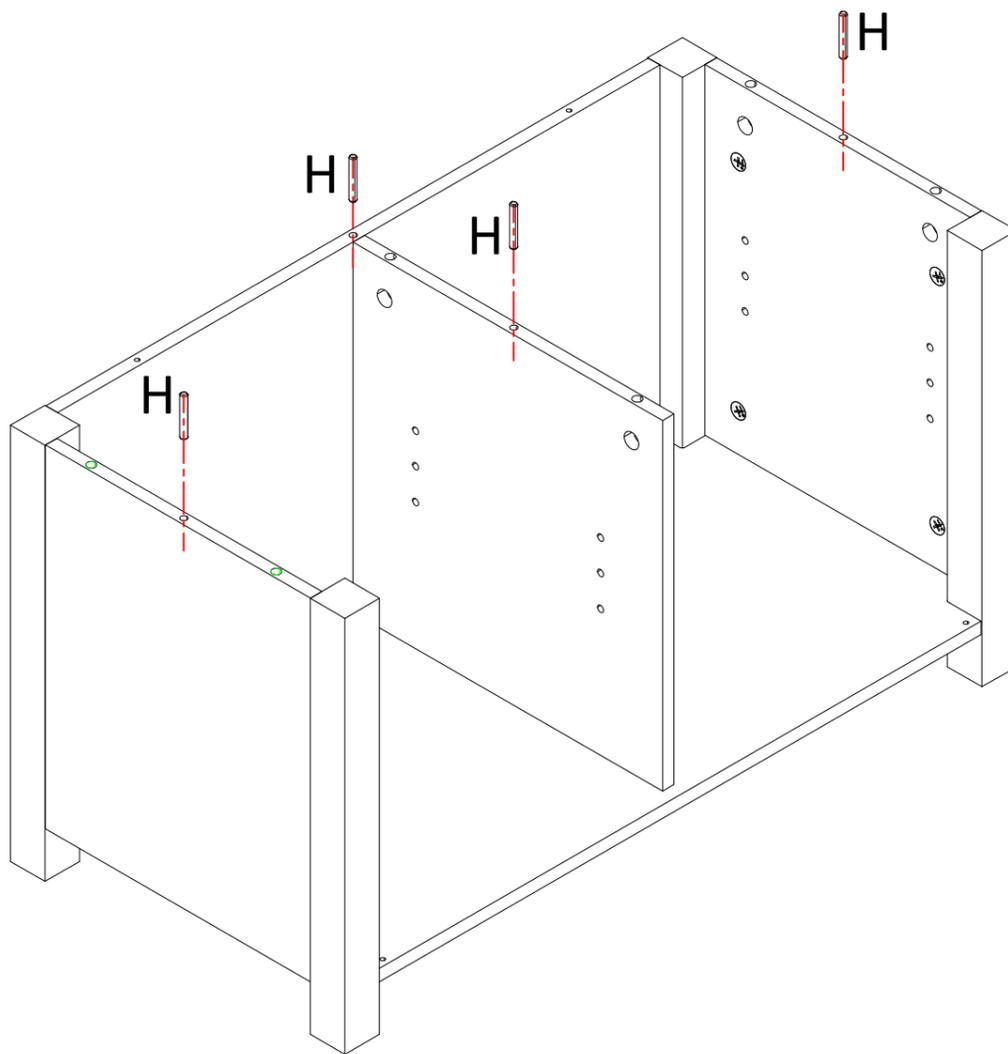



Step: 12

B	 Ø15x10	6
C	 M5x40	2
		

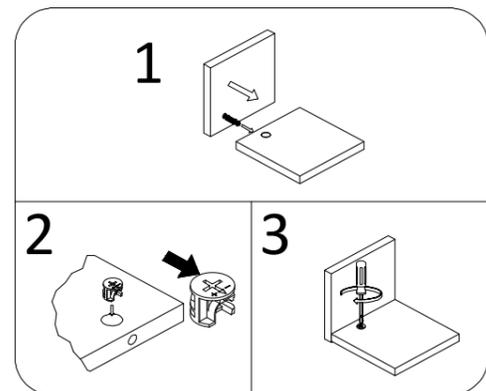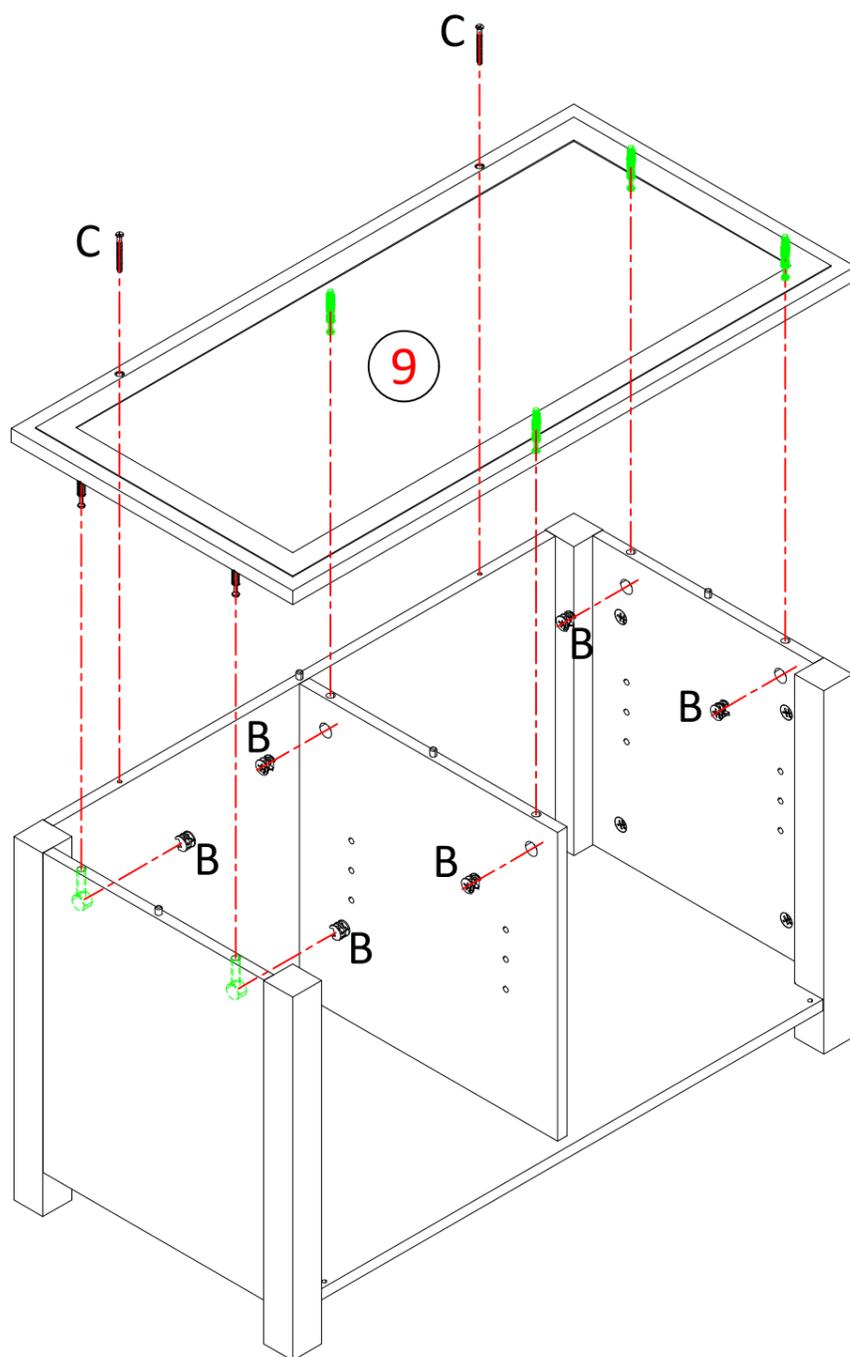



Step: 13

I	 ø6	8
---	--	---

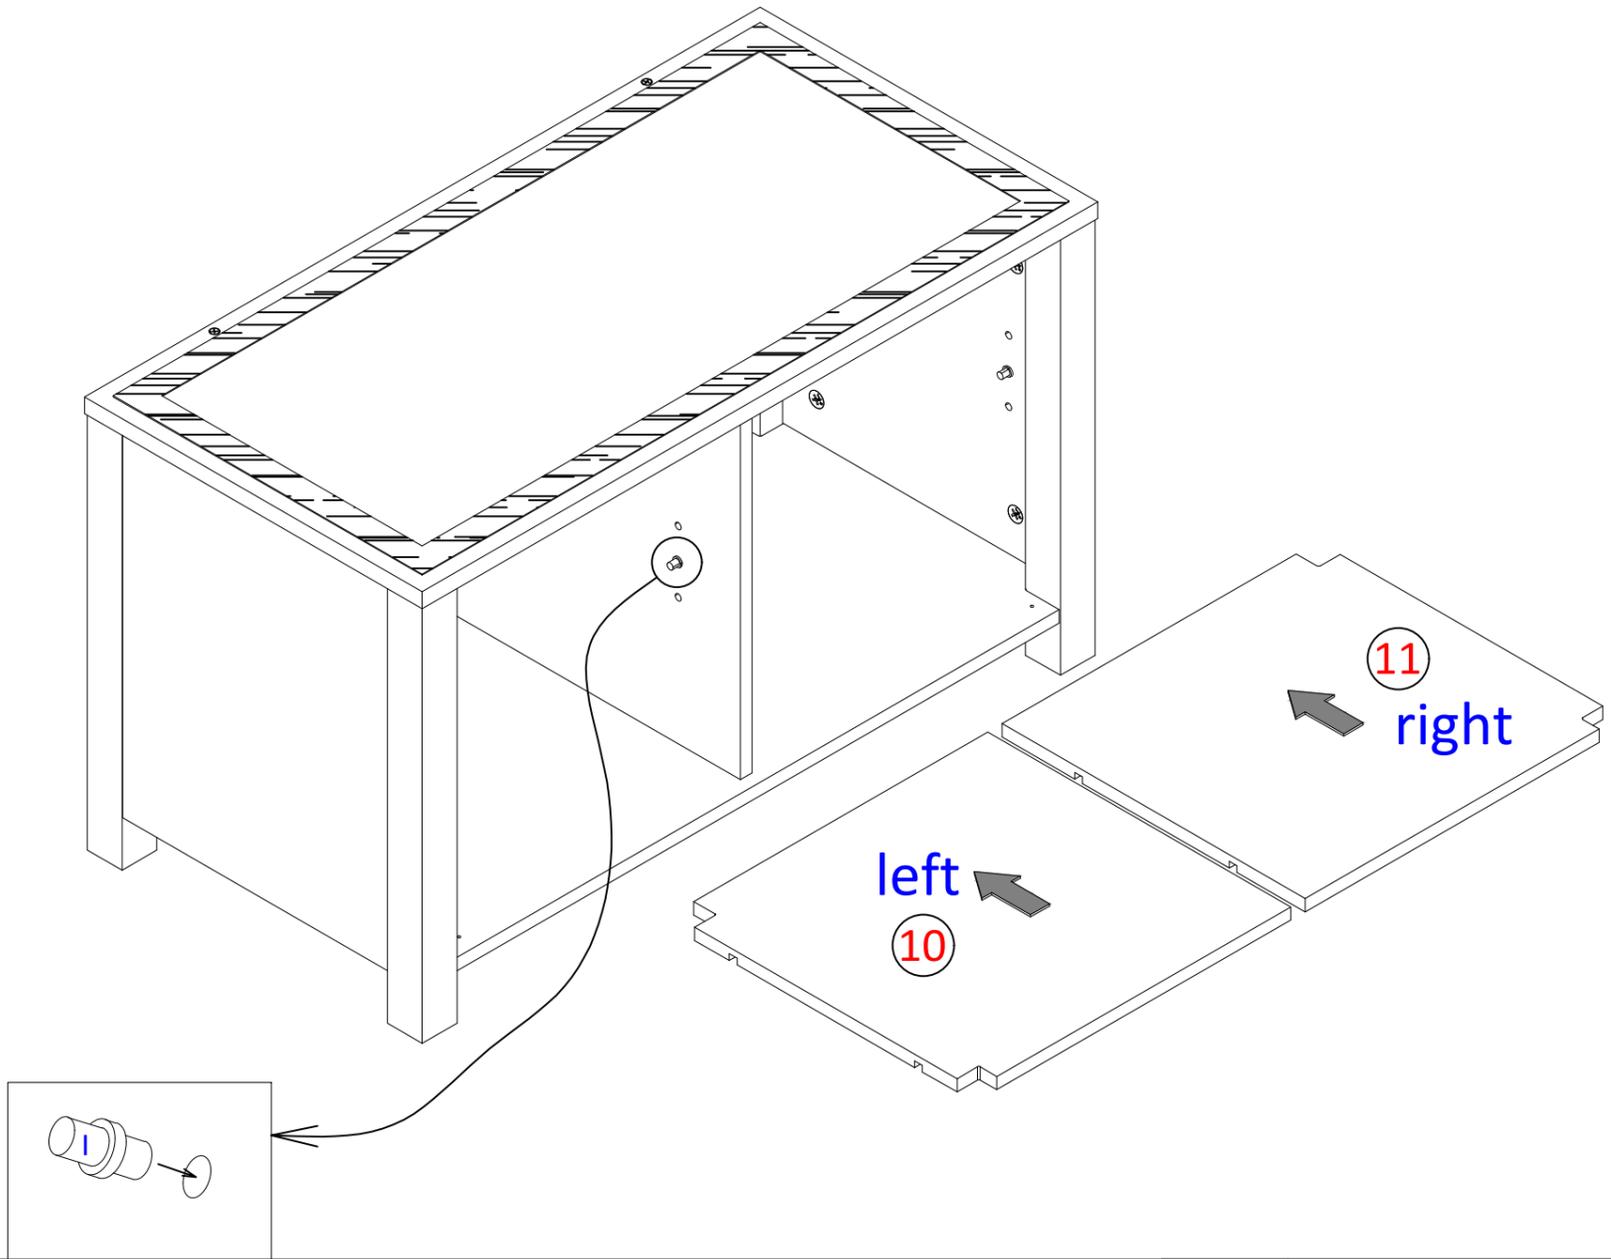


Step: 14

G		4
M	 M3.5x12	4
F		2
		

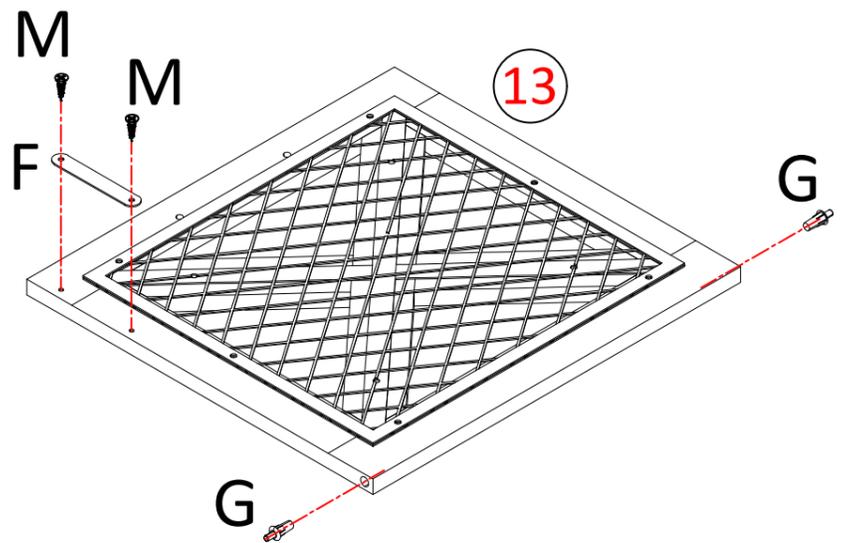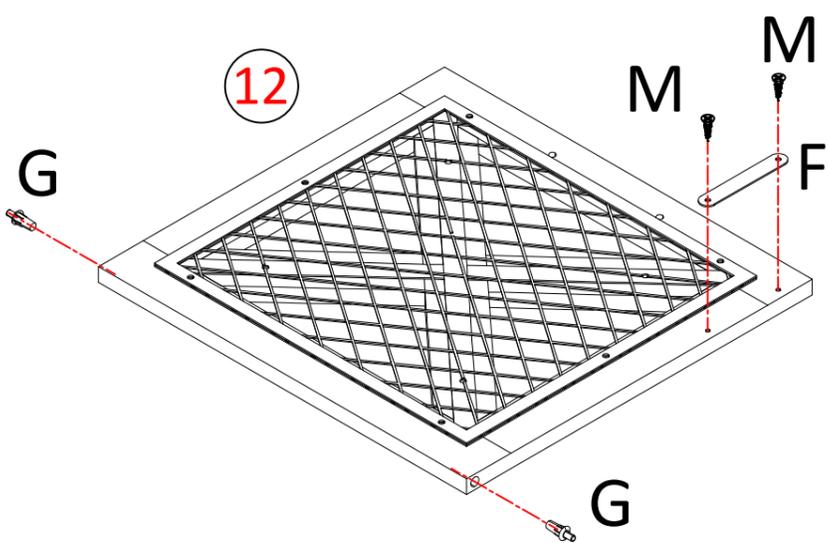

Step: 15

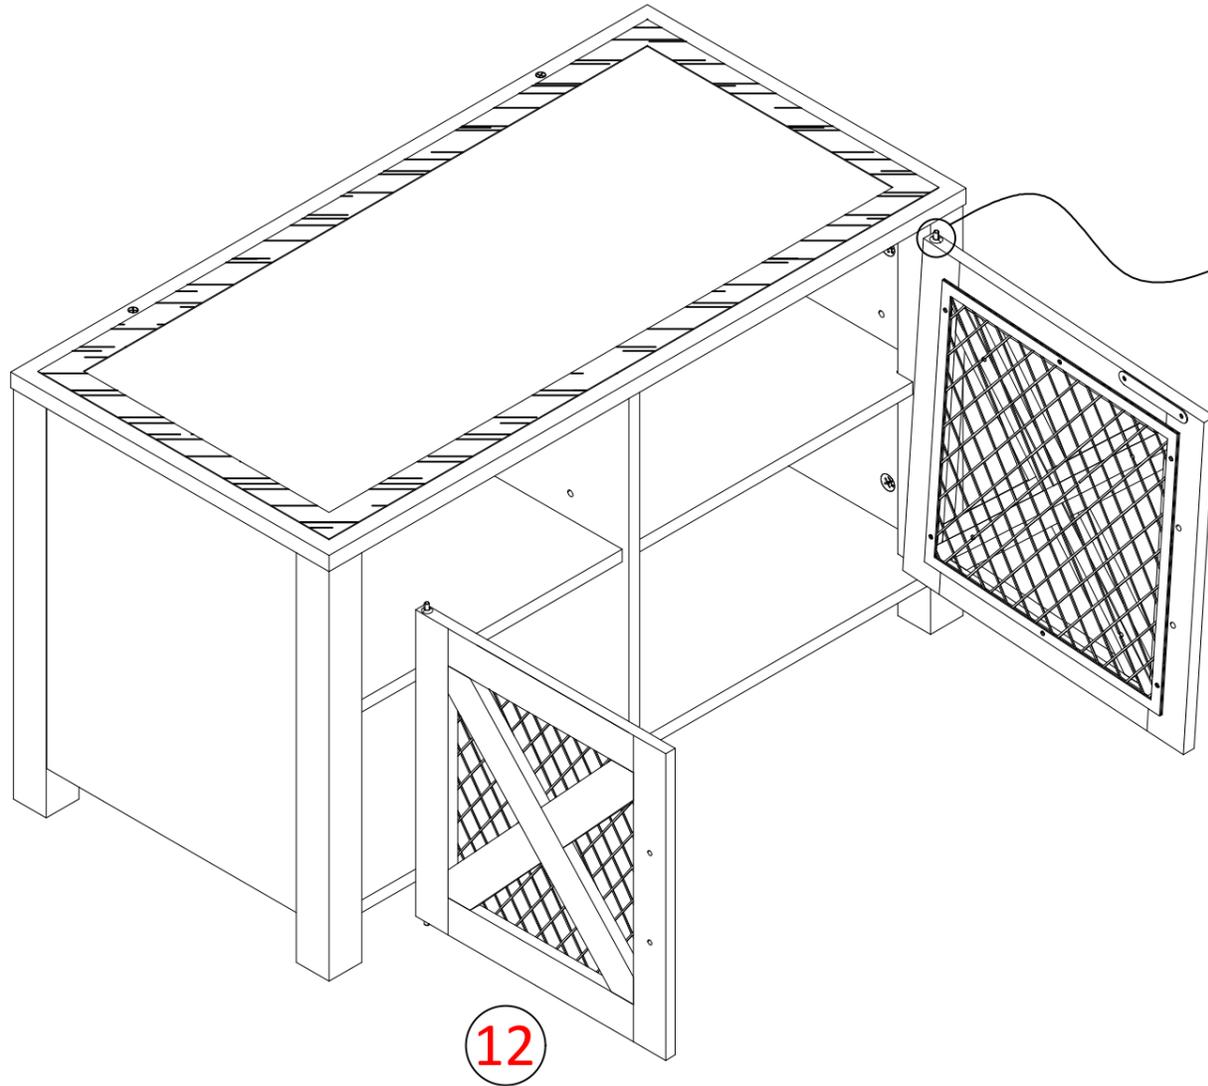


13

Hold it down,
push the
door in, and
align the
holes


12

Step: 16

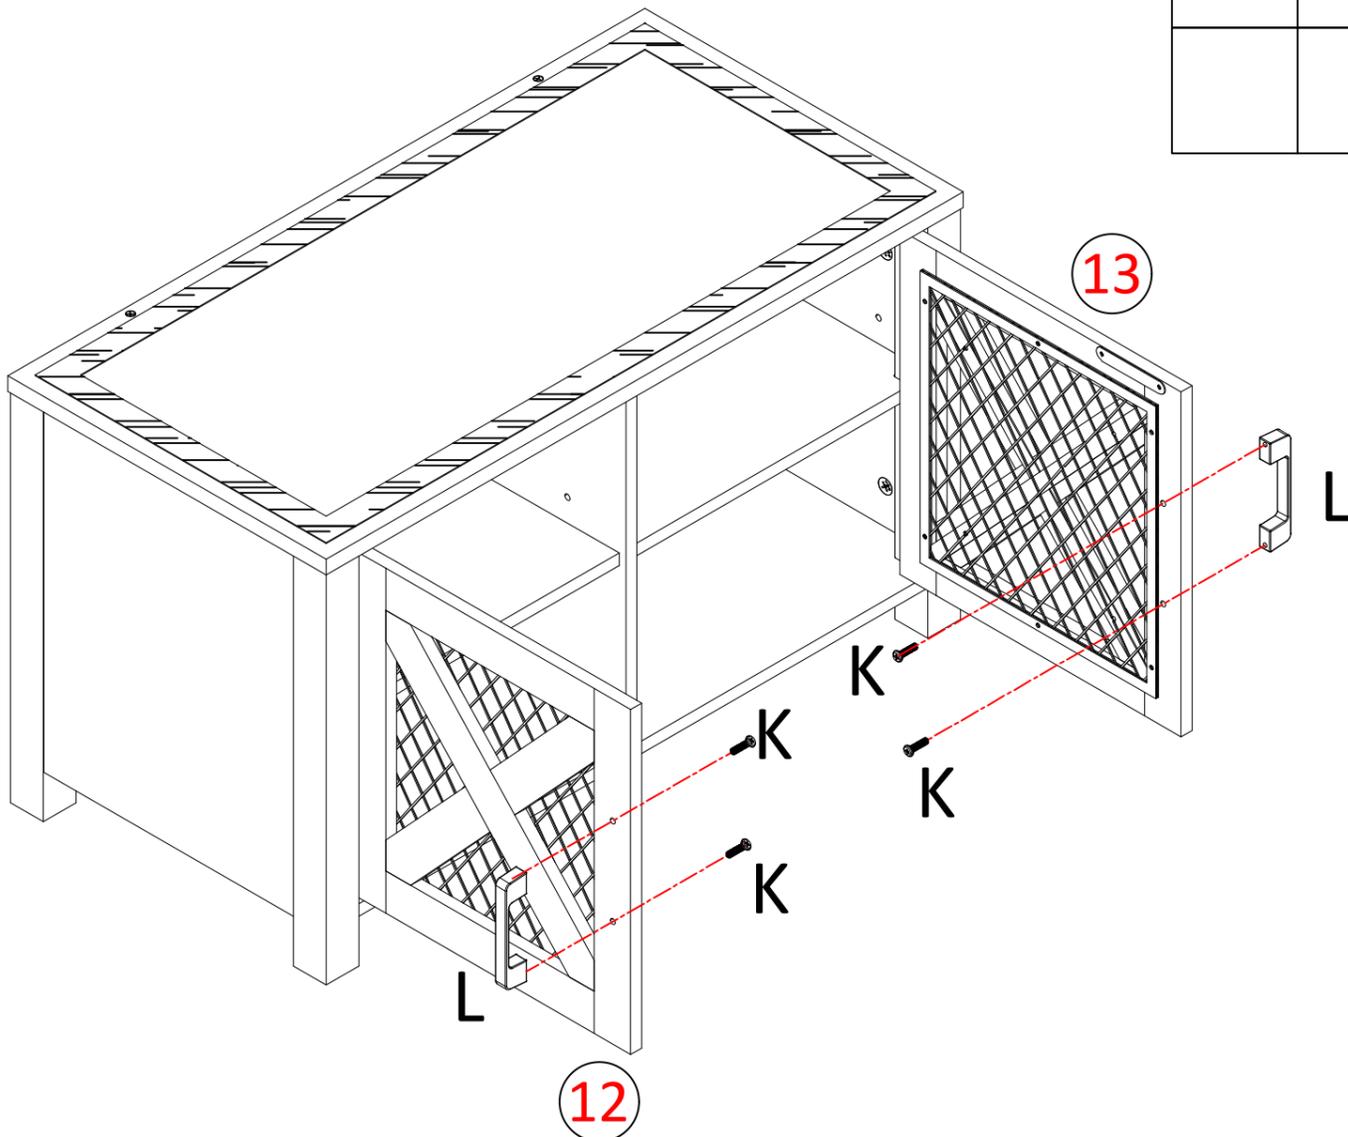

13

12

K	 M4x15	4
L		2
		

Step: 17

