


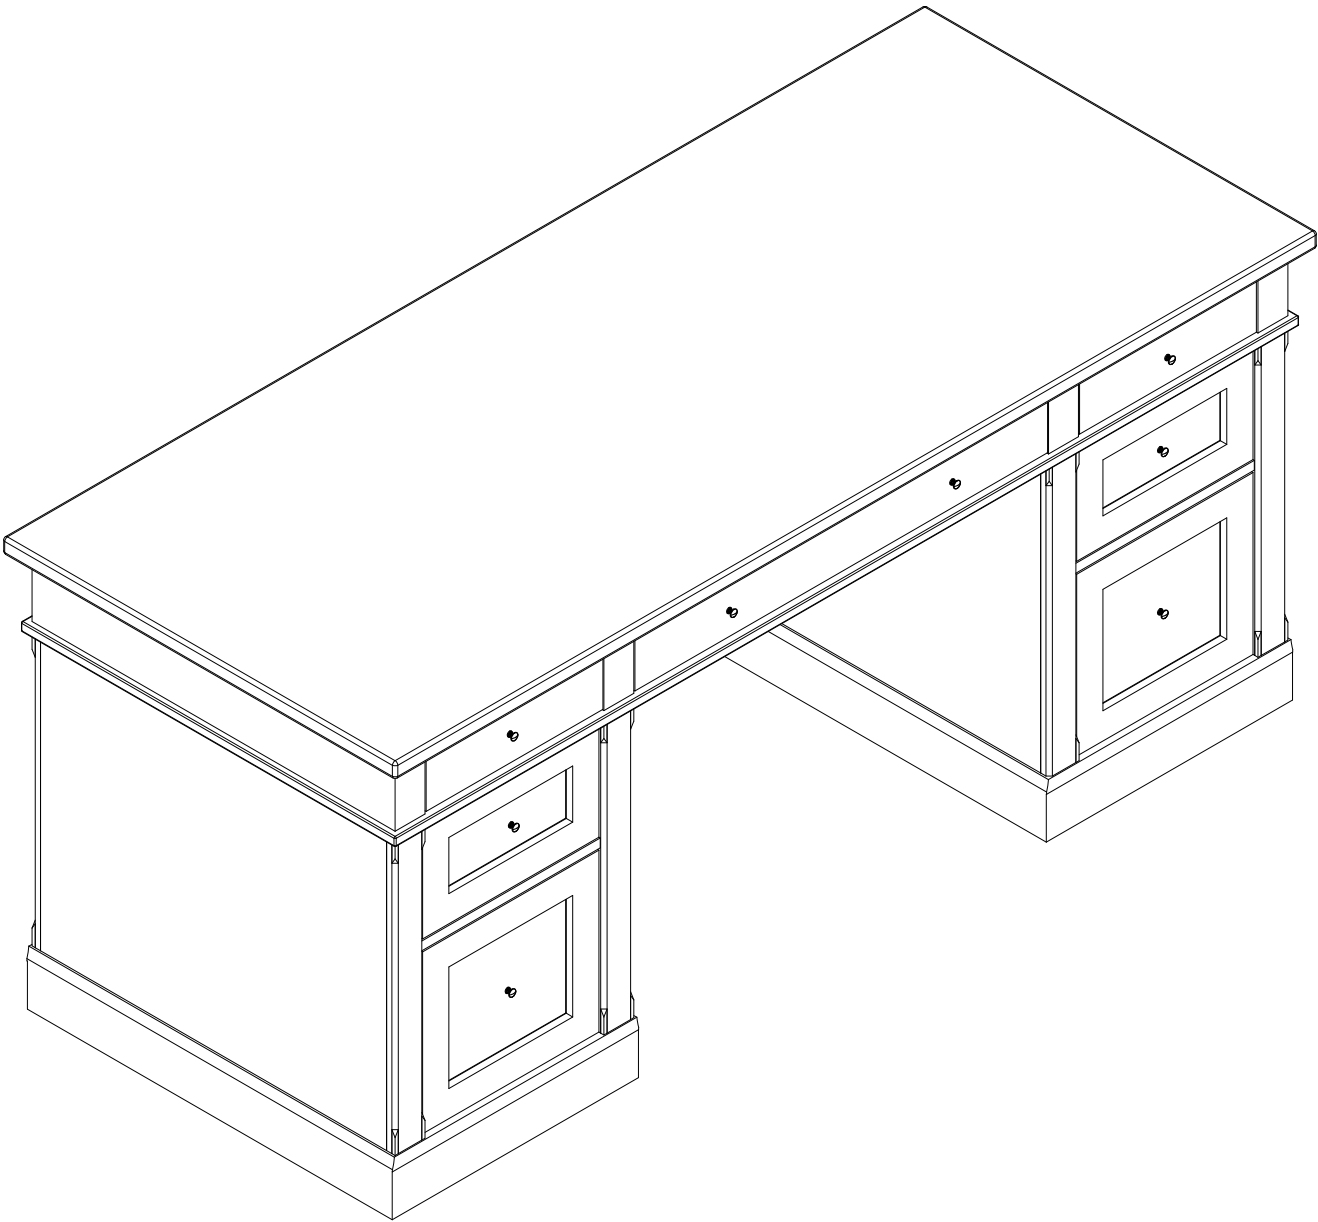

ITEM NO. DKRB1881
Scan for manual,
video & advice.



Adaptive Design, Effortless Living.



If you have any questions or concerns,
don't hesitate to reach out to us.

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)
Email: customerservice@hulalahome.com

MAINTENANCE AND WARNINGS

Thank You For Choosing Our Furniture.


Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product.

NOTE :


This brochure contains IMPORTANT safety info. Please read and keep it for future reference.



Weight Limitation
200 LBS

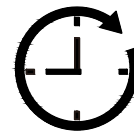

Installation:
45 minutes.

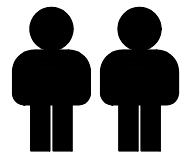

Two Person



Before You Start

Please follow the steps below:

-  Unbox the package and check if all parts and accessories are complete.
-  If you find something missing, stop assembly and contact your supplier immediately.
-  Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.
-  NOTE: Should be assembled on soft surface to keep balance.

After-Sales Service

- If you encounter any issues or need technical support during use, please contact our after-sales team. We offer long-term maintenance and warranty services.



Warranty


-  We strive to offer high , quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.
-  Are you having difficulty with assembly? Missing parts? Please send email with your order number to **customerservice@hulalahome.com**
-  For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!

Daily Maintenance

- Keep furniture away from heat.
- Do not use cleaning agents containing acids, alkalis, or corrosive substances, as they may damage the surface. It is recommended to use neutral cleaning agents or specialized furniture cleaners.
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, for residential use only.


Exploded Diagram

Please confirm that you have received all 3 boxes(box A/B/C), then begin the assembly!

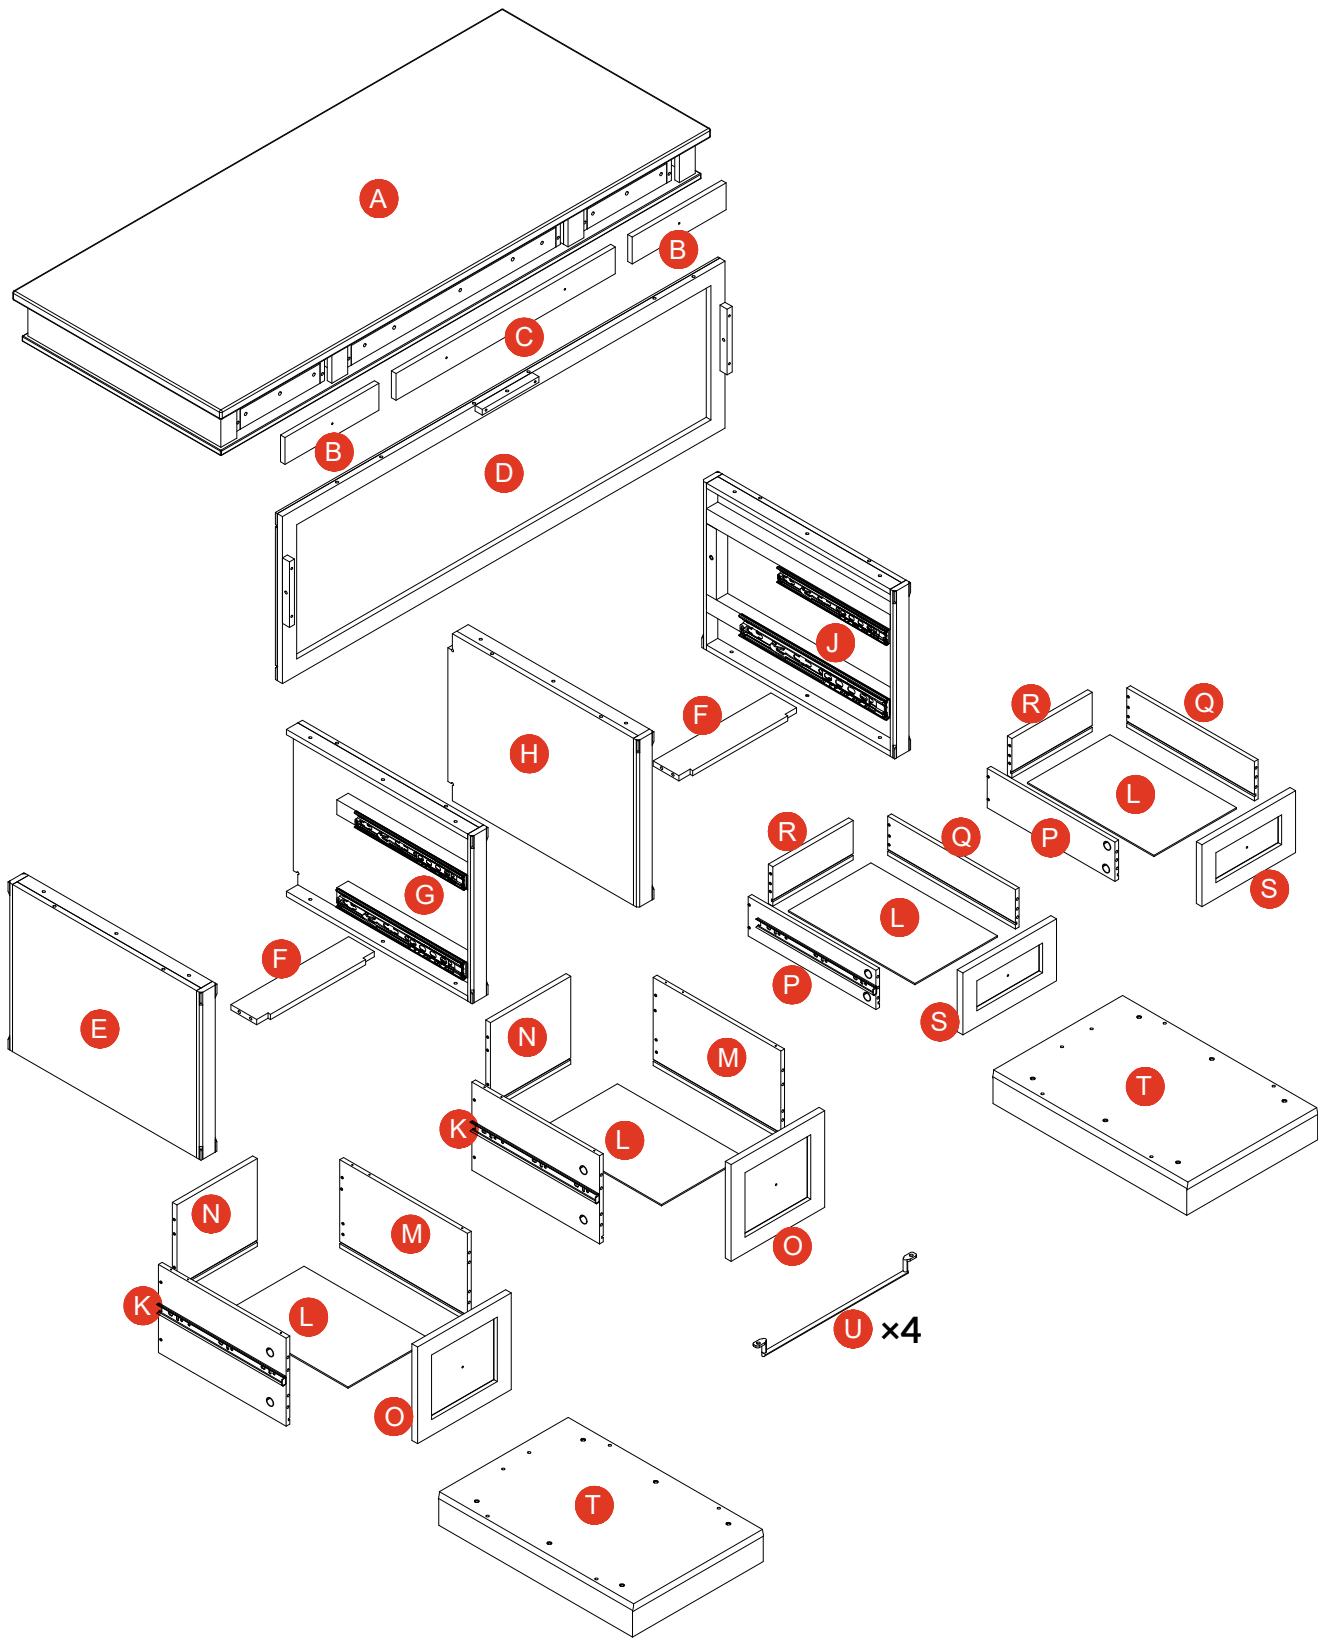

Parts List (Carton A)


A x1

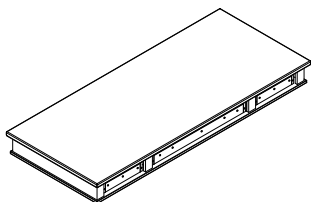

Desk top


Parts List (Carton B)

D x1

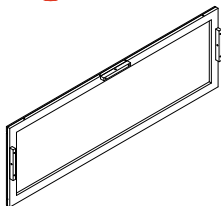


Back panel

E x1




Lef side panel

J x1




Right side panel

K x2

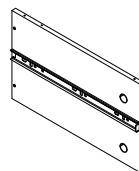


Left side panel of drawer

M x2

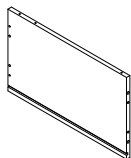


Right side panel of drawer

P x2

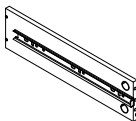


Left side panel of drawer

Q x2

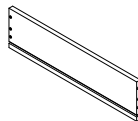

Right side panel of drawer


T x1

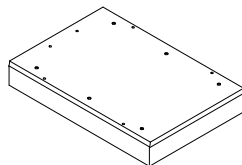

Base


Parts List (Carton C)

B ×2

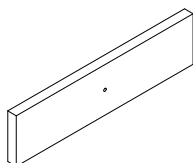


Drawer face

C ×1

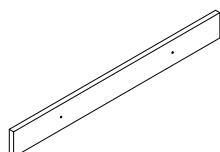


Drawer face

F ×2

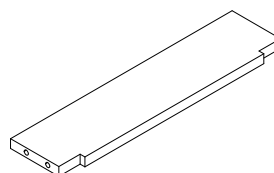


Connecting plate

G ×1




Right side panel

H ×1




Left side panel

L ×4

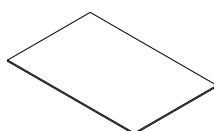


Drawer bottom panel

O ×2



Drawer face

N ×2




Back panel of drawer

R ×2




Back panel of drawer

S ×2




Drawer face

T ×1

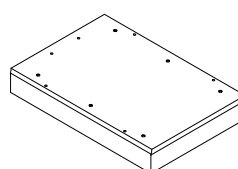

Base


U ×4



Folder hanging bar

Hardware List(Carton C)

1 x20+2



Bolt
Ø6*35mm

2 x20+2



Cam bolt
Ø15*10mm

3 x58+3




Wood Dowel
Ø8*30mm

4 x8+1



Screw
Ø3*14mm

5 x27+3



Bolt
Ø6*30mm

6 x4



Handle screw
Ø4*30mm

7 x8



Handle

8 x1




Allen key
M4

9 x20+2



Sticker

10 x16+2



Screw
Ø4*30mm

11 x7+1




Screw
Ø4*20mm

12 x4



Handle screw
M4*18mm

13 x1




Screwdriver

Assembly Instructions

Step 01

Tighten (1) into the corresponding hole of (J&H) with (13)




13	 x 1	Screwdriver
1	 x 2	Ø6*35 mm

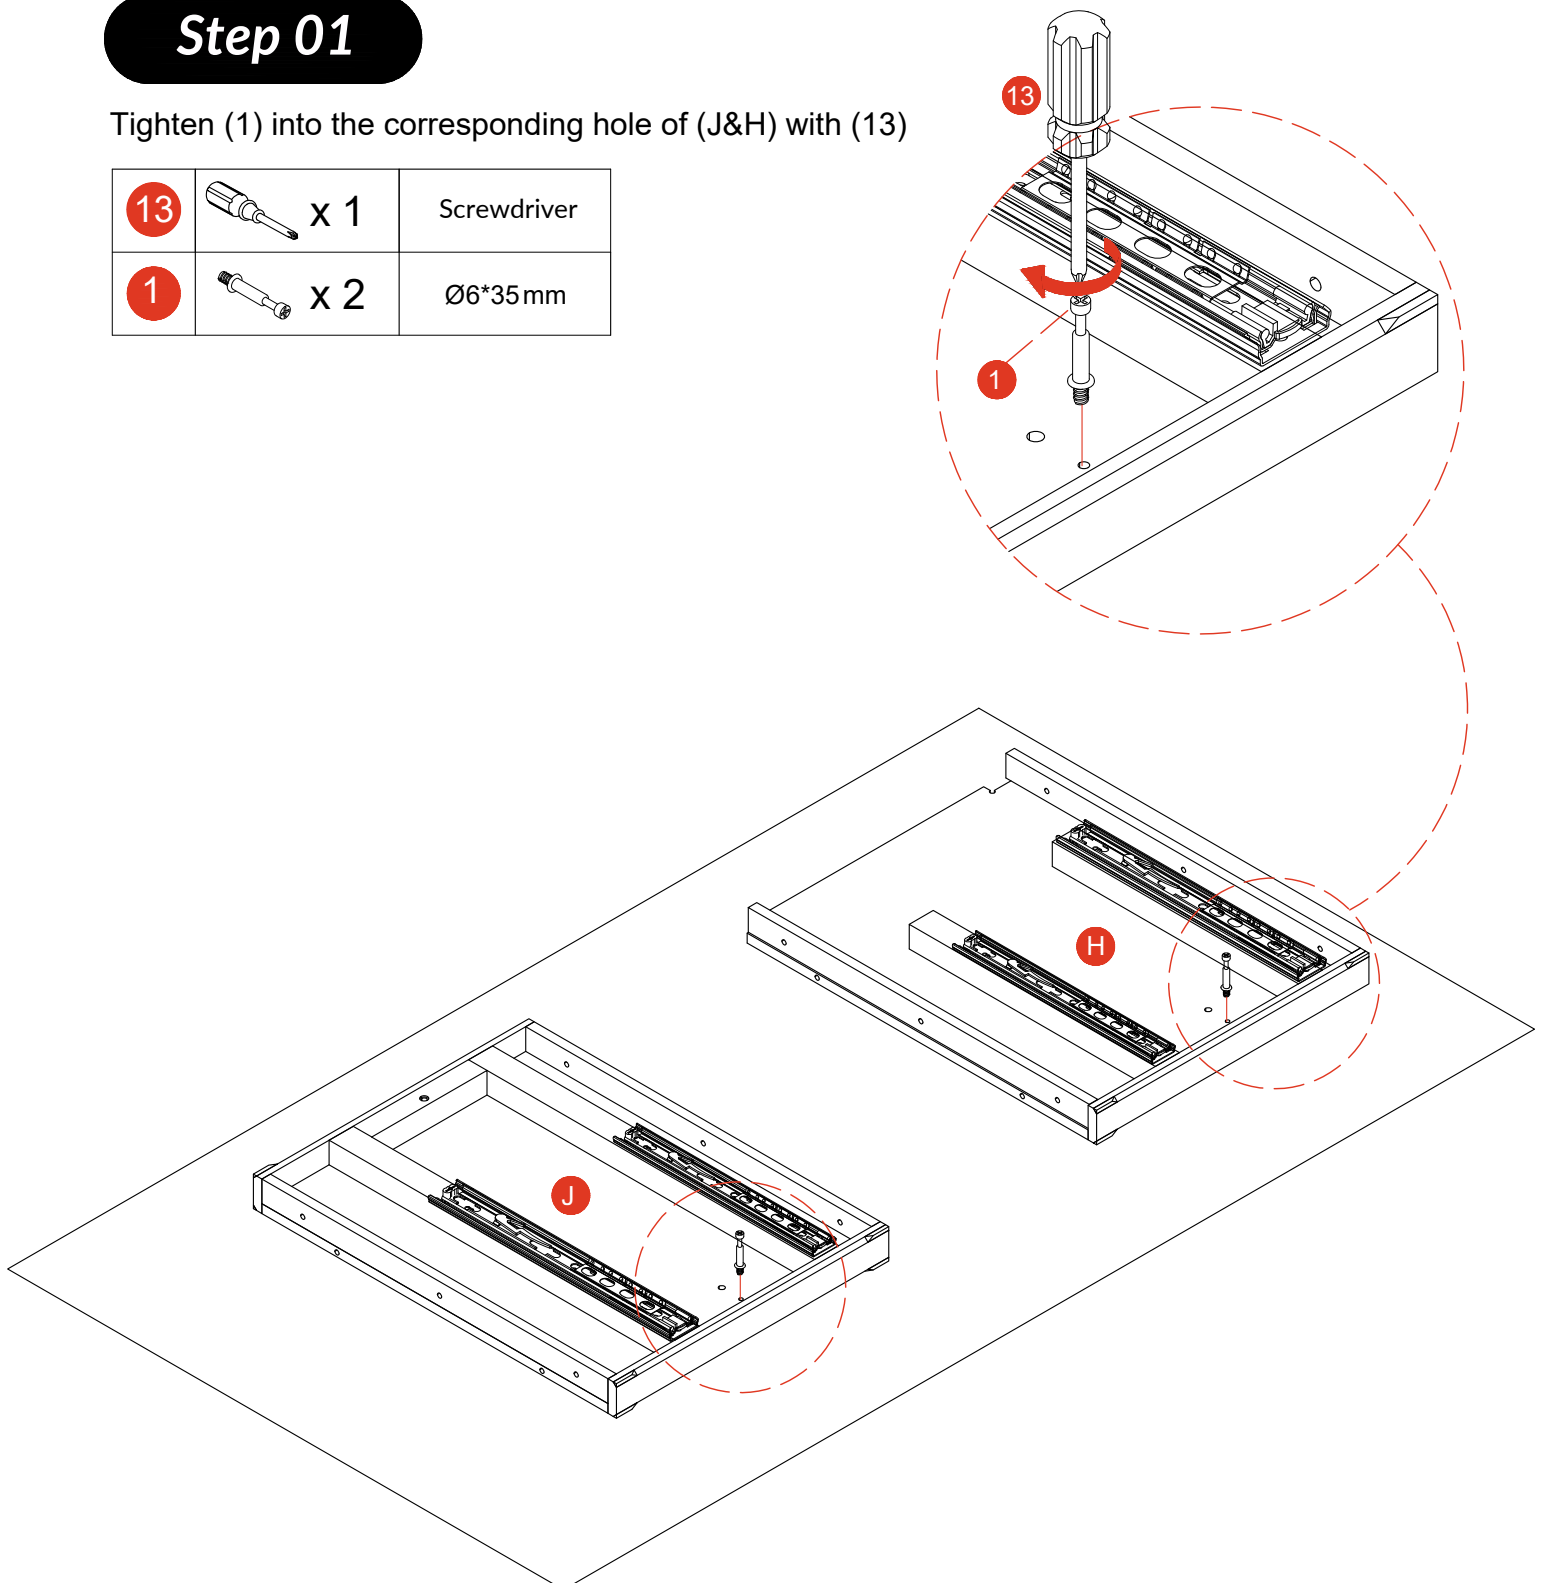

Step 02

1. Insert (3) into the corresponding hole of (F)
2. Connect (J&H) with (F)
3. Insert into the corresponding hole of (F), then tighten (2) with (13)
4. Cover (2) with (9)


13	 x 1	Screwdriver
9	 x 2	Sticker
3	 x 2	Ø8*30mm
2	 x 2	Ø15*10mm

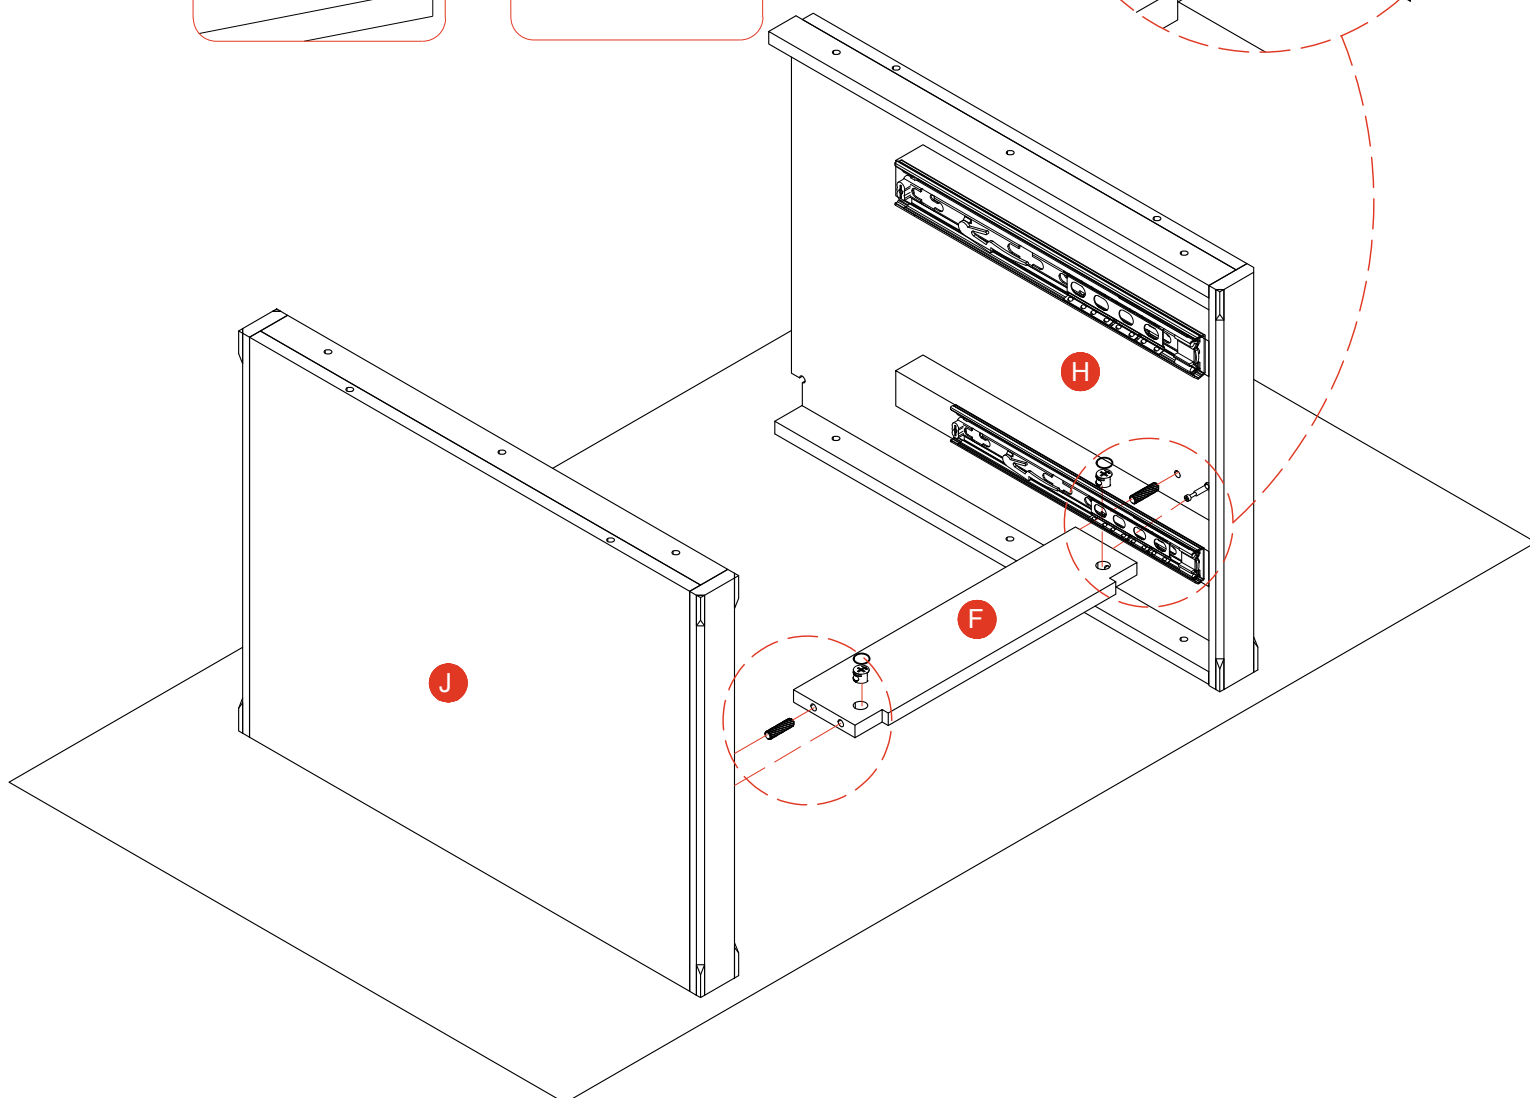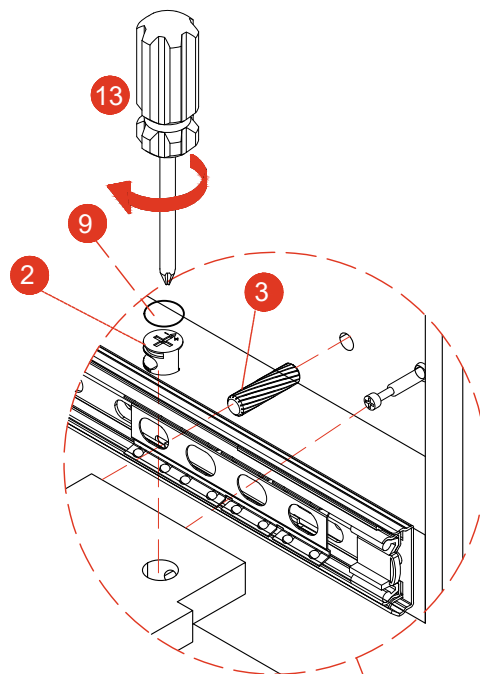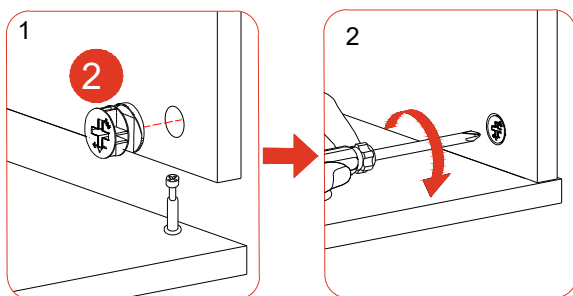

Step 03


Tighten (1) into the corresponding hole of (E&G) with (13)




13	 x 1	Screwdriver
1	 x 2	Ø6*35 mm

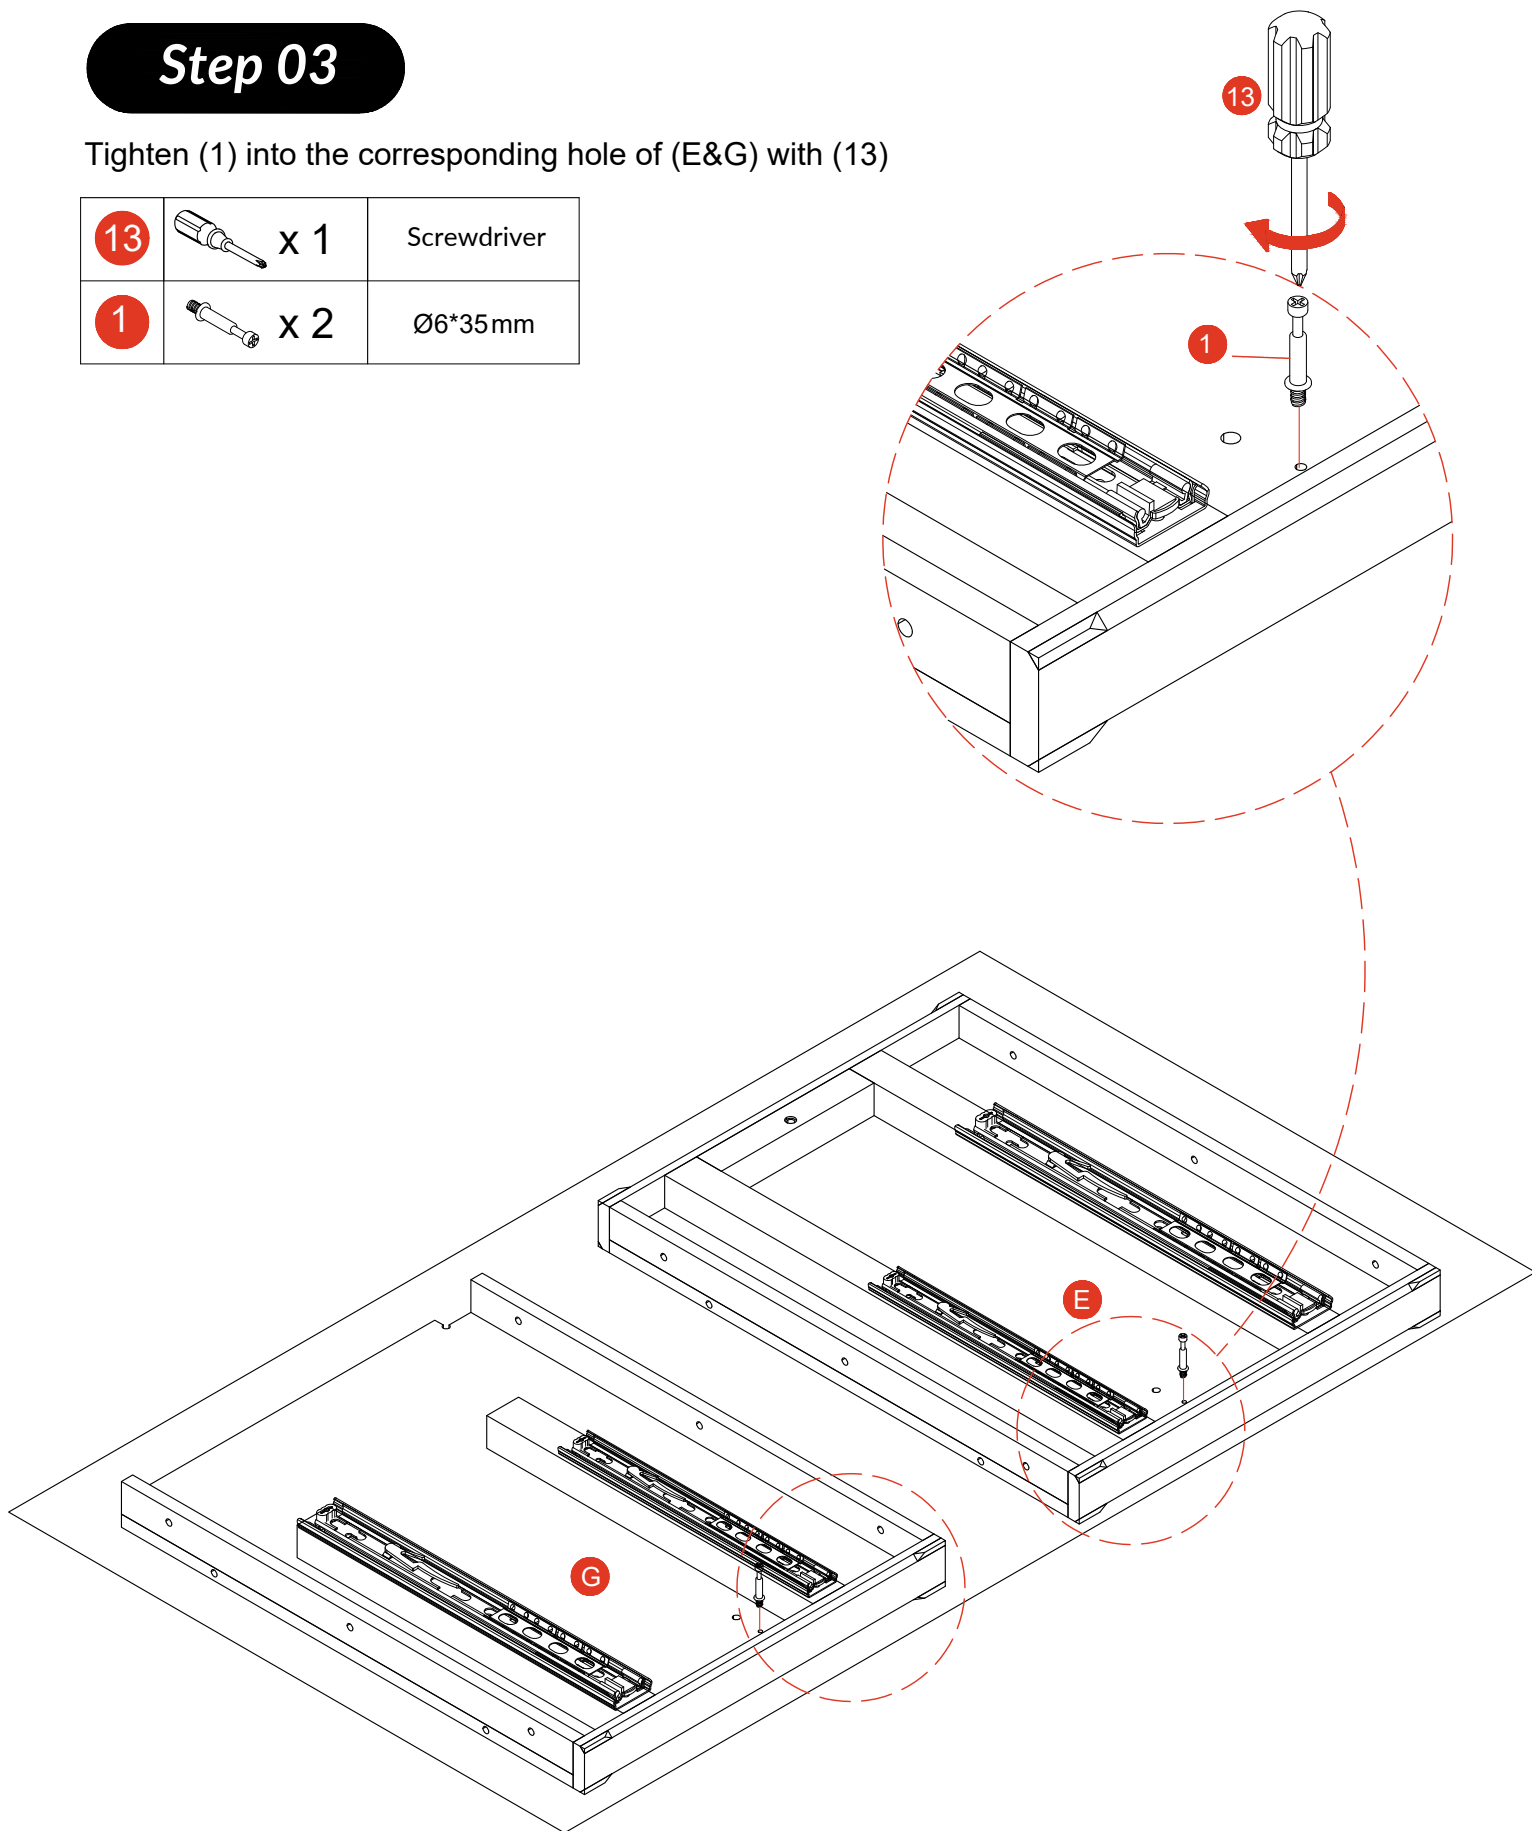

Step 04

1. Insert (3) into the corresponding hole of (F)
2. Connect (G&E) with (F)
3. Insert into the corresponding hole of (F), then tighten (2) with (13)
4. Cover (2) with (9)


13		x 1	Screwdriver
9		x 2	Sticker
3		x 2	Ø8*30mm
2		x 2	Ø15*10mm

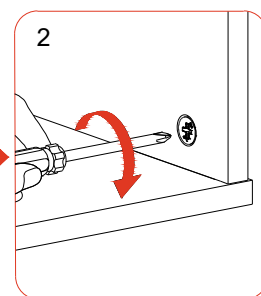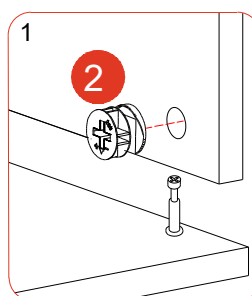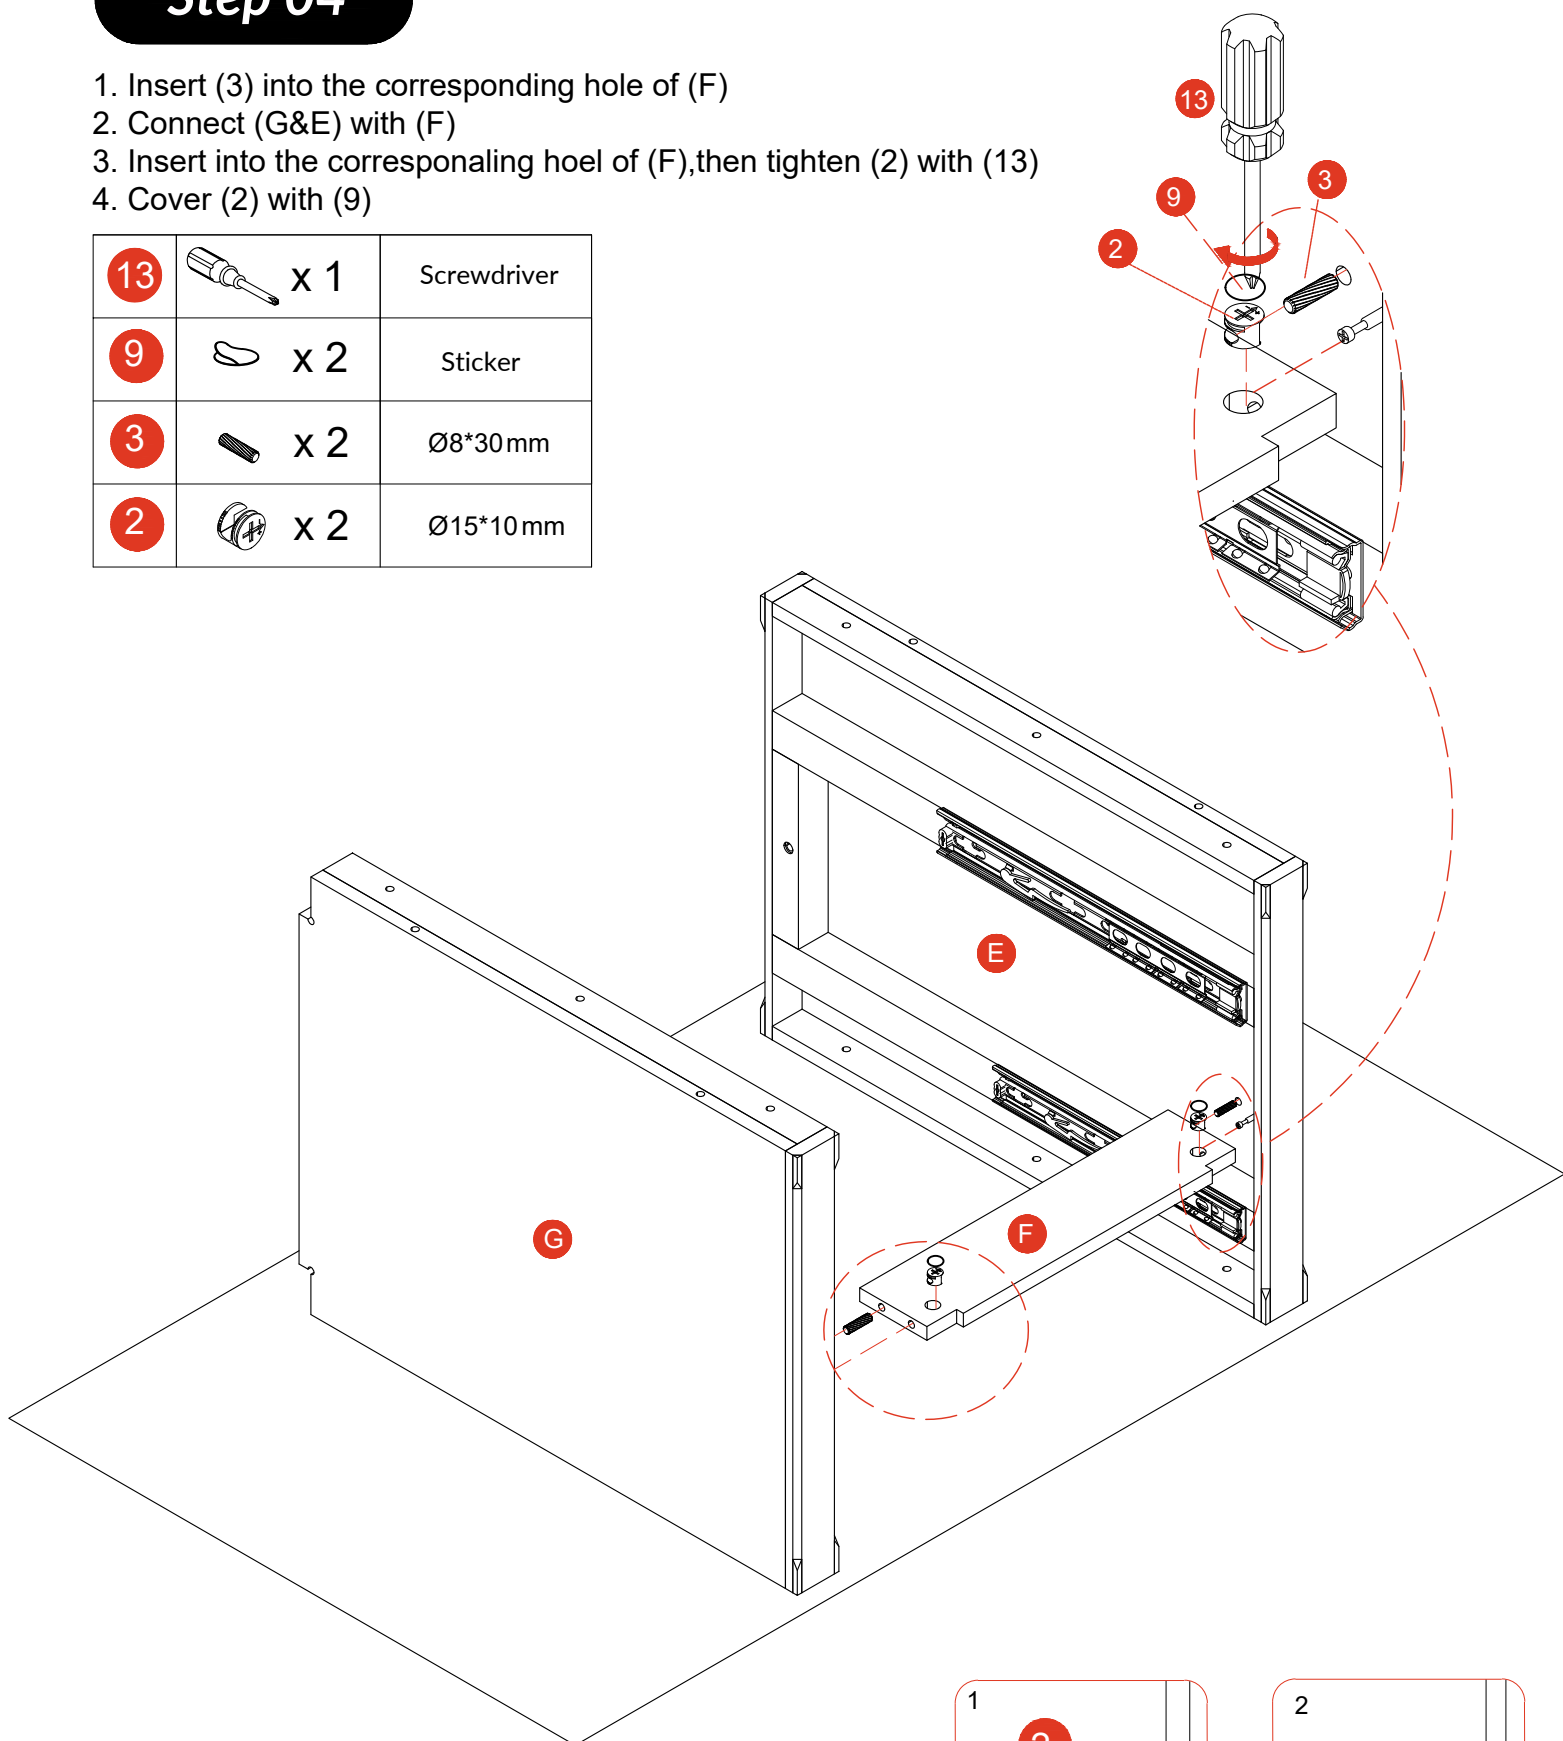

Step 05

Insert (3) into the corresponding hole of (A) by hand


3	 x 12	Ø8*30mm
---	--	---------

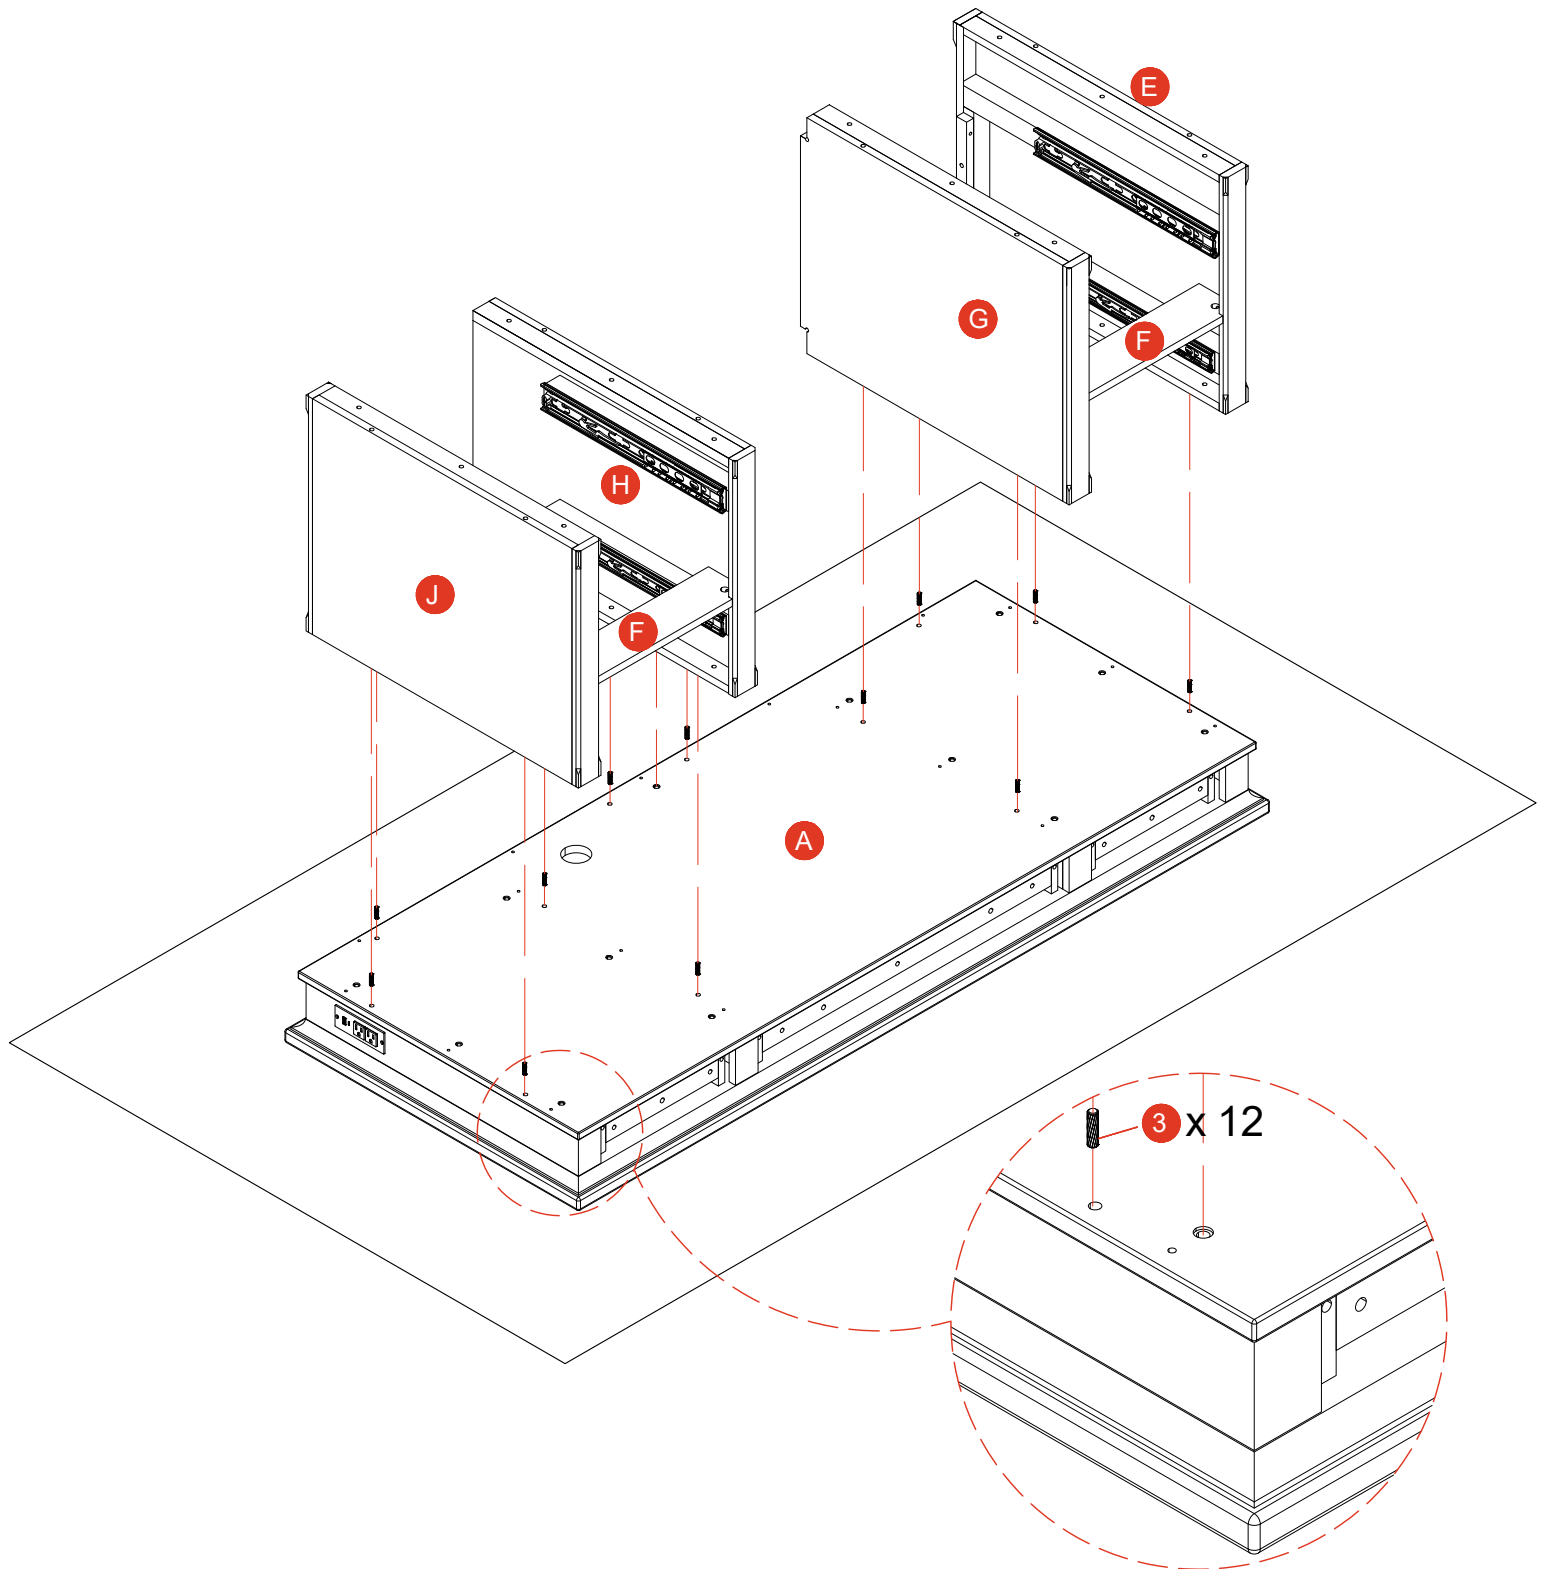

Step 06


Connect the prepared unit (&F&H) (E&F&G) with (A) Align the hole,tighten (5) with (8)

5	 x 6	Ø6*30mm
8	 x 1	M4

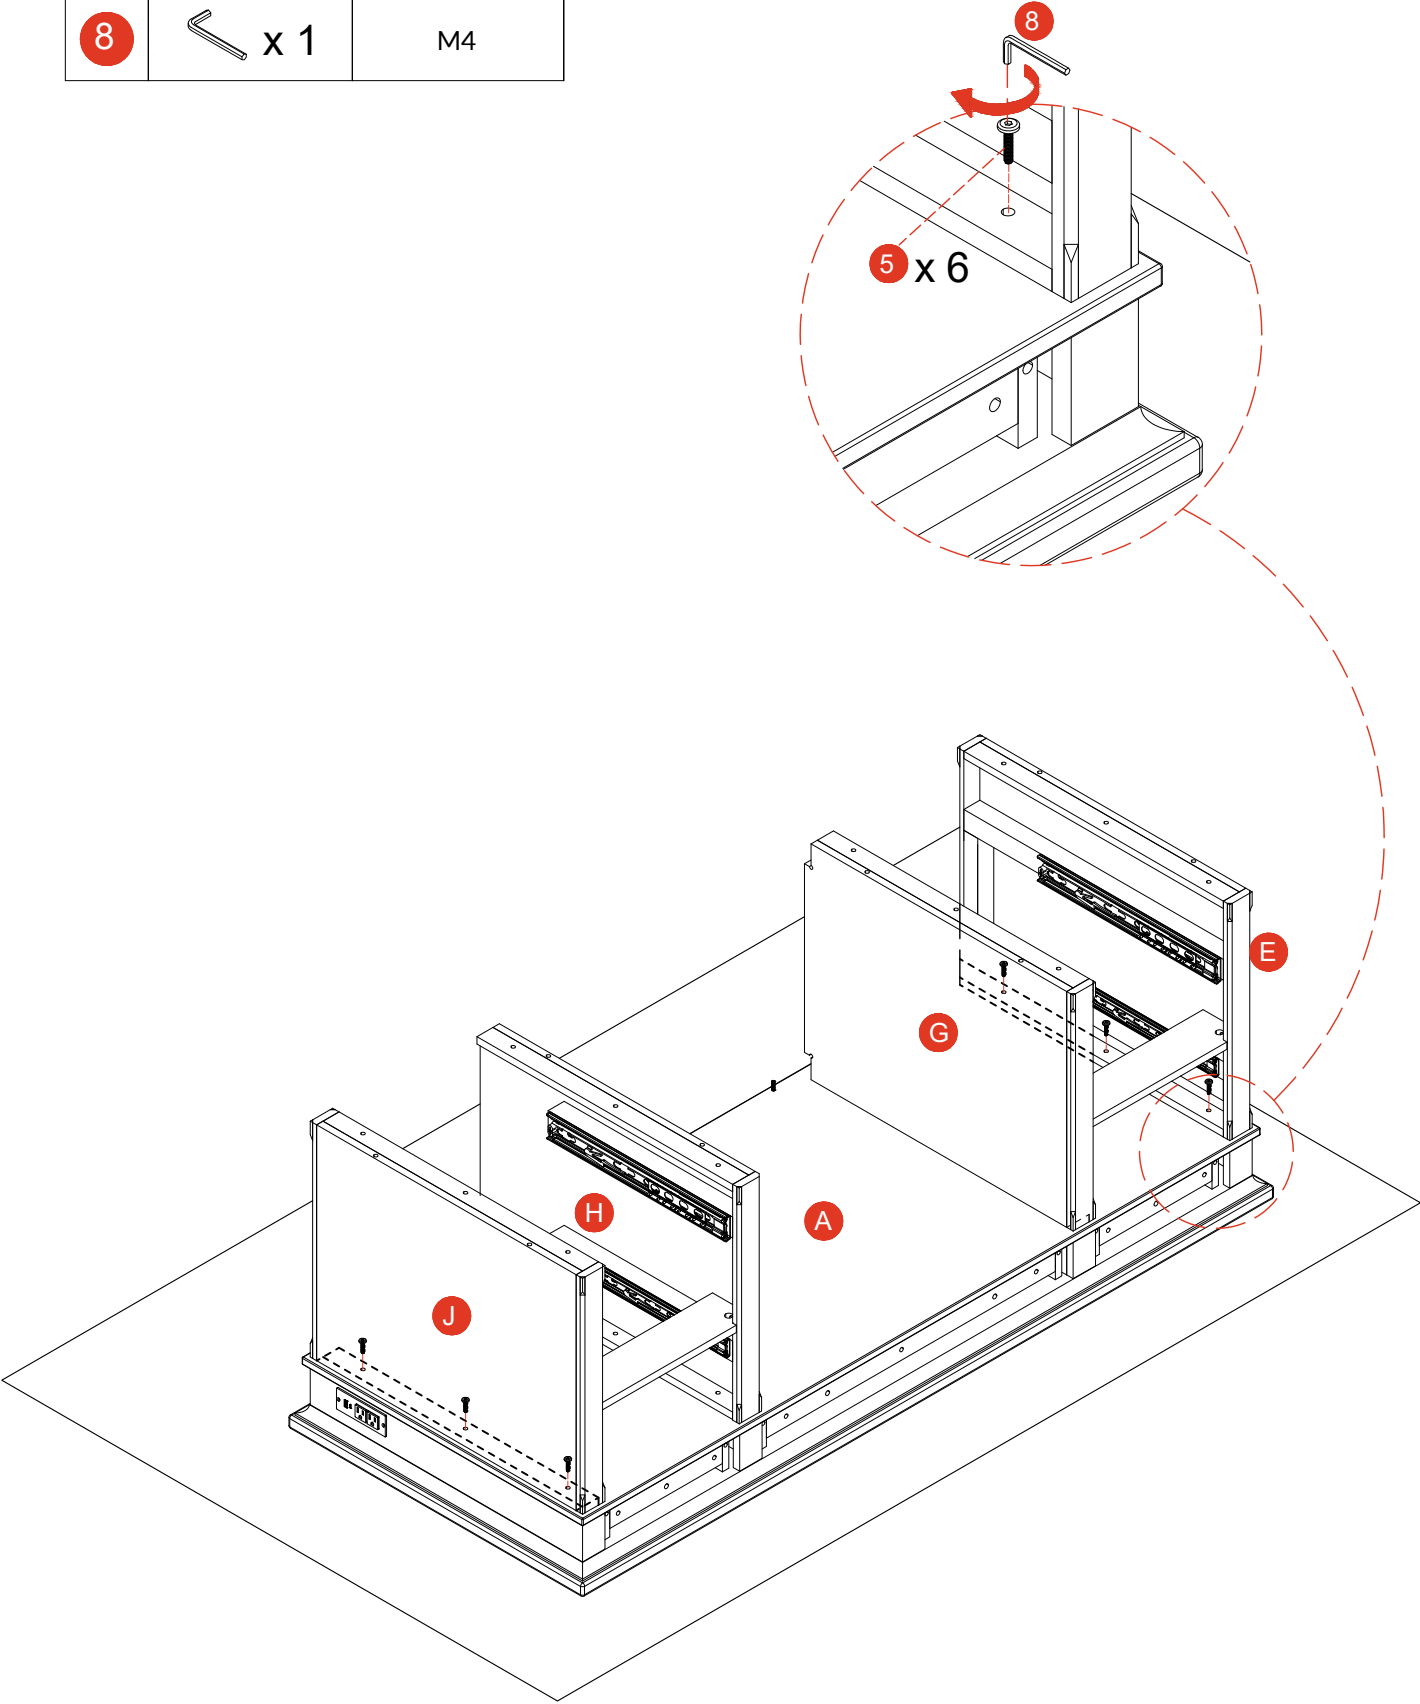

Step 07


When assembling (D), make sure to lift (G & H) slightly upward, so that the fake thickness strips fit properly into the grooves as the picture shown

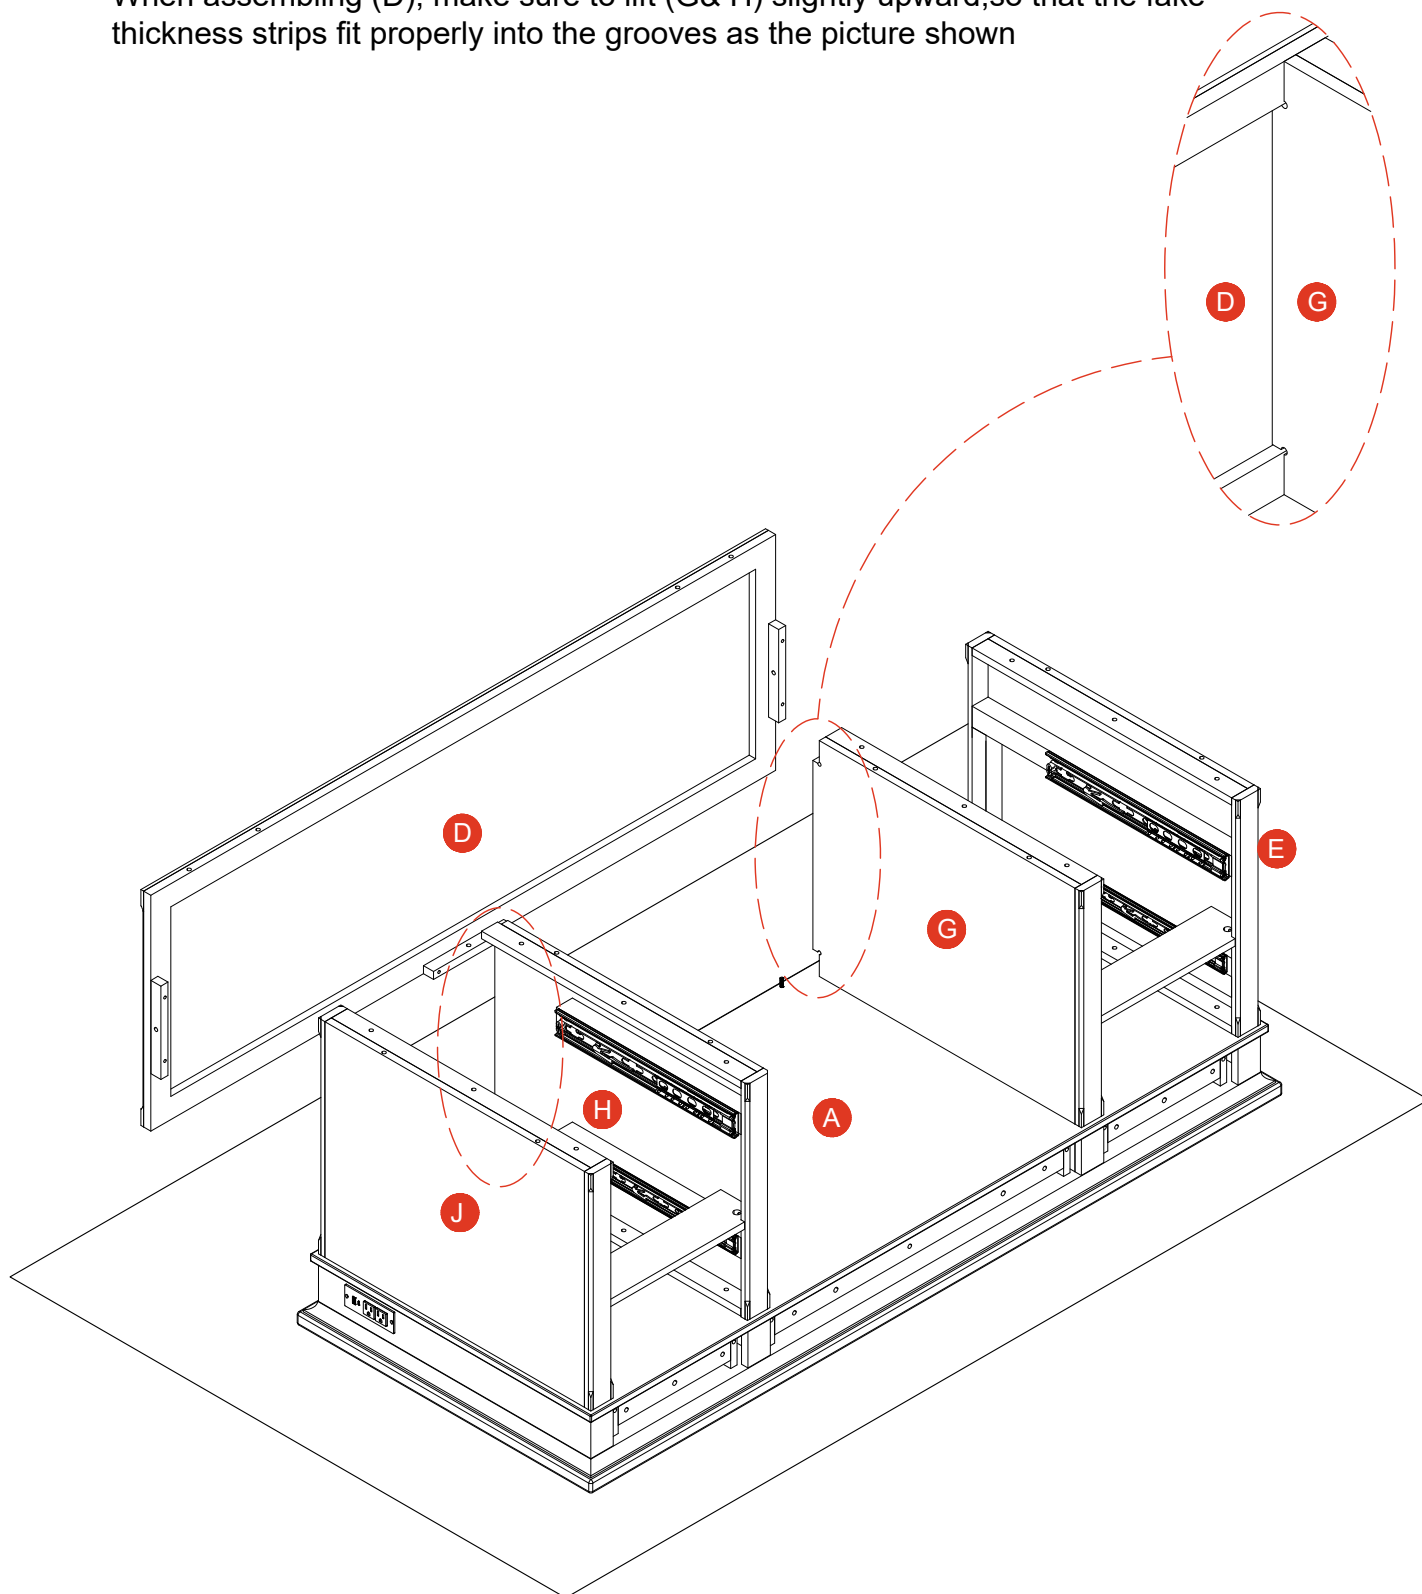

Step 08

Align the hole, tighten (5) with (8) as picture shown


8	 x 1	M4
5	 x 9	Ø6*30mm

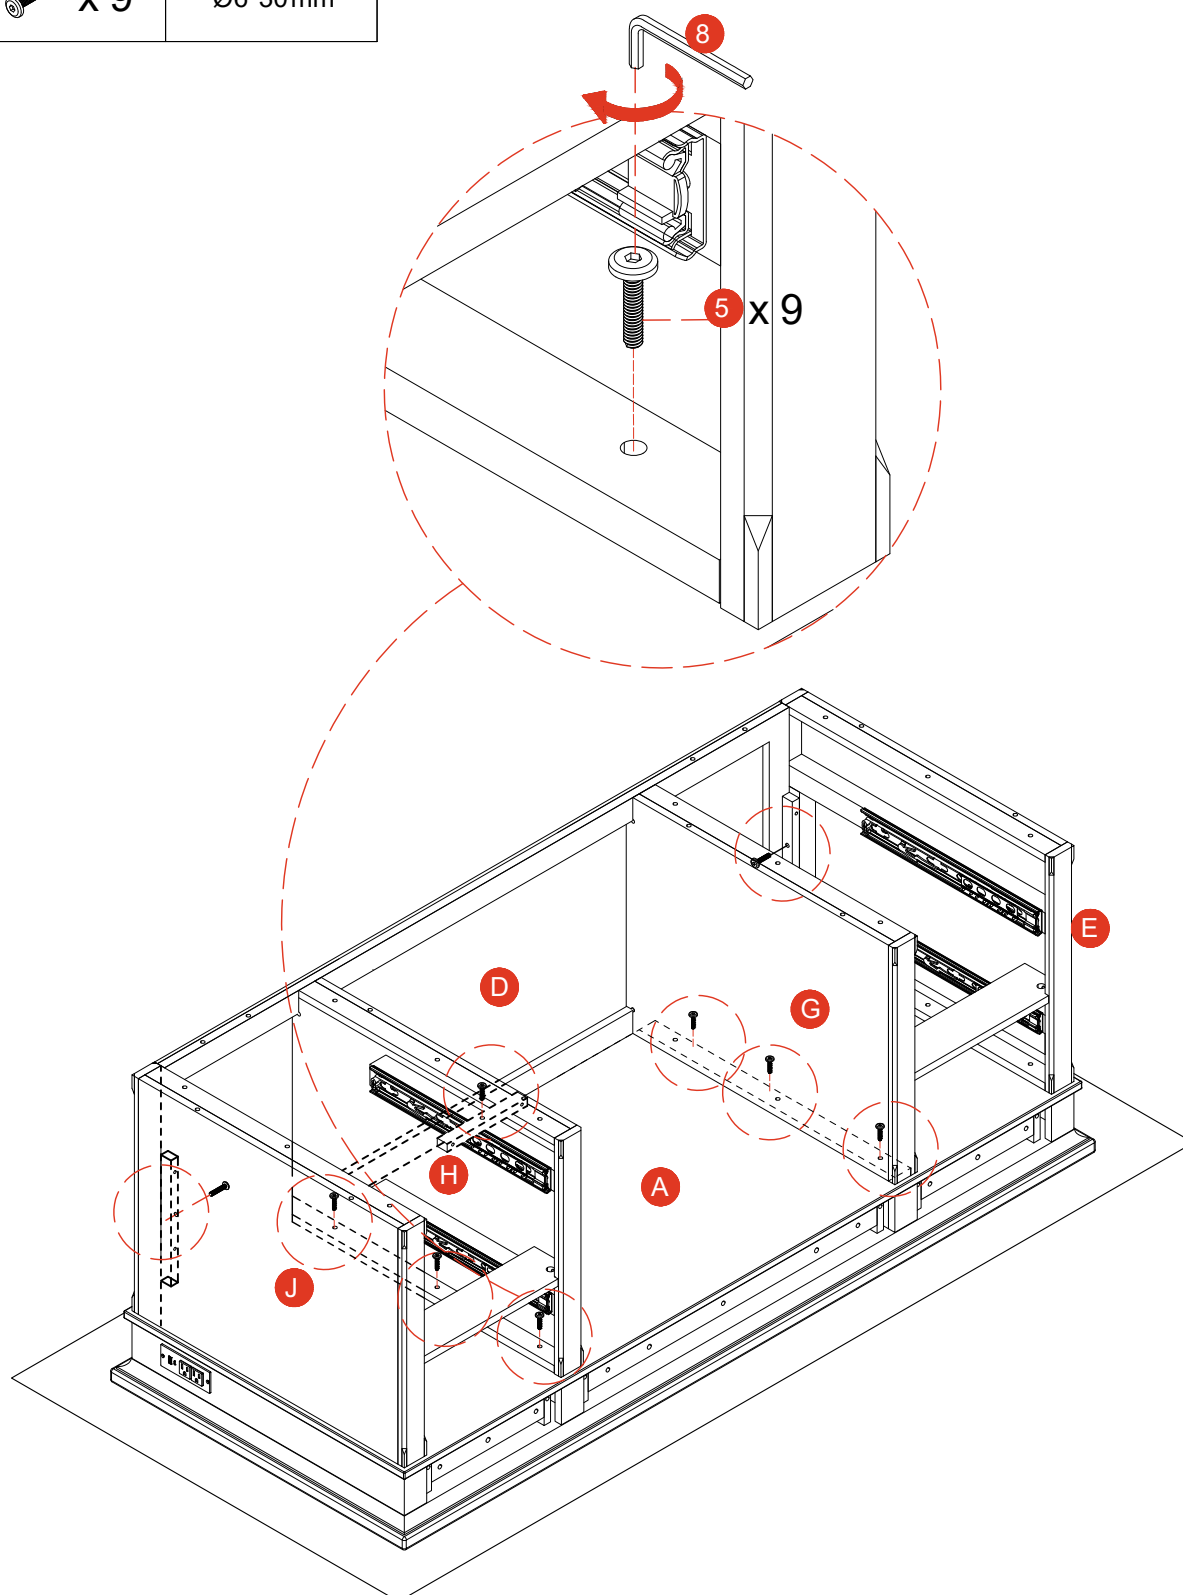

Step 09

Insert (3) into the corresponding hole of (&H&G&E&D) by hand



3		x 12	Ø8*30mm
---	---	------	---------

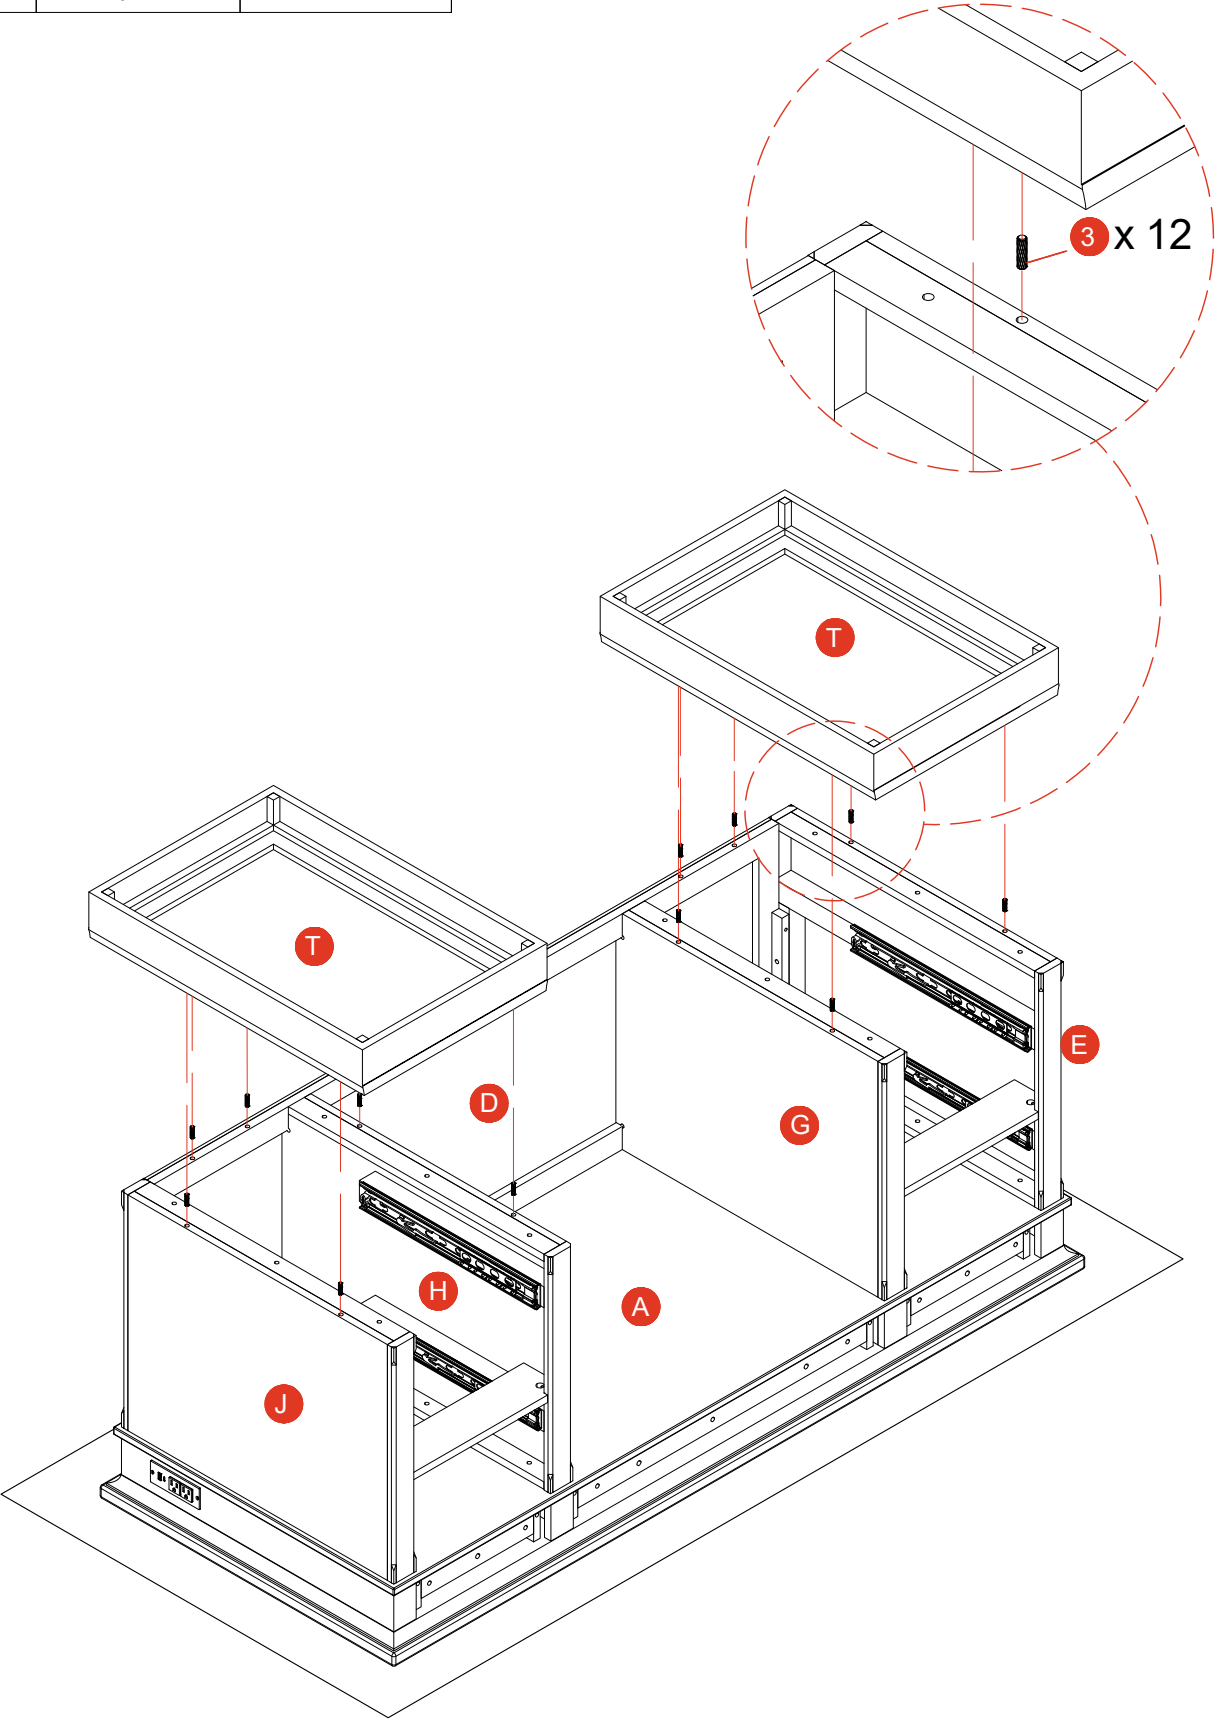

Step 10

Connect (T) with the prepared unit, tighten (5) with (8)


5	 x 12	Ø6*30mm
8	 x 1	M4

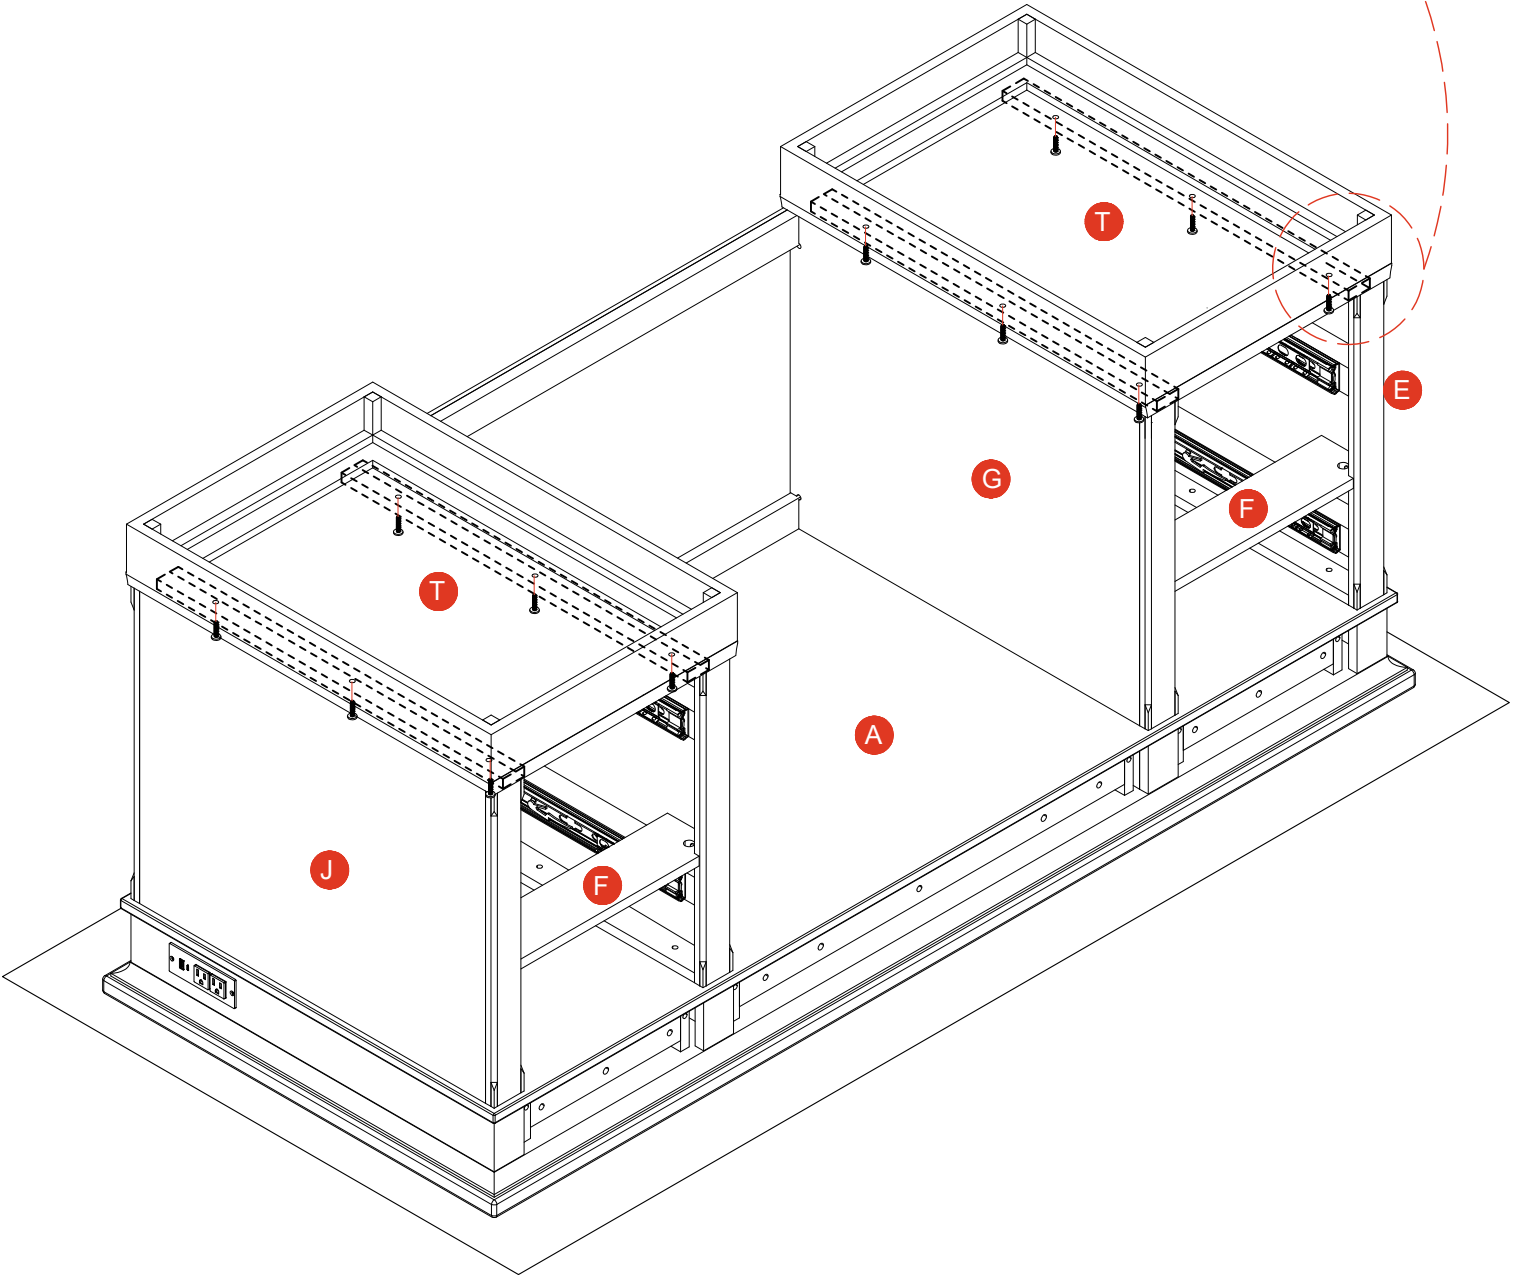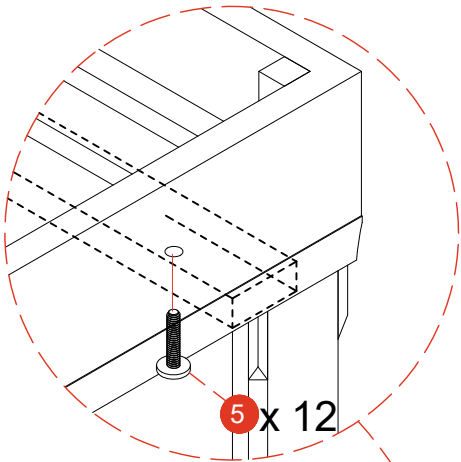

Step 11

1. Insert (3) into the corresponding hole of (N)
2. Use (10) to connect (N) with (K&M) with (13)
3. Slide in (L) into the groove in (K&N&M)


13		x 1	Screwdriver
10		x 8	Ø4*30mm
3		x 8	Ø8*30mm

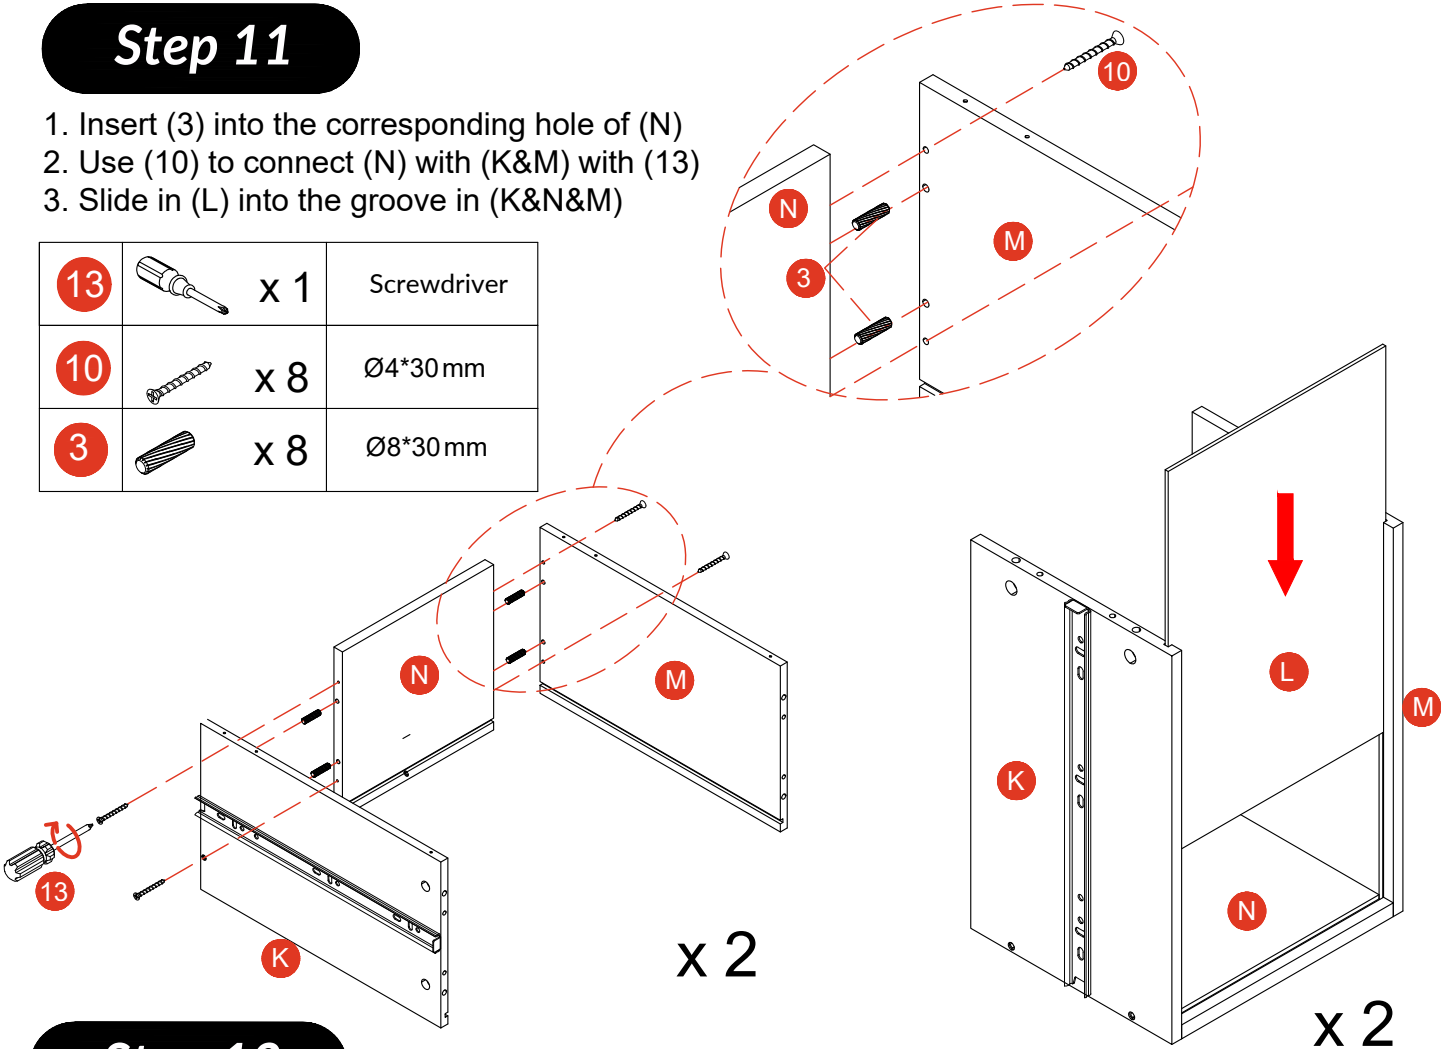

Step 12


1. Insert (3) into the corresponding hole of (R)
2. Use (10) to connect (R) with (P&Q) with (13)
3. Slide in (L) into the groove in (P&R&Q)



13		x 1	Screwdriver
10		x 8	Ø4*30mm
3		x 4	Ø8*30mm

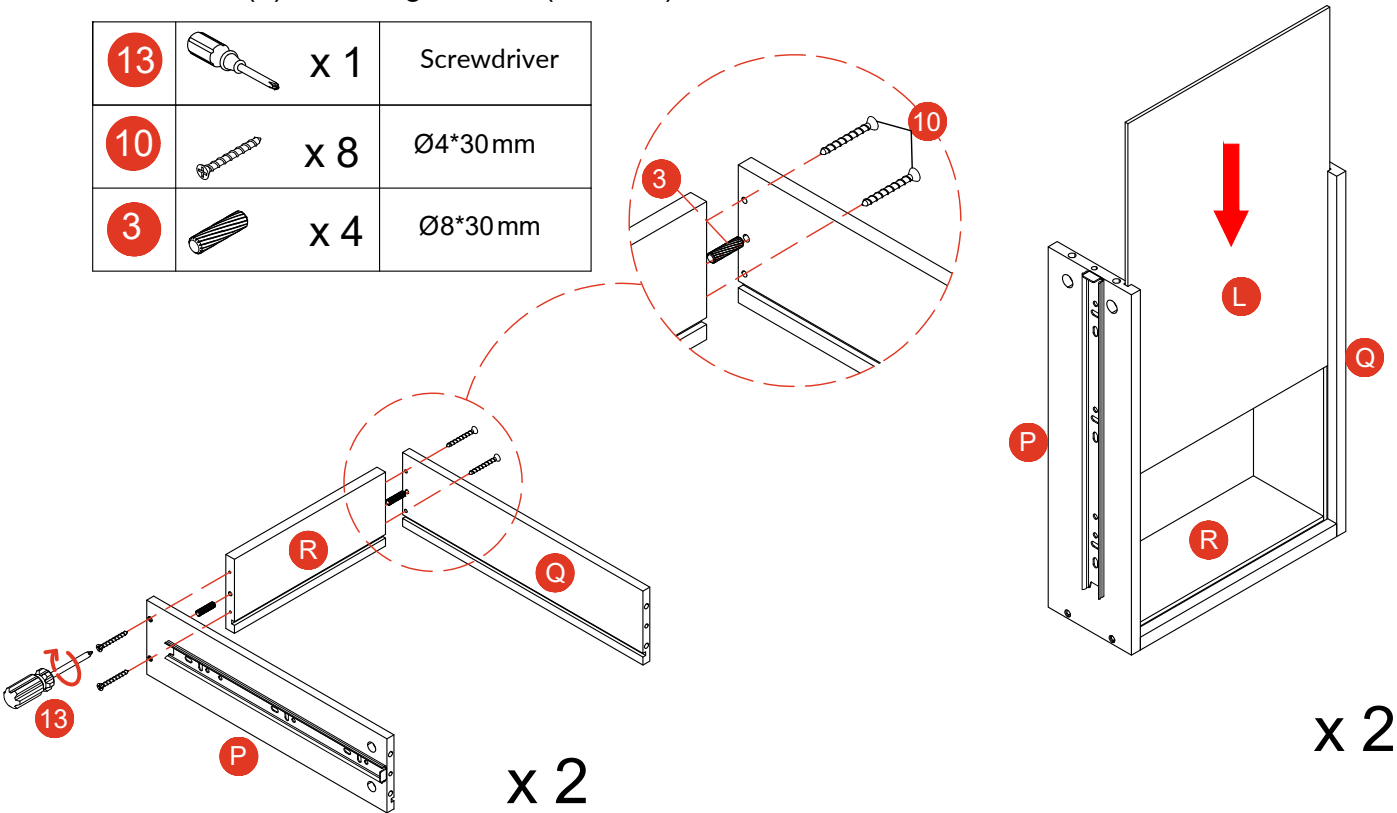

Step 13

1. Tighten (1) into the corresponding hole of (O&S) with (13)
2. Use (12) to attach (7), tighten (12) with (13)



13	 x 1	Screwdriver
12	 x 4	Ø4*18mm
7	 x 4	handle
1	 x 16	Ø6*35mm

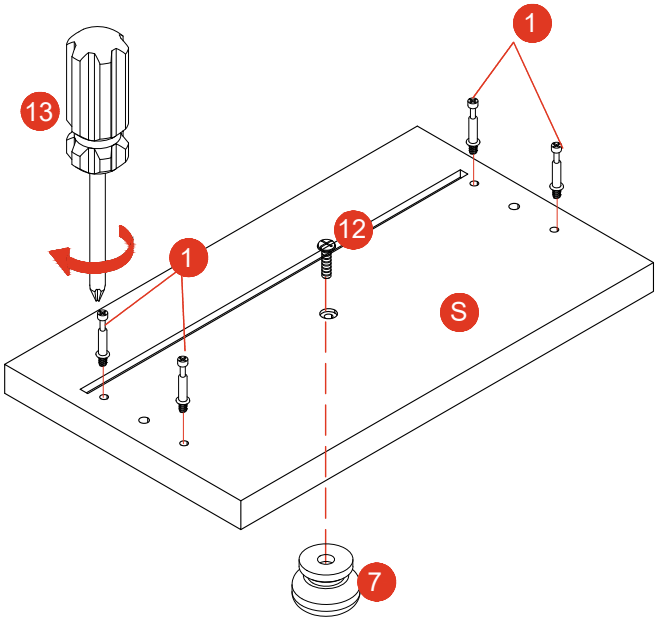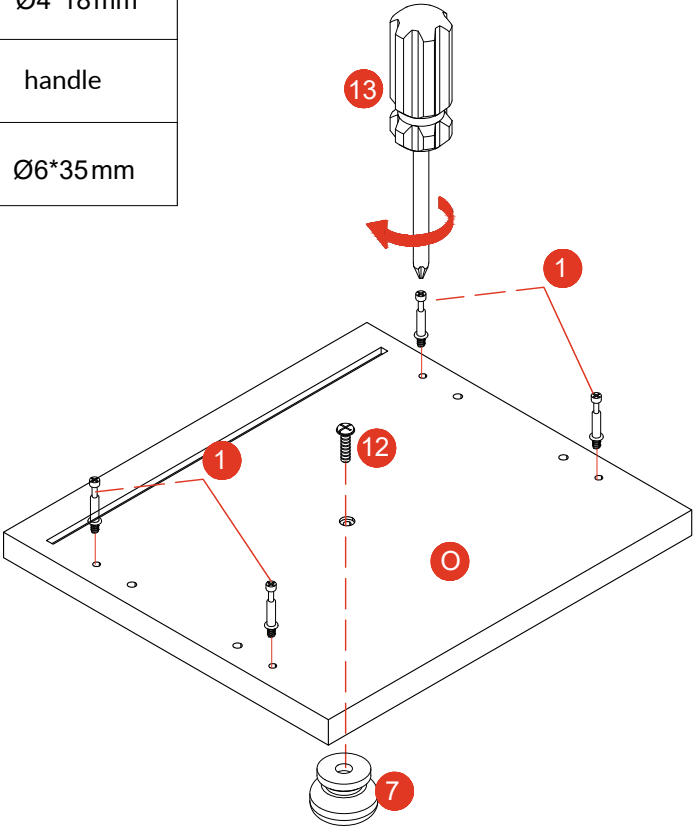

Step 14


- 1.Install the drawer face (O), insert (2) into the corresponding hole of (K&M), make sure (L) is also in groove in (O),then tighten (2) with (13),cover (2) with (9)
2. Assemble the drawer face(S) in the same manner

13	 x 1	Screwdriver
9	 x 16	handle
3	 x 12	Ø8*30mm
2	 x 16	Ø15*10mm

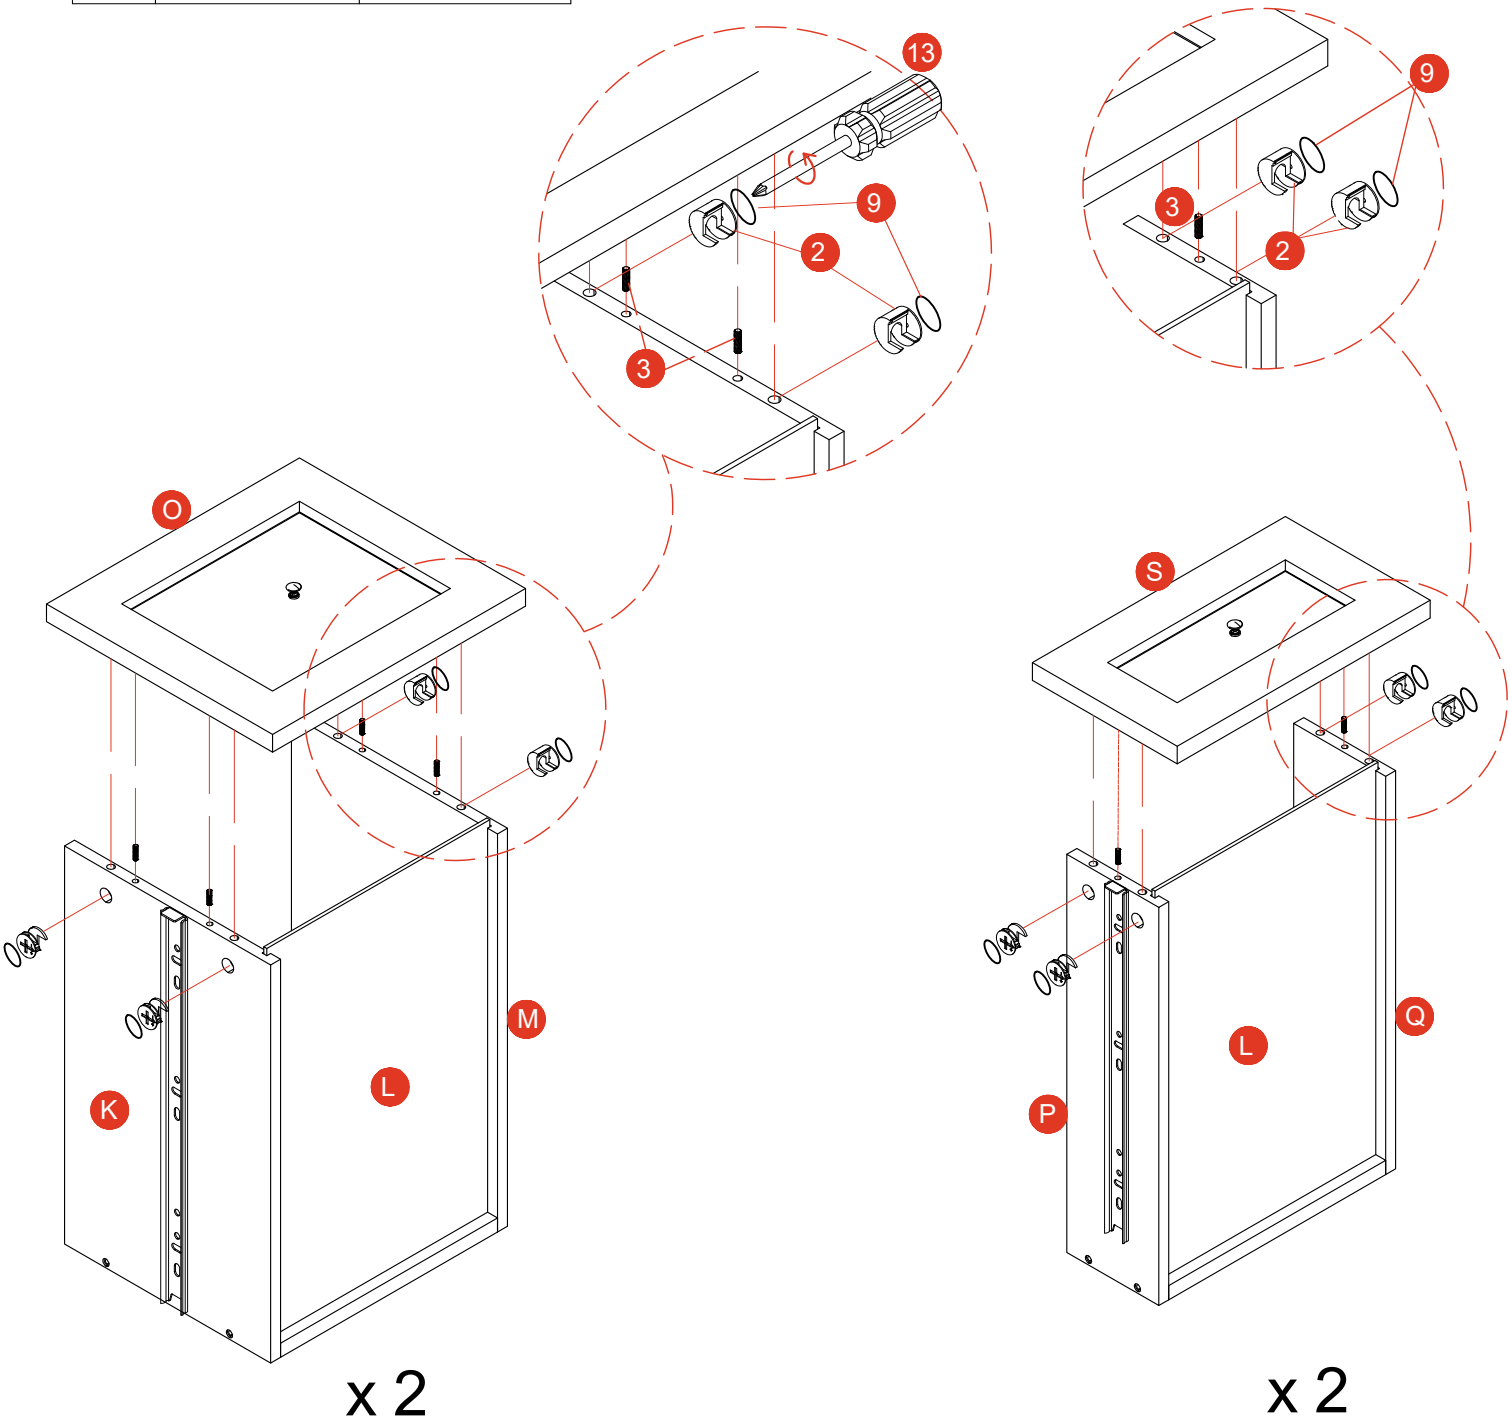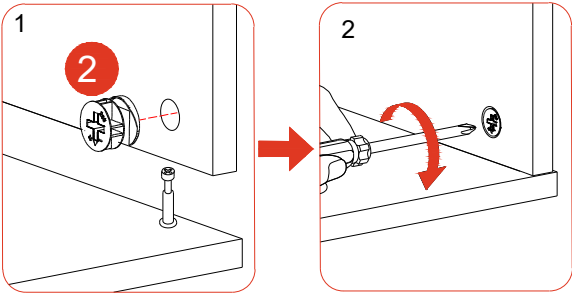


Step 15


Use (4) to attach (U),tighten (4) with (13)

13	 x 1	Screwdriver
4	 x 8	Ø3*14 mm


 The position of the part U can be adjusted to accommodate different document sizes

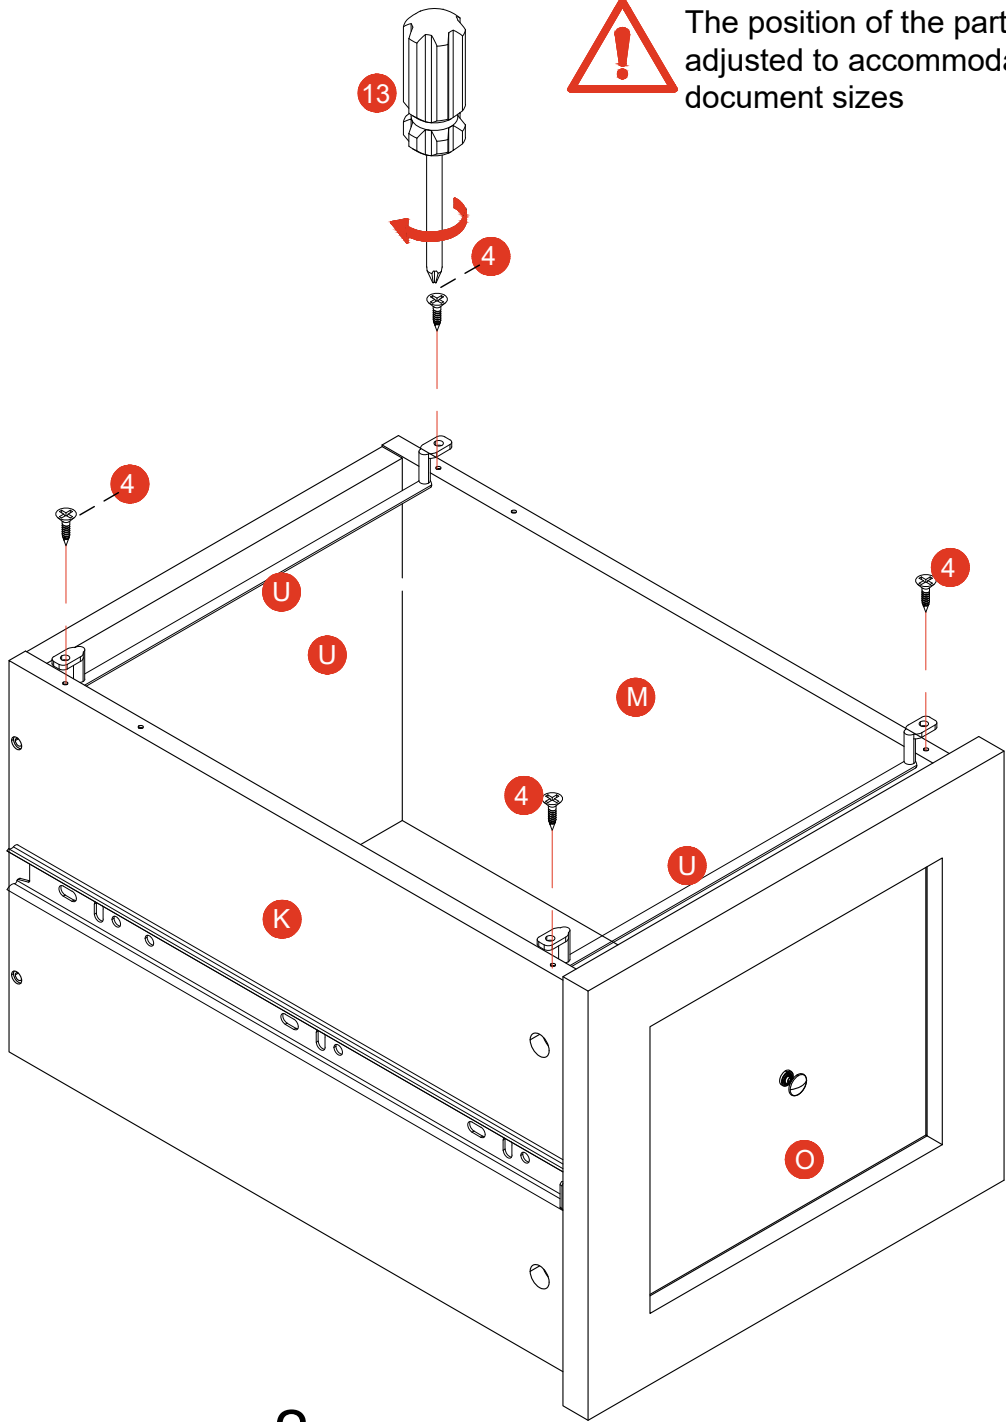

Step 1

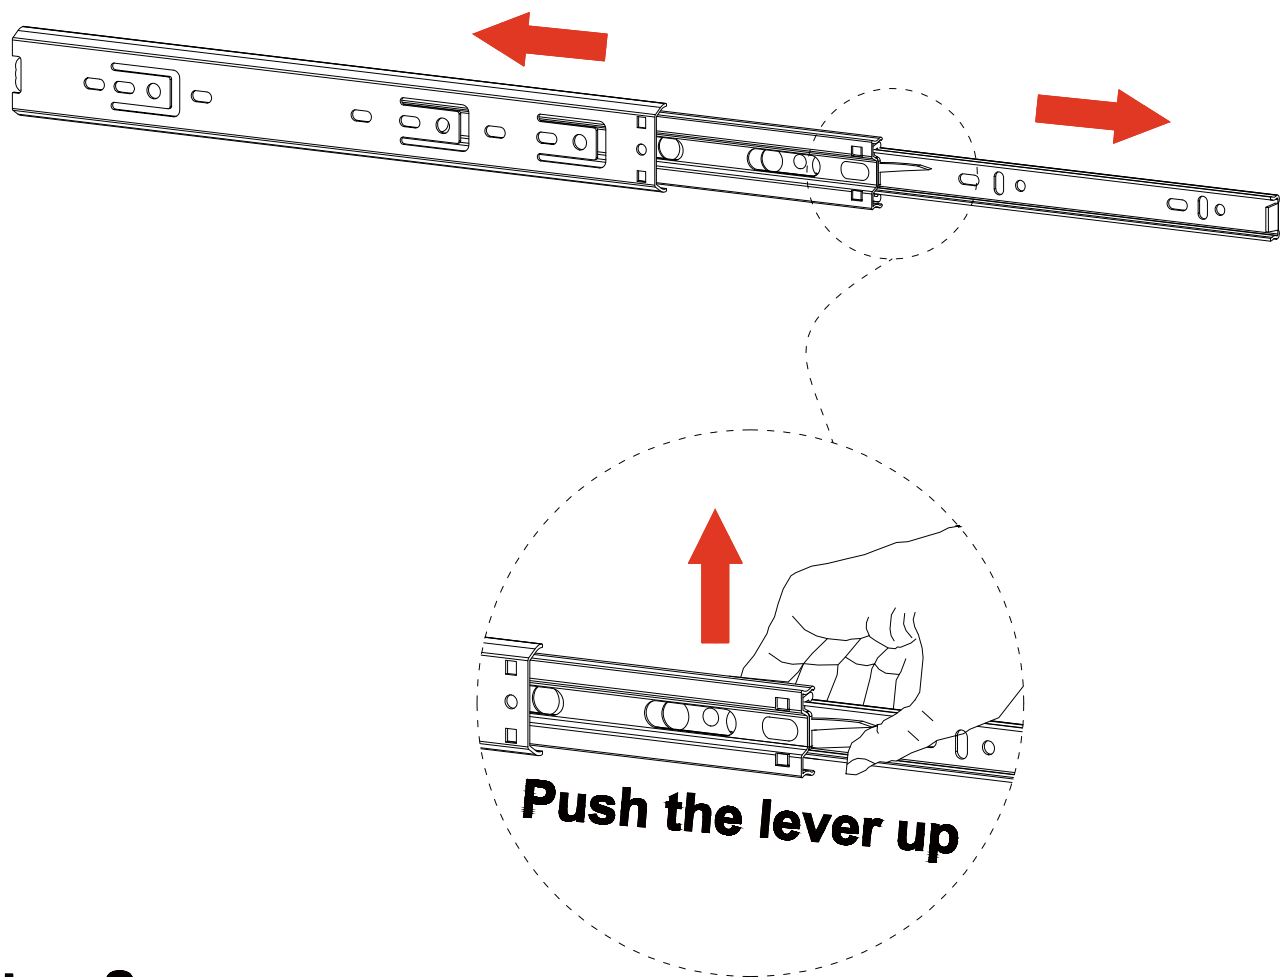


Step 2

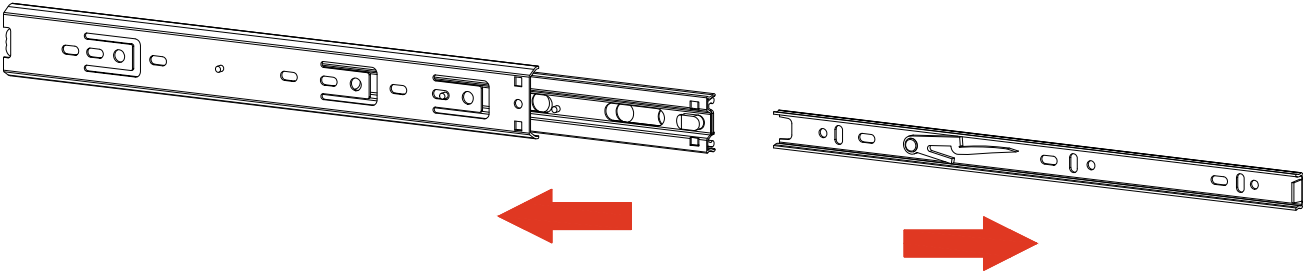


Step 16


Please note: When installing the drawer slides,(near the drawer panels), you need to move the small removable slides with steel balls inside the OUTER slides to the front and then install the INNER slides along the track into the OUTER slides.

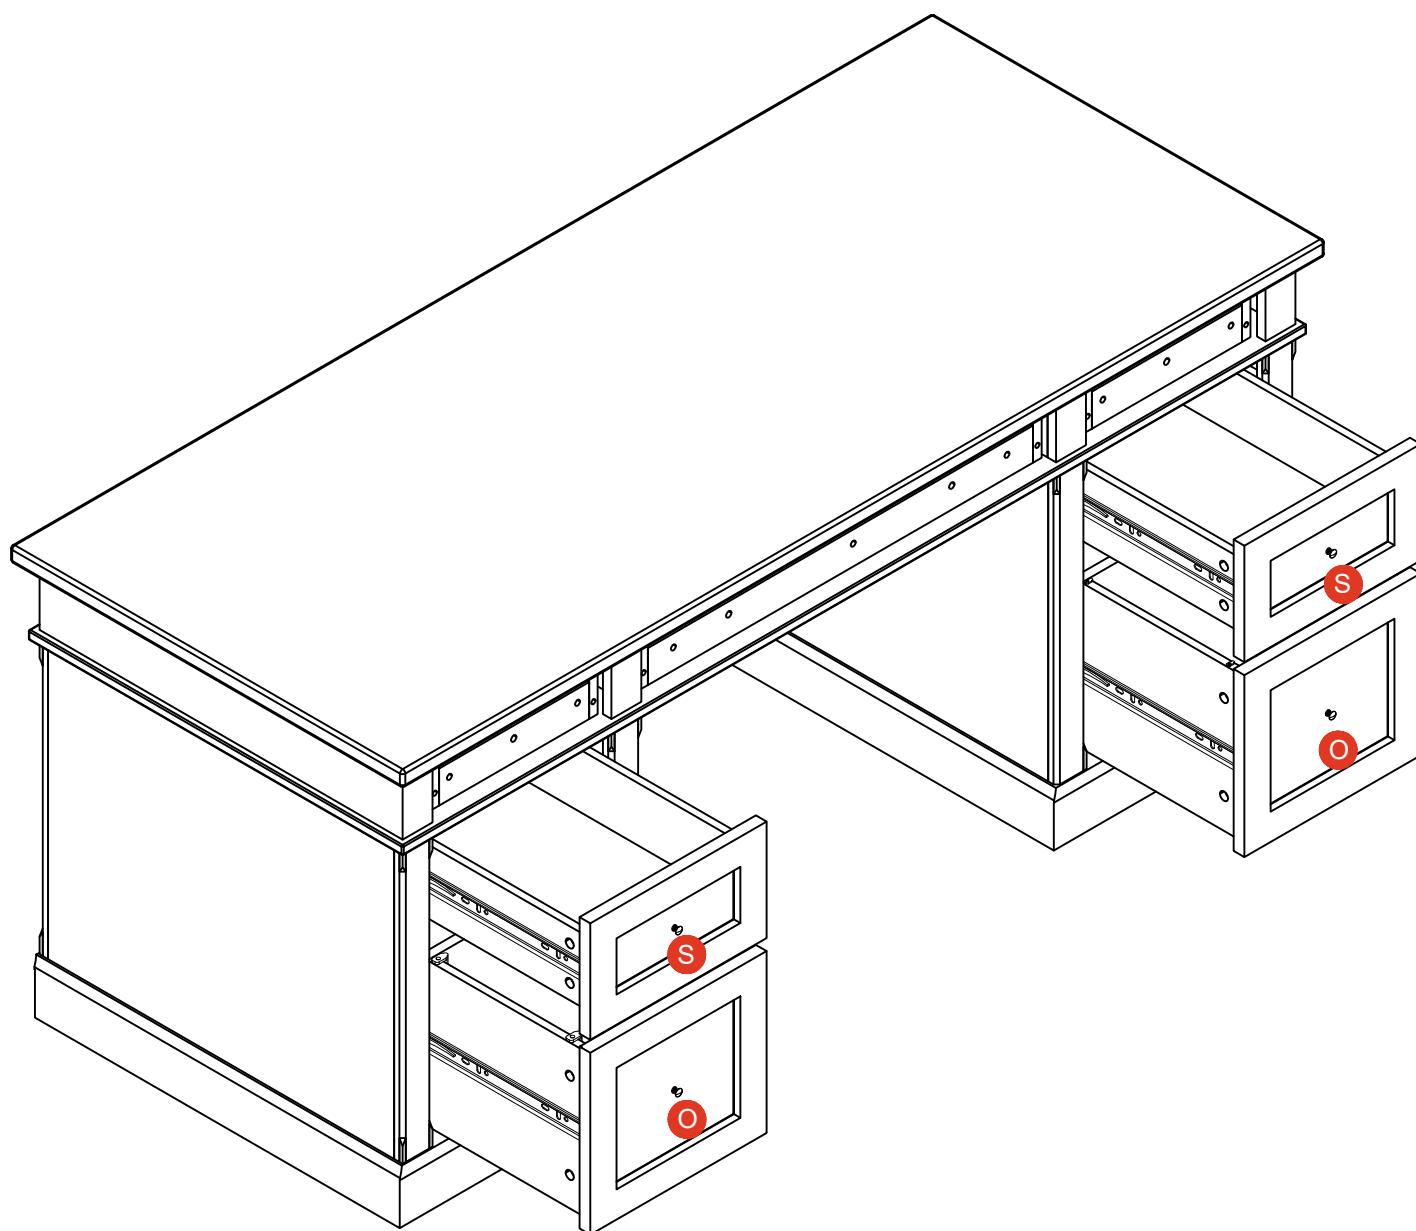


Step 17

1. Use (6) to attach (7) to (B&C), tighten (6) with (13)
2. Insert (3) into the corresponding hole of drawer side panel by hand align the hole, screw (11) to connect (B&C) with (13) as picture shown

13		x 1	Screwdriver
11		x 7	Ø4*20mm
7		x 4	Handle
6		x 4	Ø4*30mm
3		x 6	Ø8*30mm

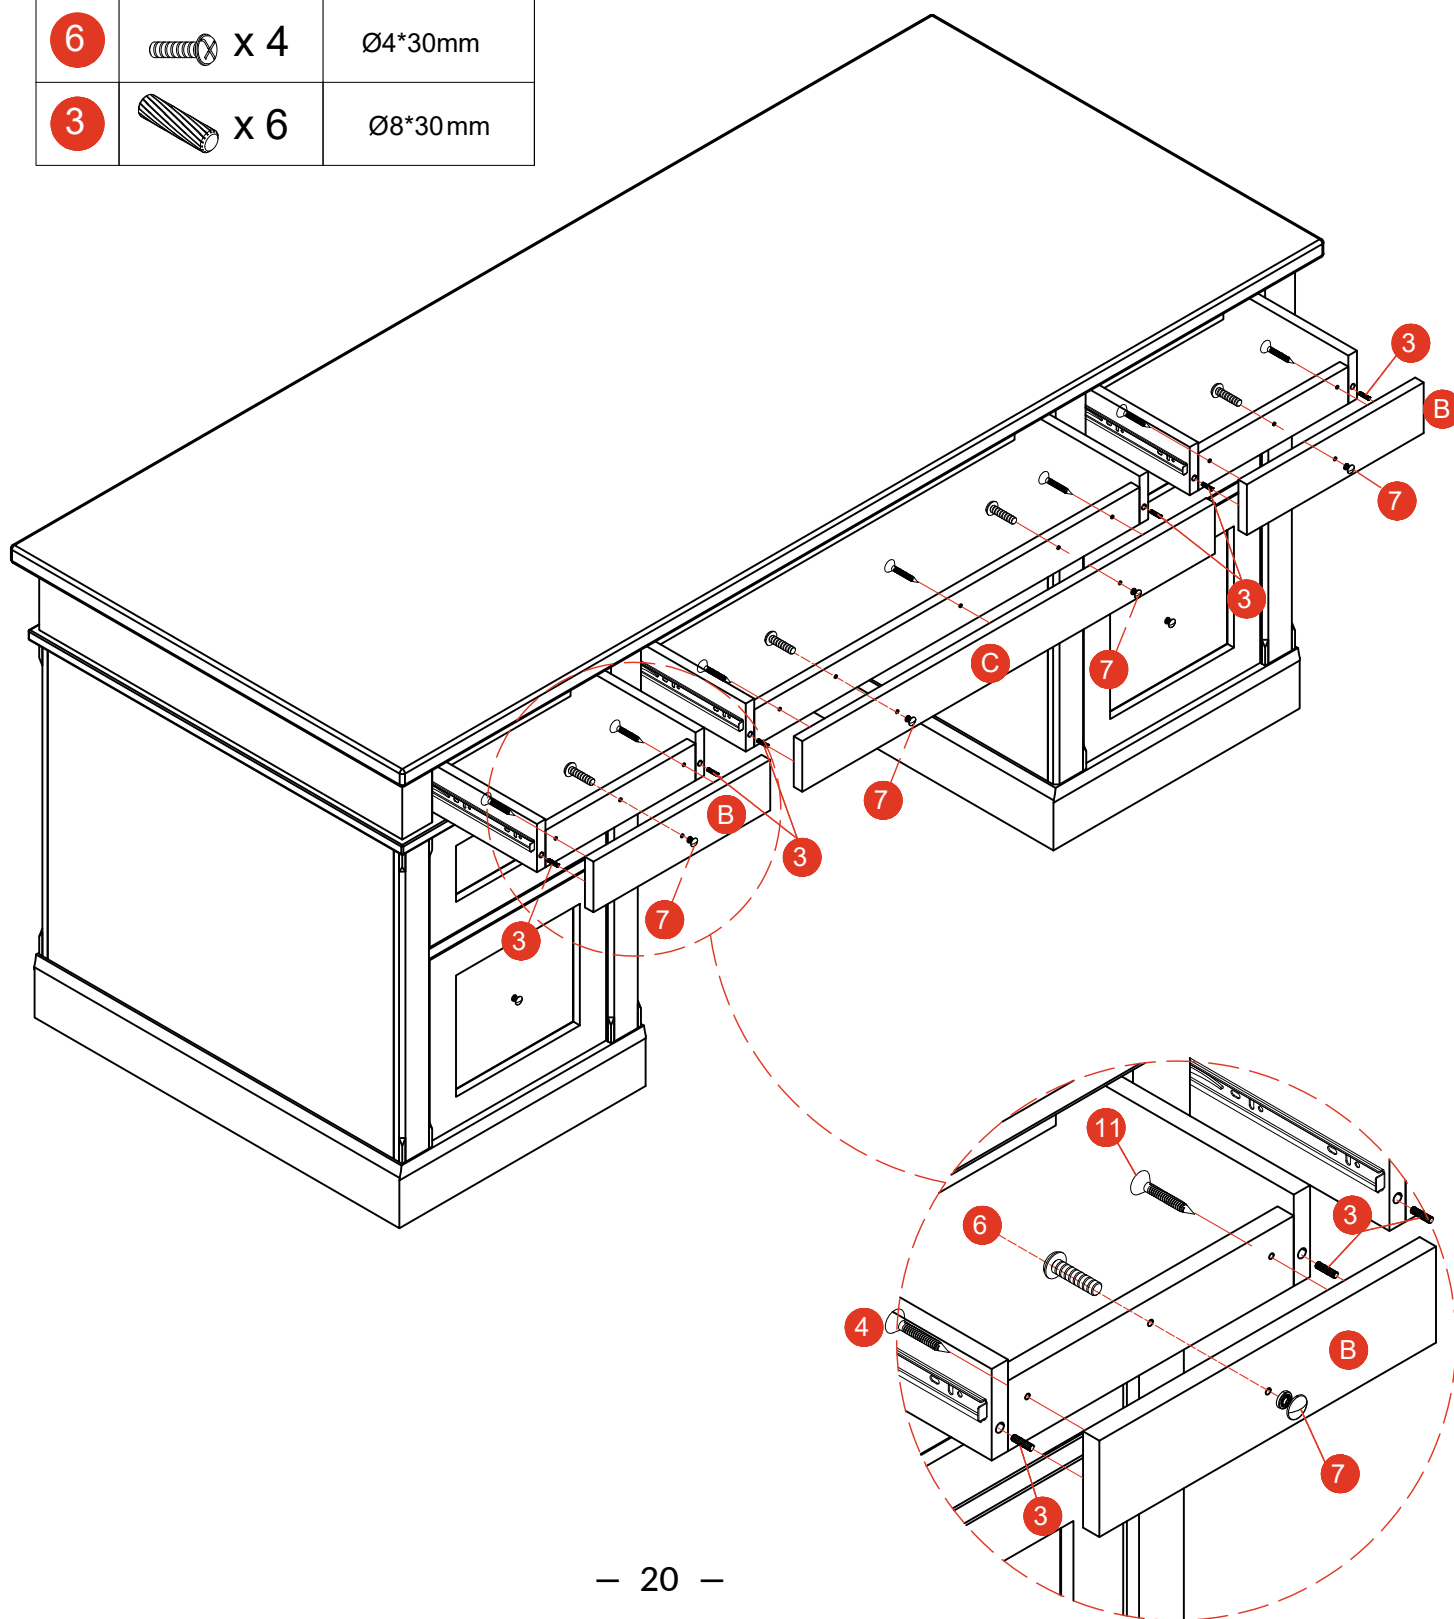

Step 18

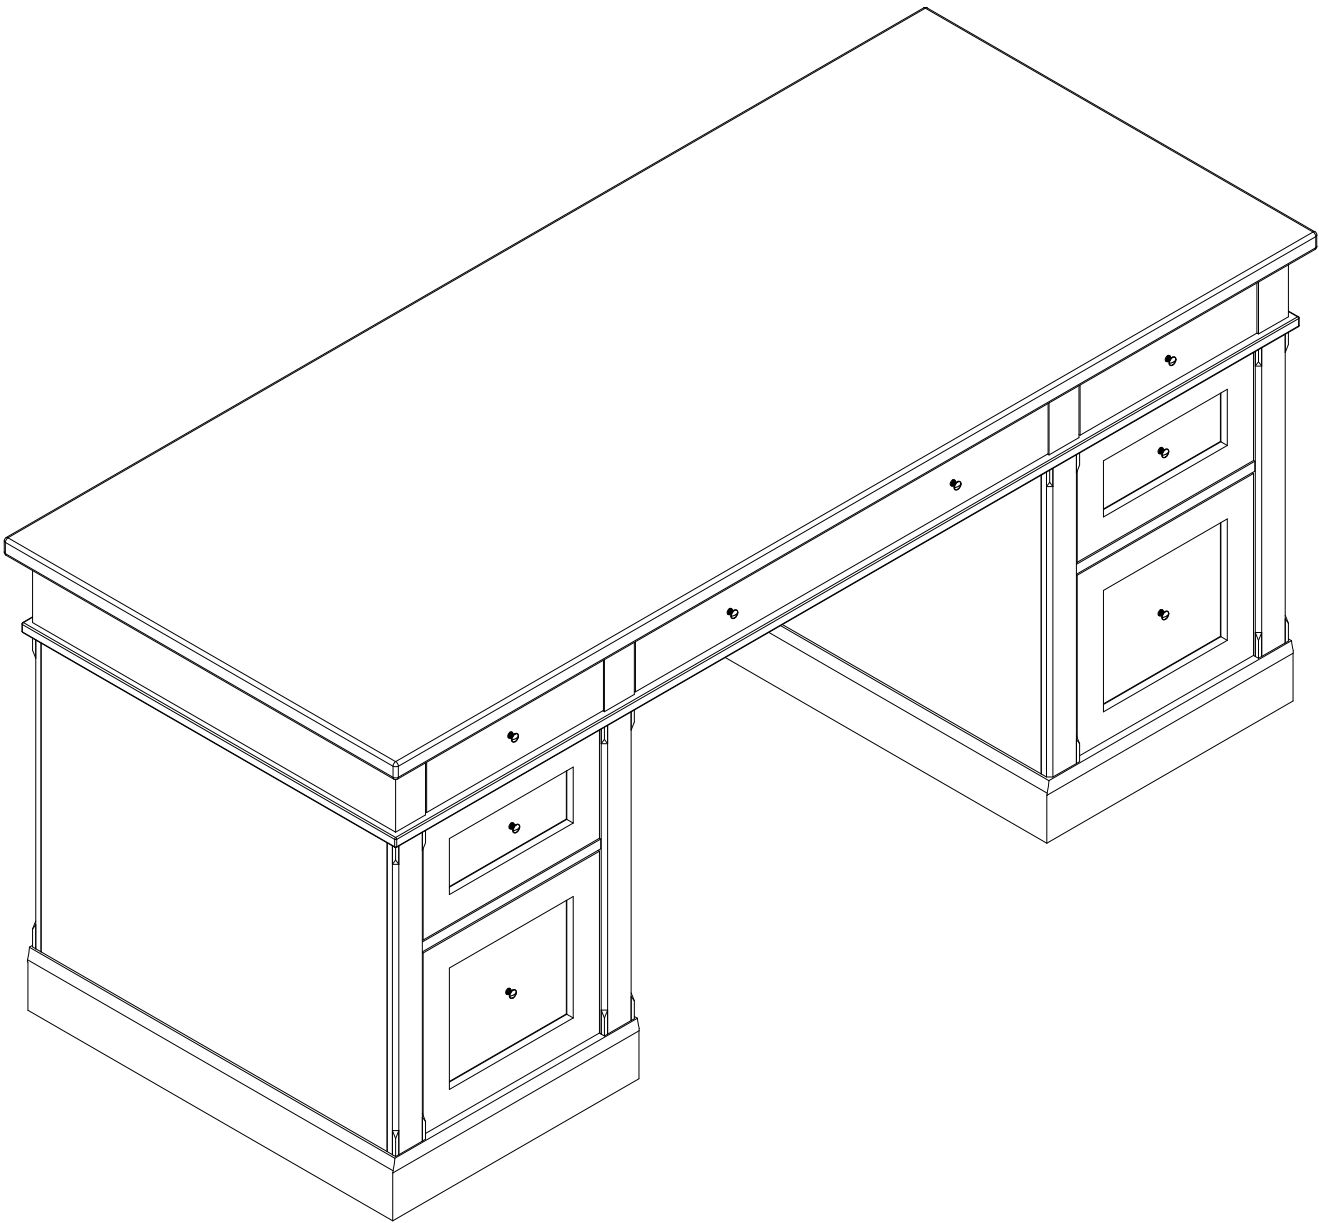

Adaptive Design, Effortless Living.

HULALA[®]
HOME

WWW.HULALAHOME.COM

Email: customerservice@hulalahome.com

Call us: +1(833)324-2464 (8 AM to 5 PM PST Monday-Friday)