


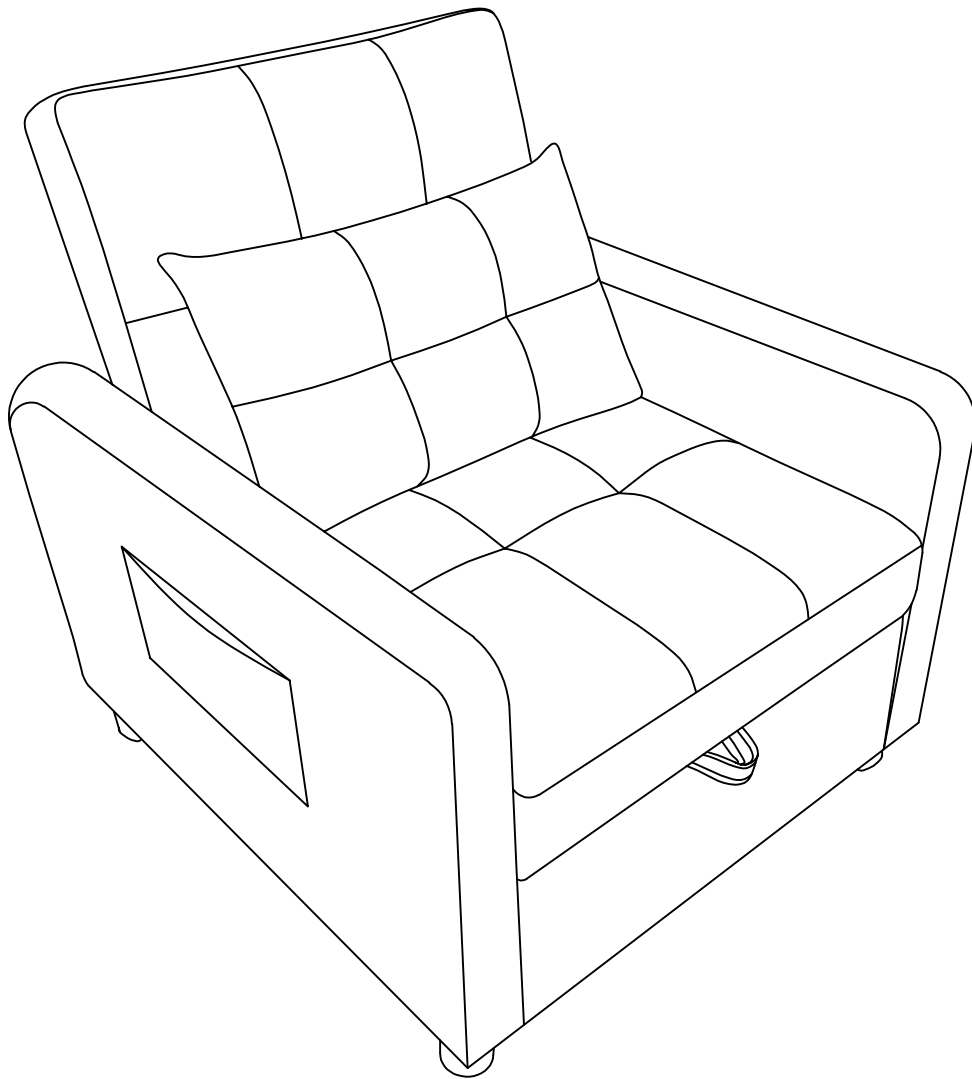




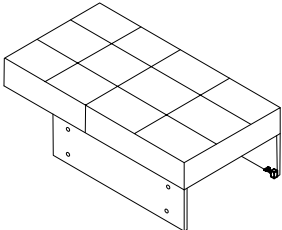
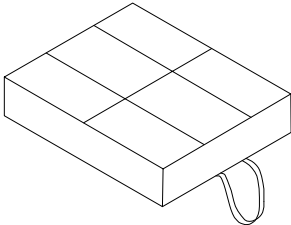
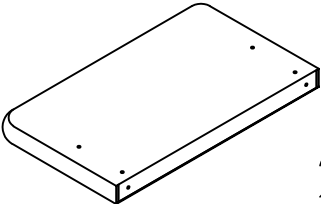
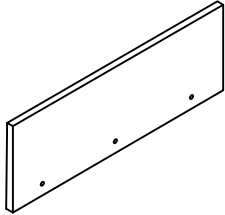
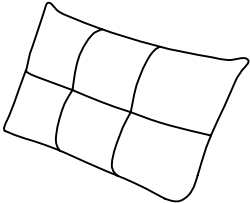
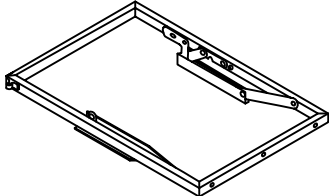

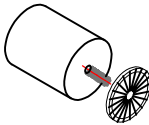



# Assembly Instruction



# HARDWARE LIST:

①		Allen Bolt 60mm Bolt 5/16"x60mm	8pcs	⑤		Flat washer 5/16"x16x1.5mm	8pcs
②		Allen Bolt 40mm Bolt 1/4"x40mm	3pcs	⑥		Flat washer 1/4"x16x1.5mm	7pcs
③		Allen Bolt 30mm Bolt 1/4"x30mm	4pcs	⑦		Allen key M4x59mm	1pc
④		Allen Bolt 20mm Bolt 1/4"x20mm	8pcs				


A		1PC	B		1PC
C		2PCS	D		1PC
E		1PC	F		1PC
G		4PCS	H		4PCS

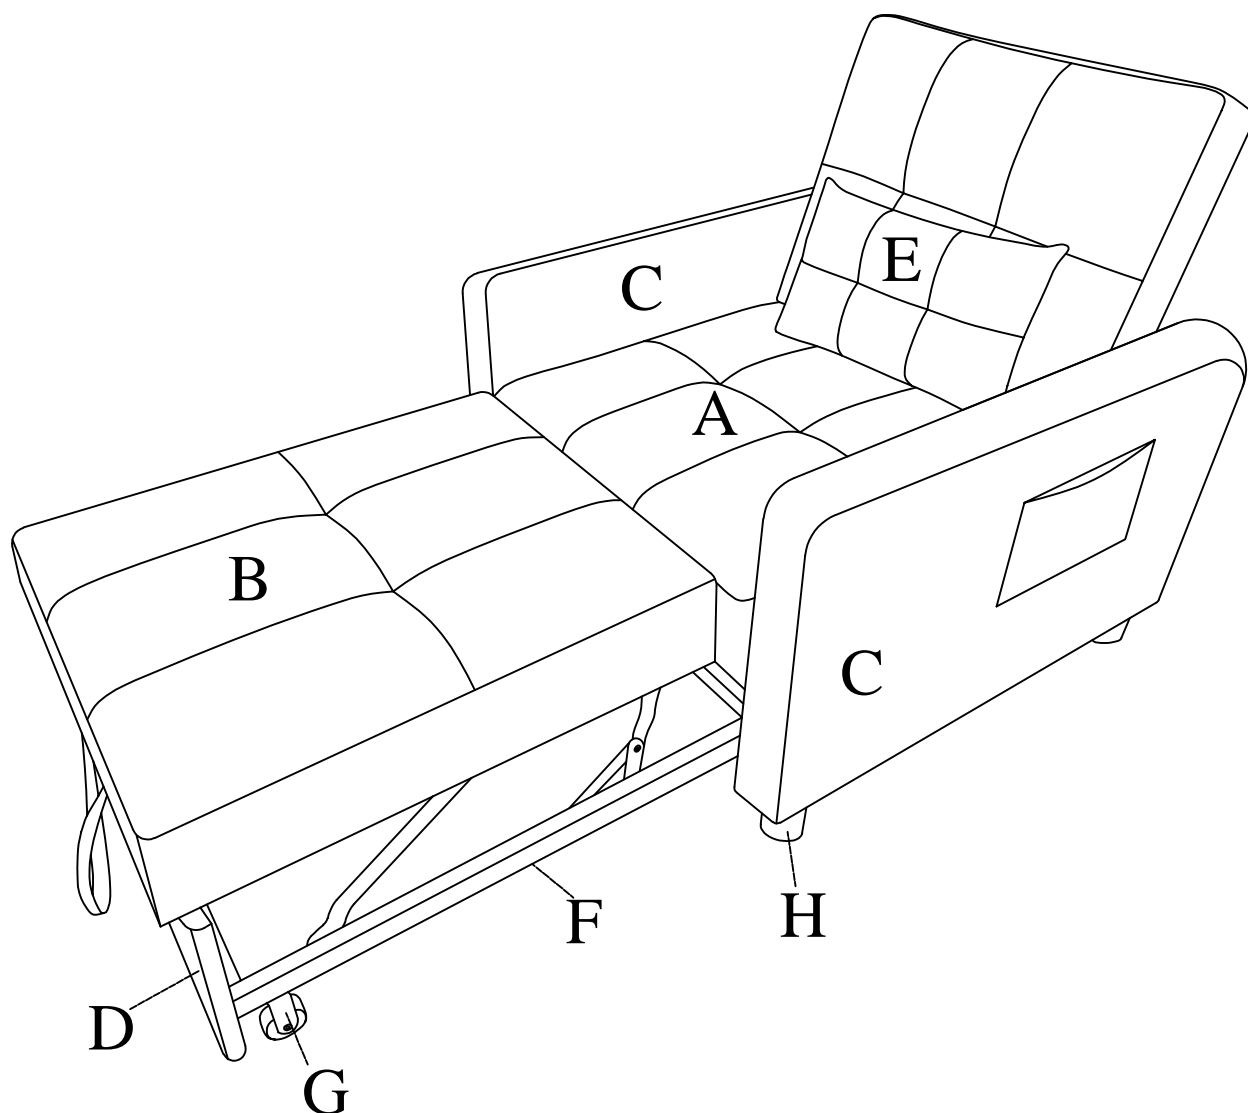




Please don't tighten the screws until all the screws are put into the hole. And if there is any problem, please contact us and we will help you to solve it.

# Assmby Instructions



Step #1

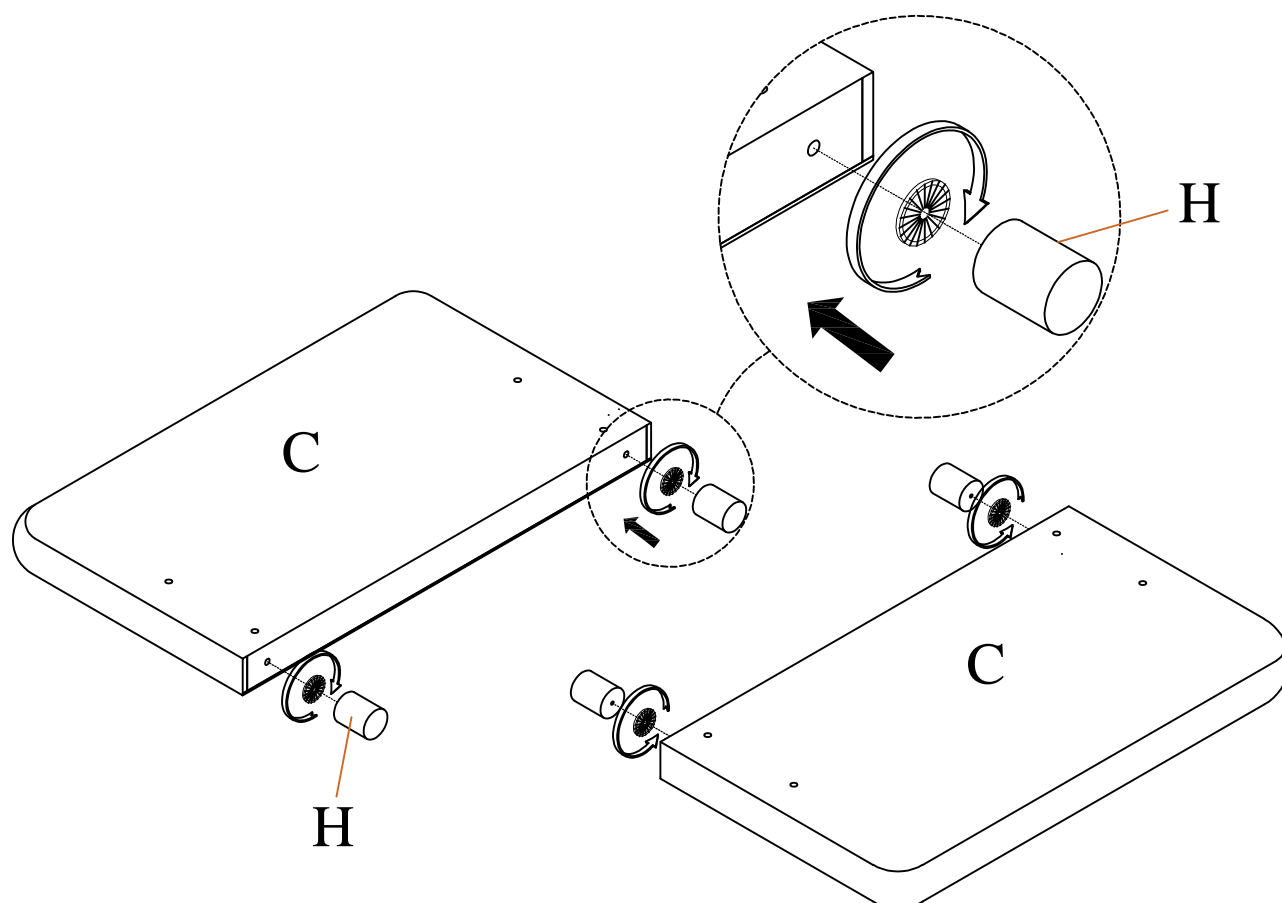




## Step #2

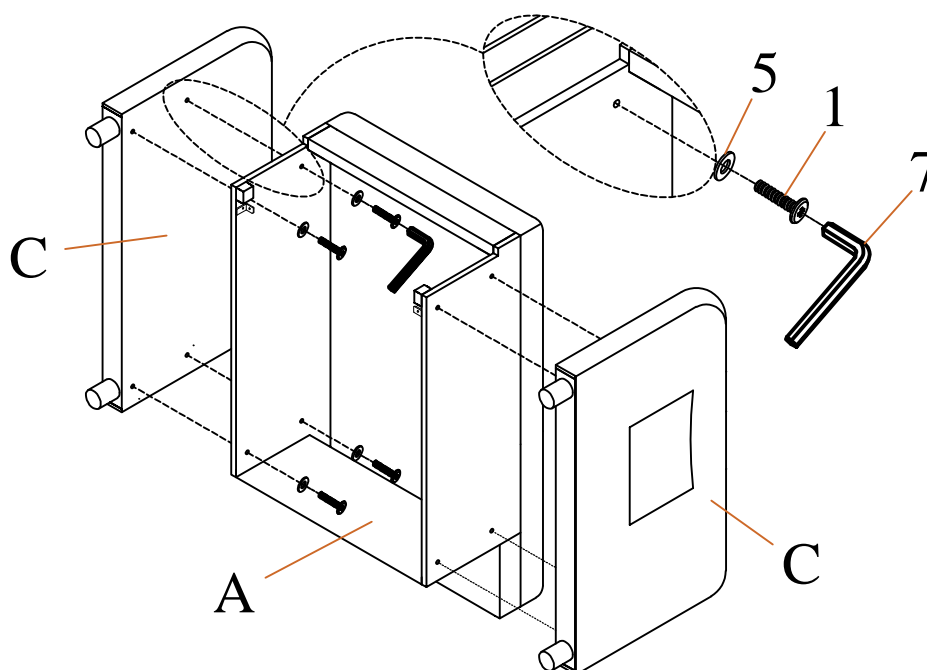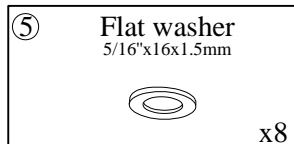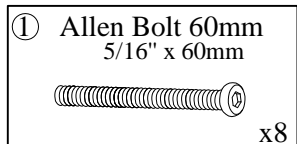




## Step #3

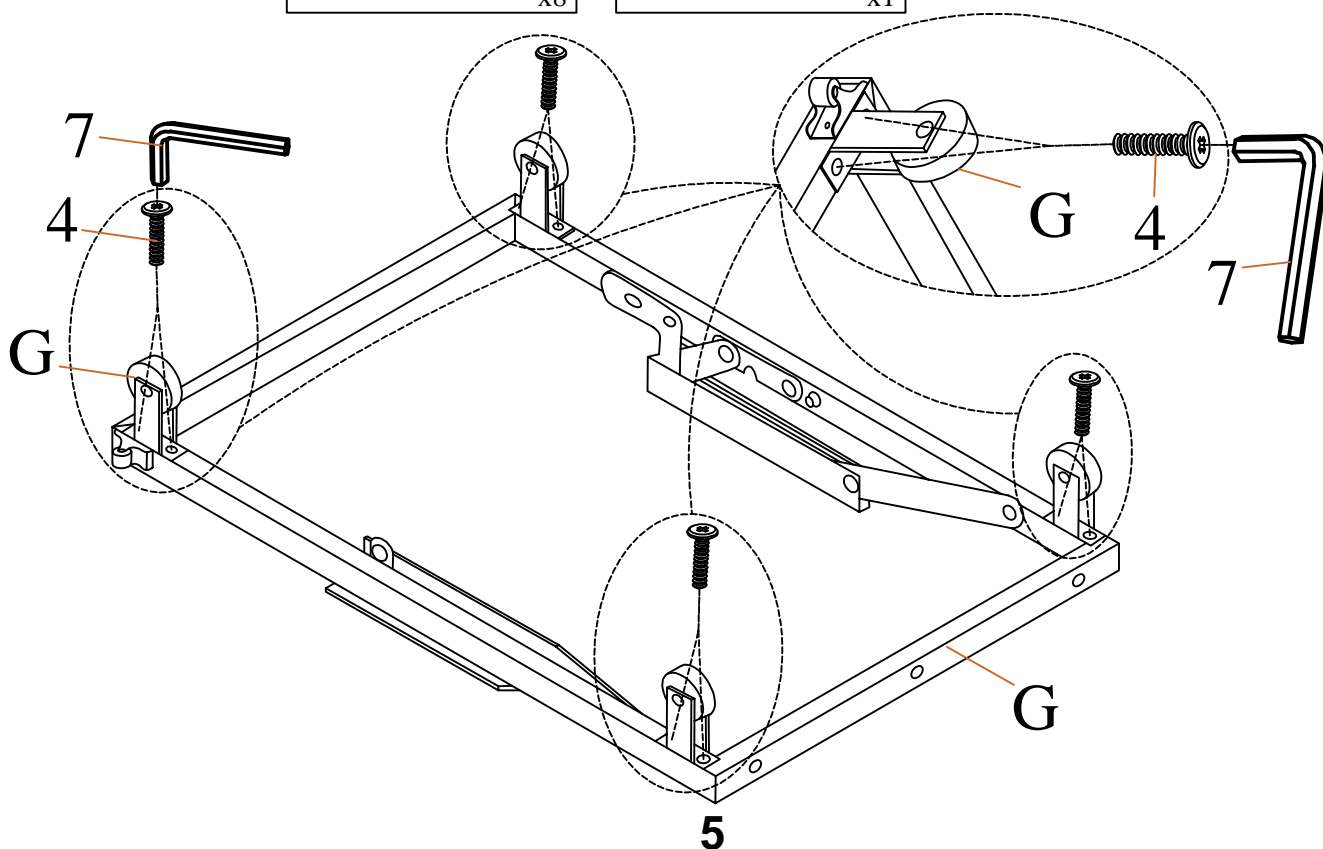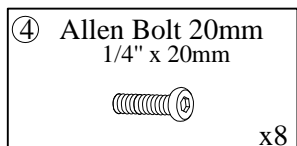


## Step #4

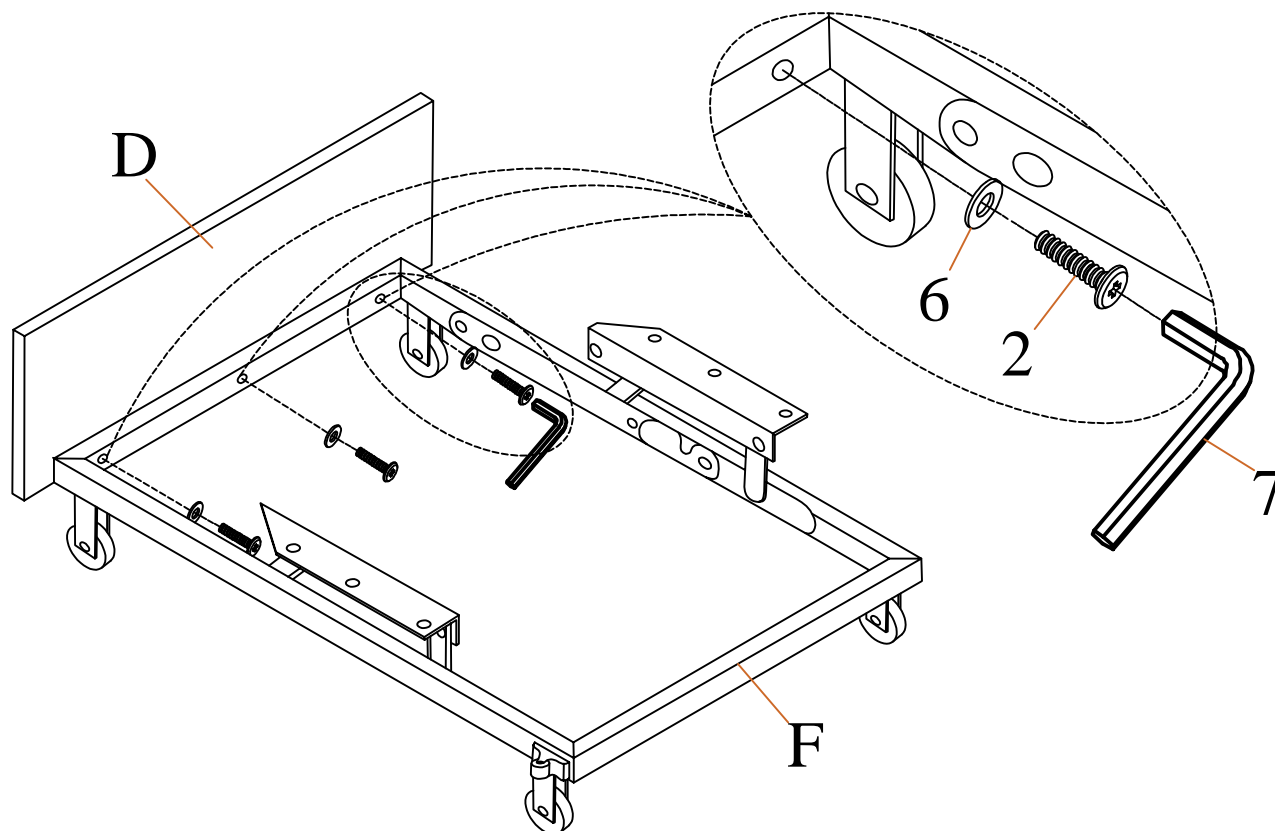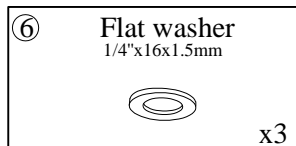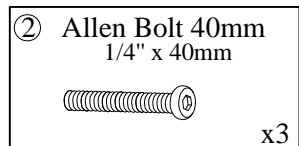


## Step #5

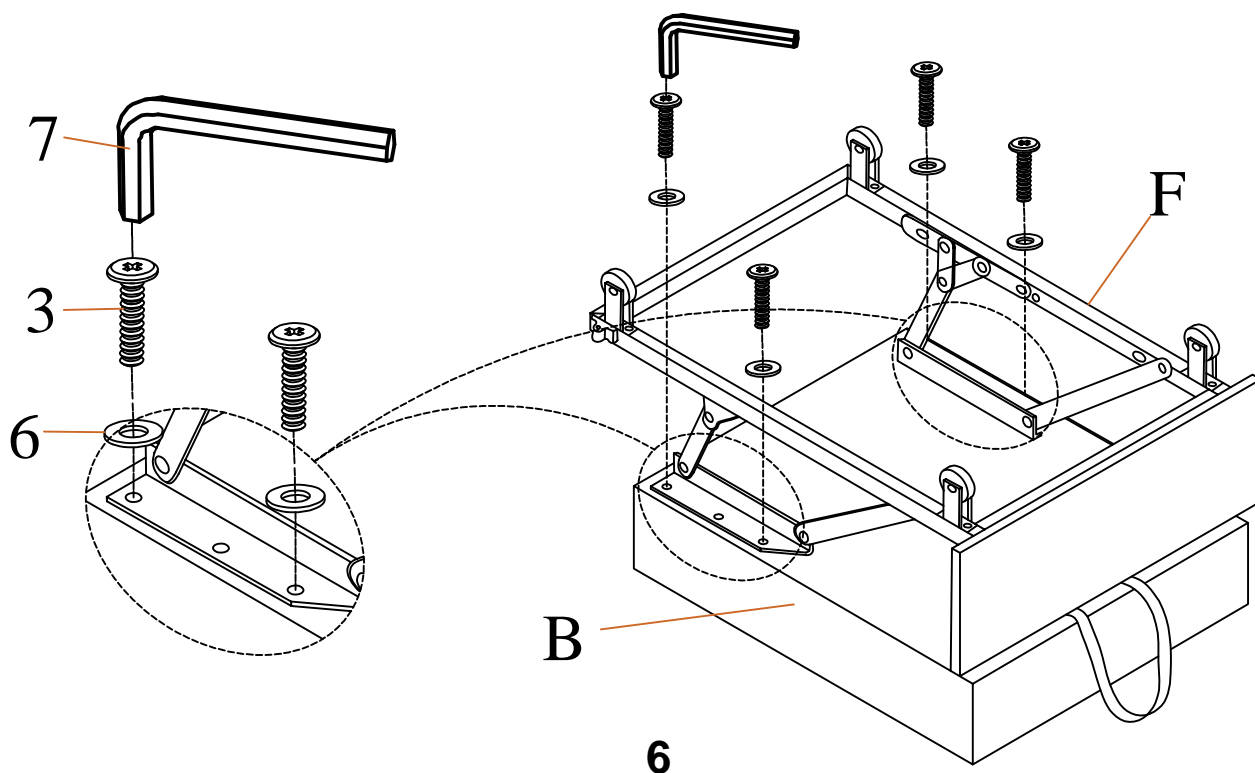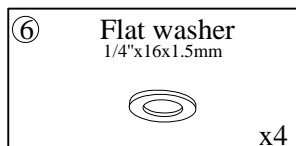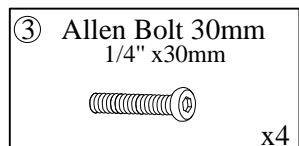


## Step #6

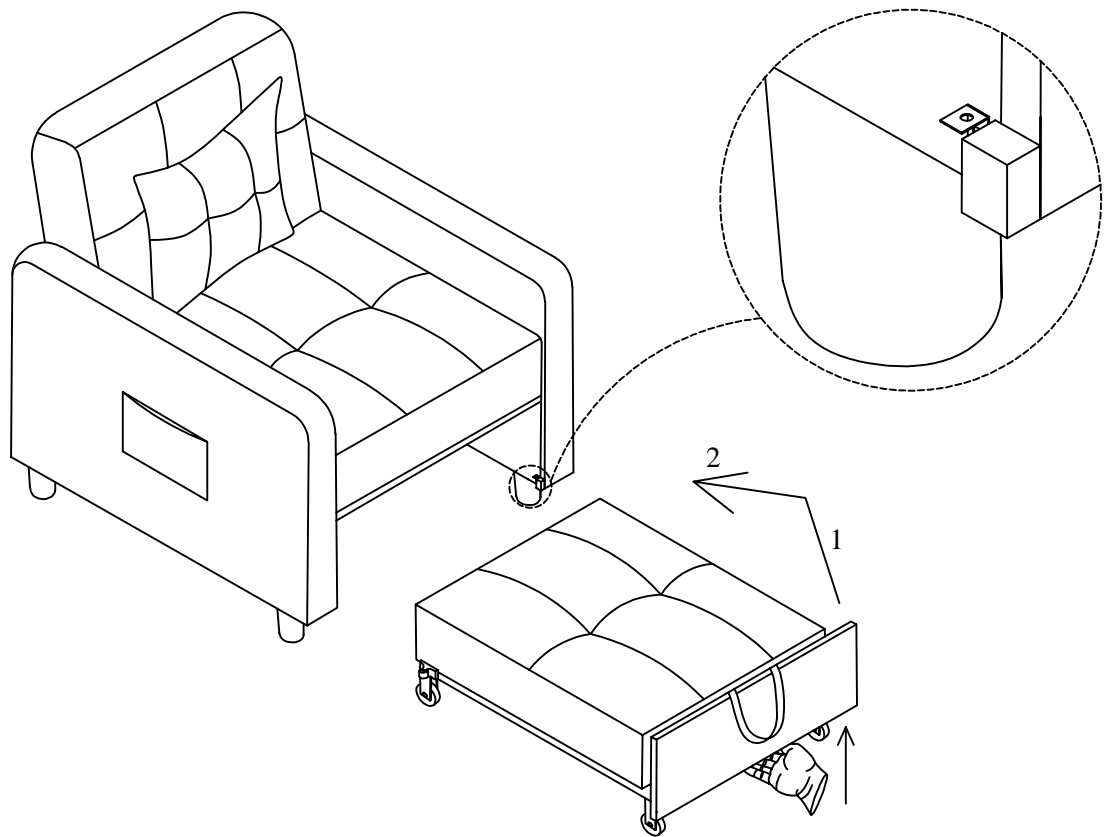

## Step #7

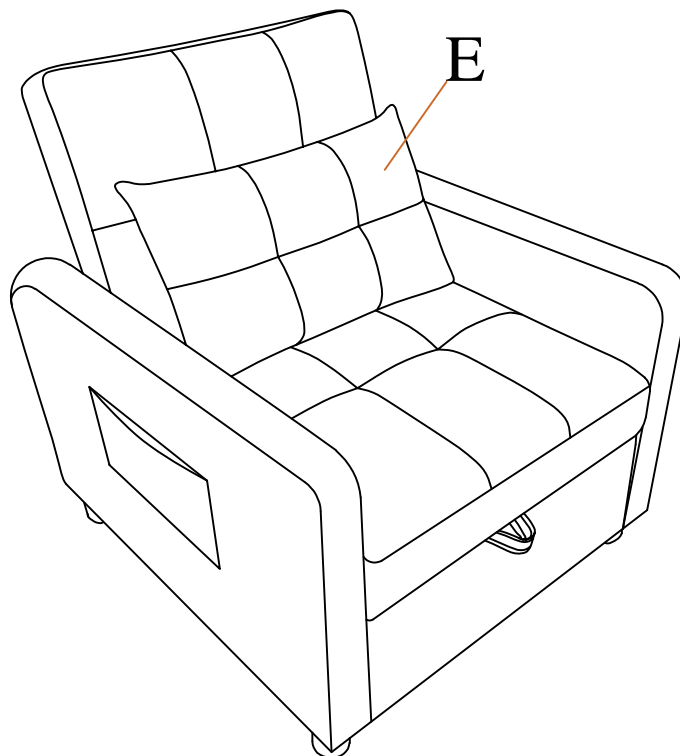

## Way to Adjust the Backrest

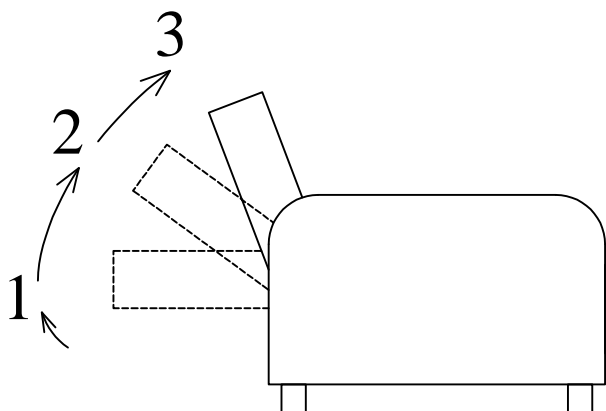

**From the bottom to the top:  
First click: locking into recline.  
Second click: releasing recliner.  
Third click: locking into chair.**

## Way to Adjust the Footrest

