

# INSTALLATION INSTRUCTIONS

Read these instructions carefully.
Ensure that all parts are complete before assembling.


- (A)  Allen Key x1
- (B)  Flat Washer x10
- (C)  Spring Washer x10
- (D)  M6*50 Bolt x6
- (E)  M6*80 Bolt x4
- (F)  Chair Back x1
- (G)  Chair Seat x1
- (H)  Front Leg x2




Lay a clean cloth before assembly to prevent scratches, dents and stains on the bar stool.



Always install flat washer and spring washers with all screws.

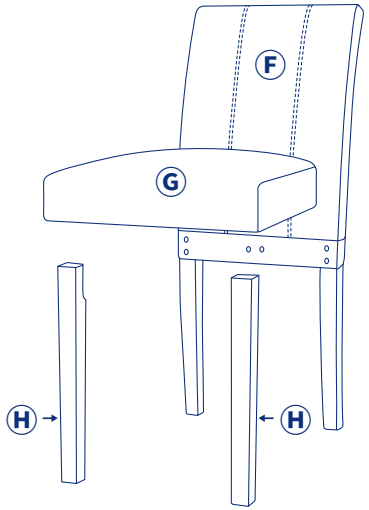



## Step 1

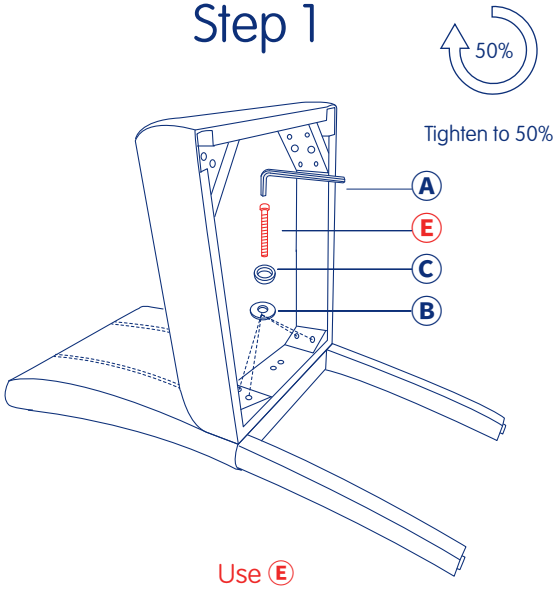



Use (E)
The longest screw

## Step 2

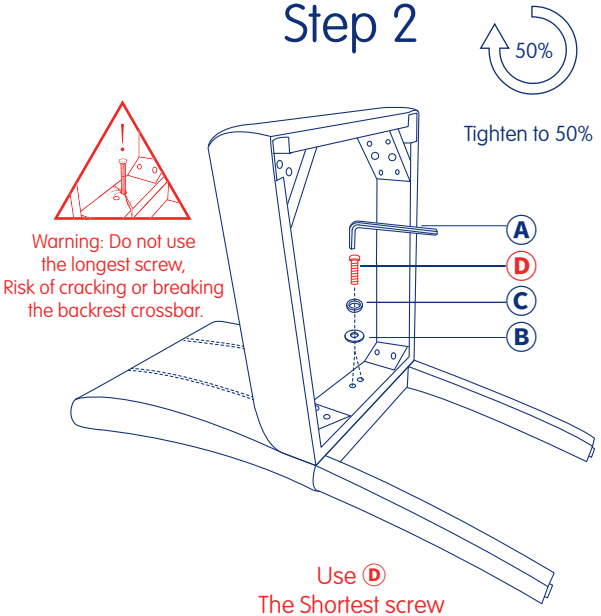


Use (D)
The Shortest screw

## Step 3

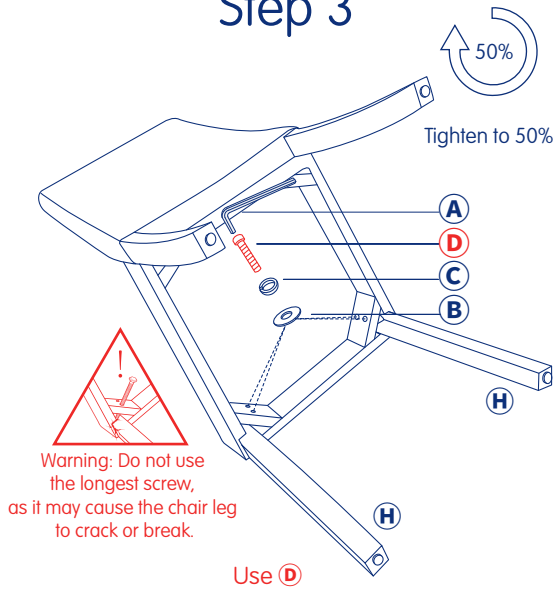


Use (D)
The Shortest screw

## Step 4

