



Twin 11" Tall Frame



1. Remove the two sides of the frame and lay them on their side. They are not side specific or end specific.

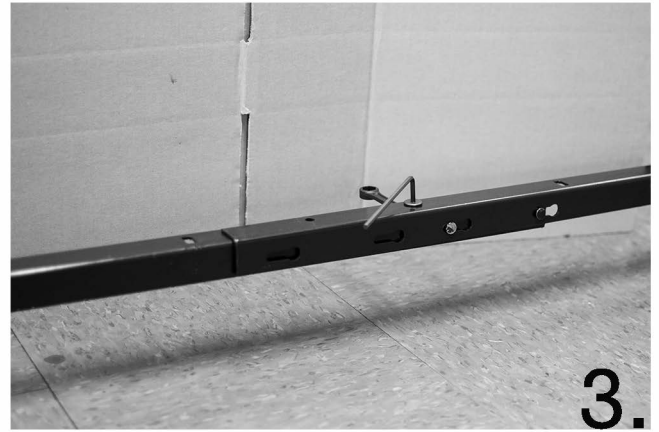

3. With cross arms open and 90 degrees to the side rail, insert the rivet head into the appropriate key hole slot and pull to the end of the slot. The twin setting is closest to the leg.

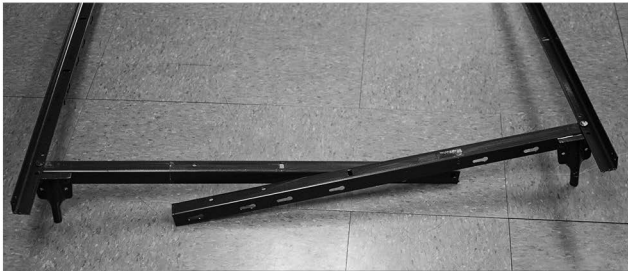

2. Swing the cross arms open as shown. Lay the frame open as shown.

Before locking the two cross arms together, drop the black screws in the holes as shown in 2b. Once you've finished assembling the frame, tighten with nuts.



4. Find the 4 black glides/feet. Push the leg of the frame into the top of the black foot/glide. The long edge of the glide should go head to toe.

Twin 11" Tall Frame



5. Next, if you have a headboard, find your headboard brackets. Attach the brackets to the head end of the frame. Install the black end caps on the foot end of the frame. If there is no headboard, install the black end angle caps on all 4 corners and center the box spring over the center of the frame.



6. Add nuts to each of the screws in the corners (step 2b) and tighten



7. Should you have any issues or questions about this installation or other bedding related questions, email us and we will respond promptly.