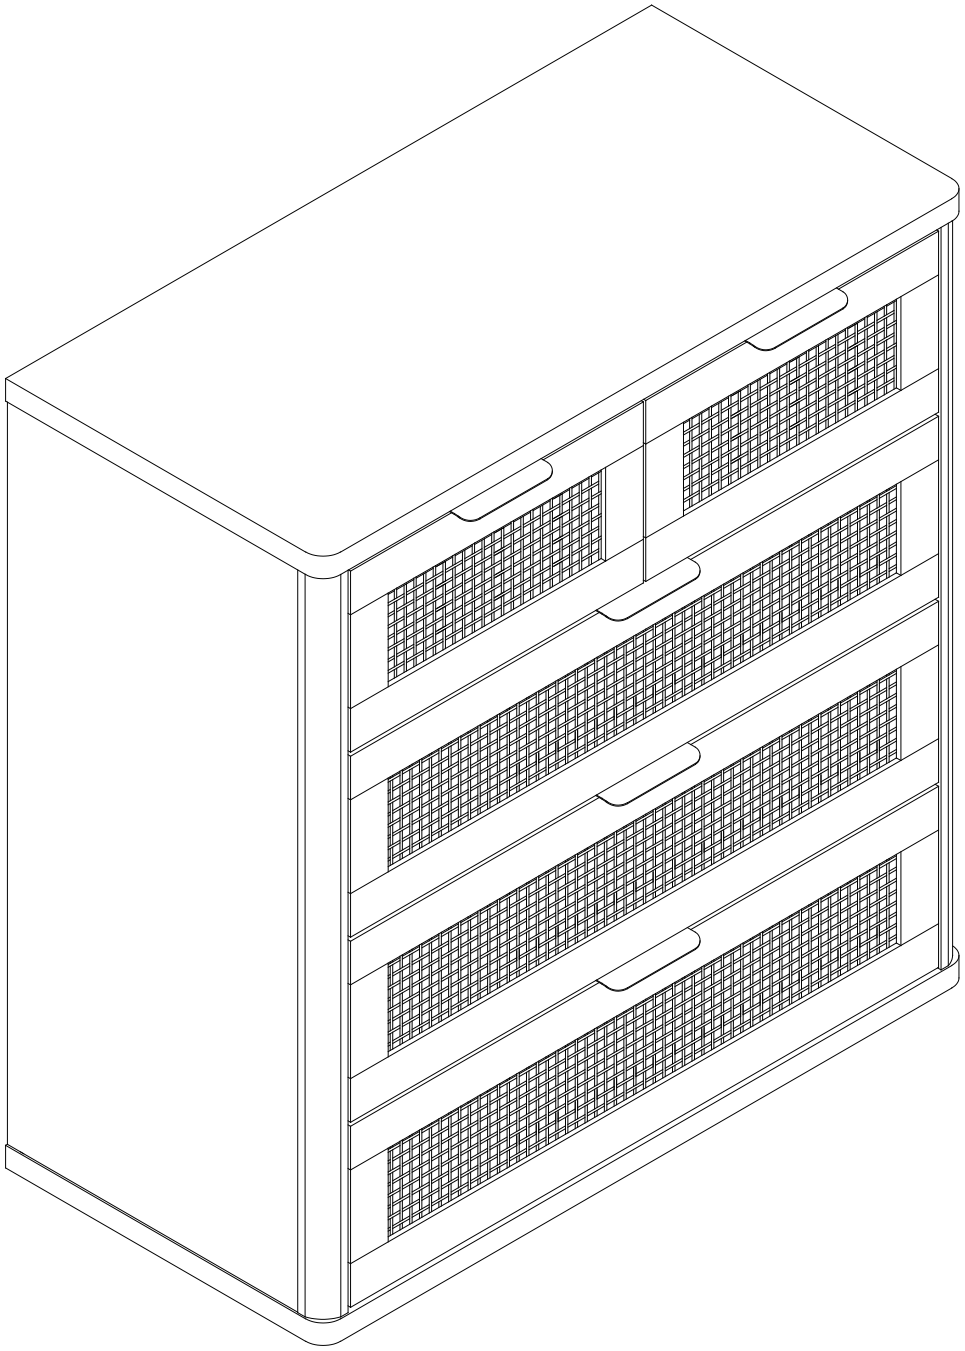


ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

BEFORE STARTING


Before Using Product

- Read each step carefully before starting.It is very important thateach step is performed in the correct order.If these steps are not followed in sequence,assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used,preferably on a carpet,or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process,we suggest you keep a lite tightness for all the screws during assembly.After the whole product is assembled, firmly tighten all the screws.

⚠ WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly,keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted,not dragged or pushed.Failure to do so could cause instability,product collapse,and/or serious injury.
- Be careful when using power tools to assemble your furniture.Power tools may strip or damage the parts.

QUICKFIT

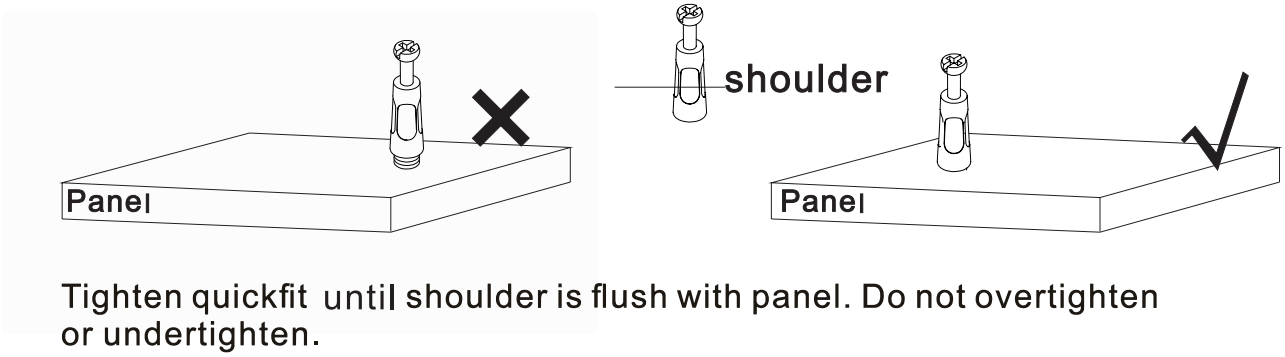


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

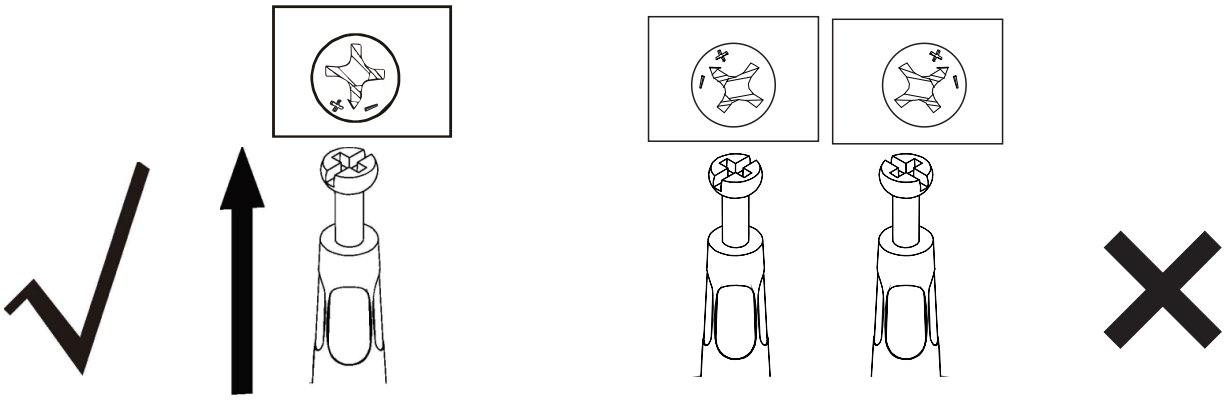


CORRECT WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

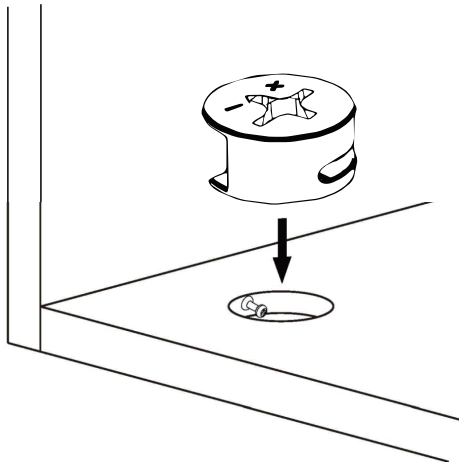


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

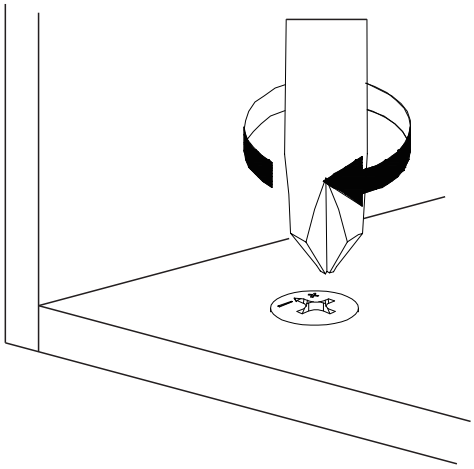


Turn cam lock clockwise to tighten.


1 x1

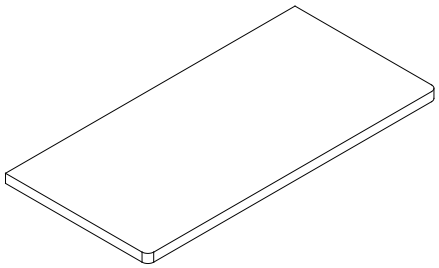


2 x1

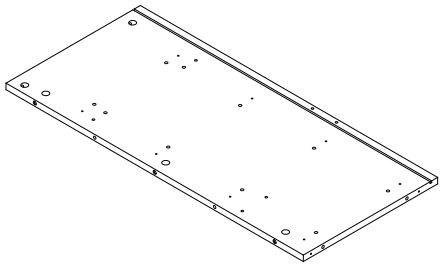


3 x1

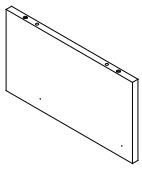


4 x1

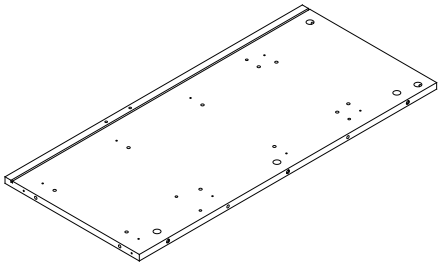


5 x2

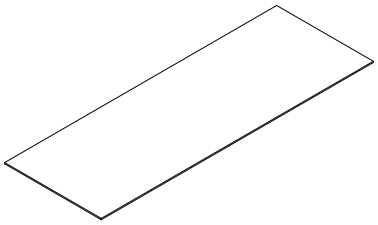


6 x2

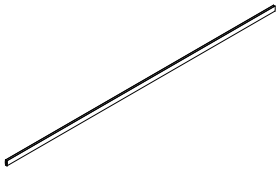


7 x2

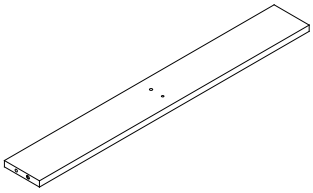


8 x2

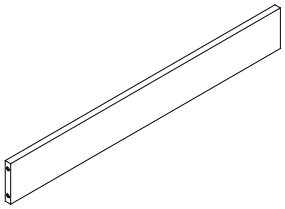


9 x1

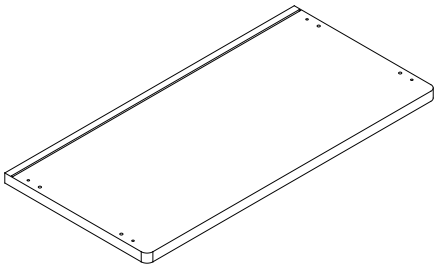


10 x5

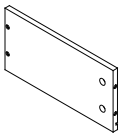


11 x5

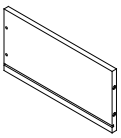


12 x3

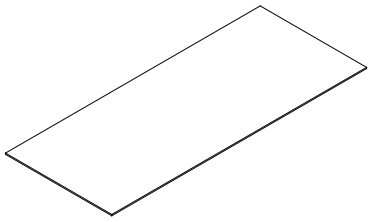


13 x2







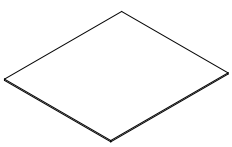



14 x3

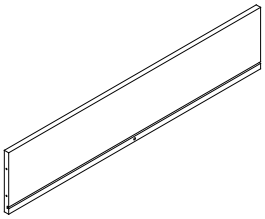

15 x2

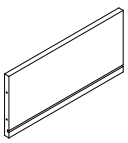

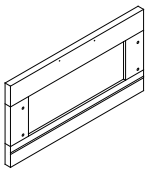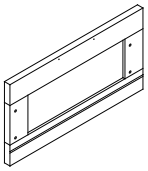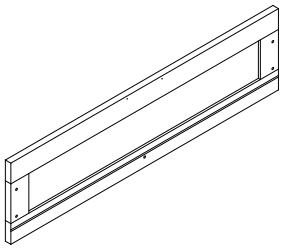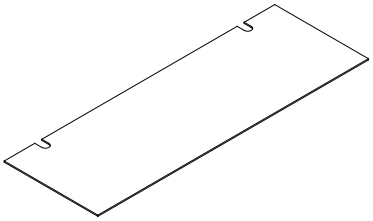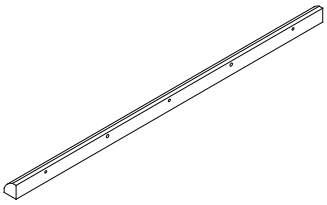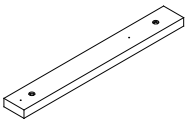
16 x3 	17 x1  L	18 x1  R
19 x3 	20 x1 	21 x2 
22 x8 		

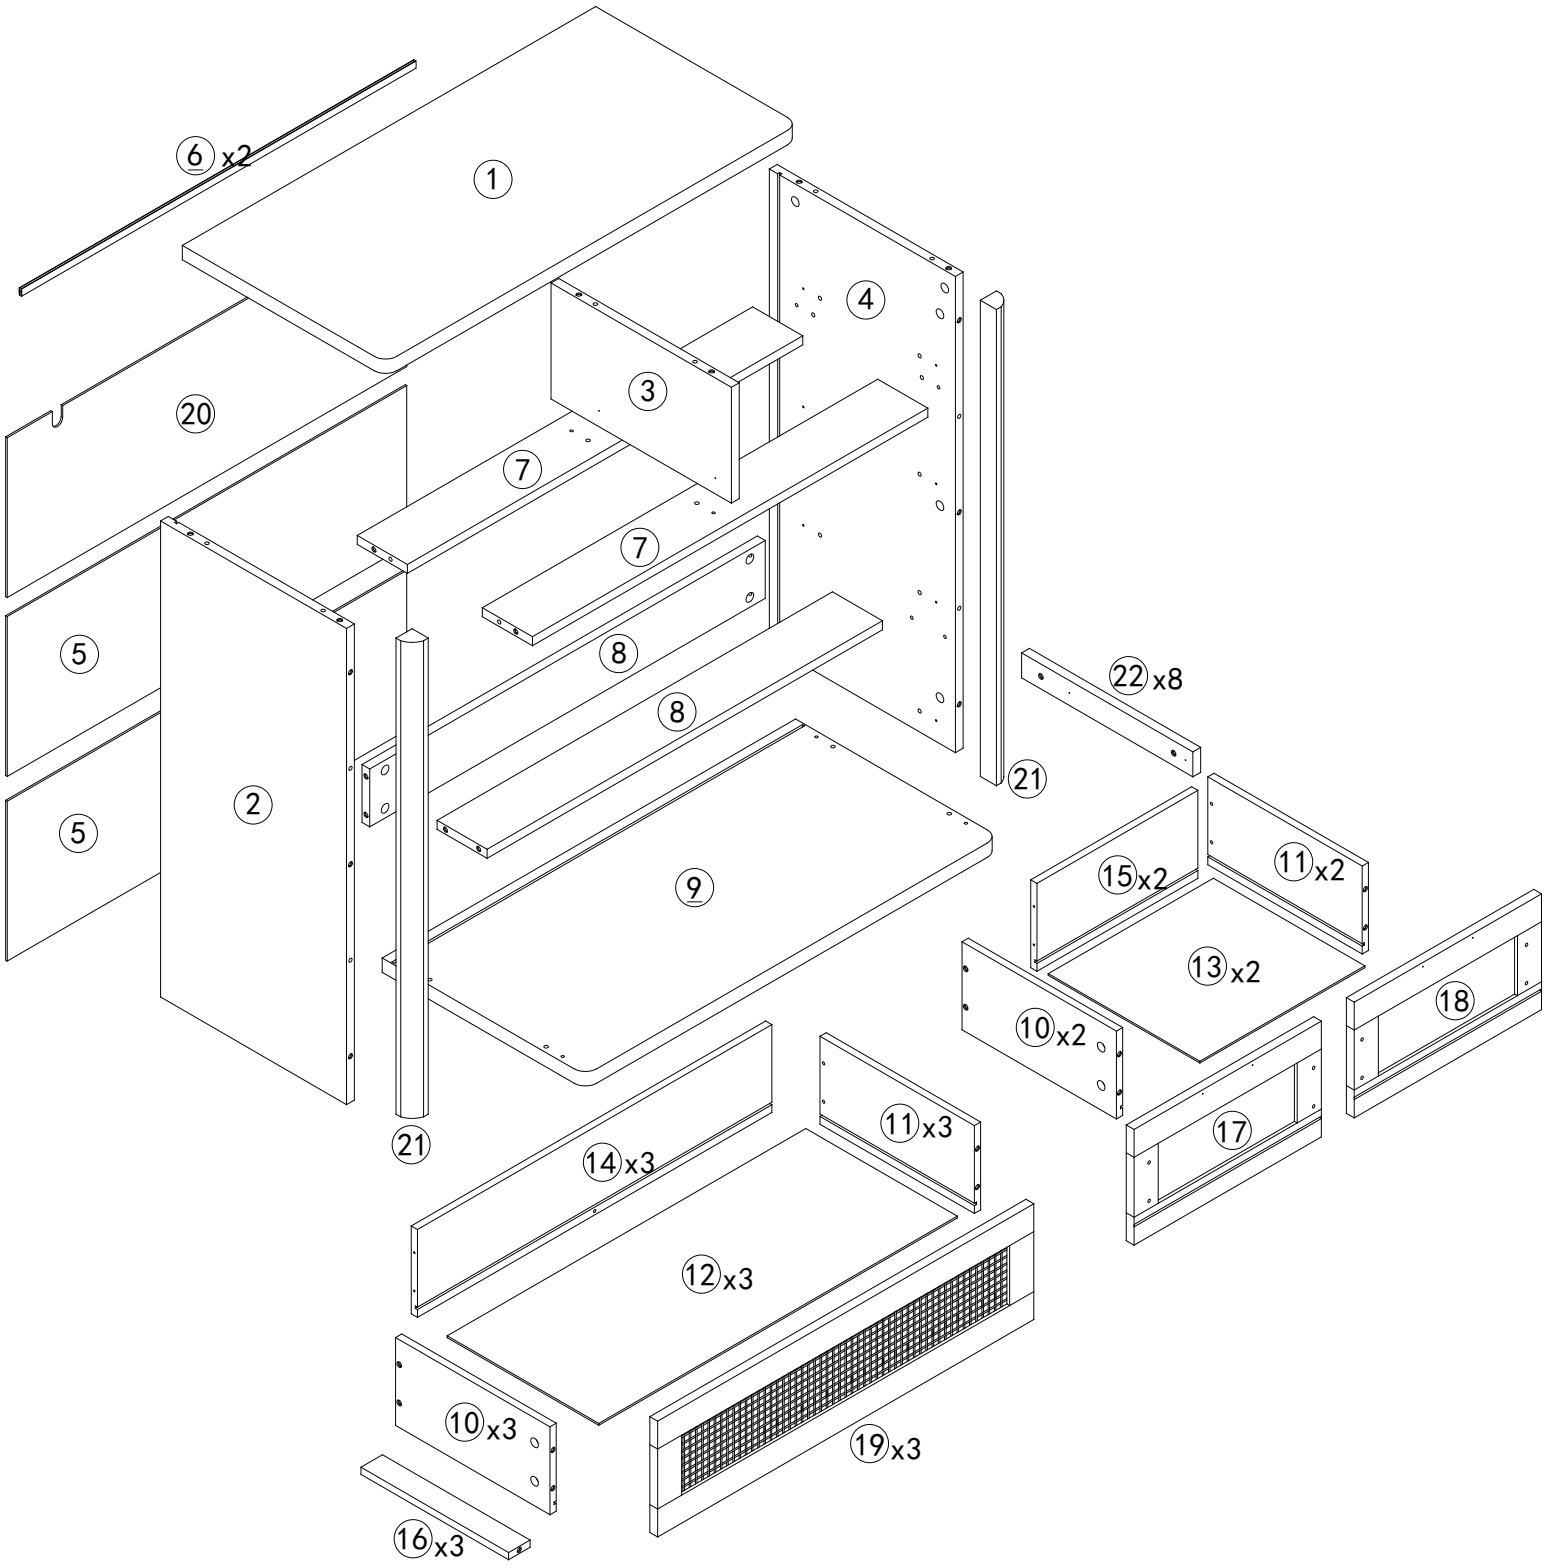



∅6x35MM
Ax47+4


∅15x10MM
Bx47+4



∅6x30MM
Cx20+2



M4x40mm M4x12mm
Dx2



M3x12mm
Ex50+4



M4x35mm
Fx25+2


M4x45mm
Gx4



96mm
Hx5


M3x16mm
Ix4



∅27x23MM
Jx6


M4x22mm
Kx16+1



∅6x20MM
Lx16+1




300mm
x5


∅21x100MM
x1


1

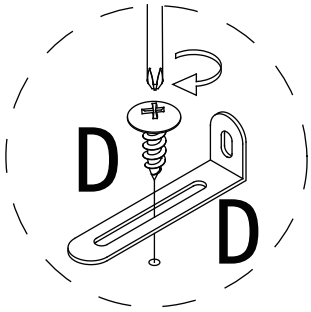

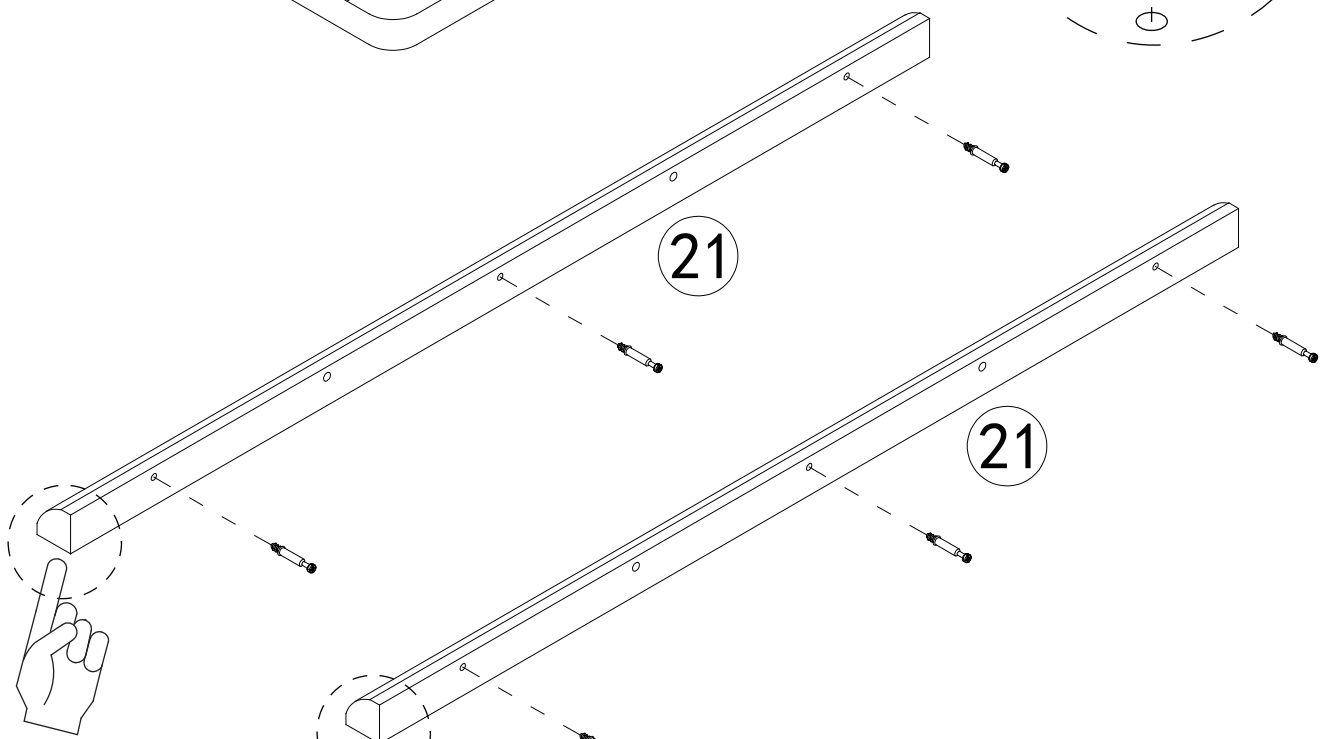


Plane down


Plane down


A		12pcs
D		2pcs


2


Take care to distinguish between C and L.

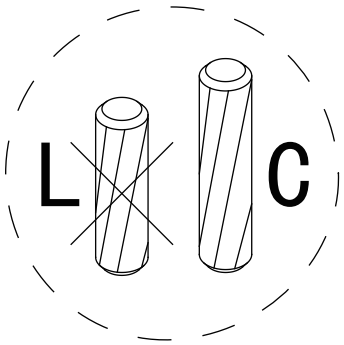

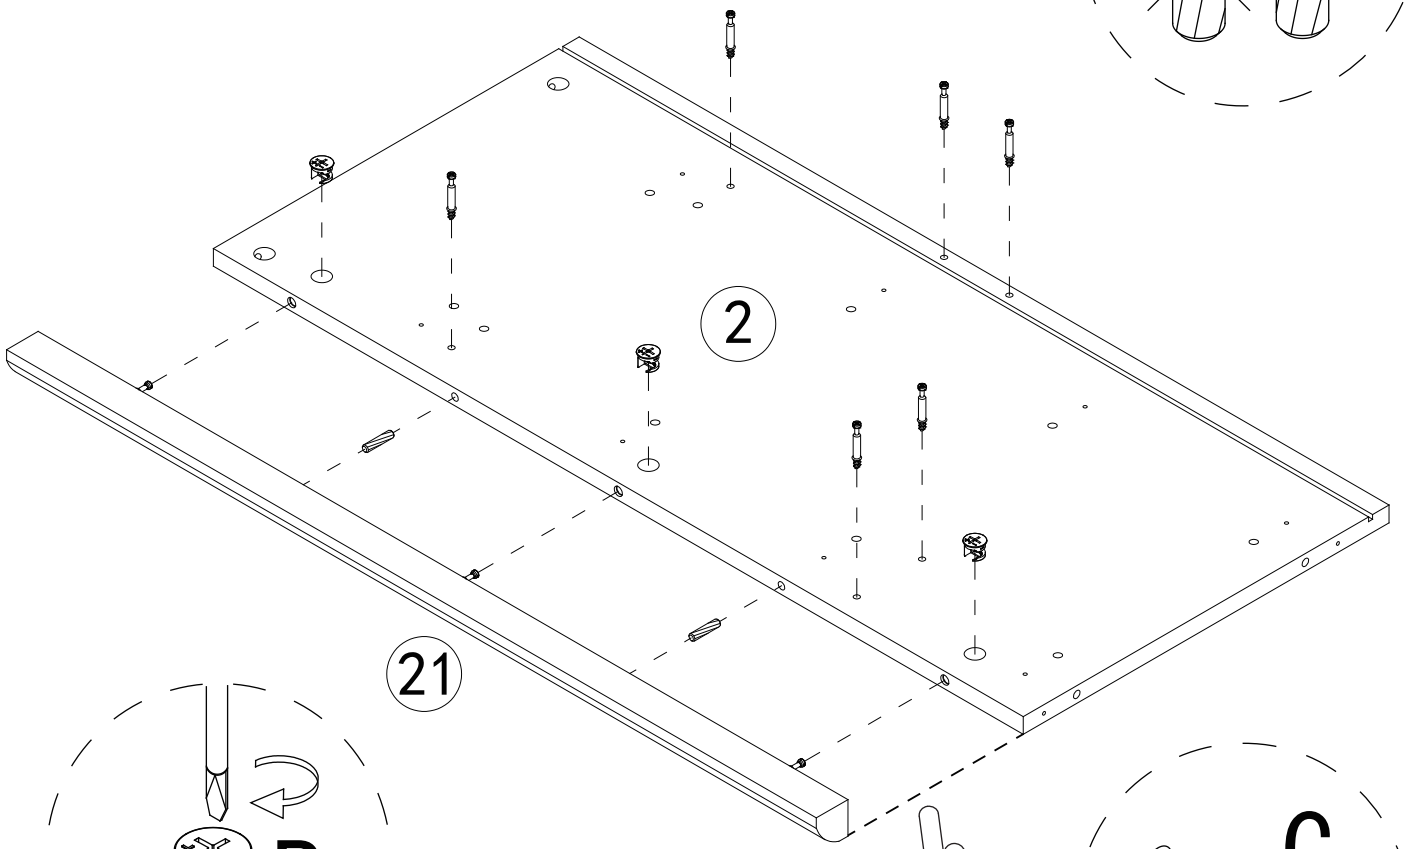

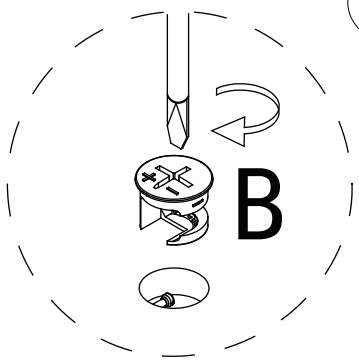

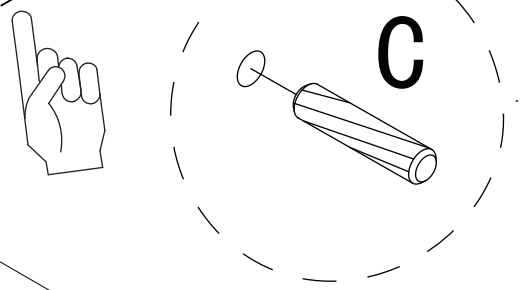

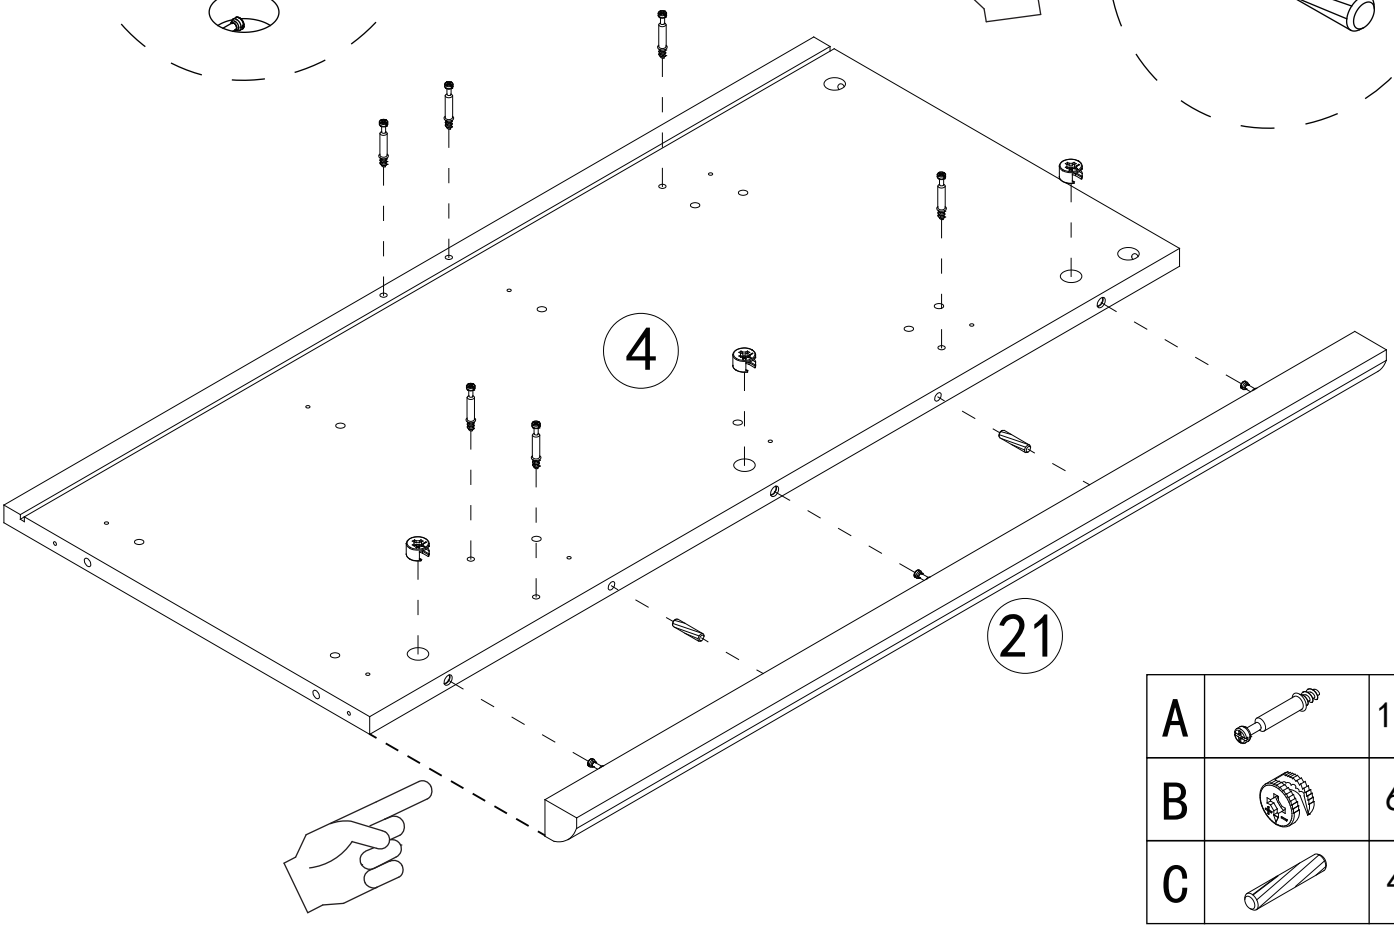



A		12pcs
B		6pcs
C		4pcs

3

Note that the foramen magnum is backward.

Take care to distinguish between C and L.

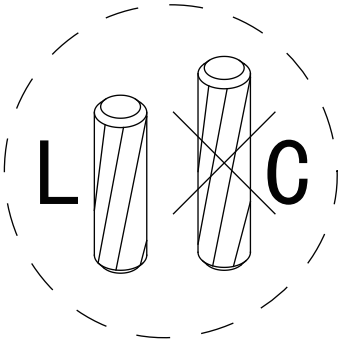


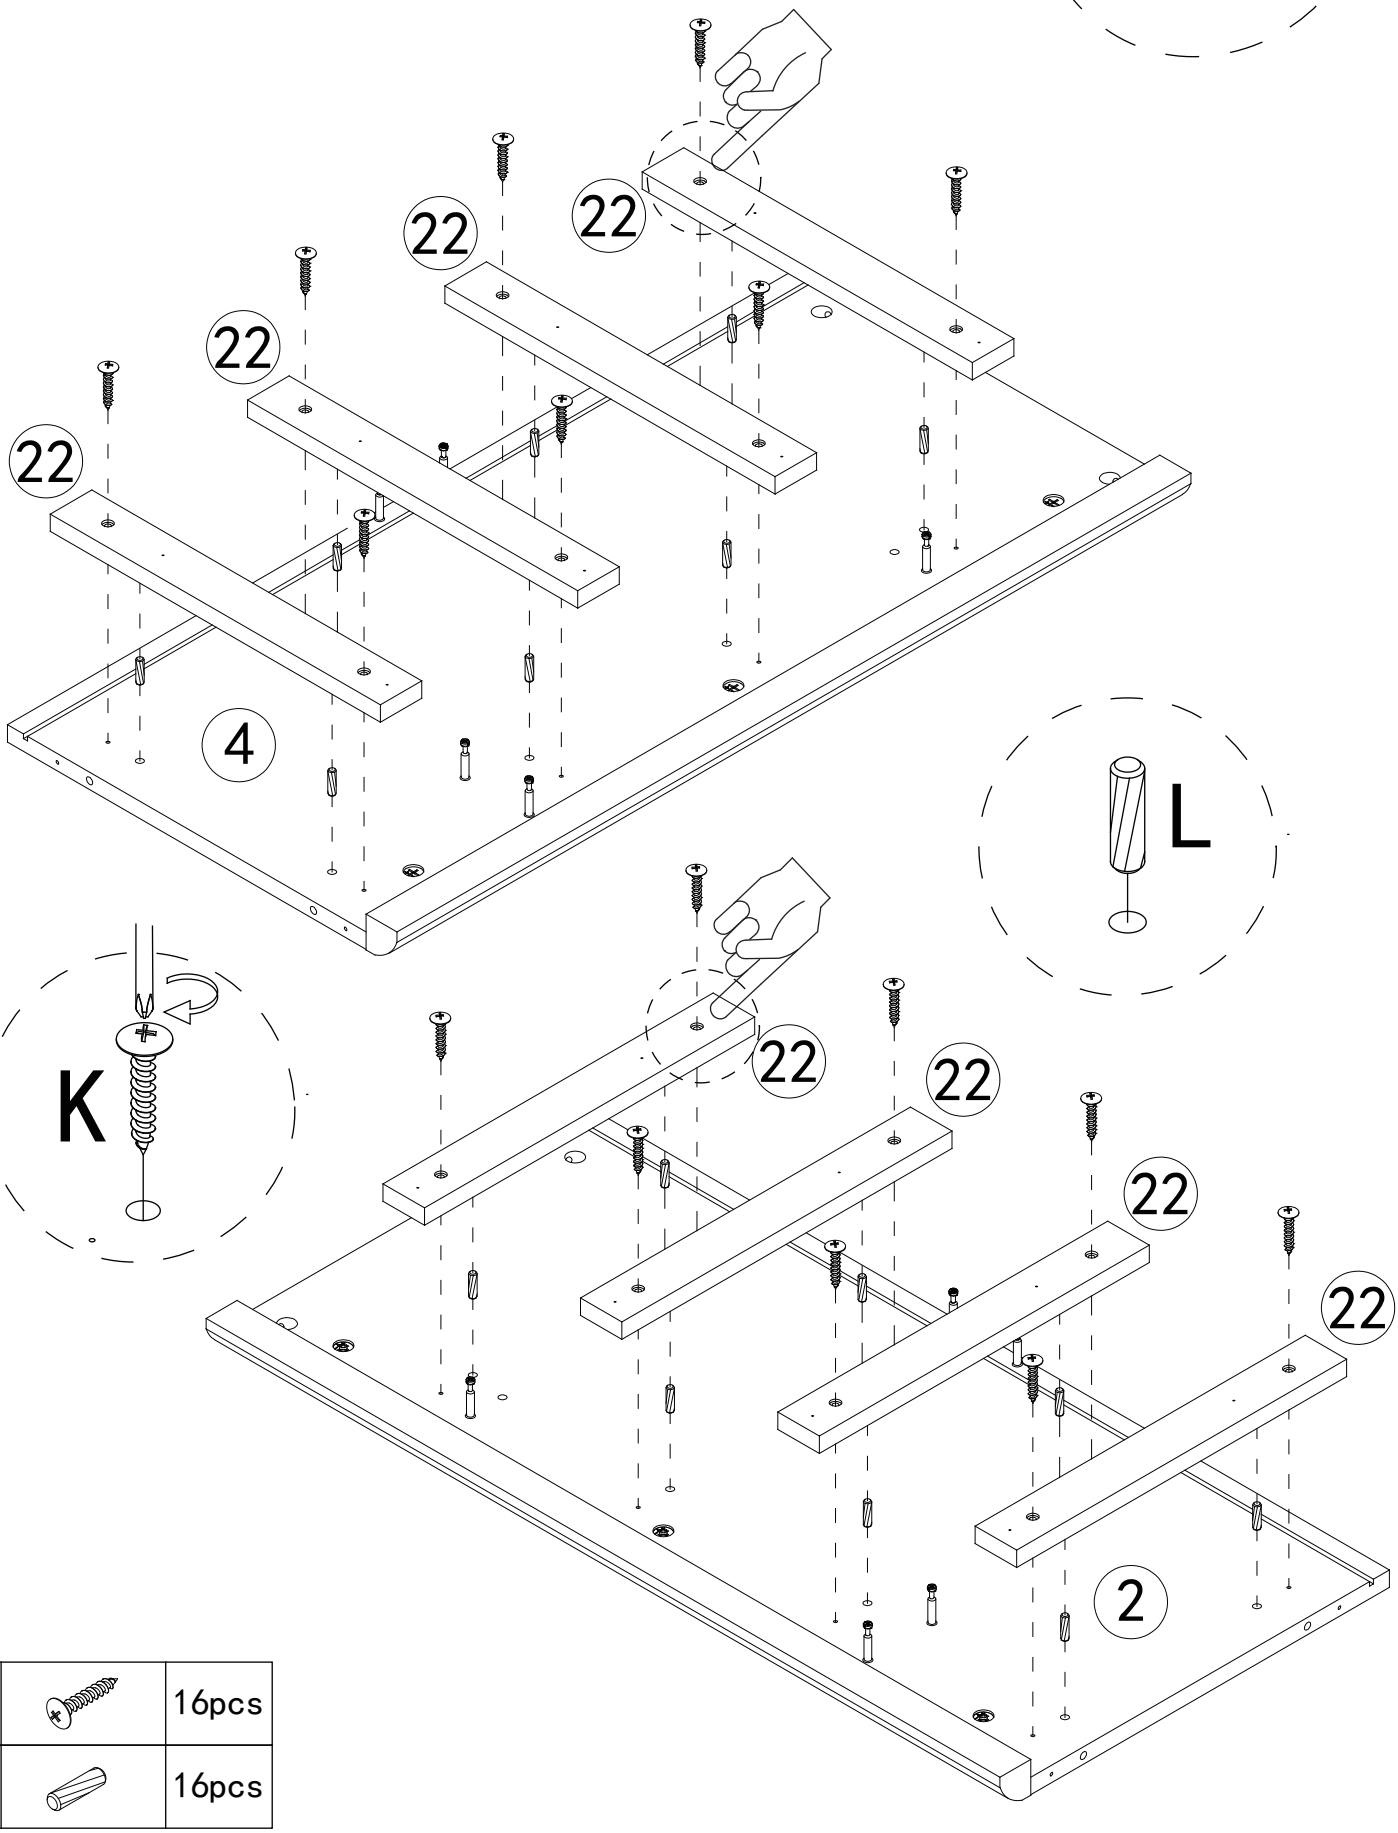

K		16pcs
L		16pcs


4

Pay attention to the hole position.

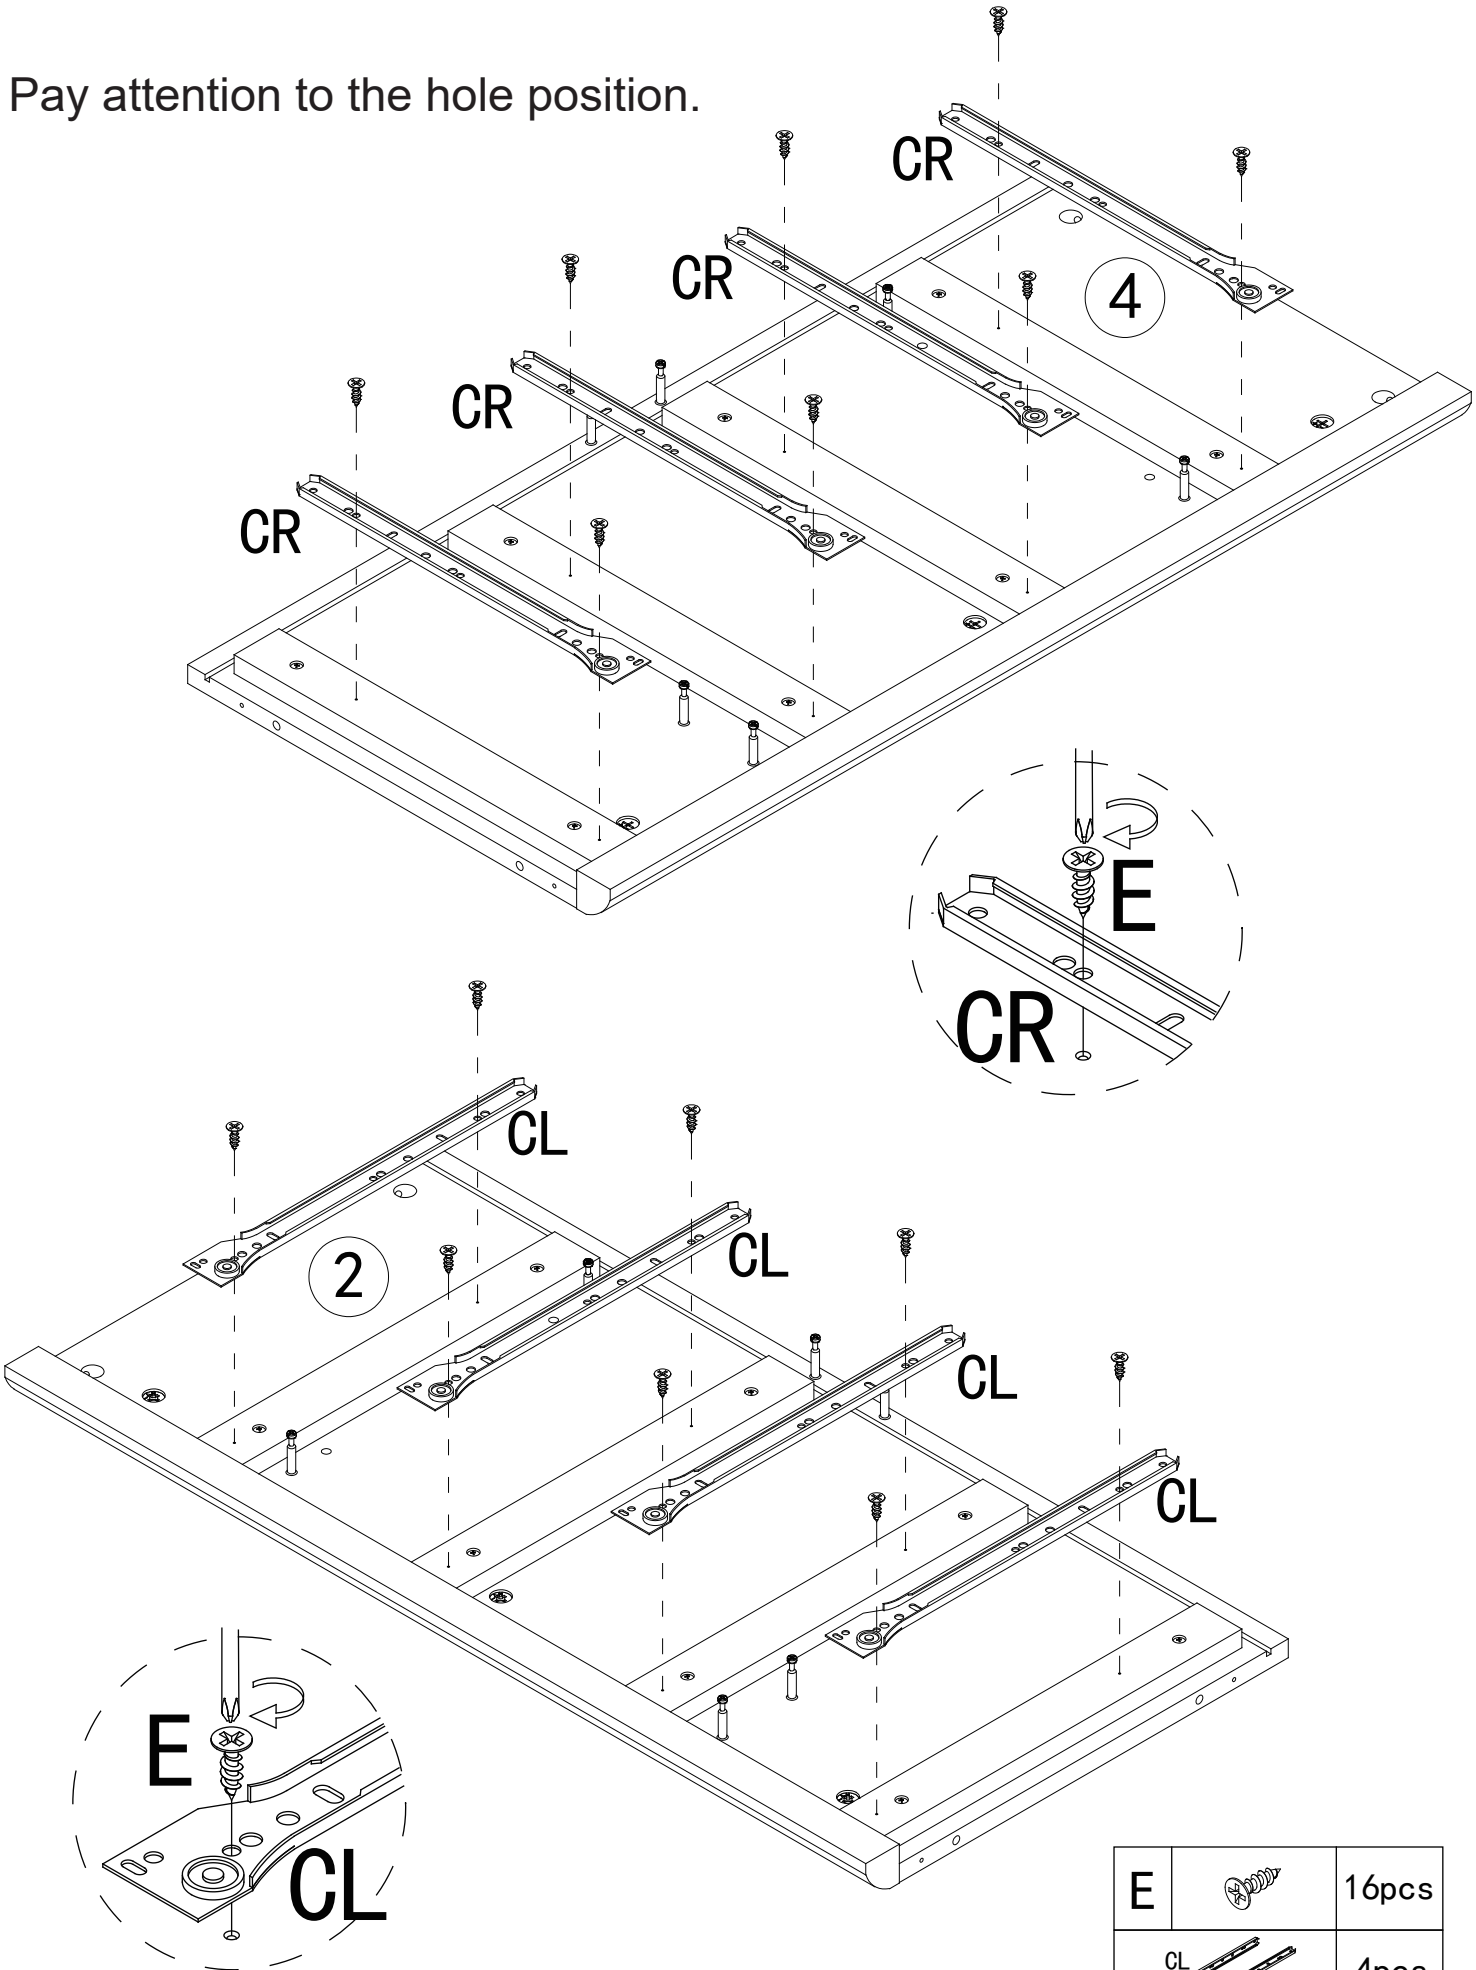


E		16pcs
CL CR		4pcs

5

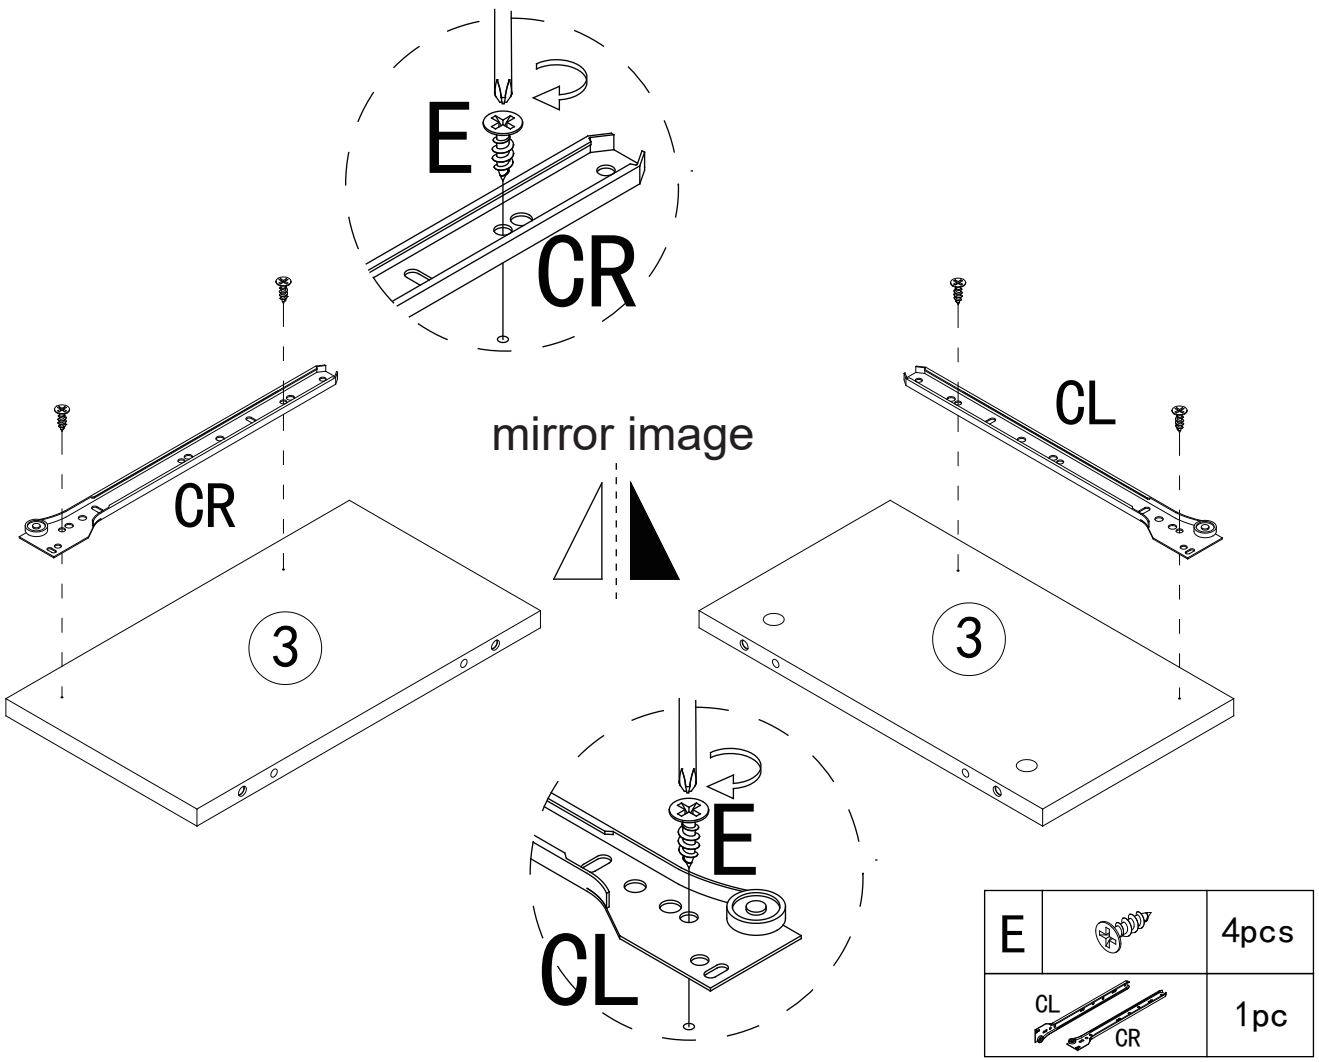

E		4pcs
CL CR		1pc


6

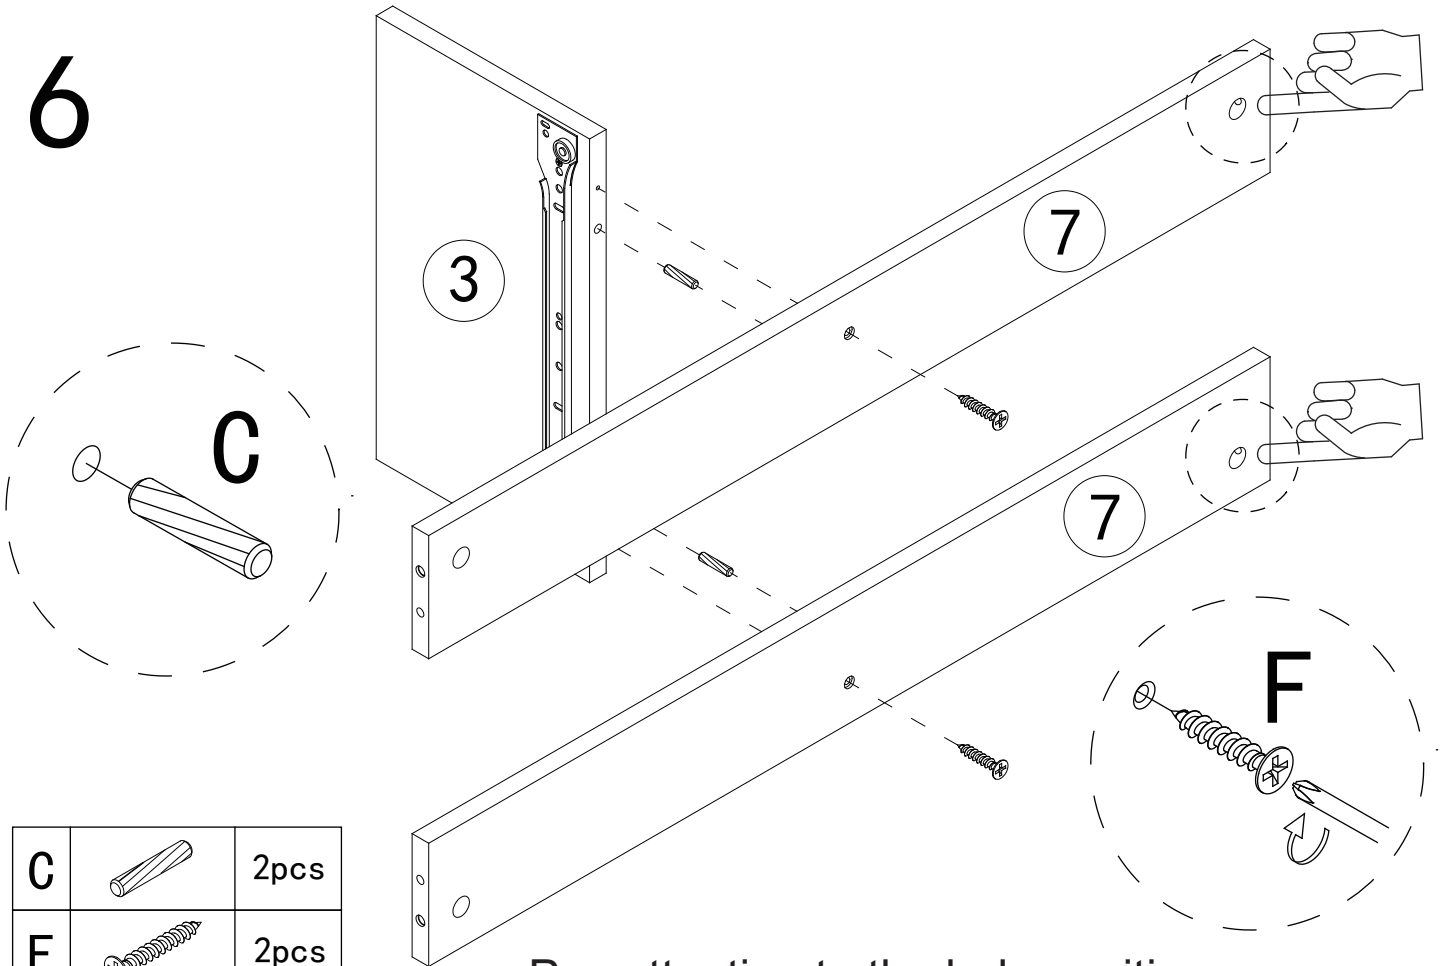

C		2pcs
F		2pcs


Pay attention to the hole position.

7

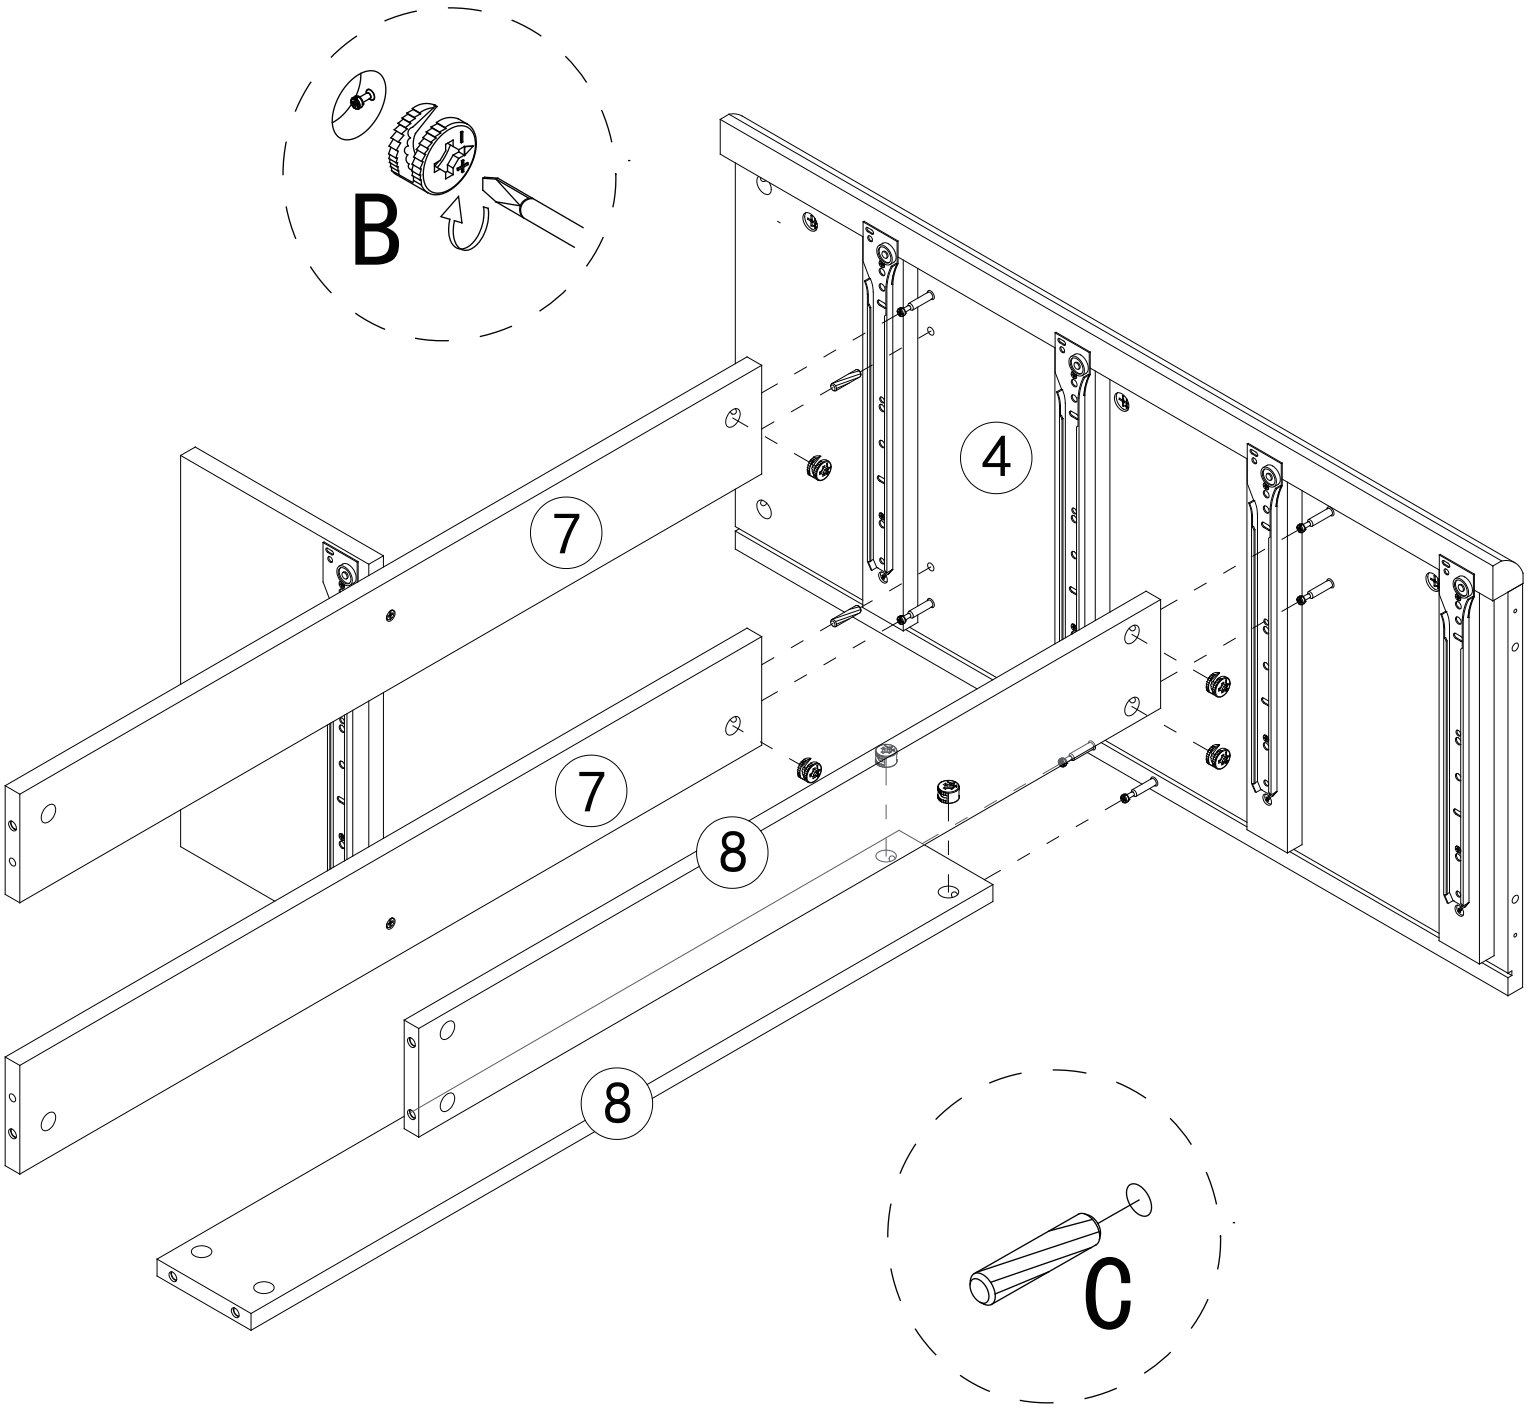


B		6pcs
C		2pcs

8

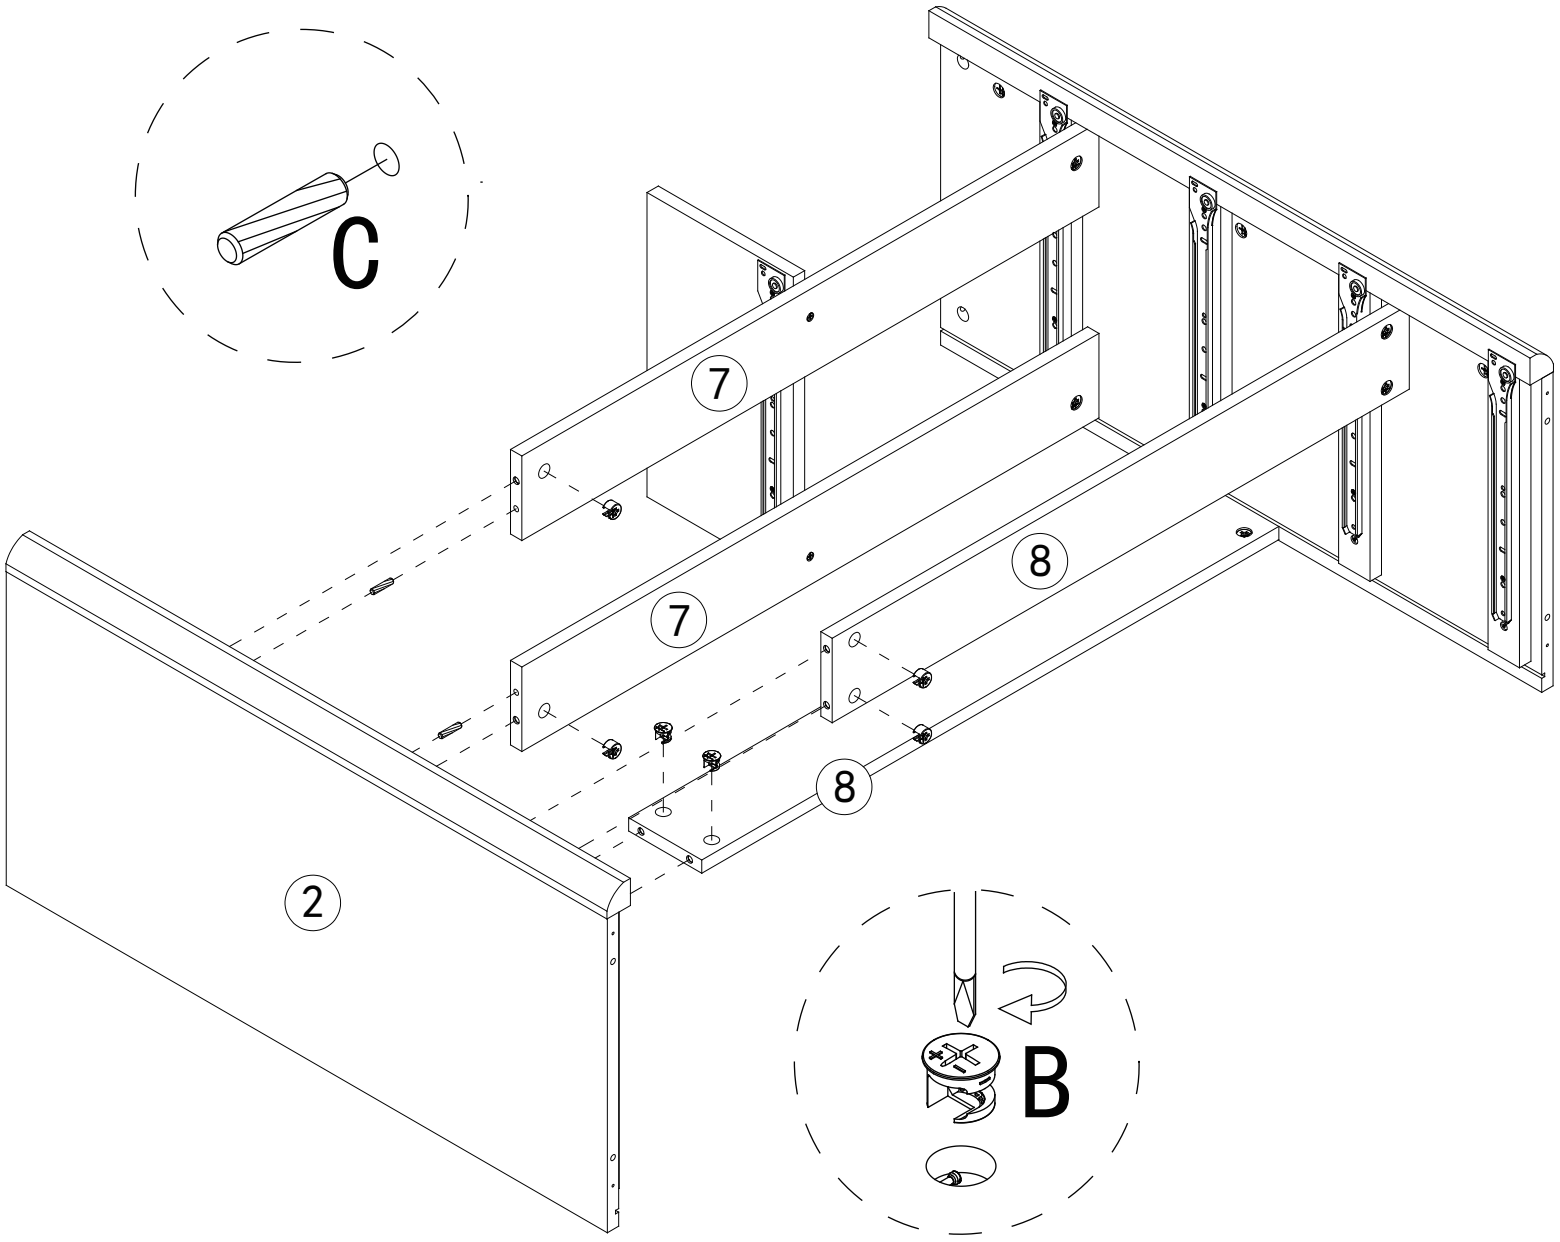


B		6pcs
C		2pcs

9

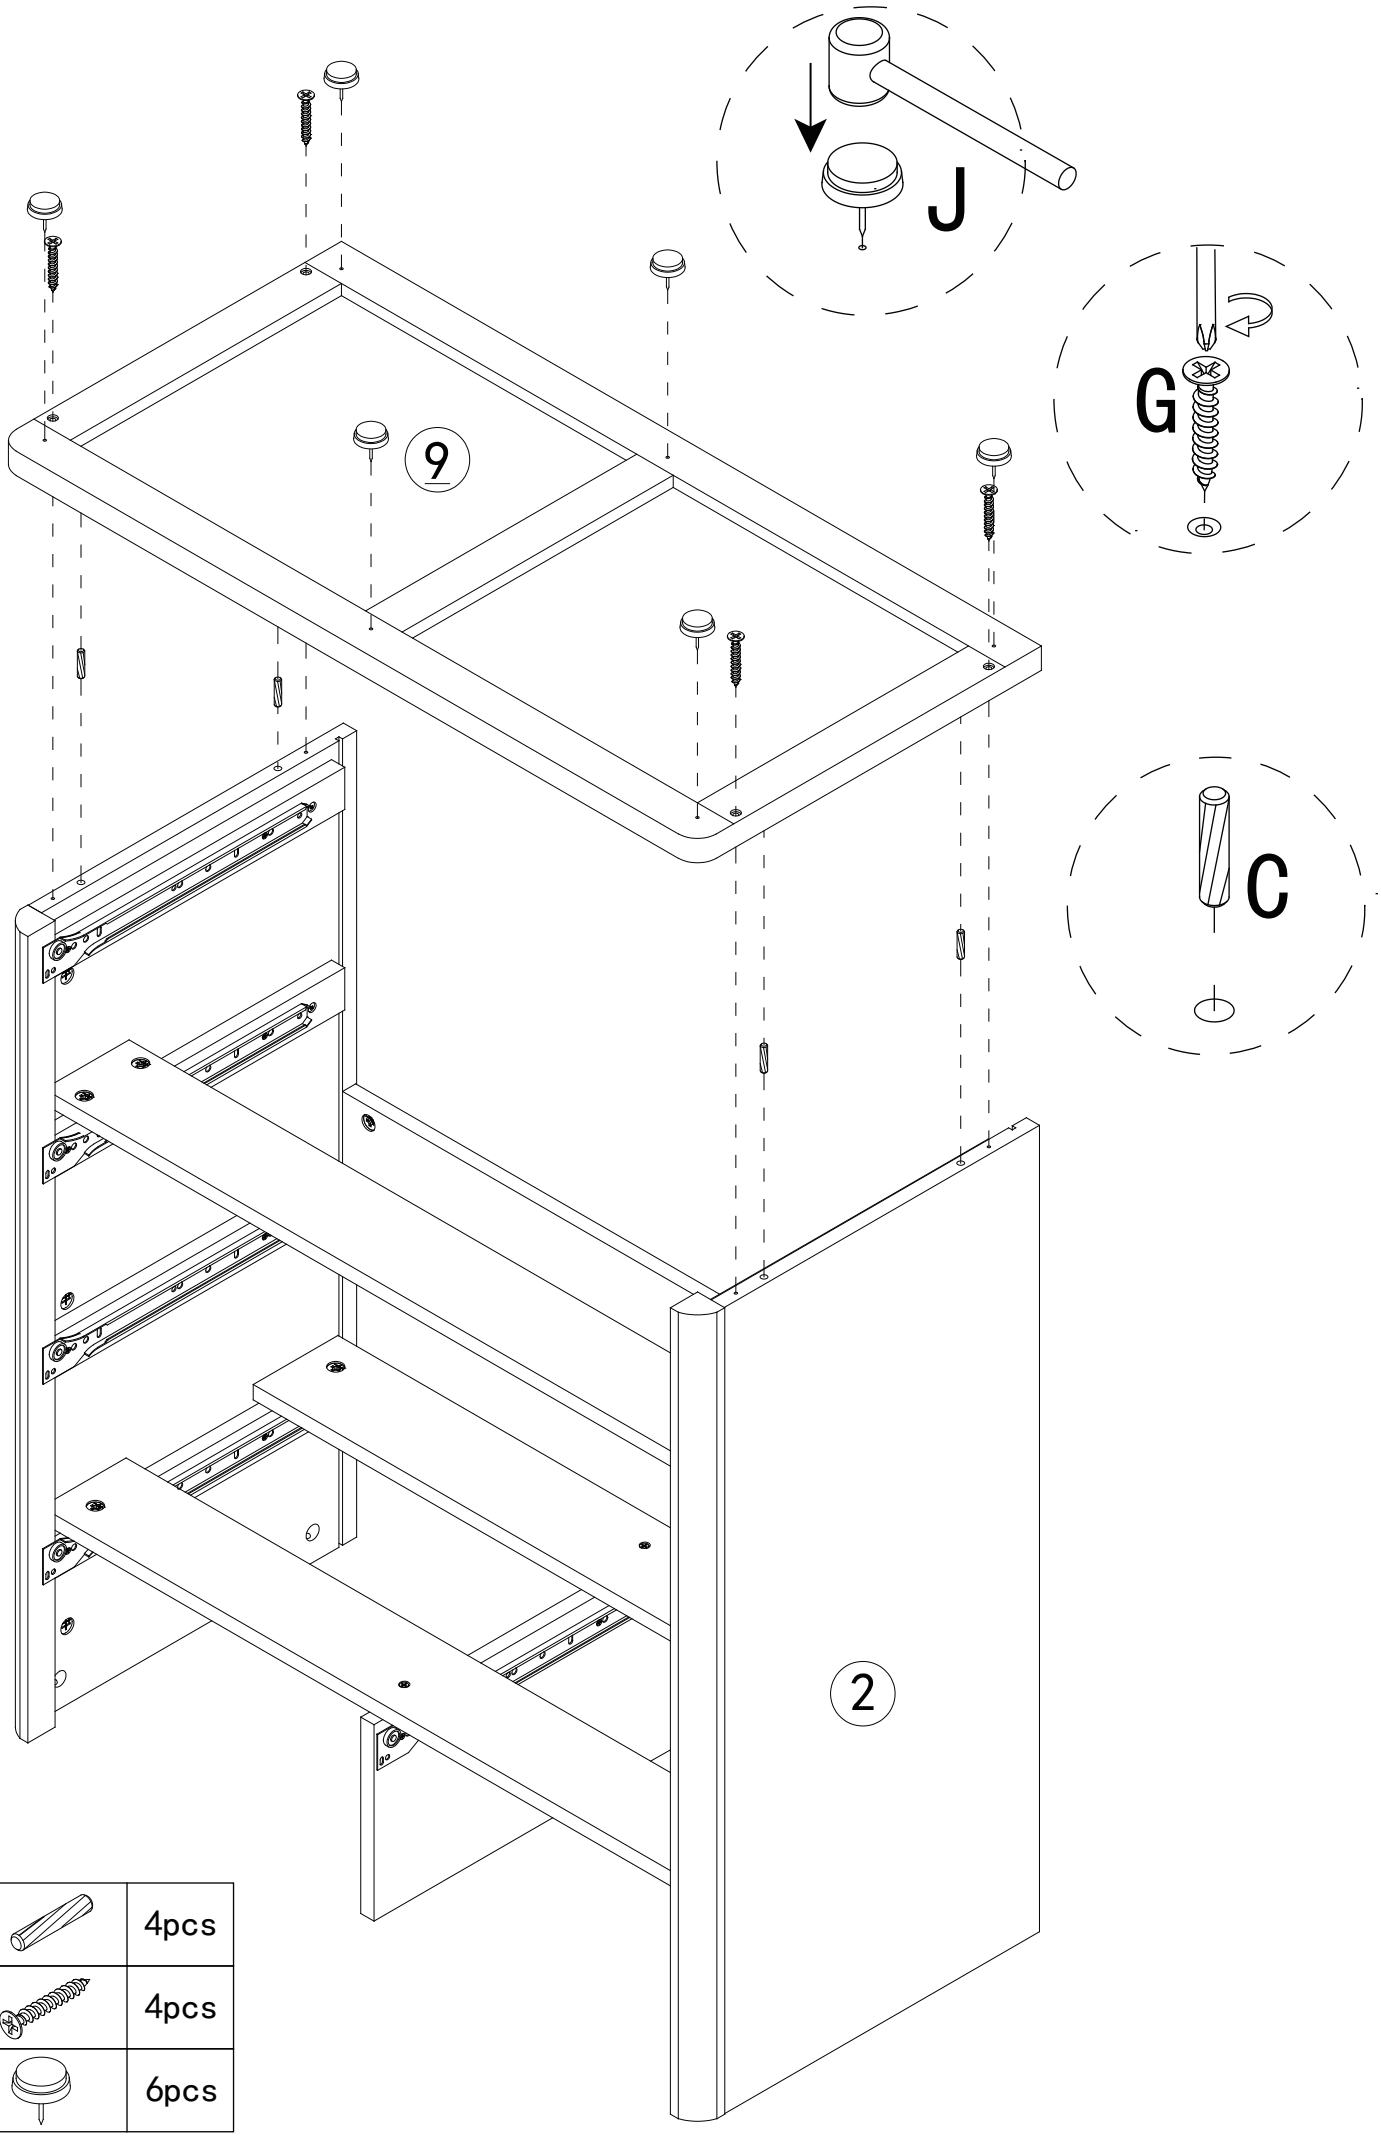



C		4pcs
G		4pcs
J		6pcs


10

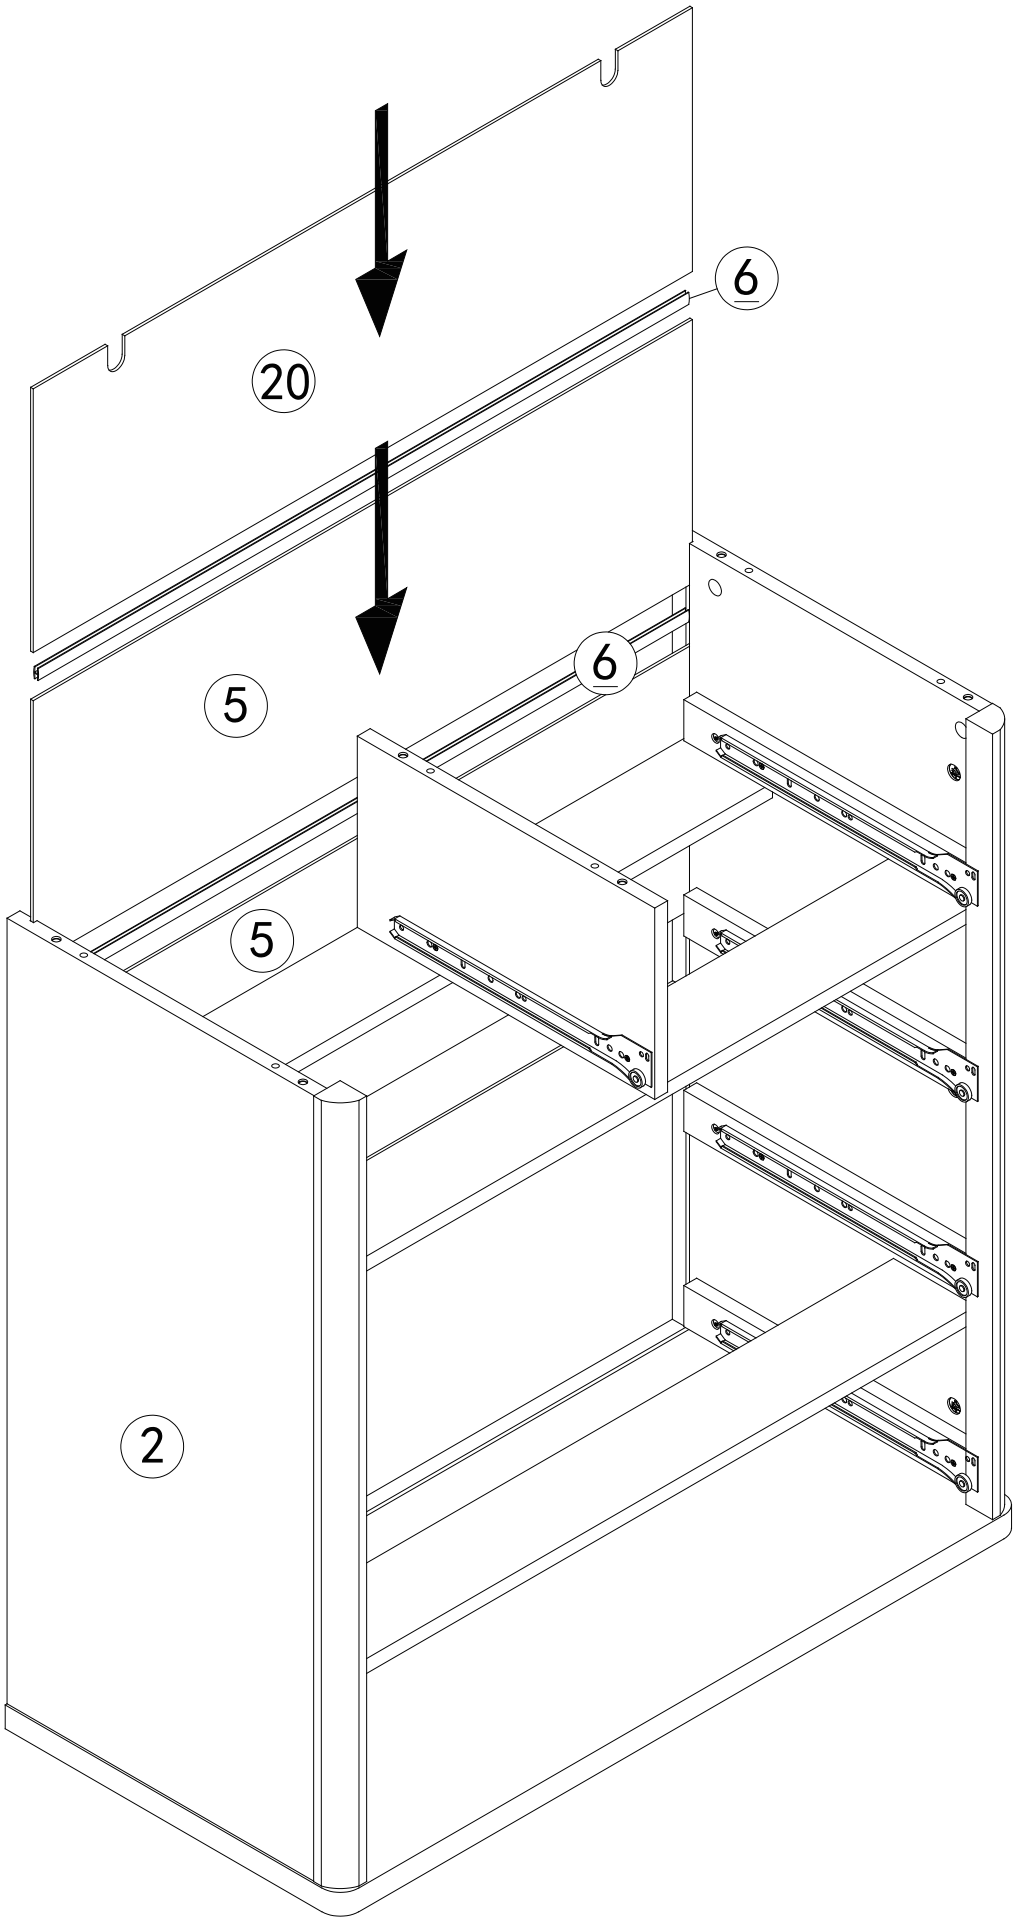

11

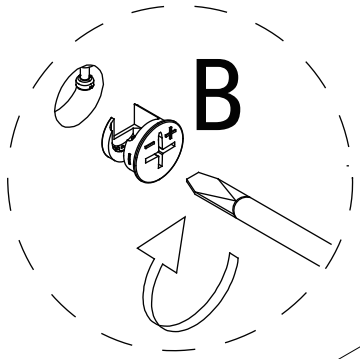

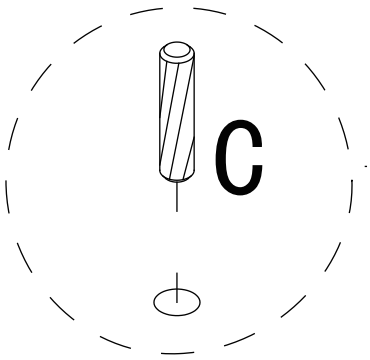


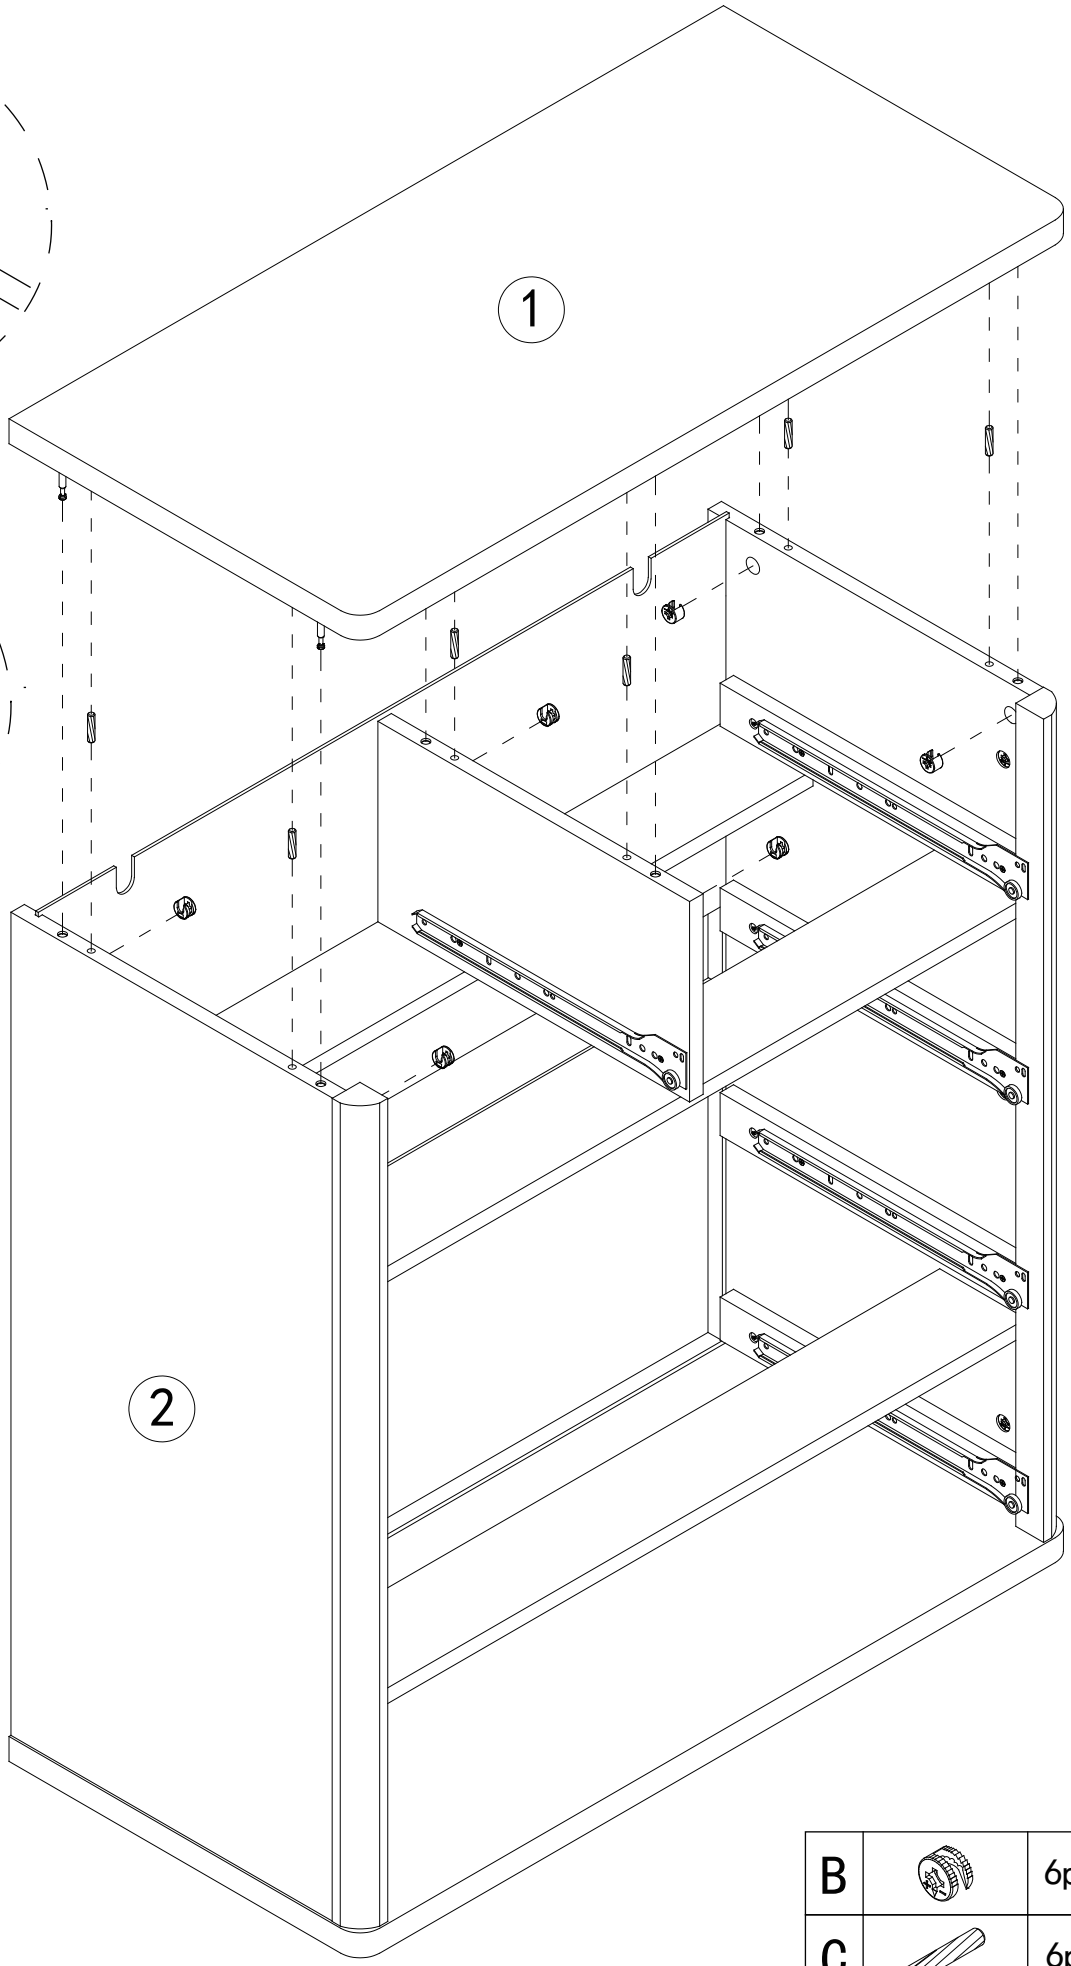


B		6pcs
C		6pcs


12

Be sure to install back plate buckle to prevent the cabinet from shaking.

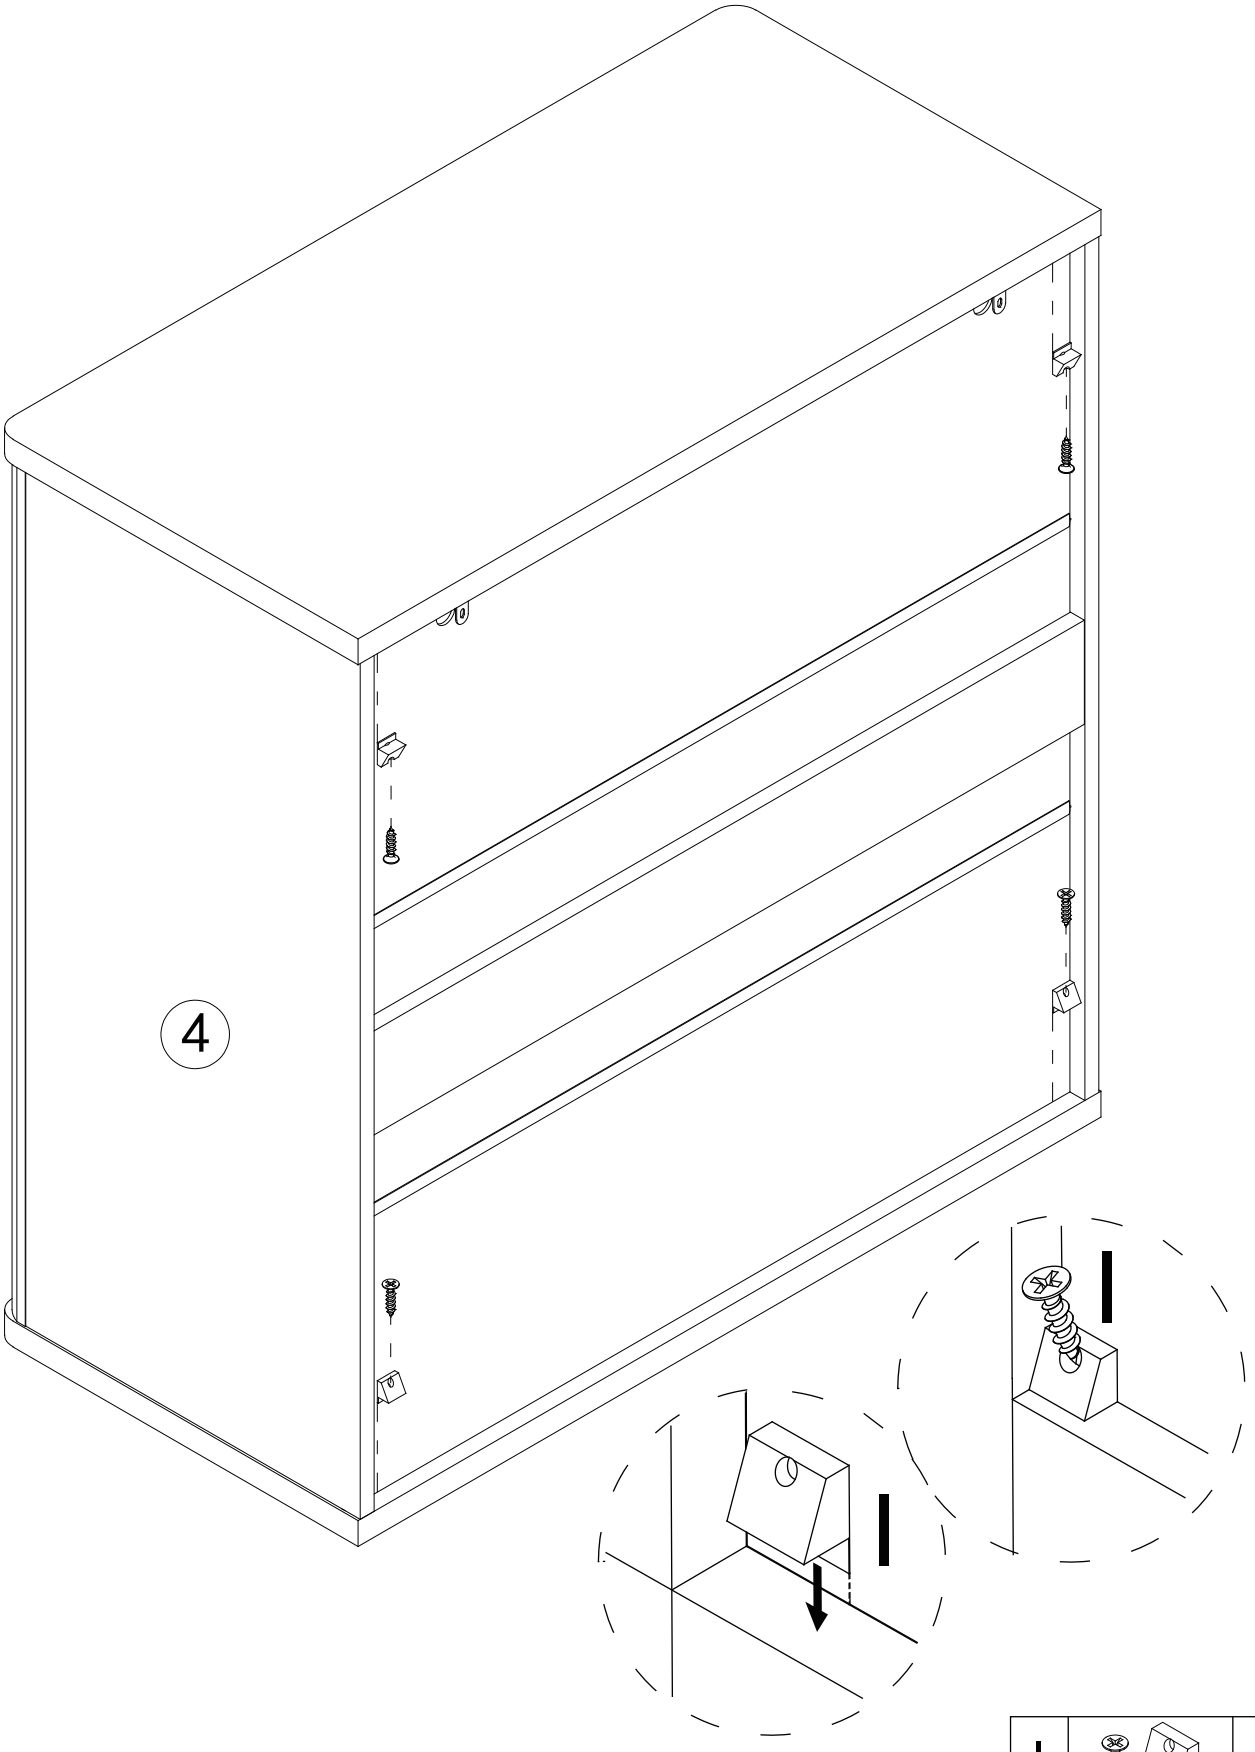


I		4pcs


13

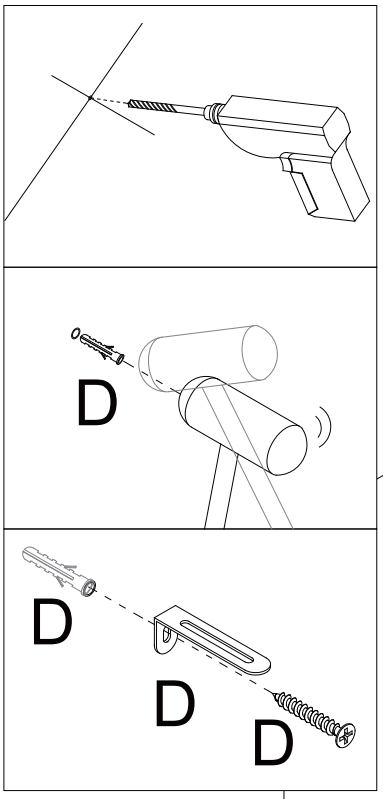


D		2pcs

14

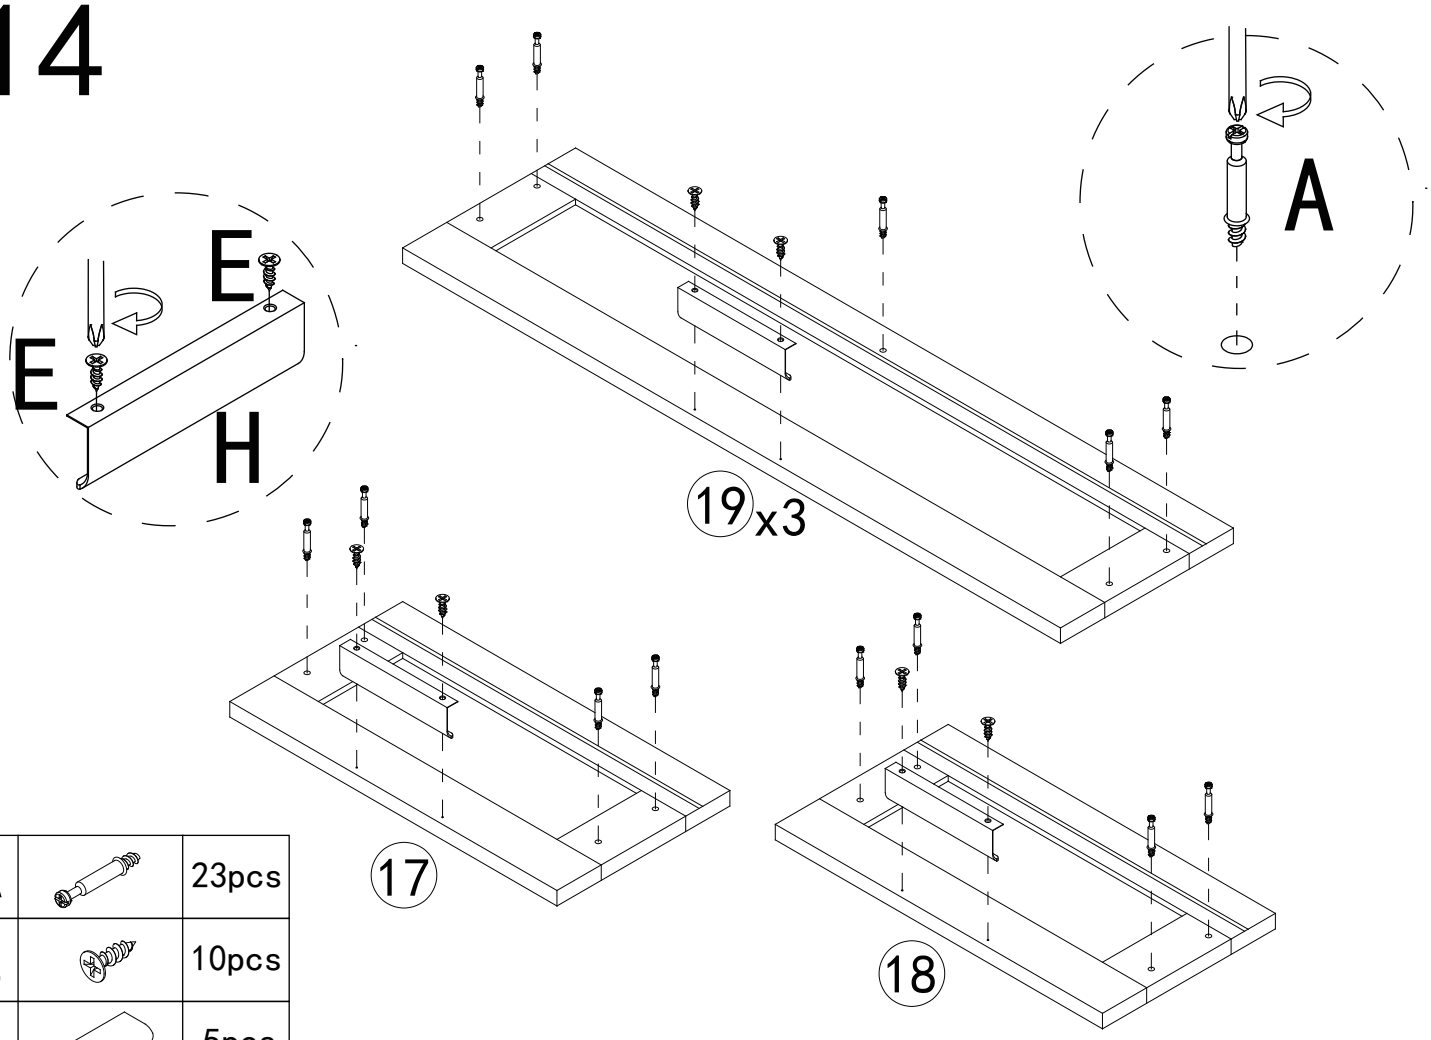

A		23pcs
E		10pcs
H		5pcs


15

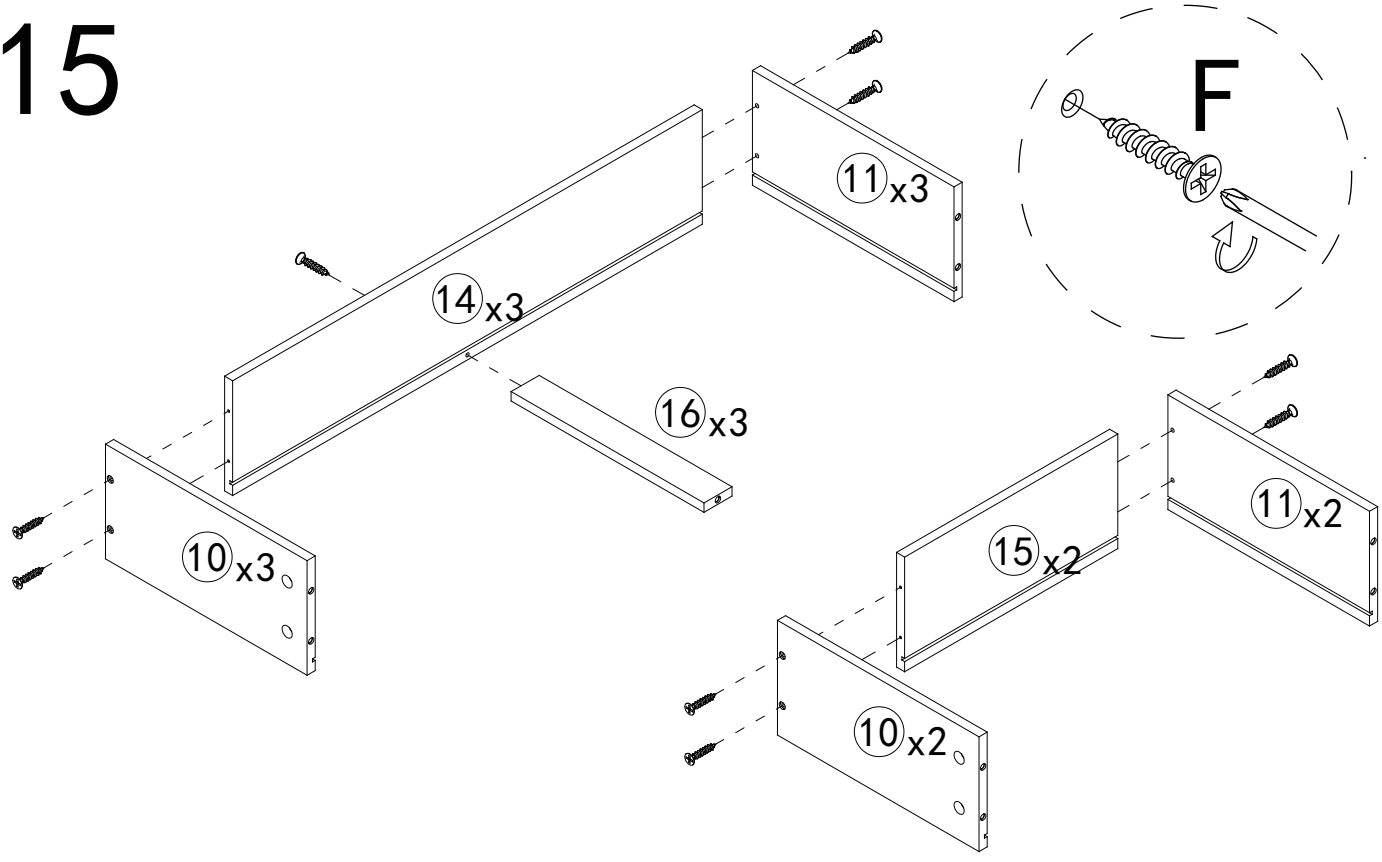


The side panels are flush with the bottom panel.

F		23pcs

16

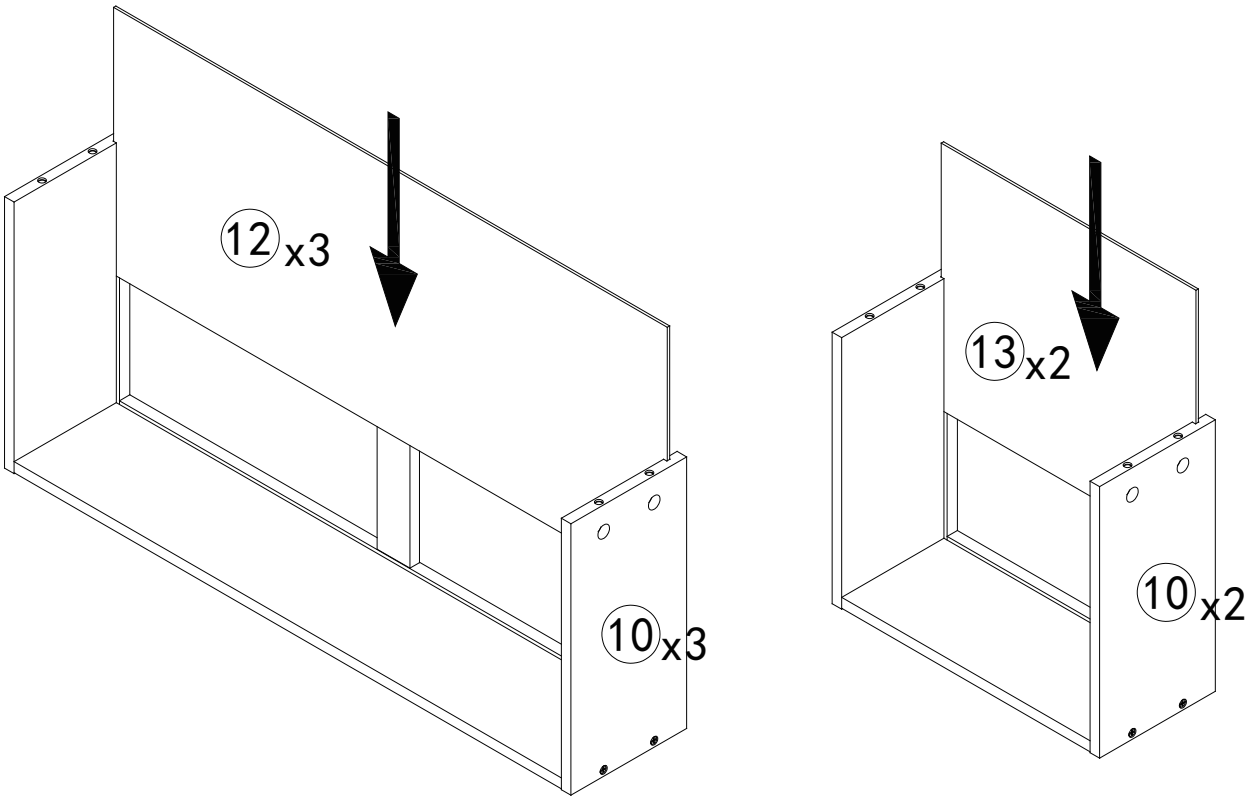



17

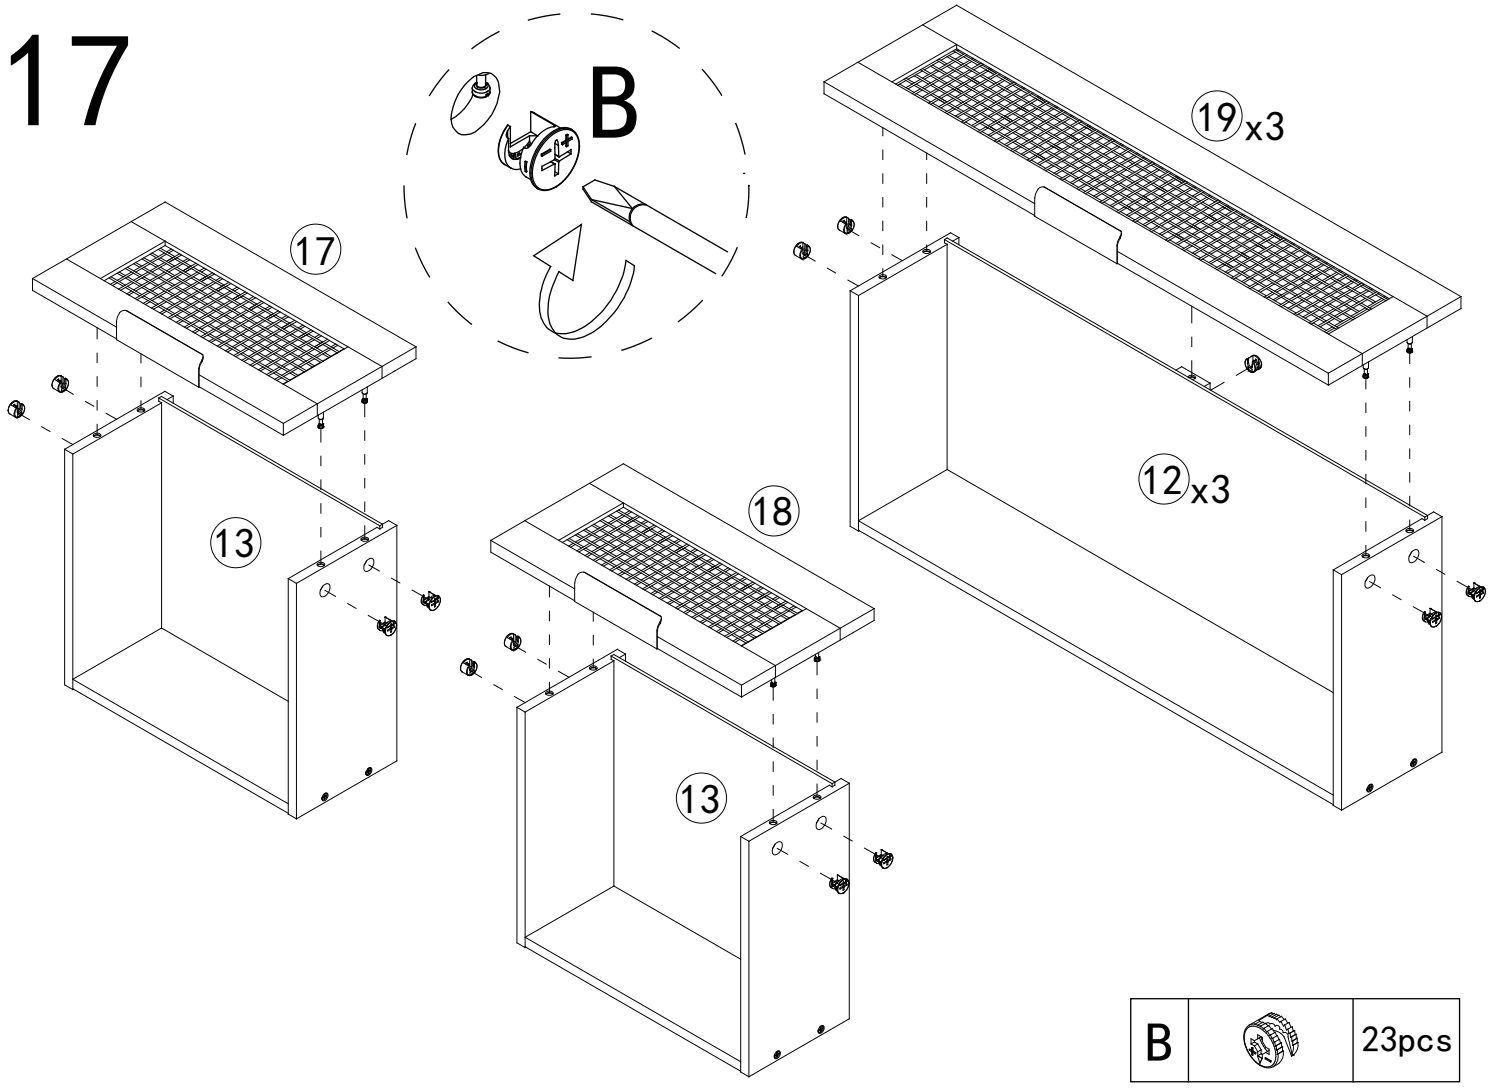



B		23pcs


18

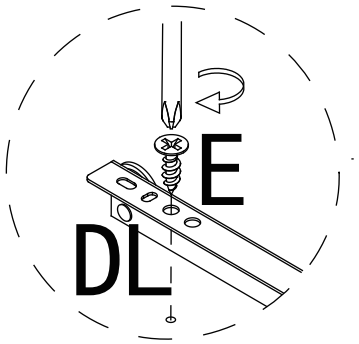

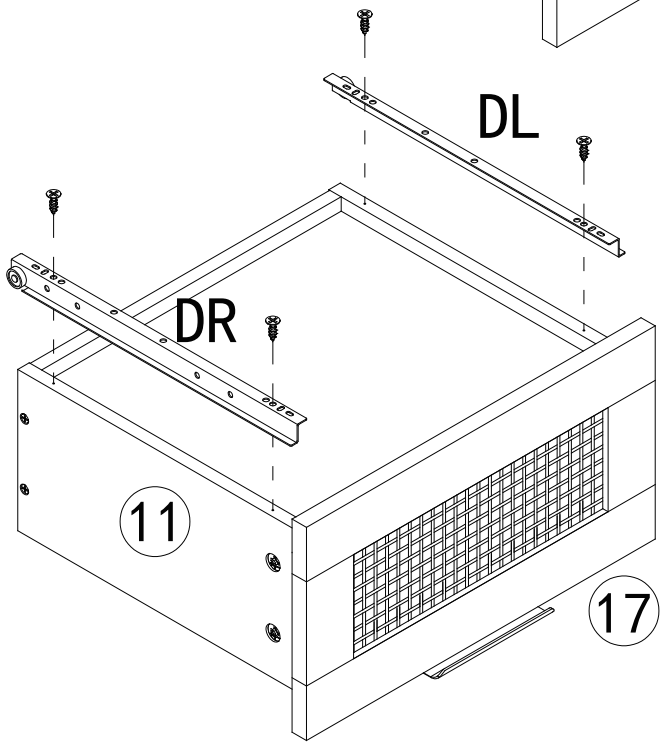

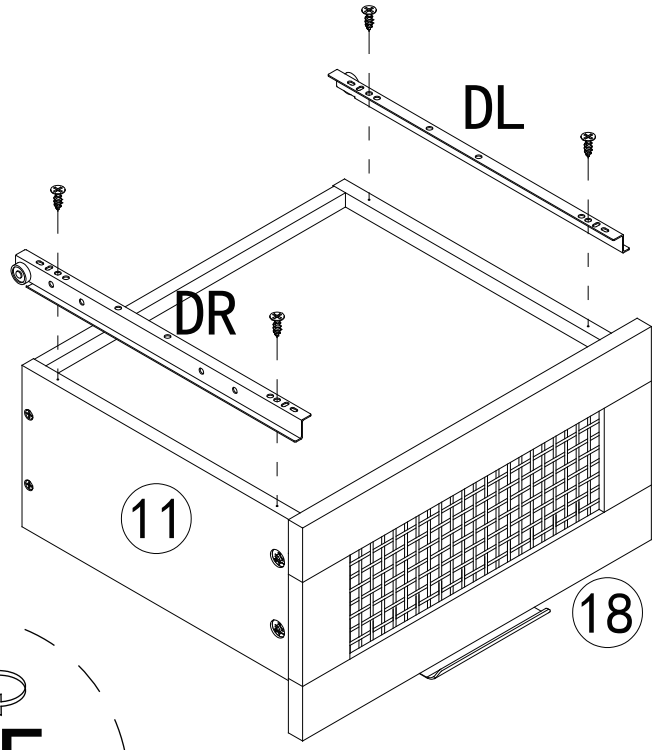


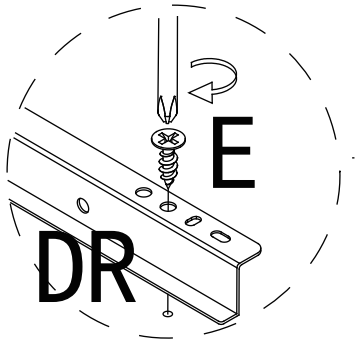

E		20pcs
		5pcs

19

Note that the drawer is divided left and right.

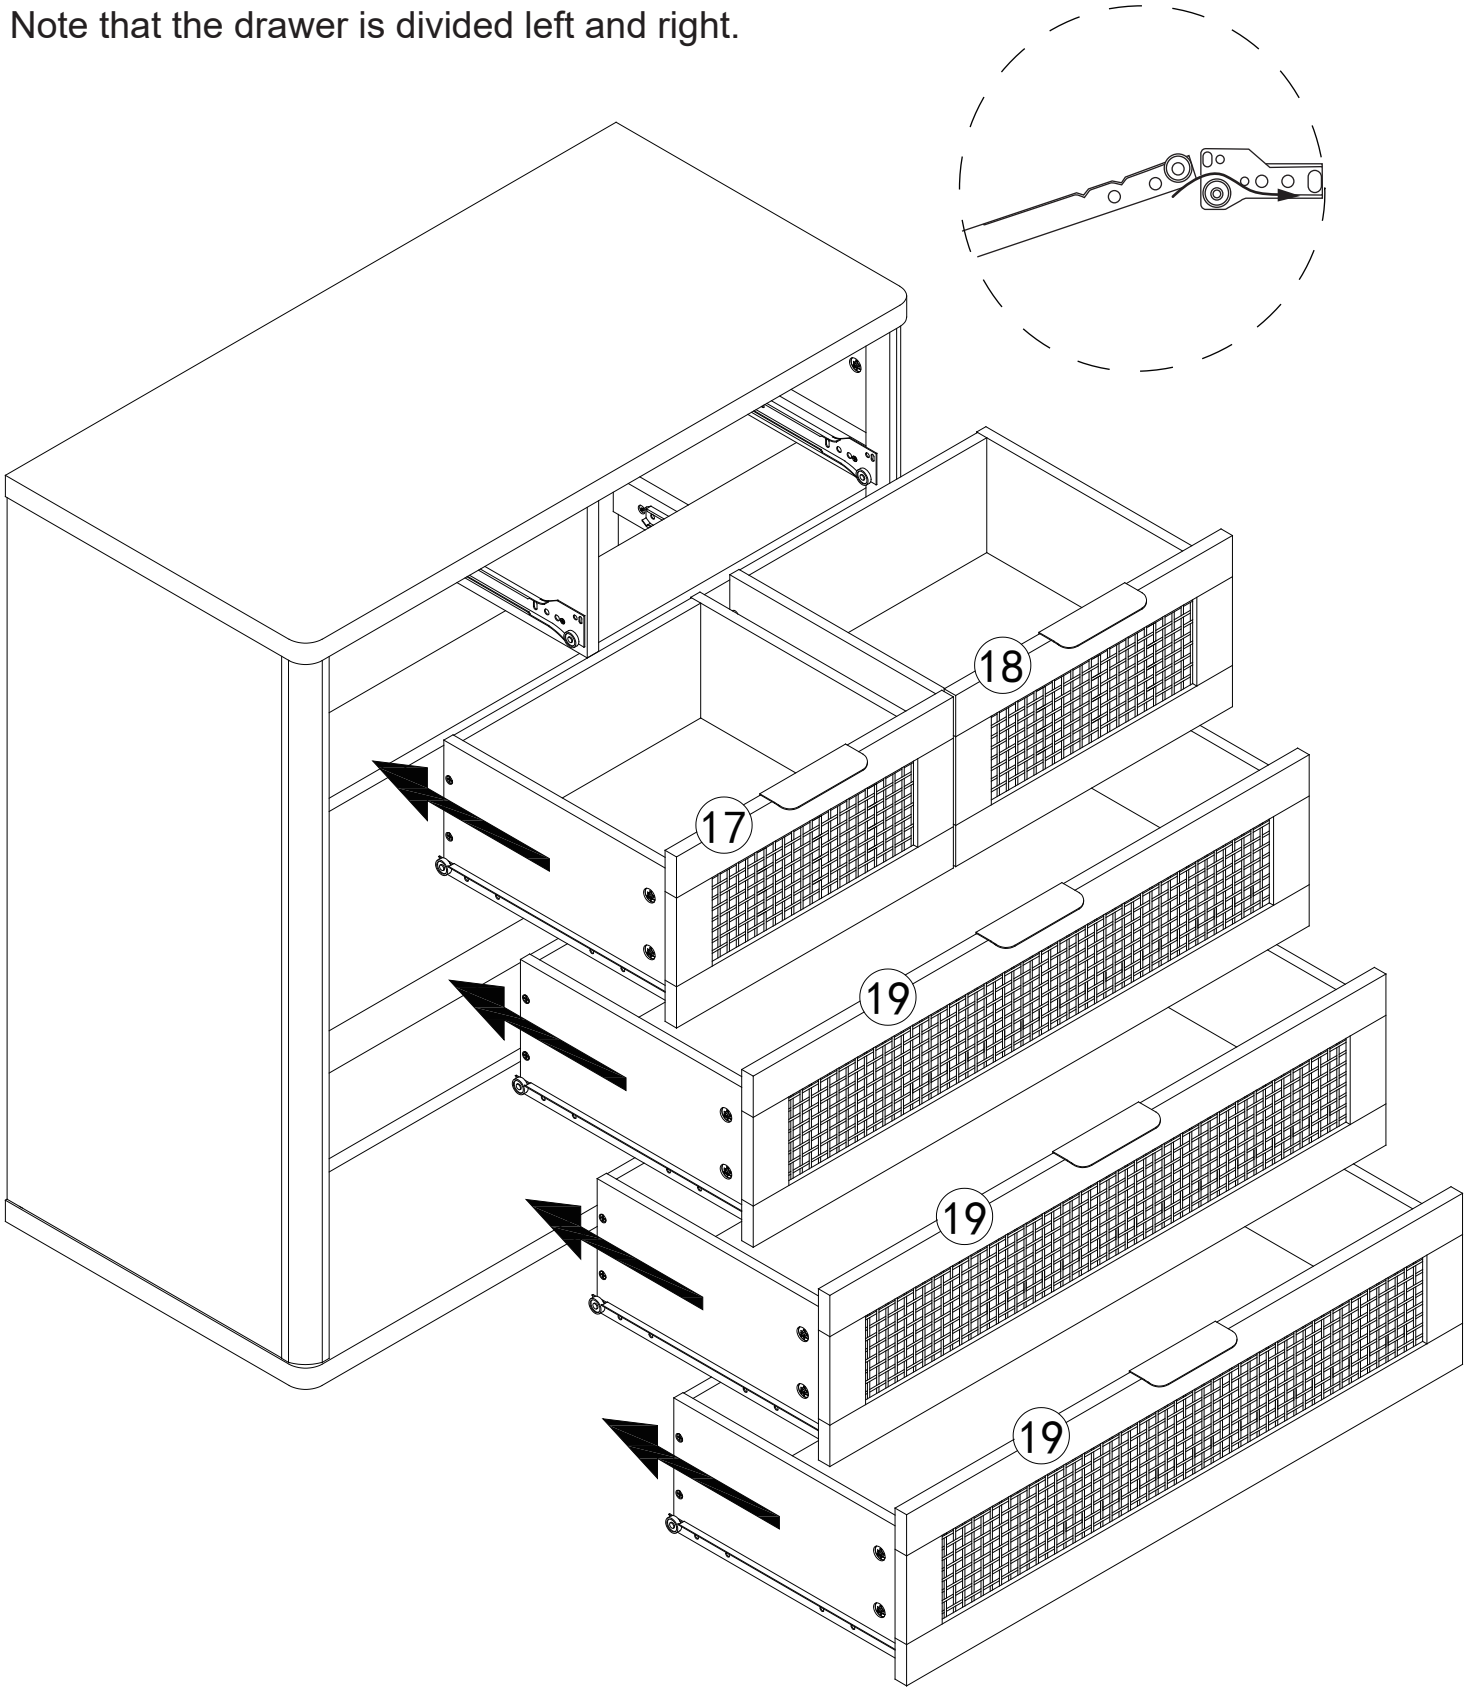

Note: When moving the cabinet, please lift it vertically off the ground.
Dragging may cause loose connectors, affecting stability and service life.