
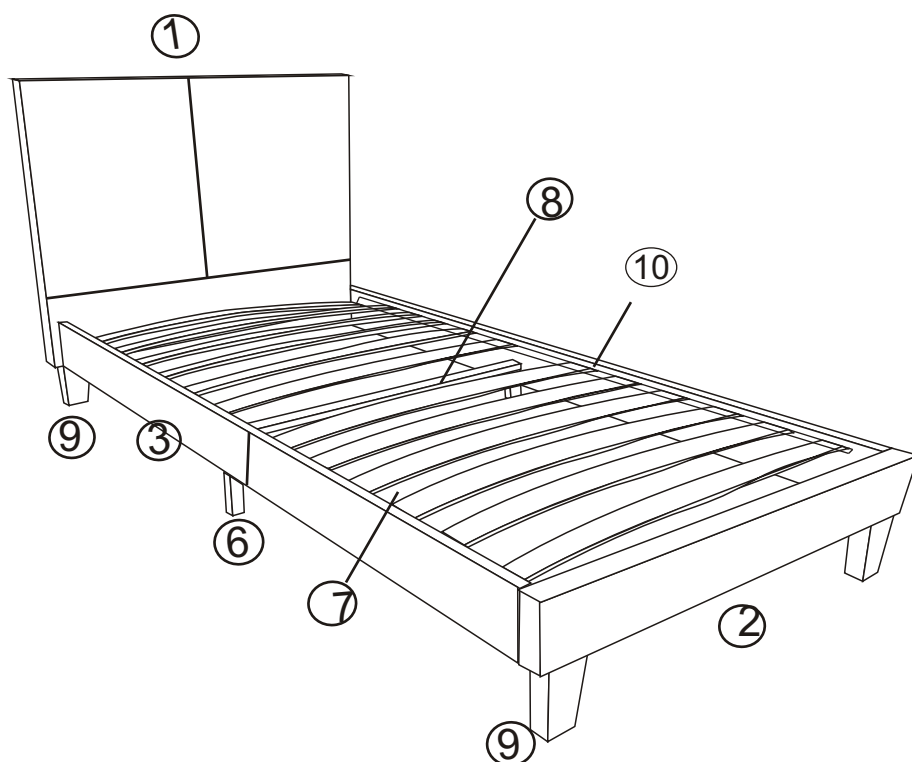



ASSEMBLY INSTRUCTION





PARTS LIST				HARDWARE LIST(Found in box1)		
No	Item	Box	Qty	No	Item	Qty
1	Headboard	1	1	A	Bolts (M8x20mm) 	16
2	Footboard	1	1	B	Spring Washer 	8
3	Side Rails	1	4	C	Flat Washer 	24
6	Support Legs under siderails	1	2	E	M5 Allen Key 	1
7	Slats	1	12	H	Bolts (M8x90mm) 	4
8	Cross Bar	1	1	I	M4 Allen Key 	1
9	Legs	1	4	M	Bolts (M6x35mm) 	12
10	Side Rails support bar 	1	4	O	Connection plate 	4
				P	Bolts (M8x30mm) 	10
				Q	Single Slat Caps 	24

DO NOT use any power tools as this may damage the frame and will invalidate any claims.

Step 1:

To fix the legs (9) to the headboard (1) you will need to use hardware parts H,E.

To fix the legs (9) to the footboard (2) you will need to use hardware parts H,E

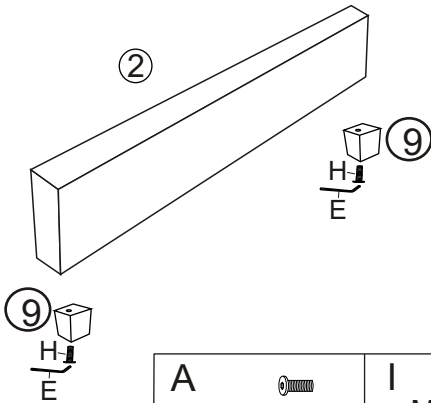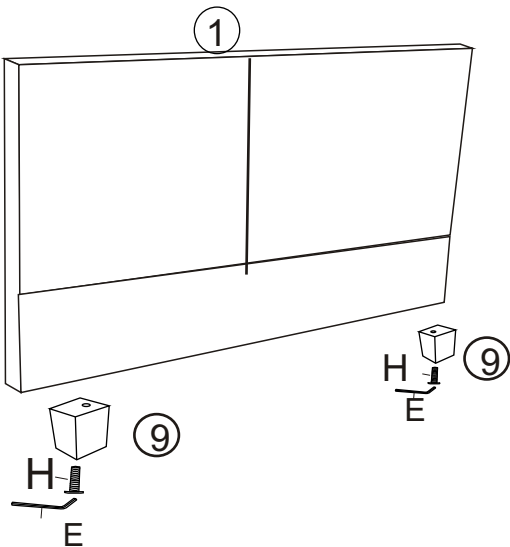

H	
Bolts (M8x90mm) x4	
9	
Legs x 4	
E	
M5 allen key	



Step 2:

To fix side rail support bar(10)to side rails(3).

You will need to use M,I.


To fix connection plate O to the side rails (3) you will need to use hardware parts A, C and O with the M5 allen key (E).

A		I	
Bolts (M8x20mm) x8		M4 Allen Key	
C		M	
Flat Washer x 8		Bolts(M6x35mm) X12	
E		O	
M5 allen key		Connection plate x 4	

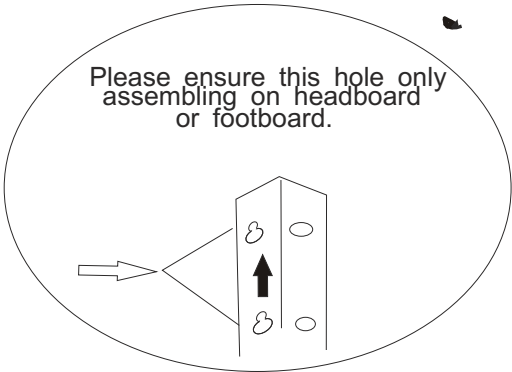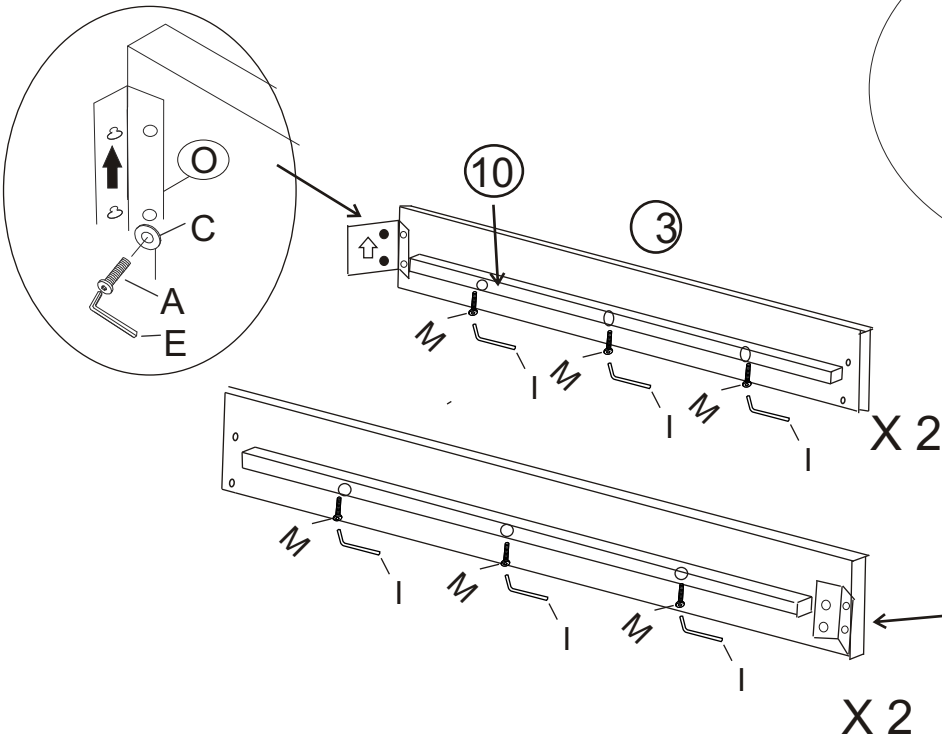


Step 3:

To fix cross bar(8)and side rail support legs(6)to the side rails (3)
you will need to use hardware parts A, C and P with the M5 allen key (E).

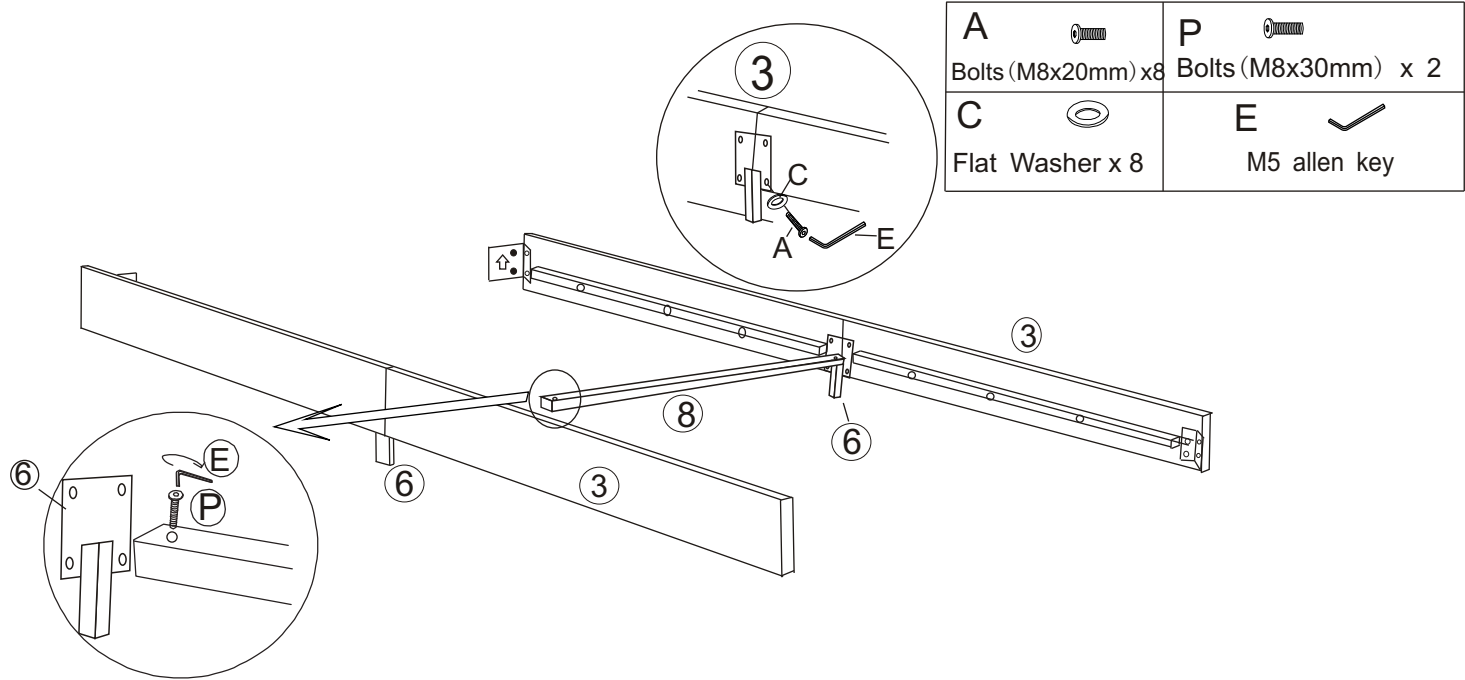

Step 4:


To attach the side rails (3) to the footboard (2) you will need
to use hardware parts P, B , C with the M5 allen key (E).
To attach the side rails (3) to the headboard (1) you will need to use
hardware parts P, B , C with the M5 allen key (E).

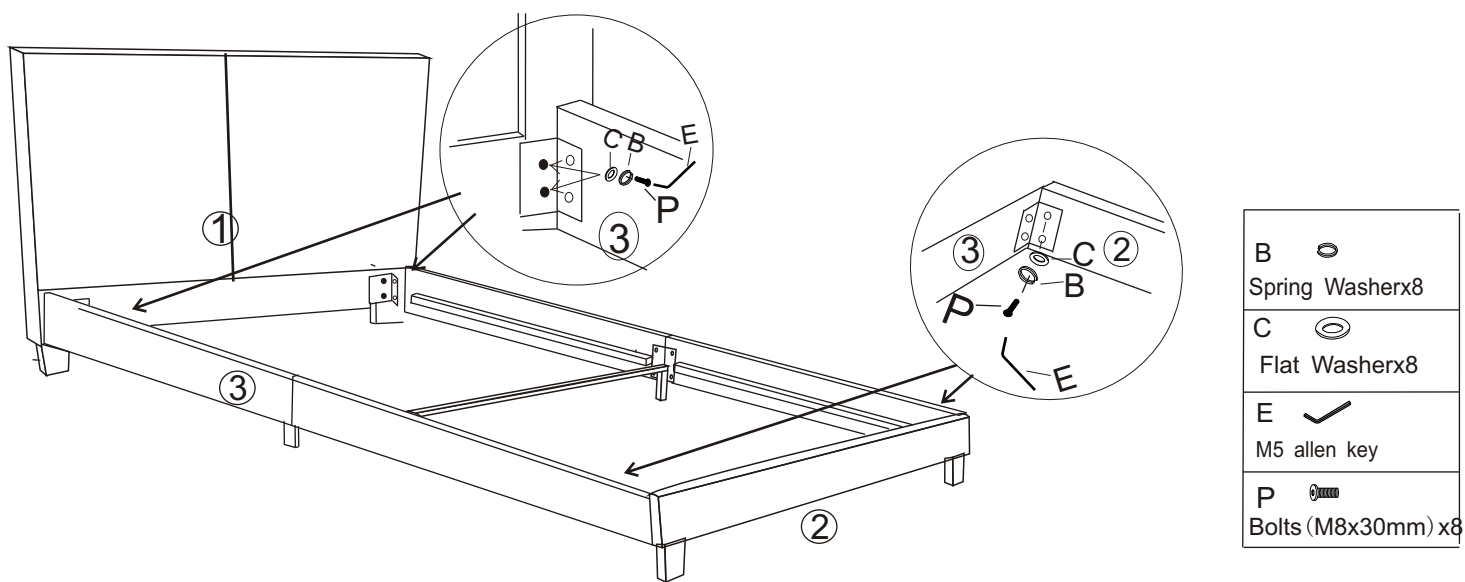

Step 5:

Assemble the slats (7) into the side rails (3) with Q

DO NOT use any power tools as this may damage the frame and will invalidate any claims.

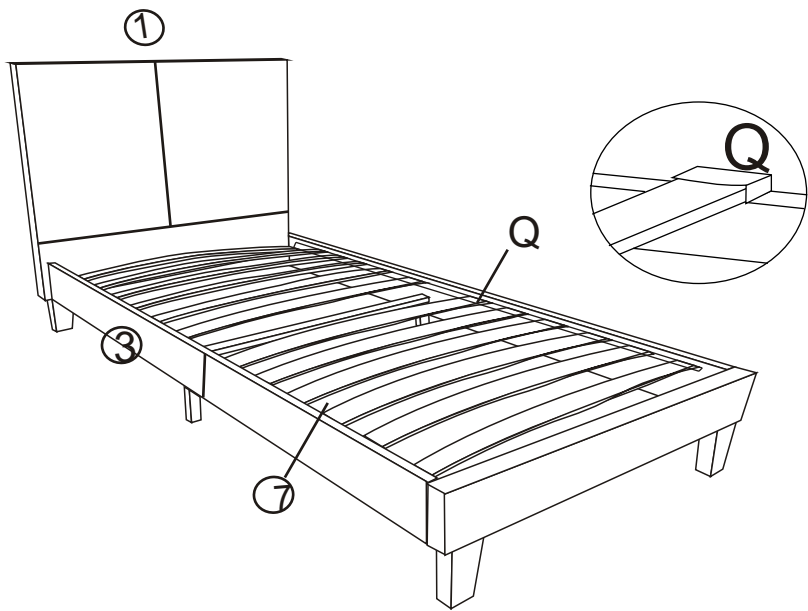

Q  Single Slat caps x 24	7  Slat x 12
--	--