



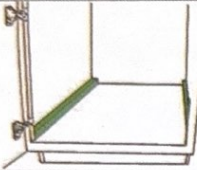
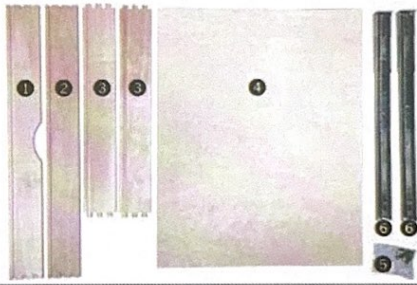
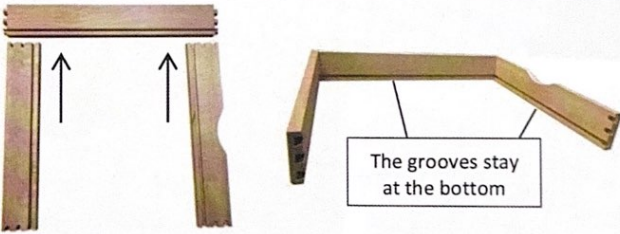
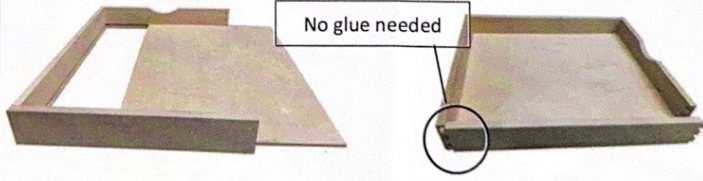
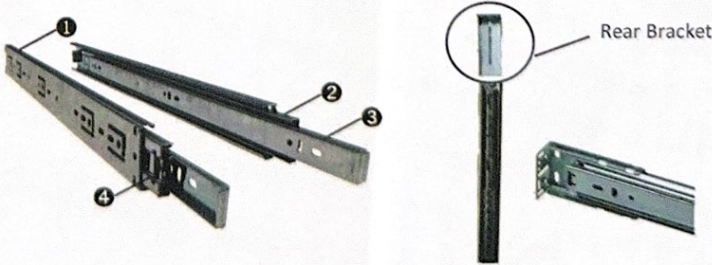


## Cabinet RTA PULL-OUT DRAWER ASSEMBLY AND INSTALLATION ver.2


What you will need			Parts List
 (+)	 (optional)	 (optional)	<ul style="list-style-type: none"> <li>• Drawer front (1)</li> <li>• Drawer bottom (1)</li> <li>• Drawer side (2)</li> <li>• Drawer back (1)</li> <li>• Slide &amp; bracket (2)</li> <li>• Screws (20)</li> </ul>
 (optional)	 <p>You will need wooden SPACERS if your cabinet's inner width is wider than drawer width (*Spacers are not included)</p>		

<ol style="list-style-type: none"> <li>1 Drawer front</li> <li>2 Drawer back</li> <li>3 Drawer sides</li> <li>4 Drawer bottom</li> <li>5 Screws</li> <li>6 Slides &amp; brackets</li> </ol>	
<p><b>1</b></p> <p>a. Make sure the grooves stay at the bottom</p> <p>b. Attach one of the drawer sides, a drawer back, and a drawer front together</p> <p><i>Note: Optionally you may need a hammer to press firmly, but please use it gently</i></p>	
<p><b>2</b></p> <p>a. Insert the drawer bottom to the grooves</p> <p>b. Attach another drawer side</p> <p><i>Note: No glue needed</i></p>	
<p><b>3</b></p> <p>Insert the rear bracket on the slide as shown in the picture</p> <ol style="list-style-type: none"> <li>1 Cabinet member (Outer Slide)</li> <li>2 Slide member (Middle Slide)</li> <li>3 Drawer member (Inner Smallest Slide)</li> <li>4 Release lever</li> </ol>	

#### 4

Align the slide's bottom to the bottom of the drawer and the inner slide (Drawer Member) to the drawer front. Secure with the screws provided.

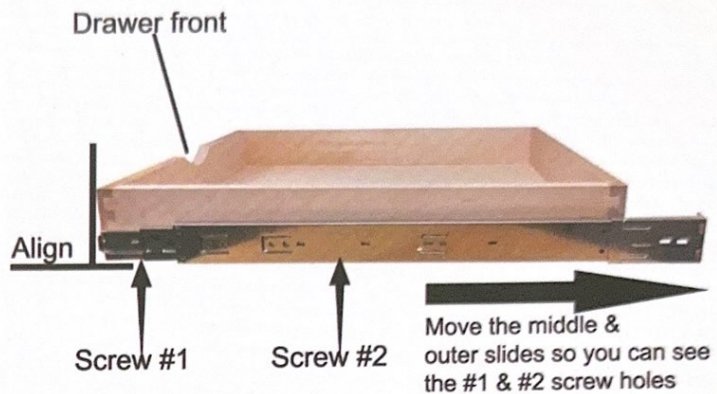
- Drill a pilot hole for screw #1 near the drawer front. Secure the screw #1
- Drill a pilot hole for screw #2 in the middle. Secure the screw #2
- Disengage the lever (see below)**



*Note: Make sure the both sides of the slides are secured horizontally parallel on the drawer*

#### How to disengage the lever

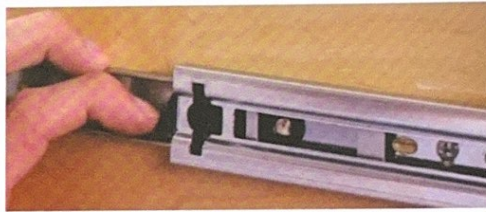Press the lever down to disengage/separate the middle & outer slides (Slide & Cabinet Members) from the inner slide (Drawer member)



#### 5

After pulling off the middle & outer slides (and the bracket),

- Drill a pilot hole for the screw #3 near the drawer back. Secure the screw #3.
- Repeat the **step 4 & 5** for another side



*Note: Make sure the both sides of the slides are secured horizontally parallel on the drawer*

#### 6

Install Cabinet Members (the outer slides)

- Mark the desired location in your pantry/cabinet/wall etc. by making sure two sides are horizontally parallel and stay at the same height
- Secure the rear brackets at the desired positions using the 2 screws on each side
- Secure the Cabinet slides using one screw on each side
- Insert the drawer to complete the installation



**Note: Use wooden spacers (not included) on the side wall in your cabinet if your cabinet's inner width is wider than drawer width**