



Bi-Fold Barn Door Hardware Instruction Manual

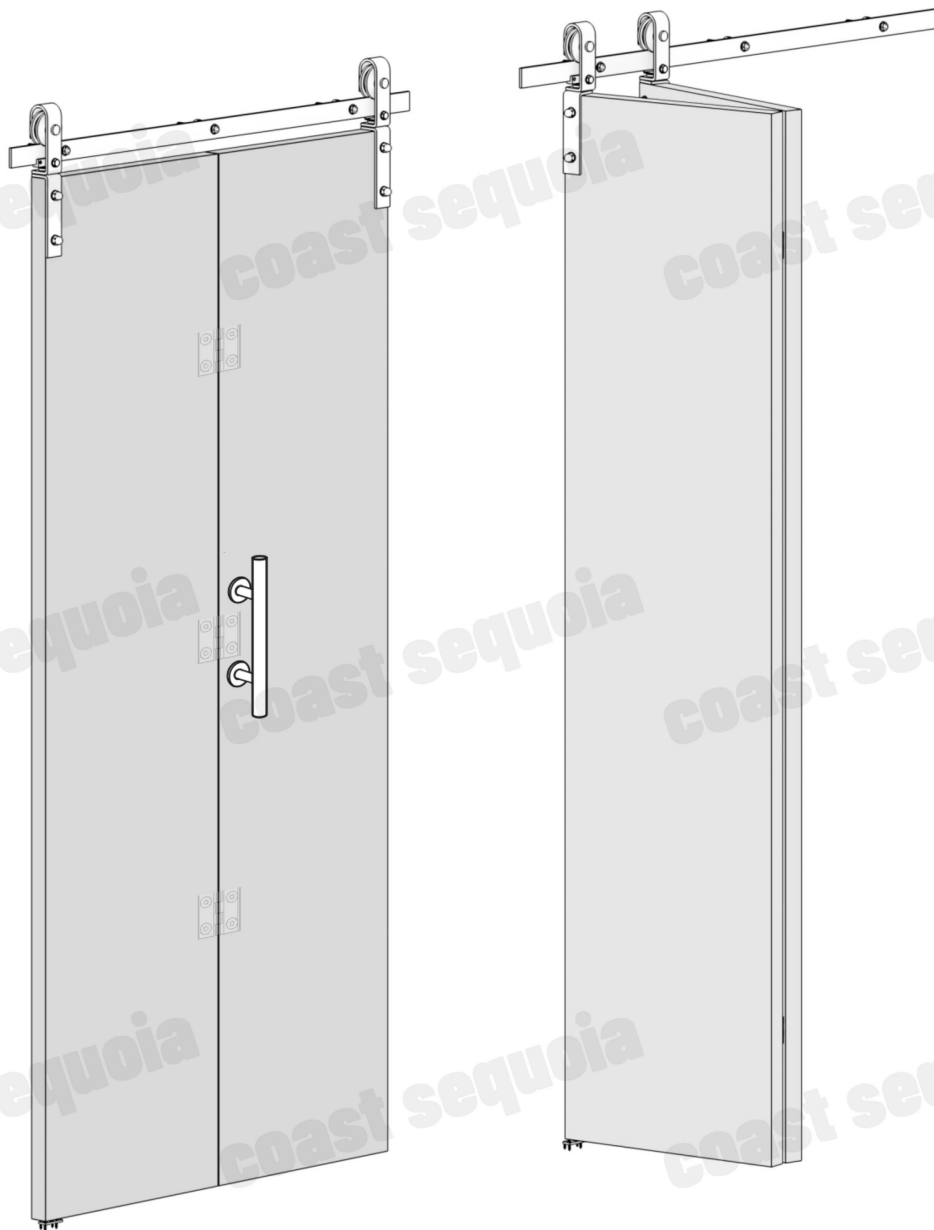







(J-Shape Single Door)

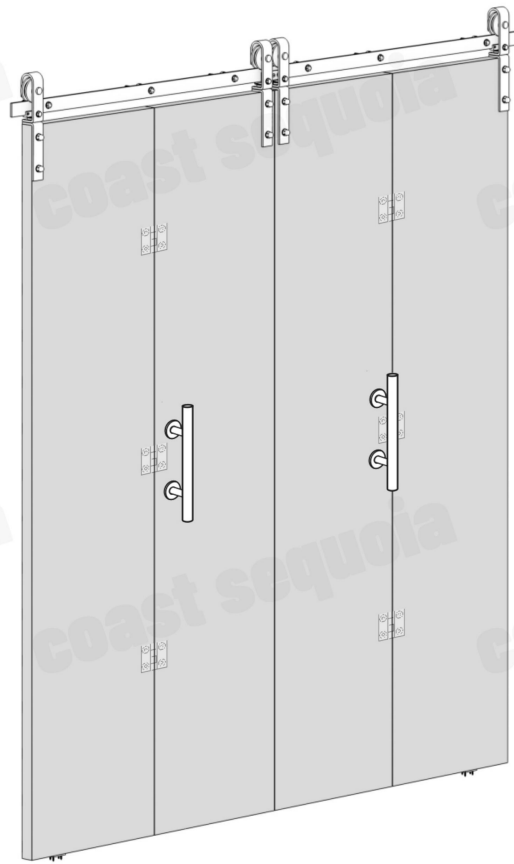


(J shape double door)


Door hardware kit includes

Product Content

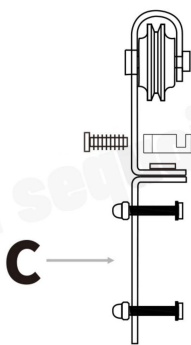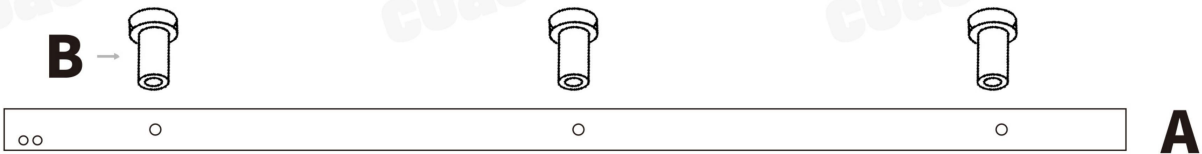


A Flat Track (X1)


*All sizes of track holes have a pitch of 16 "

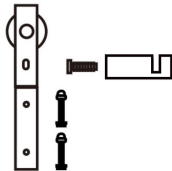B Adjustable Spacer (X3)**Lag bolt (X3)****Washer (X3)****C**



Fixer
Steel Hanger (X1)

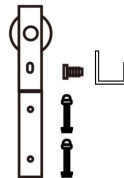

Anti Jumper Fixer
Steel Hanger (X1)

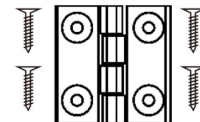D

Door Hinge (X3)

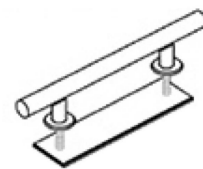
E**Bottom Pivot and Bracket (X1)****F****Handle (X1)****G****Junction Plate(For double doors)****Tools Needed****Pencil****Phillips Screwdriver****Wrench****Plumb Bob****Tape measure****Wrench****Drill****Drill Bit 1/4"(6mm)****Drill Bit 2/5"(10mm)**

Prepare and Install the Tracks



1 Draw Line for the Track

A Track (X1)	Tape measure	Pencil	Wrench
			


Place the rail against the wall , Using a level , draw a line for the Track , and use a pencil to mark where the holes should be . Make sure the height of holes on the wall is $H + 2\frac{9}{16}$ " ($H + 65\text{mm}$)

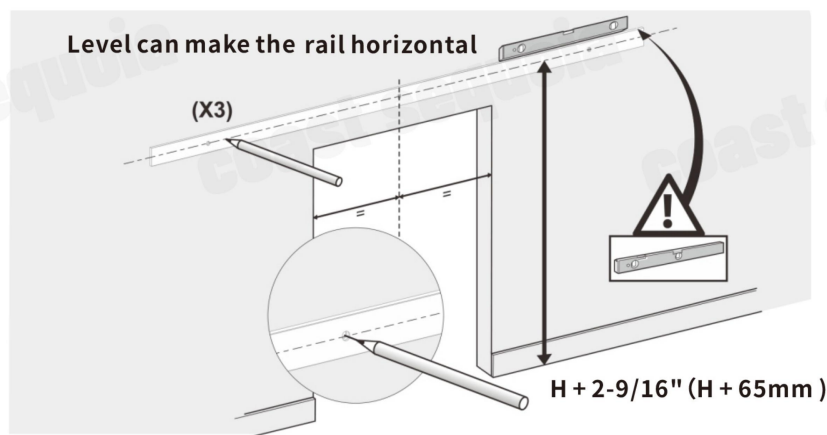

2 Drill Track Holes

Drill	Drill Bit $\frac{1}{4}$ "(6mm)	Drill Bit $\frac{2}{5}$ "(10mm)
		

Then , pre-drill $\frac{2}{5}$ "(10mm) holes into the concrete according to your marks

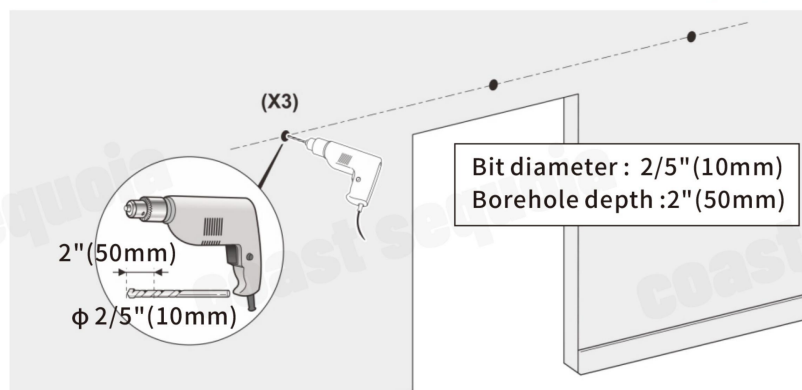

Note:

Concrete wall: Drill holes by using a $\frac{2}{5}$ "(10mm) concrete drill bit.
Wood framed wall: Drill out the holes by using a drill with $\frac{1}{4}$ "(6mm) drill bit.

3 Install The Track(Concrete wall installation)

A Track (X1)



B

φ10
(x3)



Spacer
(x3)



Washer
(x3)




Lag bolt
(x3)



Wrench



Install the anchor to holes on the concrete wall first ,
then install lag bolt to anchor .

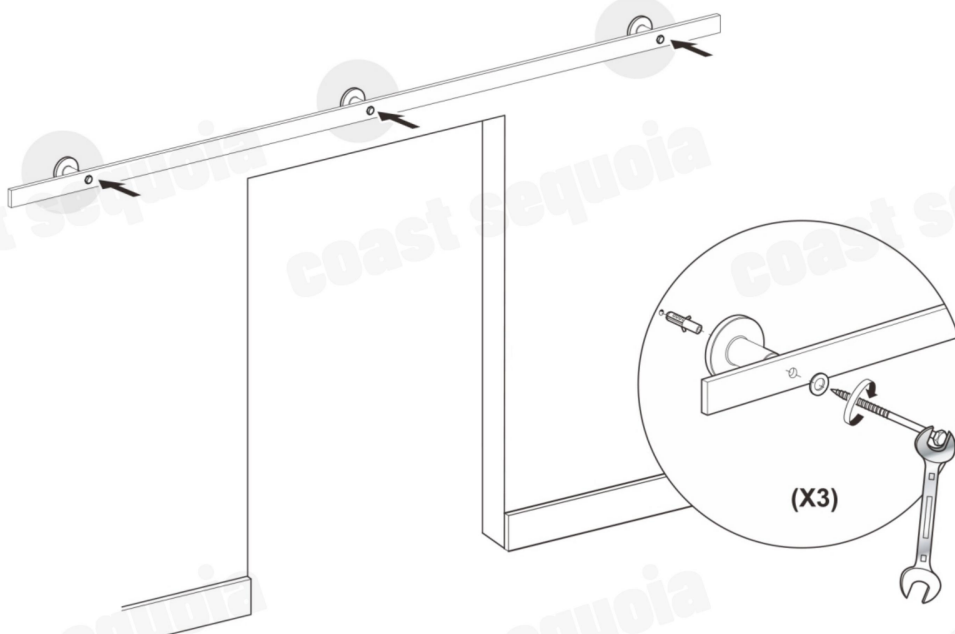

3 Install The Track(Drywall Installation)

A Track (X1)



B

φ10
(x3)



Spacer
(x3)



Washer
(x3)



Lag bolt
(x3)



Wrench




Instructions

It's very important to determine whether you will be installing a Header Board prior to installing the track.



Due to many overlapping factors such as the location of wall studs (Our rail comes with pre-drilled holes every 16" on center) .

the weight of a barn door and the various types of trim used in homes , we recommend using a Header Board in all situations .

Please install a Header Board above the door opening directly into studs.

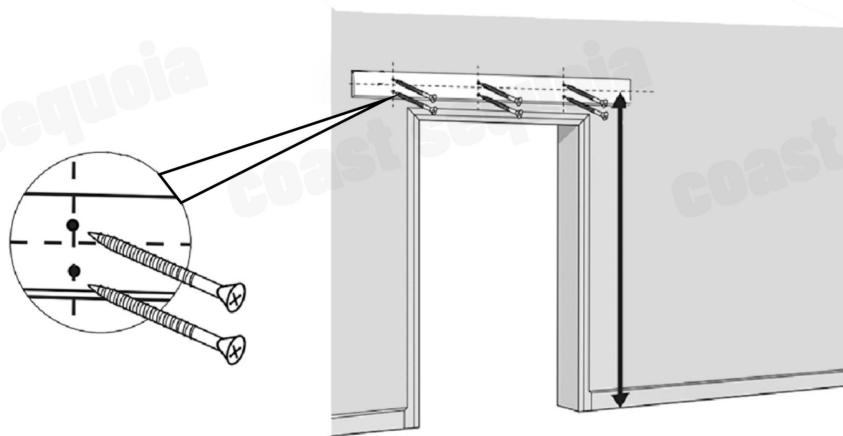

Place the rail against the wall, and use a pencil to mark where the holes should be.

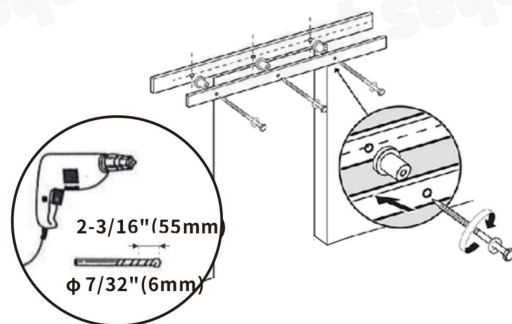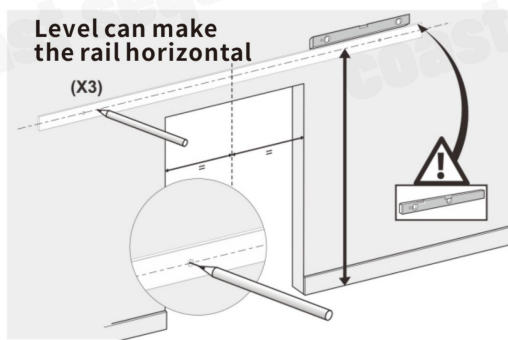


Install the lag bolt to wood stud or head board directly

4 Install Handle


Drill



Drill Bit




F Handle (X1)



Install the barn door Handle Pull and Flush Hardware Set.


Put barn door handle on the door first to fix a suitable position and make a mark.

Use suitable drill bit to drill holes on the door where the mark is, and then install the barn door Handle Pull and Flush Hardware Set according to the picture.

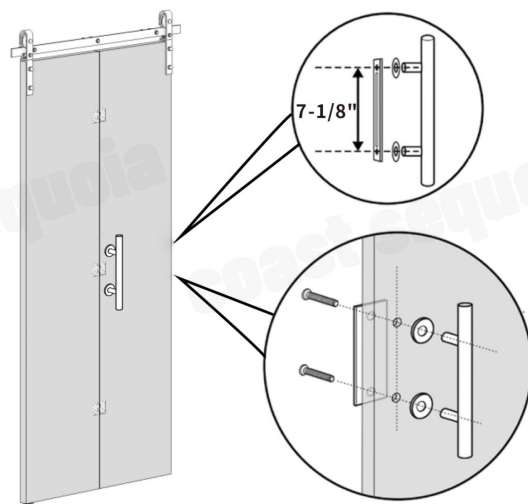

5 Install Hinges

D Door Hinge (X3)





Pencil



Phillips Screwdriver



- 1 Lay the doors to be joined together face down on a flat surface.
- 2 Butt the doors together with a $\frac{1}{16}$ " (1mm) gap in between (approximate thickness of 3-4 business cards).
- 3 Space the hinges approximately 10"-12" (254-304mm) down from the top and up from the bottom of the doors.

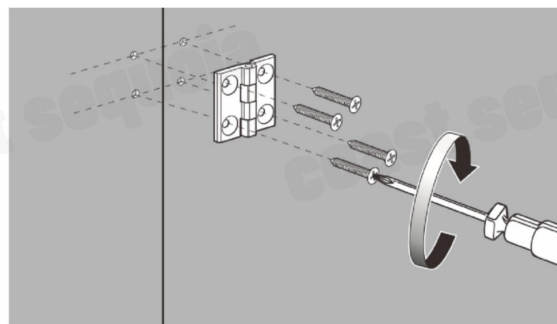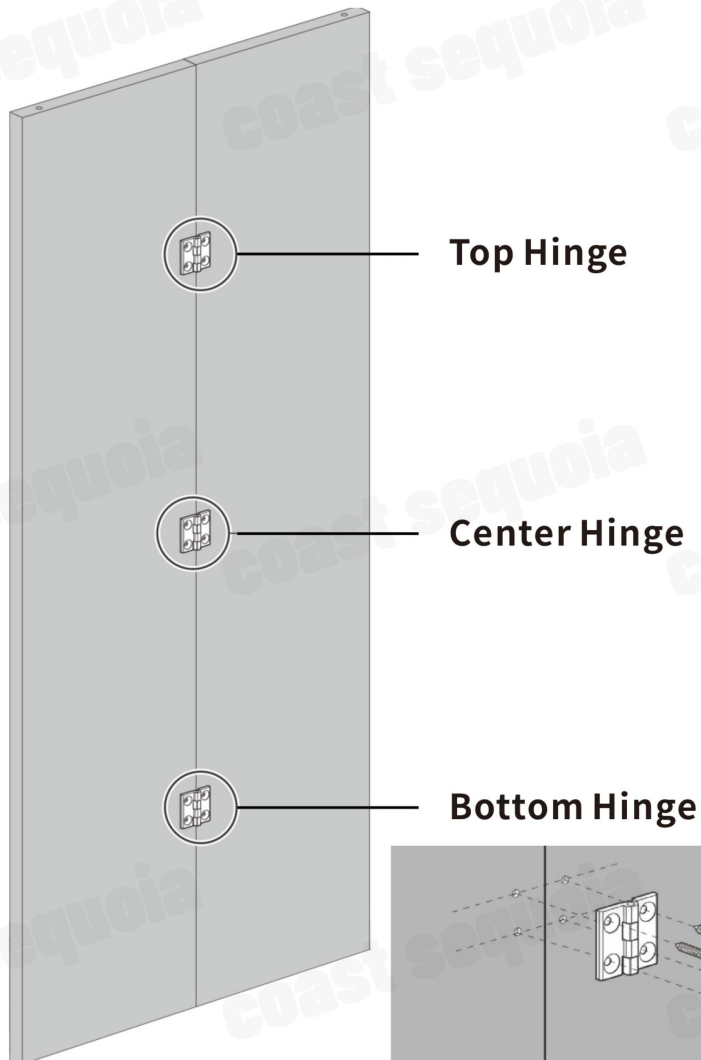

- 4 Secure the hinges to the door with the supplied flathead screws

Prepare Your Doors




6 Attach steel Hangers to Your Doors

C Steel Hanger (X2) 

Wrench




install the hangers with predrilled the holes . Maximum door thickness is 1-3 / 4 " (45mm) , please add some bolt washers or cut the long door bolts to a suitable length to fit the door .

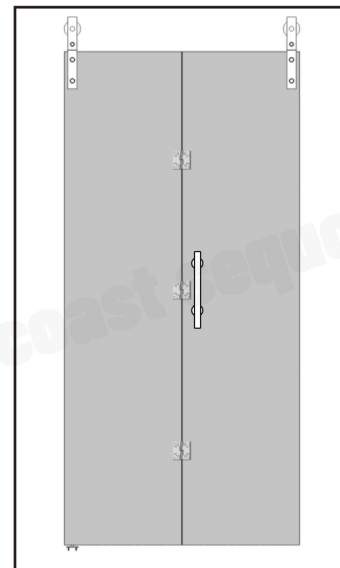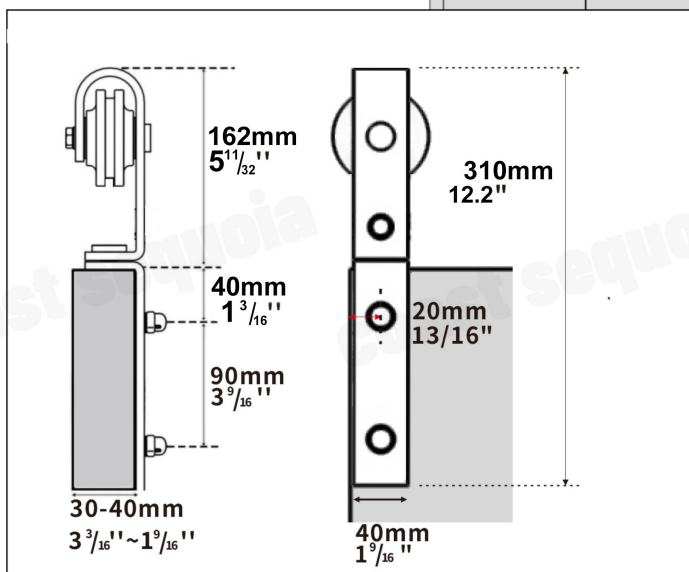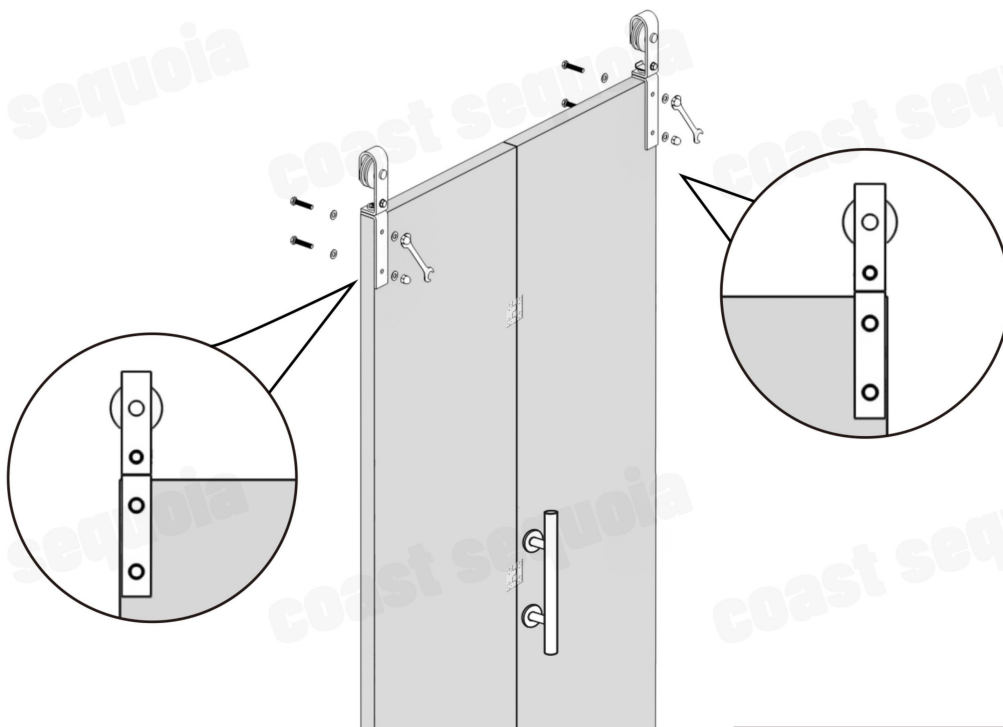

7

Single Door Hanging and Positioning Doors (Fold to the left side)

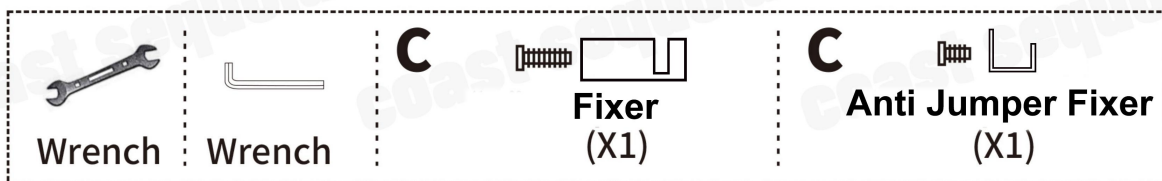


Note:

For your safety, please do as the following. this is to secure the door from falling.

1. Point the fixed wheel towards the fixing device on the rail and clip it in. Then tighten the fixing screw to complete the process





2. Insert the anti Jumper Fixer from one side of the roller, place it on the back of the roller, and tighten the anti slip plate to the roller with screws

Warning: Door hanging operation requires 2 people to ensure installation safety




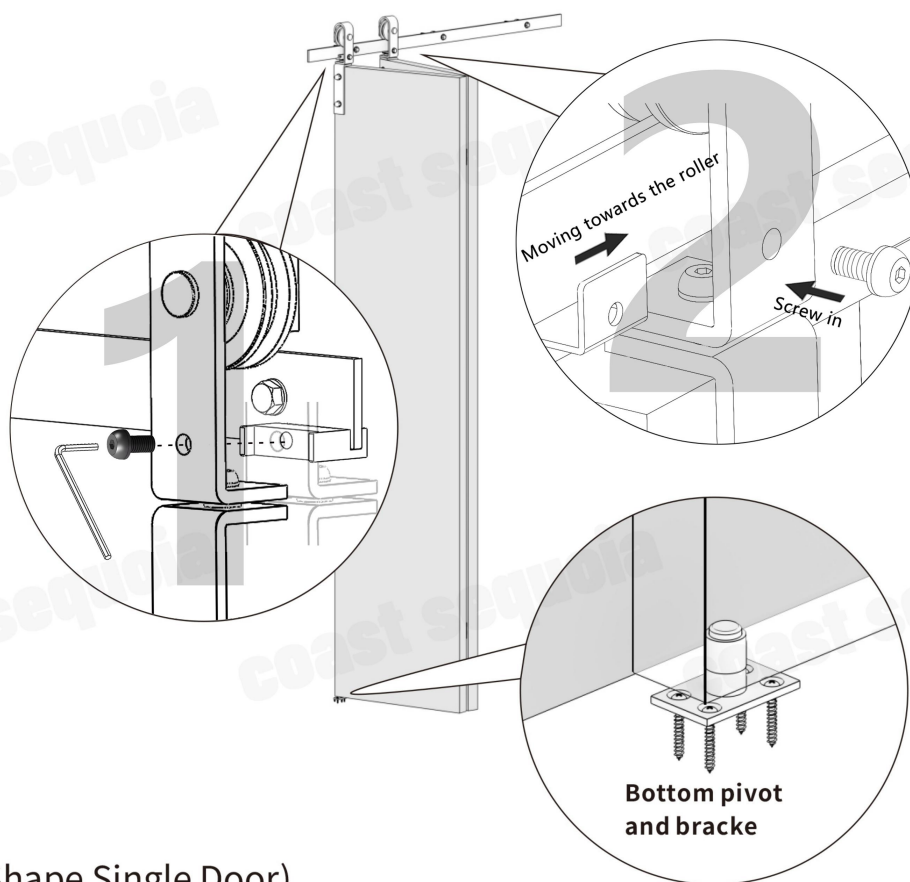


(J-Shape Single Door)

Anti Jumper Fixer

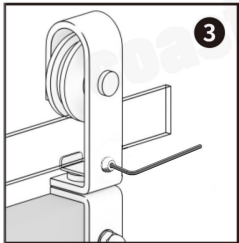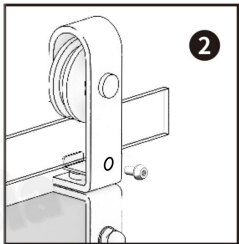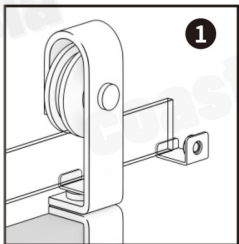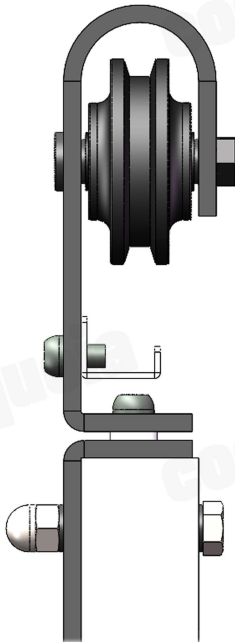

Fixer

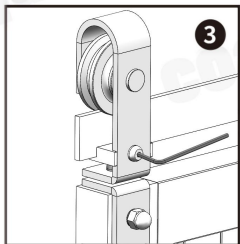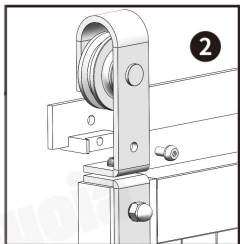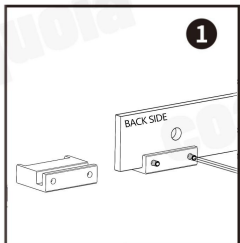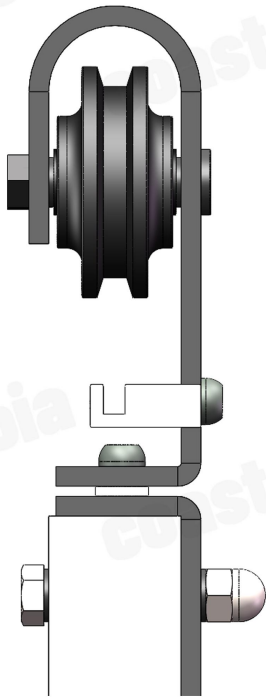

7

Single Door Hanging and Positioning Doors (Fold to the right side)



Wrench



Wrench

C

Fixer
(X1)

C

Anti Jumper Fixer
(X1)


Note:

For your safety, please do as the following. this is to secure the door from falling.

1. Point the fixed wheel towards the fixing device on the rail and clip it in. Then tighten the fixing screw to complete the process


2. Insert the anti Jumper Fixer from one side of the roller, place it on the back of the roller, and tighten the anti slip plate to the roller with screws

Warning: Door hanging operation requires 2 people to ensure installation safety

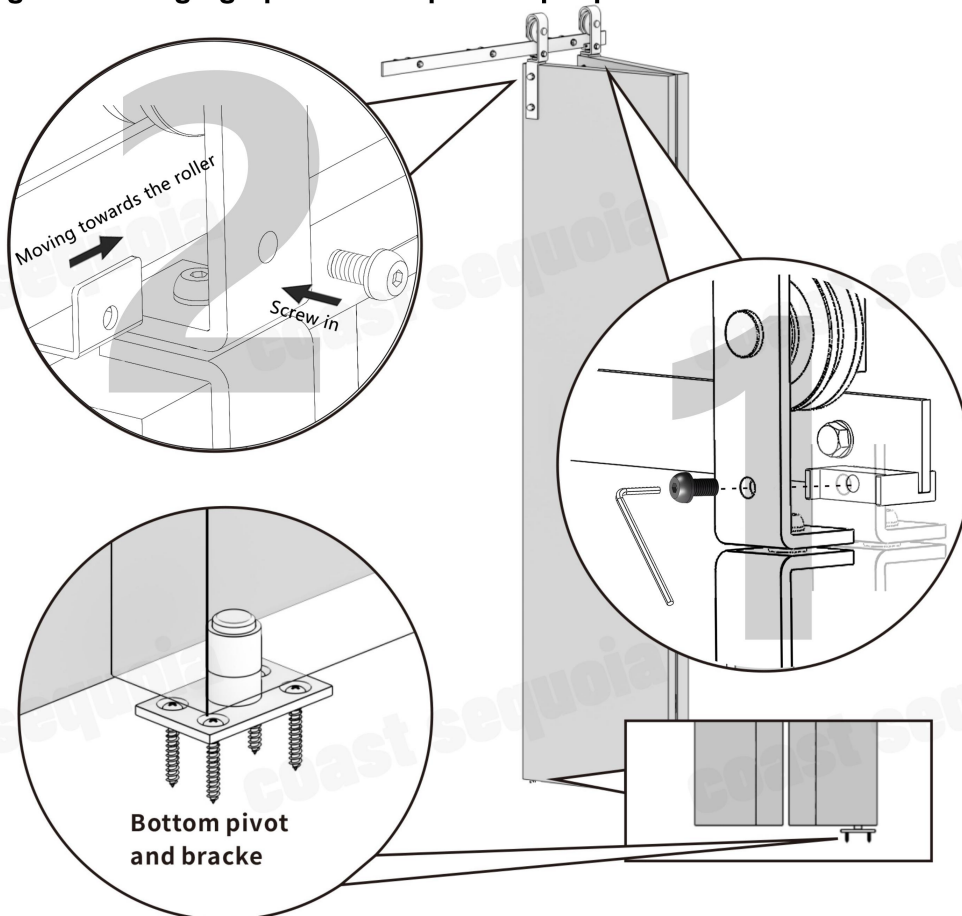

(J-Shape Single Door)

7 Double Door Hanging and Positioning Doors (For a double door)

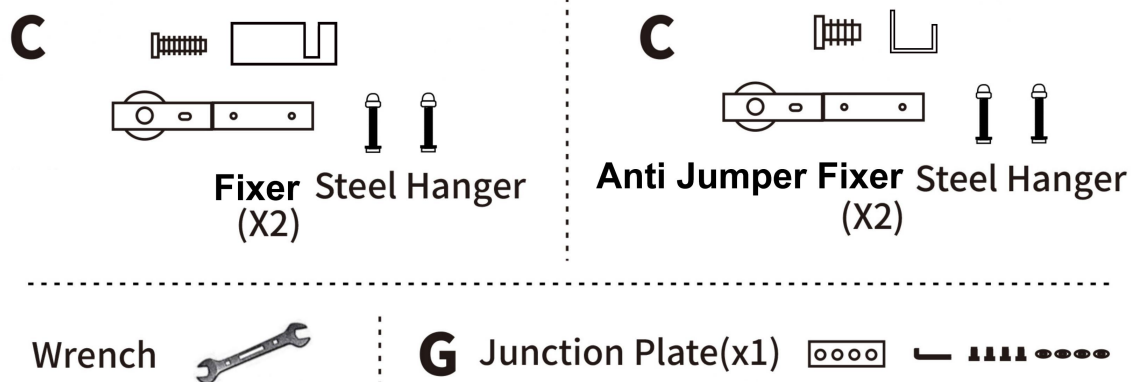


Note:

For your safety, please do as the following. this is to secure the door from falling.




For a double door, the hangers on each door side out should be placed on the edge of the side.

For each side in, the hangers should be placed 1.38" to make sure the doors are fully closed when sliding. Don't forget to mount the junction plate.

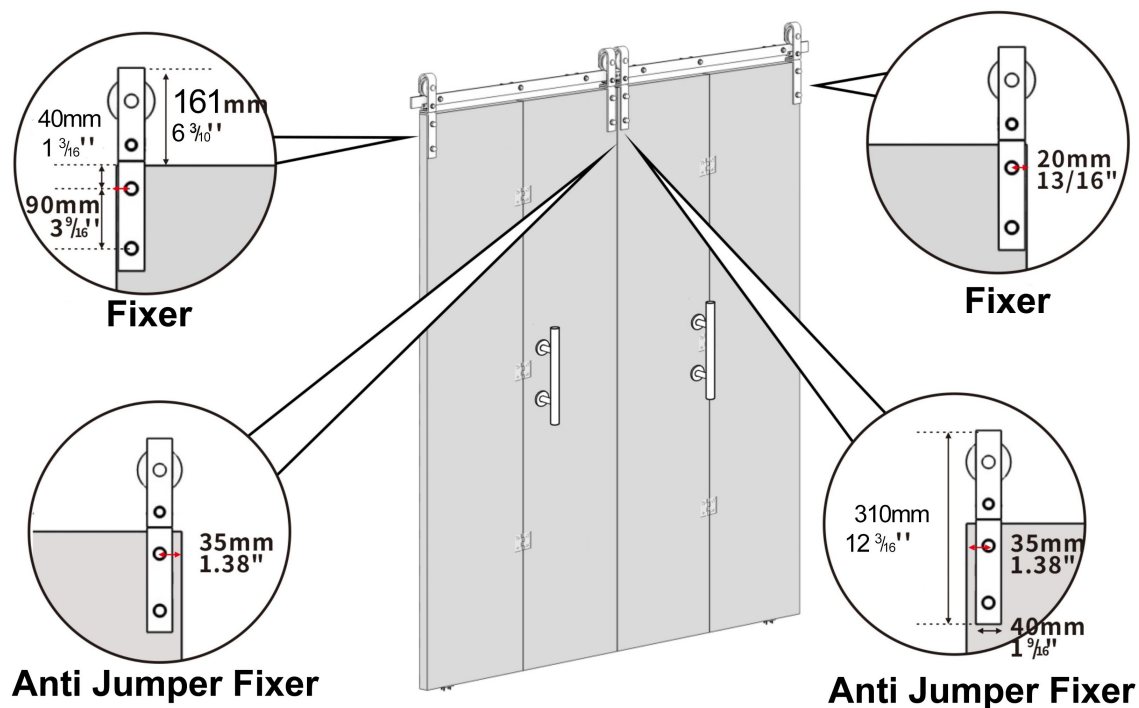

(J shape double door)

Before hanging the door on the rack: For the fixed doorside, position the Fixer between the wheel bar and the rack. For the other side, position the Anti Jumper Fixer between the wheel bar and the rack. Then tight the sides up with provided screws.

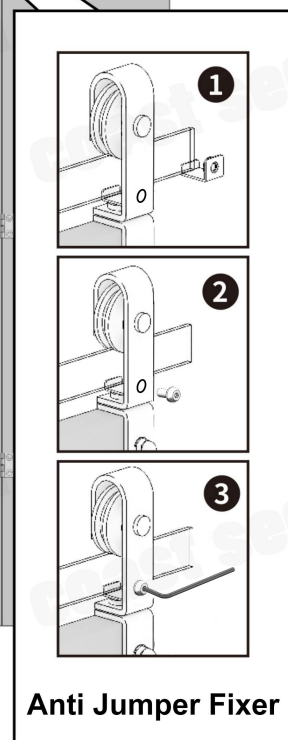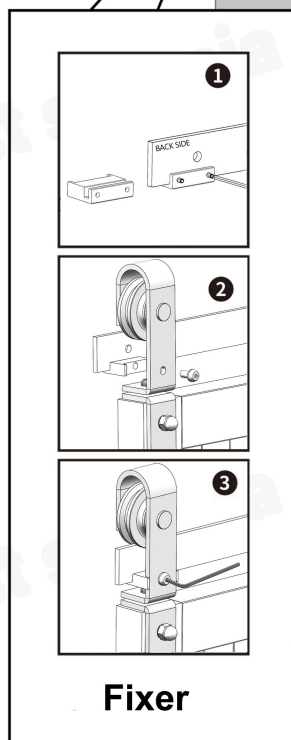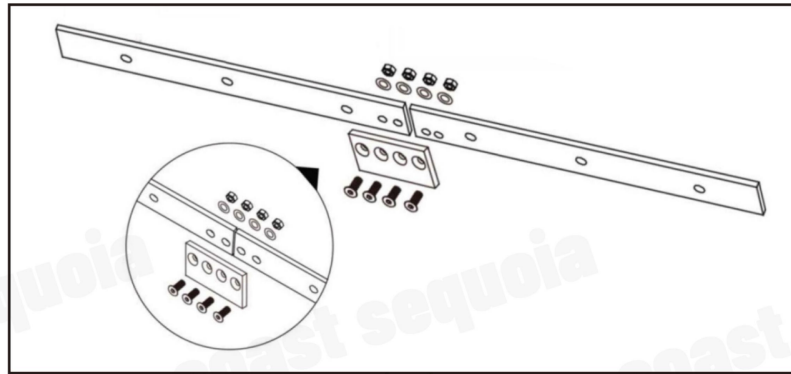

(J shape double door)

8 Install the Bottom Pivot and Bracket

E



Bottom Pivot and Bracket
(X1)



Pencil



Drill



Drill Bit





Phillips
Screwdriver

- 1 Mark the location of the holes at the bottom of the door with a pencil according to the dimensions indicated in the figure below.

Note:

The Bottom Pivot and Bracket need to align with the center of the top connector plate used with the fixed roller.

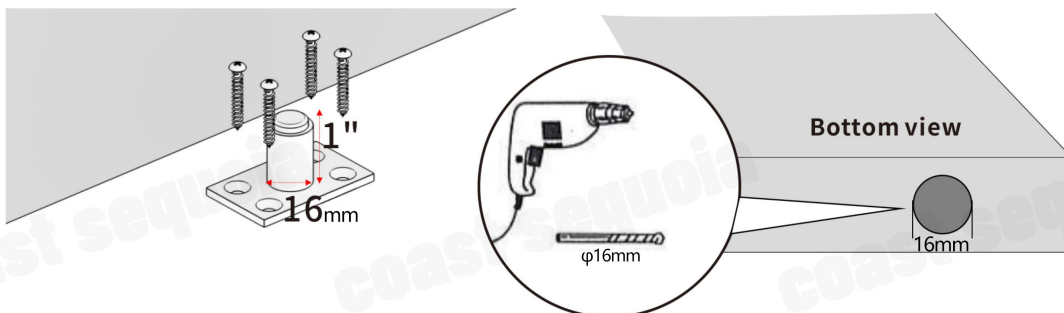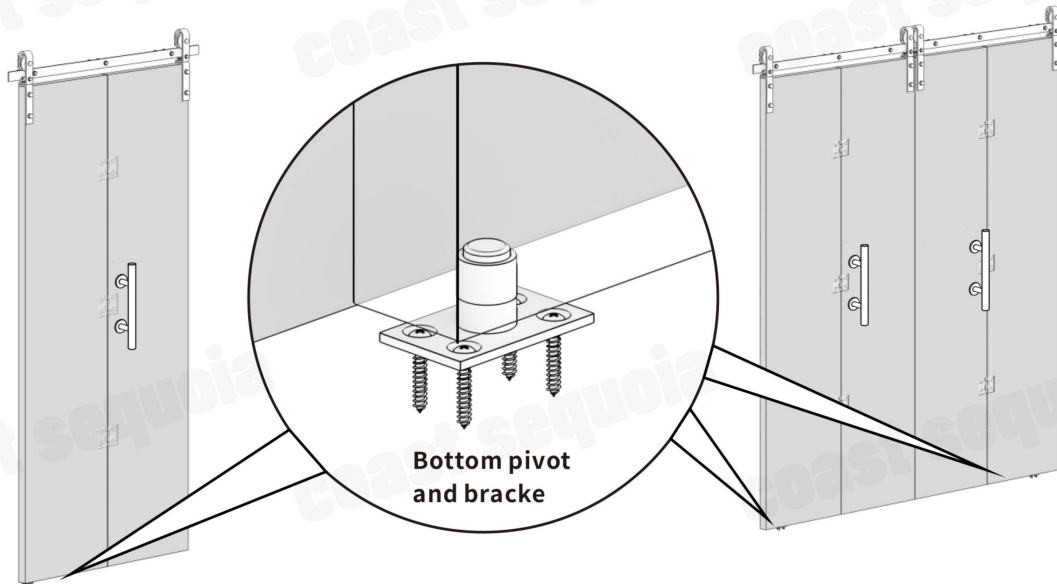

- 2 Install the metal plate at the bottom of the door panel.
- 3 Install the floor guide on the ground.

WARNING

- Failure to wear proper safety gear (i . e , eye protection) may result in serious injury or death . Always wear proper safety gear before using power tools .
- Improper operation of power tools may result in loss of control, serious injury or death . Always ensure you have complete control of the power tool and the work area is free of hazards before operating a power tool .
- Lack of secure clamping of the door may result in unexpected movement of the door , loss of power tool control and serious injury or death . Always securely clamp the door in place before cutting or drilling the door .
- Lack of or improperly installed anti-jump pads may result in the door coming off the track and cause serious injury or death . Installation of anti-jump pads are required for safe operation of this hardware . Installed properly , these anti-jump pads will keep the door securely attached to the track.

CAUTION

- Mishandling of heavy objects (i.e., doors) may cause a loss of balance and serious injury . Always be sure you have a secure hold on the object and are balanced before moving the object . Always wear safety shoes when lifting heavy objects.
- Getting body parts (i . e., hair , fingers) caught in moving parts may cause pinching and serious injury . Do not put fingers in parts that may move and always remove or contain anything on your body that may become entangled with a moving part .
- Closing sliding doors with your hand on the end of the door may result in your hand , or fingers , getting caught between the door and other solid objects (i . e., another door , molding) causing serious injury . Always use the door handle to close doors.

Usage Statement :

Use of excessive force when opening , and closing , the door (s) may result in damage to the hardware

Always hold the handle and gently open and close the door (s)