


---

## Faux Wood Adirondack Chair

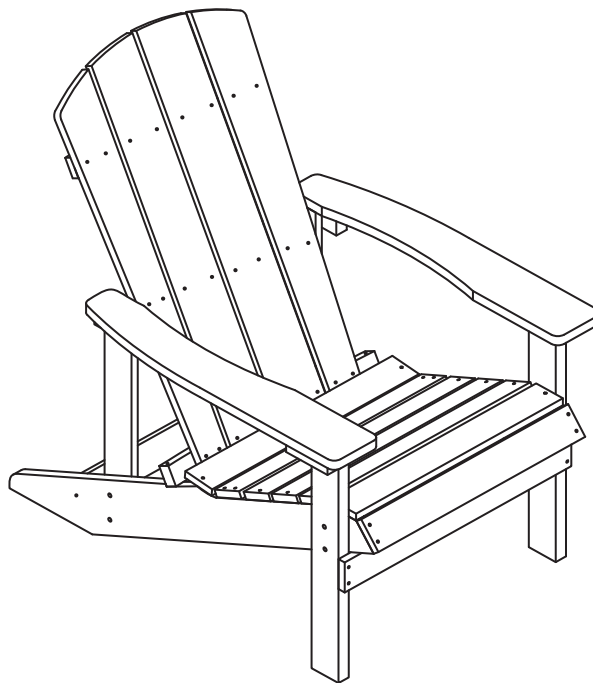

### Safety Information



**DANGER:** Please keep children out of the assembly area during assembly.




**CAUTION:** Use the chairs on flat ground only.



**WARNING:** Do not stand on the chairs. Do not sit on the armrests.

# Pre-Assembly

## TOOLS REQUIRED (not included)



Phillips screwdriver

## HARDWARE INCLUDED



**NOTE:** Hardware not shown to actual size.



AA



BB




CC



DD




EE




Part	Description	Quantity
AA	Screw (3.5x40)	6
BB	Bolt (M6x60)	2
CC	Bolt (M6x70)	2
DD	Bolt (M6x60)	6
EE	Bolt (M6x45)	4

## Pre-Assembly(continued)


### PACKAGE CONTENTS

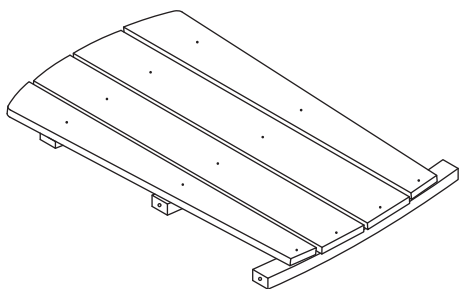


\_\_\_\_\_ A

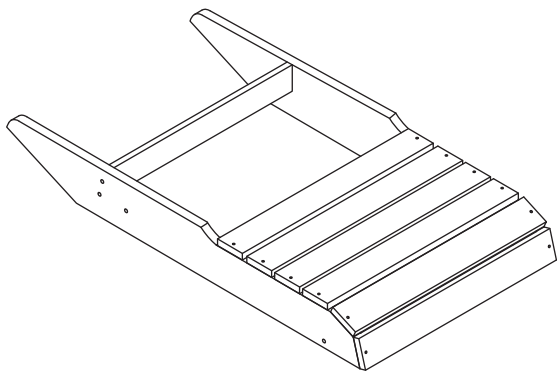

\_\_\_\_\_ B

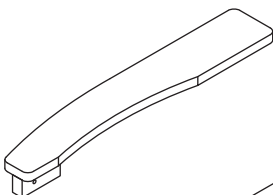

\_\_\_\_\_ C

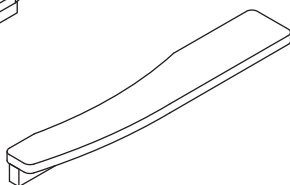


\_\_\_\_\_ D




\_\_\_\_\_ E



\_\_\_\_\_ F

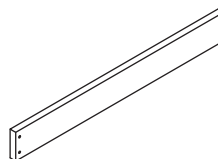

\_\_\_\_\_ G

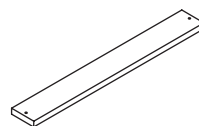

\_\_\_\_\_ H

**\*Note: DO NOT TIGHTEN ANY BOLTS  
BEFORE THE UNIT PUT TOGETHER.**


Part	Description	Quantity
A	Back	1
B	Seat	1
C	Left armrest	1
D	Right armrest	1
E	Vertical Back Support	2

Part	Description	Quantity
F	Front Legs	2
G	Front Leg Cross Beam	1
H	Rear Seat Slat	1

# Assembly


## 1 Attaching the rear seat slat

- Attach the rear seat slat (H) to the seat (B) with screws (AA).

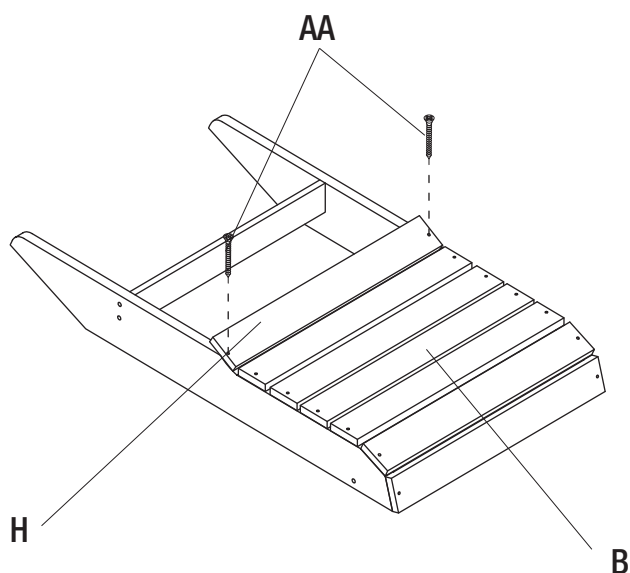


## 2 Attaching the front legs

- Attach the front legs (F) onto the seat (B) with Bolts (DD). Attach Vertical Back Support (E) onto the Seat with Bolts (EE).

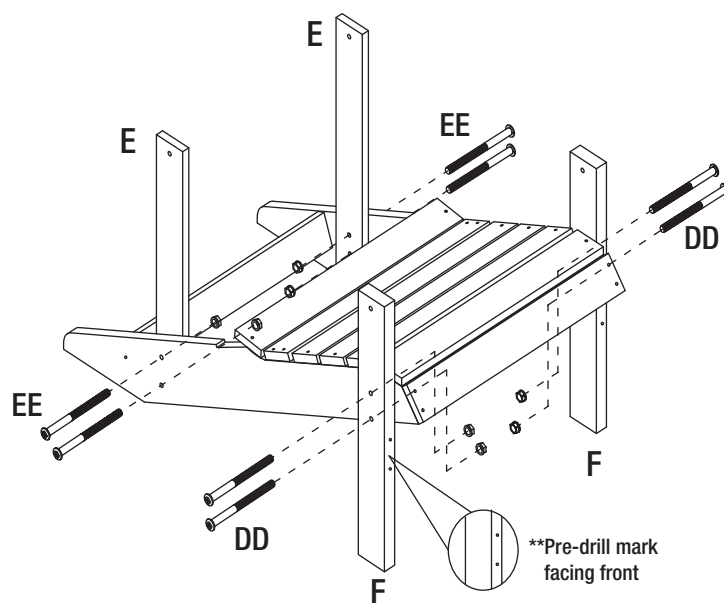

## 3 Attaching the cross board

- Attach the Cross Beam (G) to the front legs (F) with screws (AA).

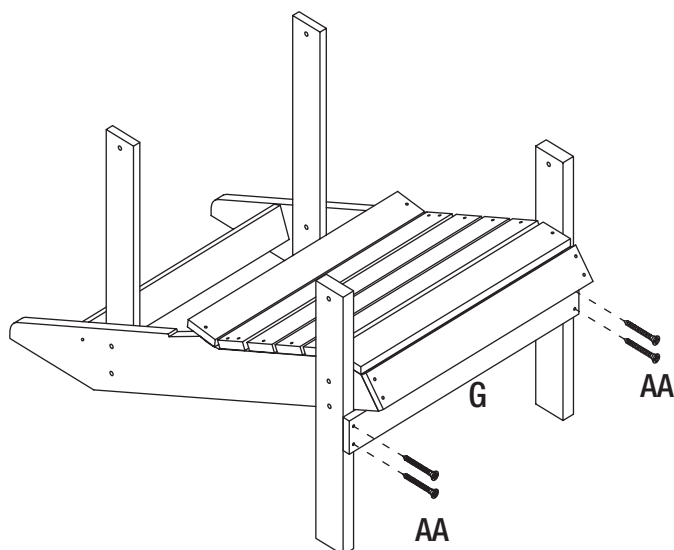

## 4 Attaching the Hinge

- Attach the Back (A) to the Seat (B) with Bolts (BB). Attach the Armrest (C & D) to the Front Legs with Bolt (DD). Attach the Armrest to the Vertical Back Support (E) with Bolt (CC).

