


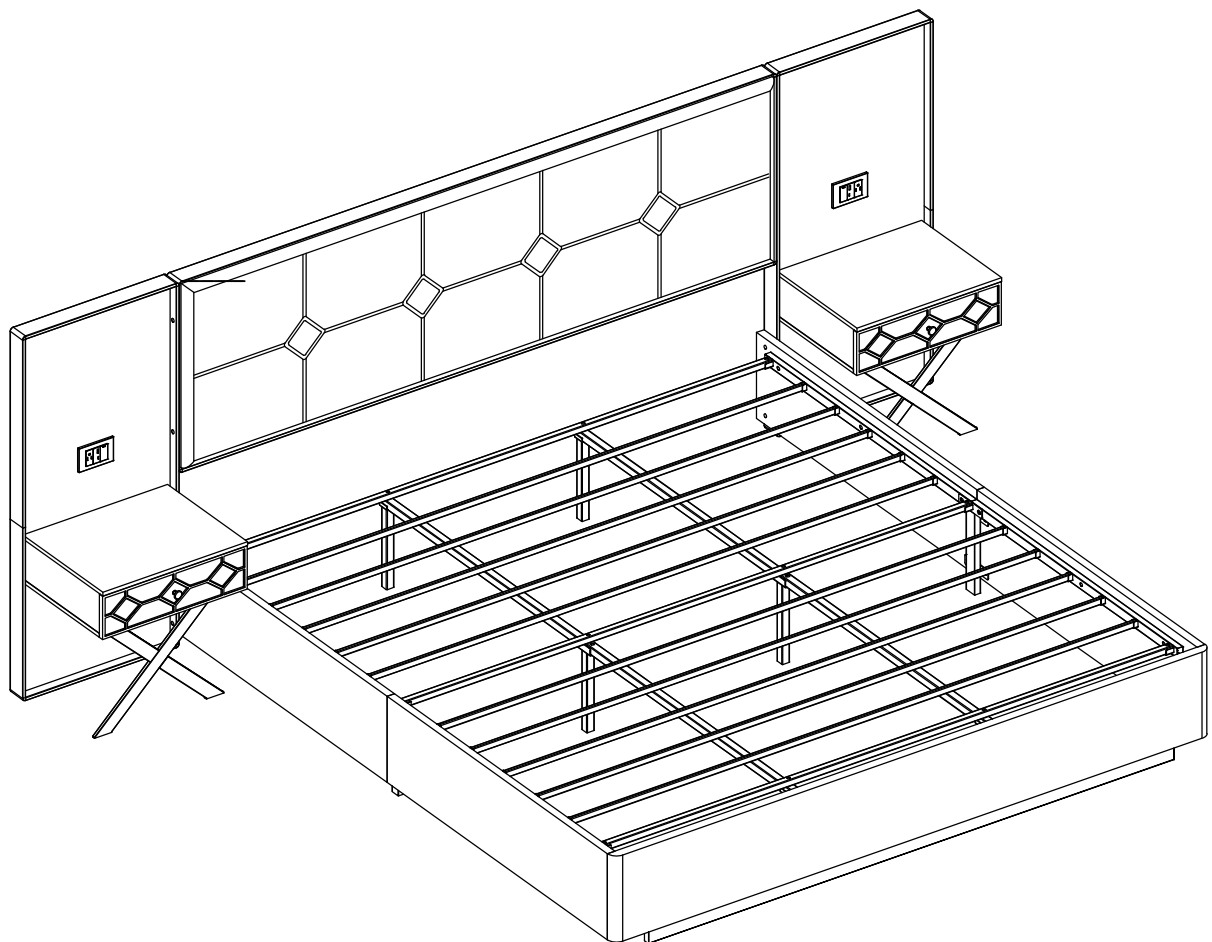








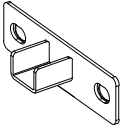






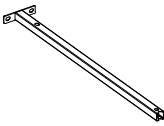









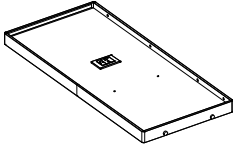

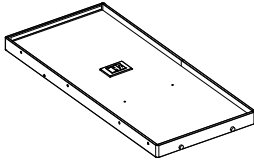



ASSEMBLY INSTRUCTIONS

Compression must wait for 72 hours before it can be unfolded, and it needs to be flapped by hand



parts list












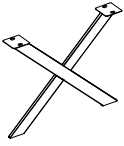
1  M6*30 4pcs	2  M8*55 6pcs	3  M8*40 12pcs	4  M8*30 10pcs	5  M8*15 10pcs	6  M8*20 28pcs	7  M8*16 6pcs	9  M6*19 4pcs	10  M8 2pcs	11  M6 1pcs	
12  M8*30 4pcs	B  2pcs		B1  2pcs		B2  2pcs		B3  4pcs		B4  2pcs	
B5  2pcs		C1  2pcs			C2  2pcs		C3  3pcs			
C4  10pcs		C5  2pcs			C6  2pcs		D1  1pcs			
D2  1pcs		D3  1pcs			D4  1pcs		D5  1pcs			
E1  1pcs		E2  1pcs			E3  1pcs		E4  2pcs			

packing list







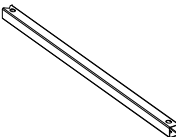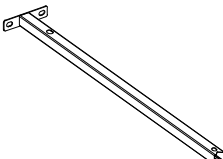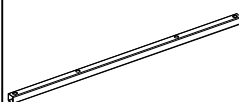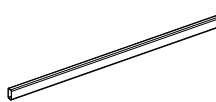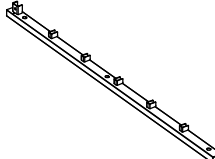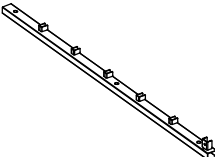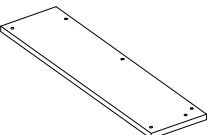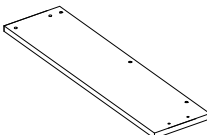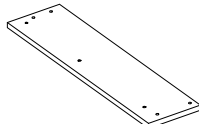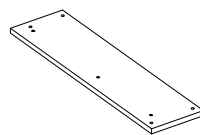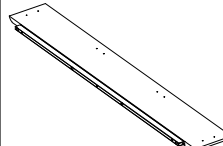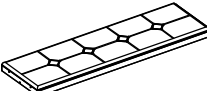













CK bed: 1x5 2x7 3x13 4x11 5x11 6x30 7x7 9x4 10x2 11x1 12x5
 Bx2 B1x2 B2x2 B3x4 B4x2 B5x2
 C1x2 C2x2 C3x3 C4x10 C5x2 C6x2
 D1x1 D2x1 D3x1 D4x1 D5x1
 E1x1 E2x1 E3x1 E4x2 (Including spare hardware)

Note: The package is as follows.

A box


<p>C1</p>  <p>2pcs</p>	<p>C2</p>  <p>2pcs</p>	<p>C3</p>  <p>3pcs</p>	<p>C4</p>  <p>10pcs</p>	<p>C5</p>  <p>2pcs</p>	<p>C6</p>  <p>2pcs</p>
<p>D1</p>  <p>1pcs</p>	<p>D2</p>  <p>1pcs</p>	<p>D3</p>  <p>1pcs</p>	<p>D4</p>  <p>1pcs</p>	<p>D5</p>  <p>1pcs</p>	<p>E2</p>  <p>1pcs</p>

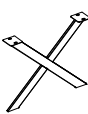B box
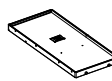
<p>1</p>  <p>M6*30 4pcs</p>	<p>2</p>  <p>M8*55 6pcs</p>	<p>3</p>  <p>M8*40 12pcs</p>	<p>4</p>  <p>M8*30 10pcs</p>	<p>5</p>  <p>M8*23 10pcs</p>	<p>6</p>  <p>M8*20 28pcs</p>	<p>7</p>  <p>M8*16 6pcs</p>
<p>9</p>  <p>M6*19 4pcs</p>	<p>10</p>  <p>M8 2pcs</p>	<p>11</p>  <p>M6 1pcs</p>	<p>12</p>  <p>M8*30 4pcs</p>	<p>B</p>  <p>2pcs</p>	<p>B1</p>  <p>2pcs</p>	<p>B2</p>  <p>2pcs</p>
<p>B3</p>  <p>4pcs</p>	<p>B4</p>  <p>2pcs</p>	<p>B5</p>  <p>2pcs</p>	<p>E4</p>  <p>2pcs</p>	<p>E1</p>  <p>1pcs</p>	<p>E3</p>  <p>1pcs</p>	


Installation method

Step 1

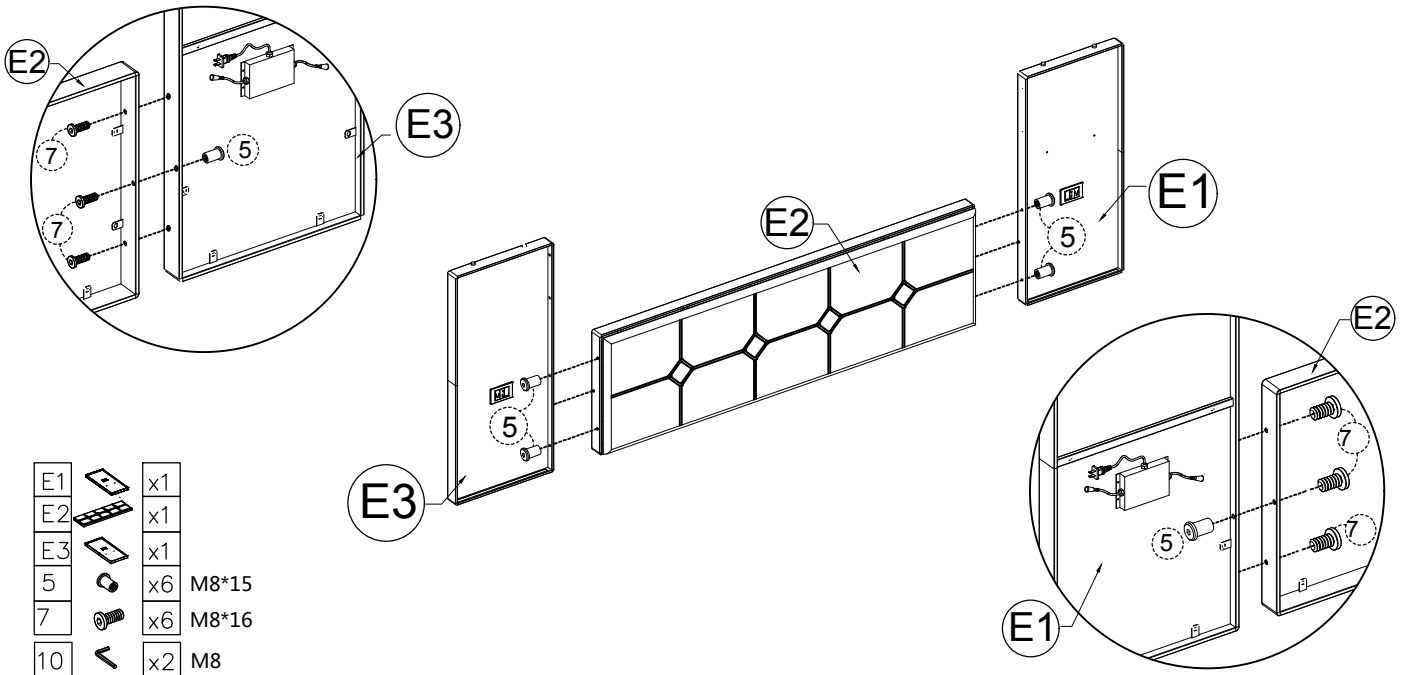

E1		x1	
E2		x1	
E3		x1	
5		x6	M8*15
7		x6	M8*16
10		x2	M8


Step 2

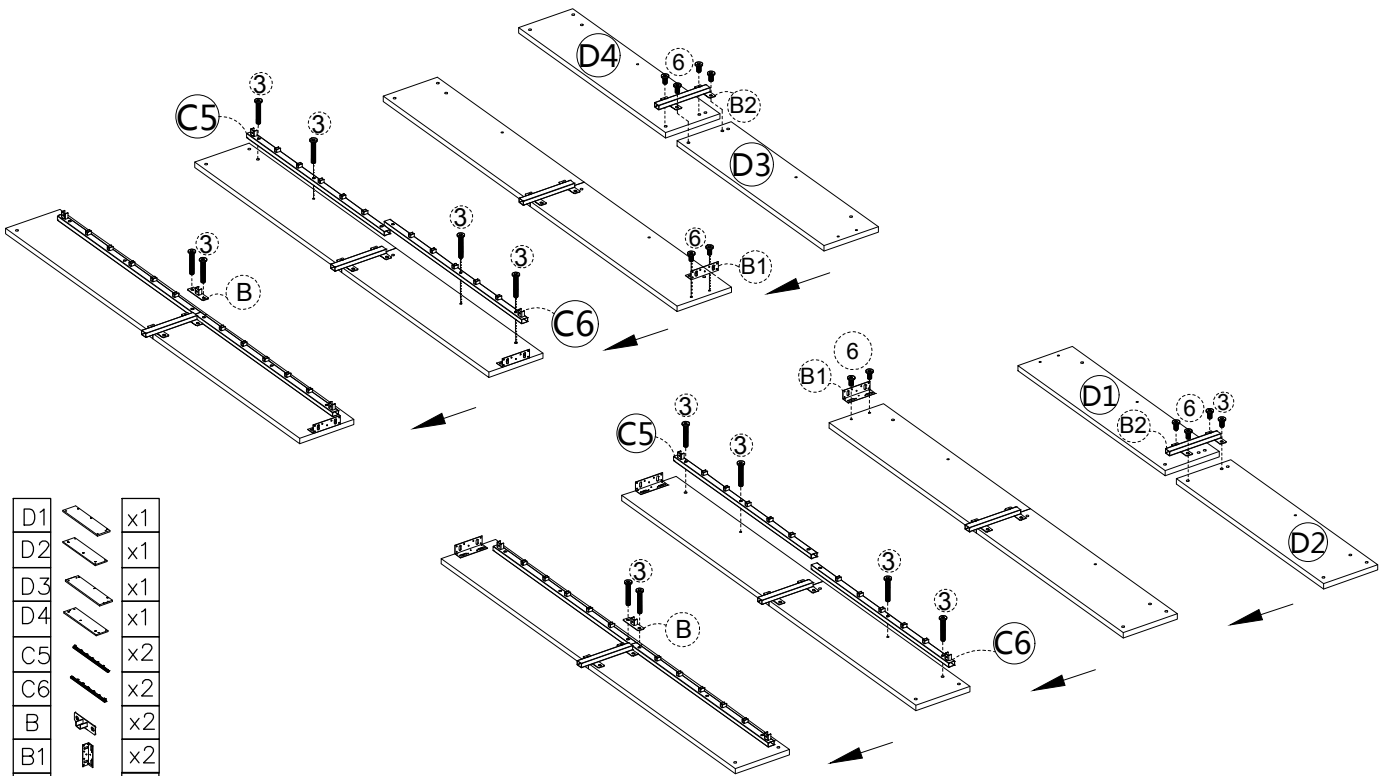


D1		x1	
D2		x1	
D3		x1	
D4		x1	
C5		x2	
C6		x2	
B		x2	
B1		x2	
B2		x2	
3		x12	M8*40
6		x12	M8*20
10		x1	M8

Installation method

Step 3

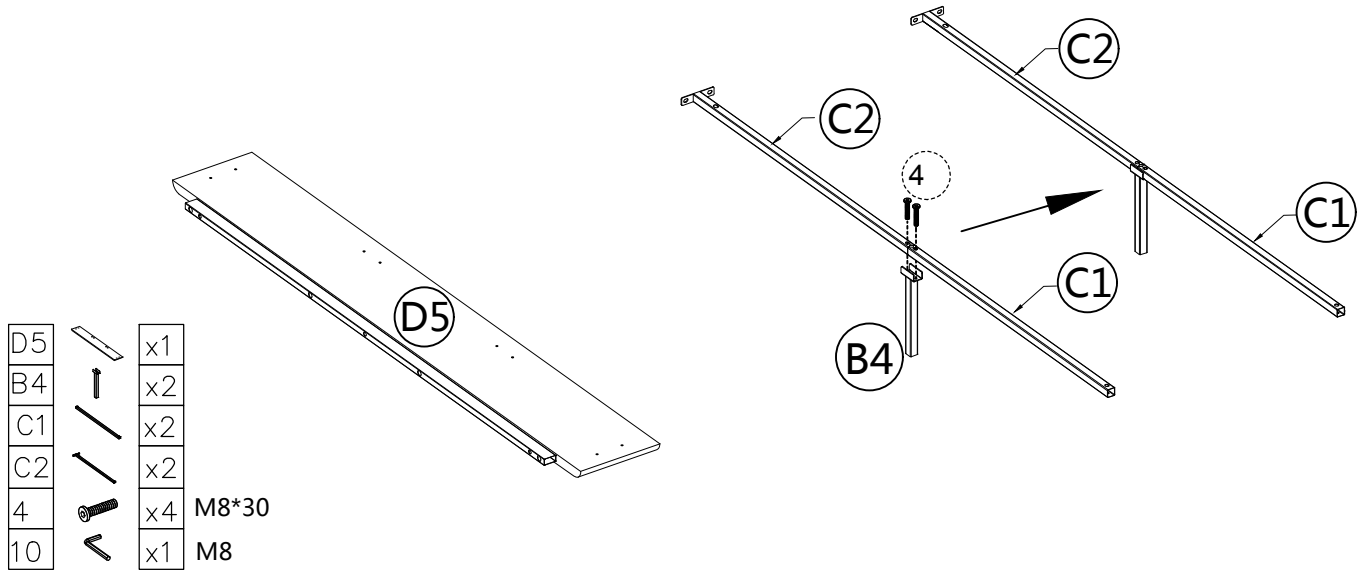


Step 4

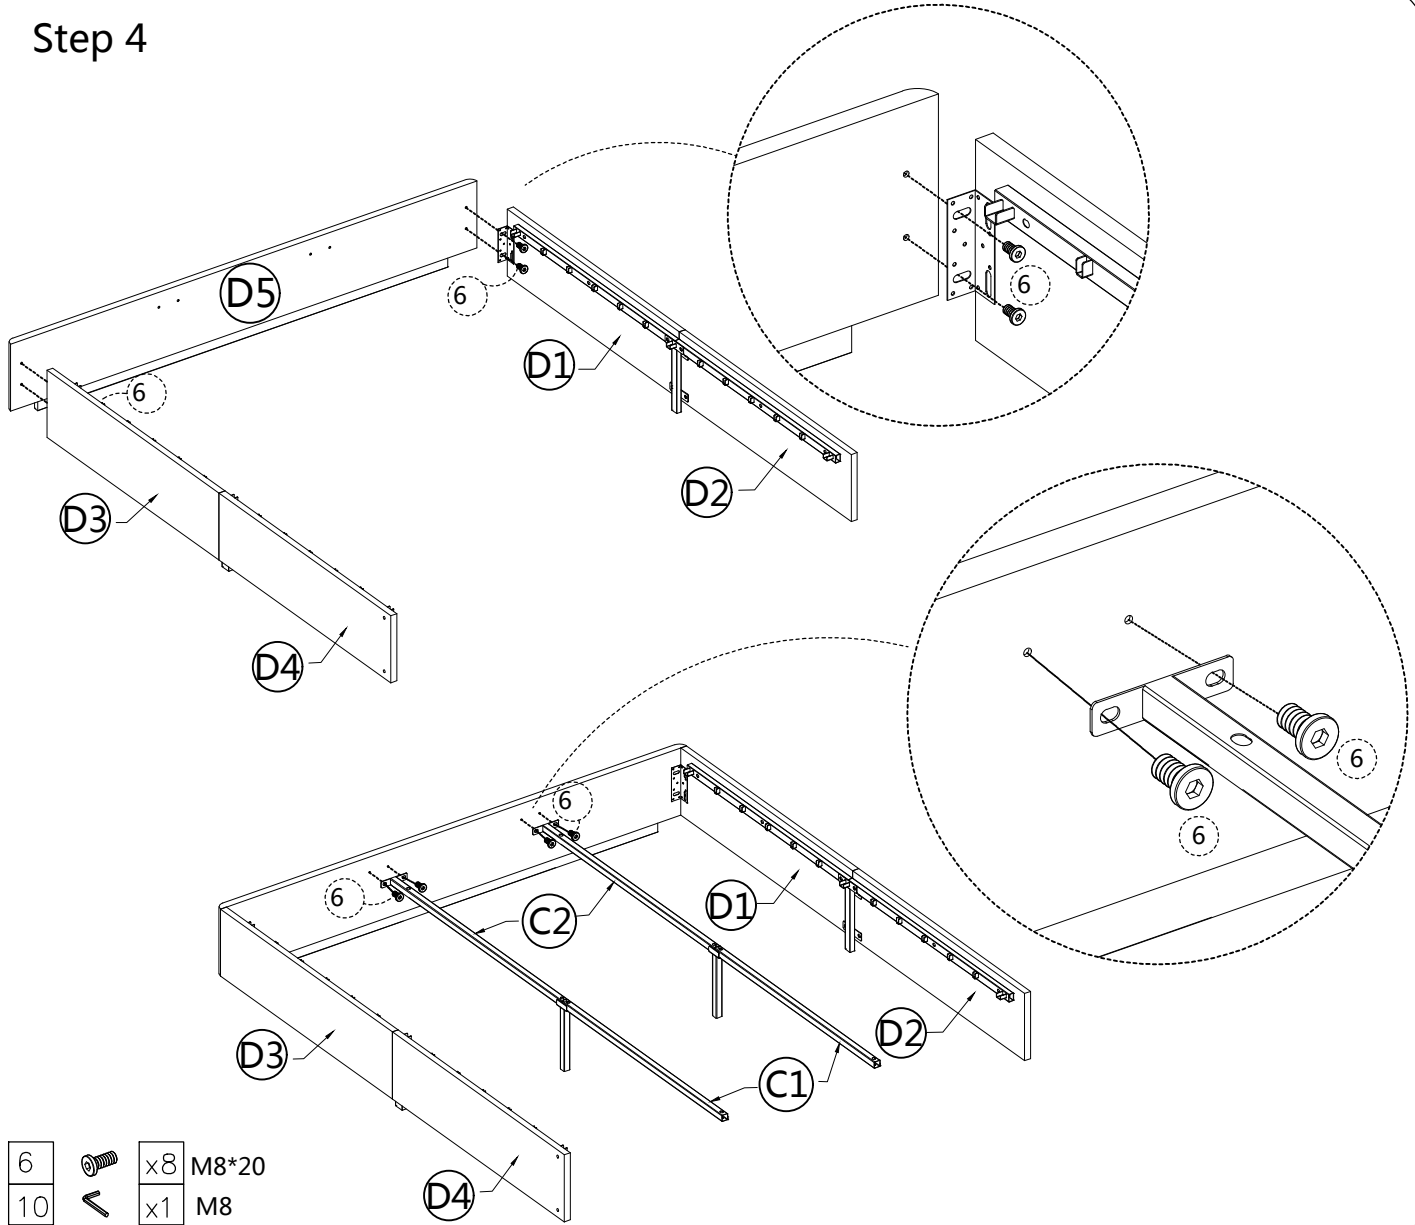


Installation method

Step 5

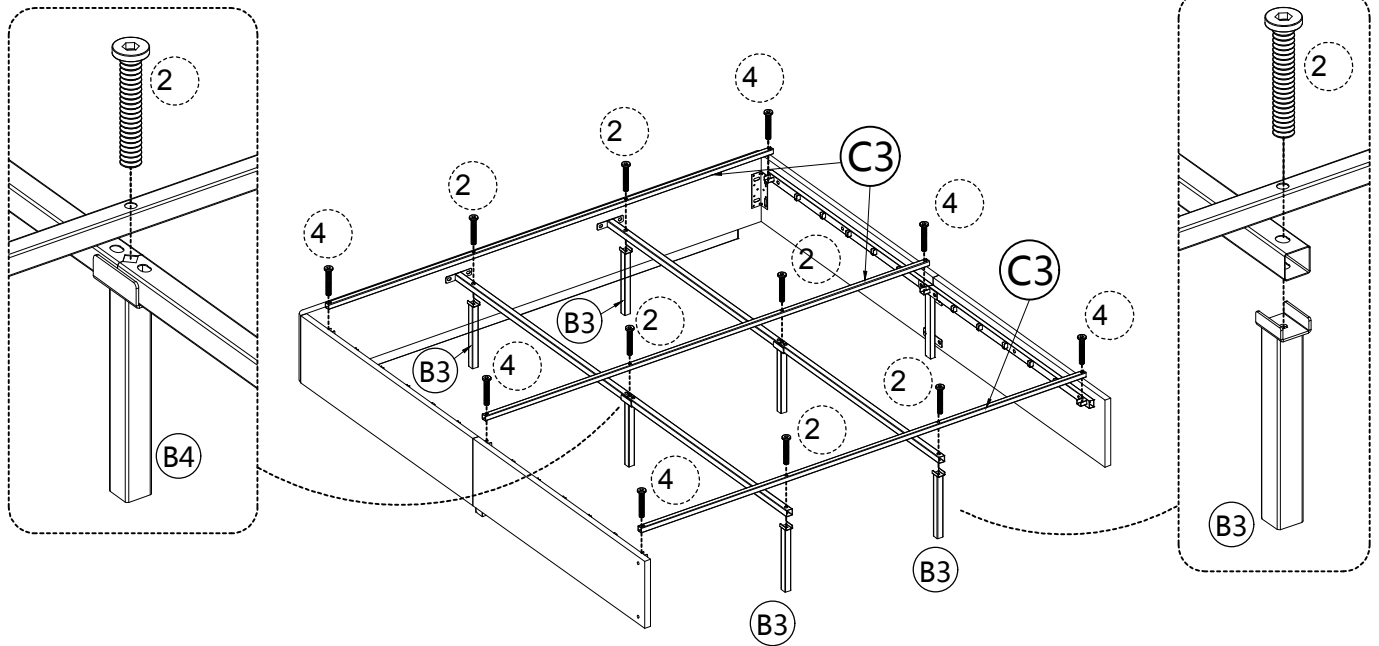

B3		x4	
C3	—	x3	
2	—	x6	M8*55
4	—	x6	M8*30
10	∧	x1	M8



Step 6

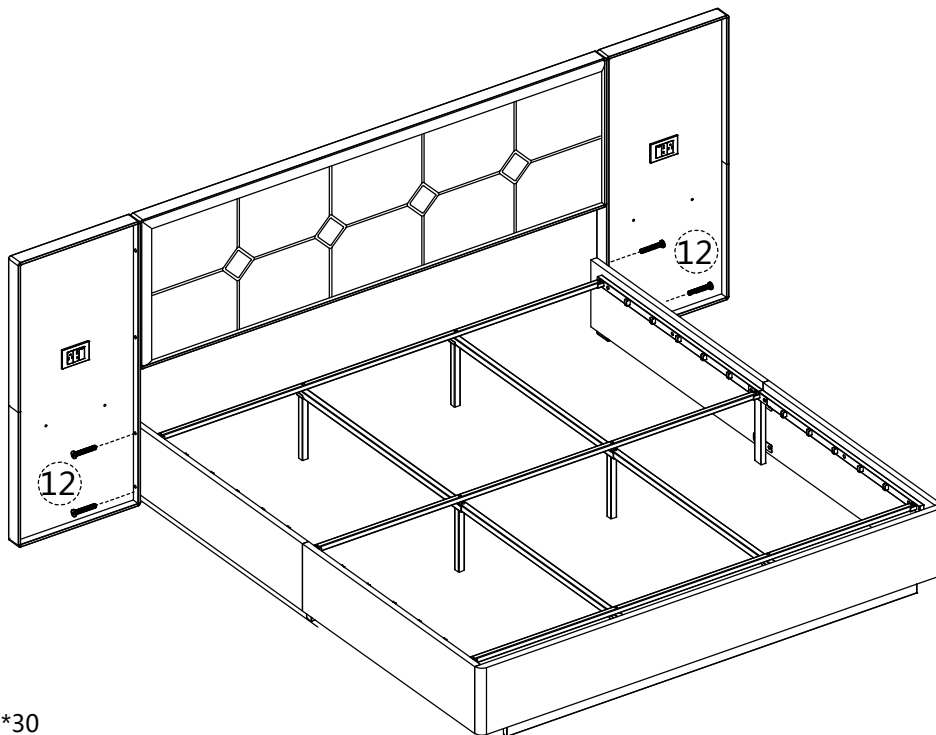

12	—	x4	M8*30
5	—	x4	M8*23
10	∧	x1	M8



Installation method

Step 7

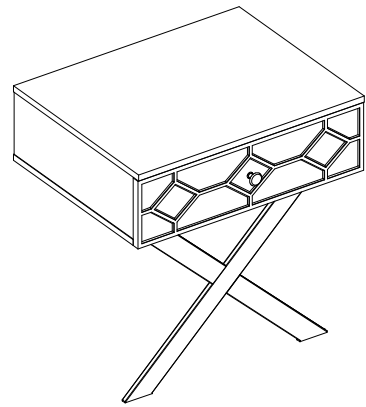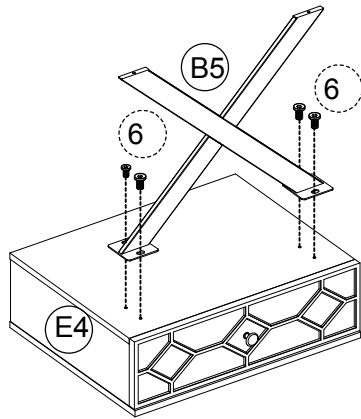


E4		x2	
B5		x2	
6		x8	M8*20
10		x1	M8

Step 8

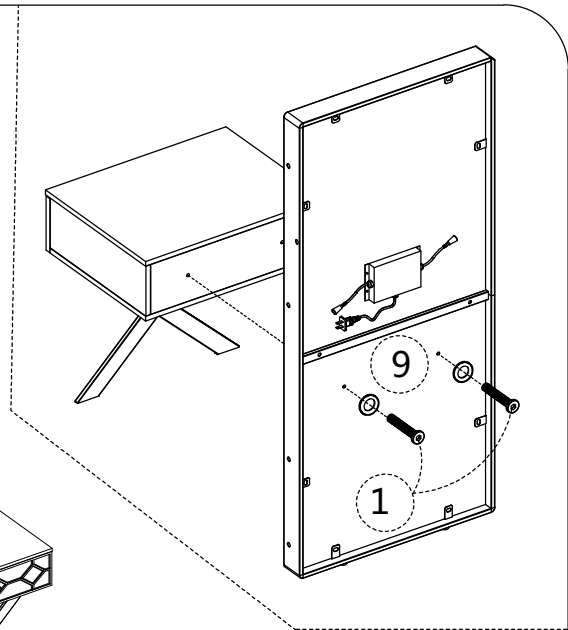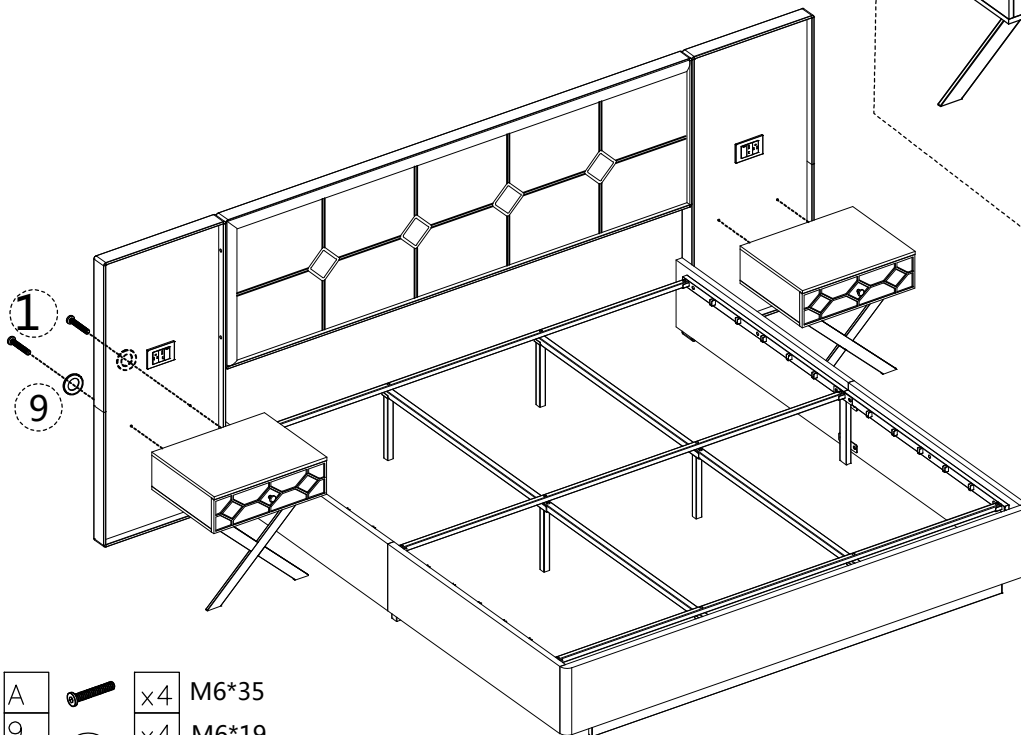

A		x4	M6*35
9		x4	M6*19
11		x1	M6

Step 9

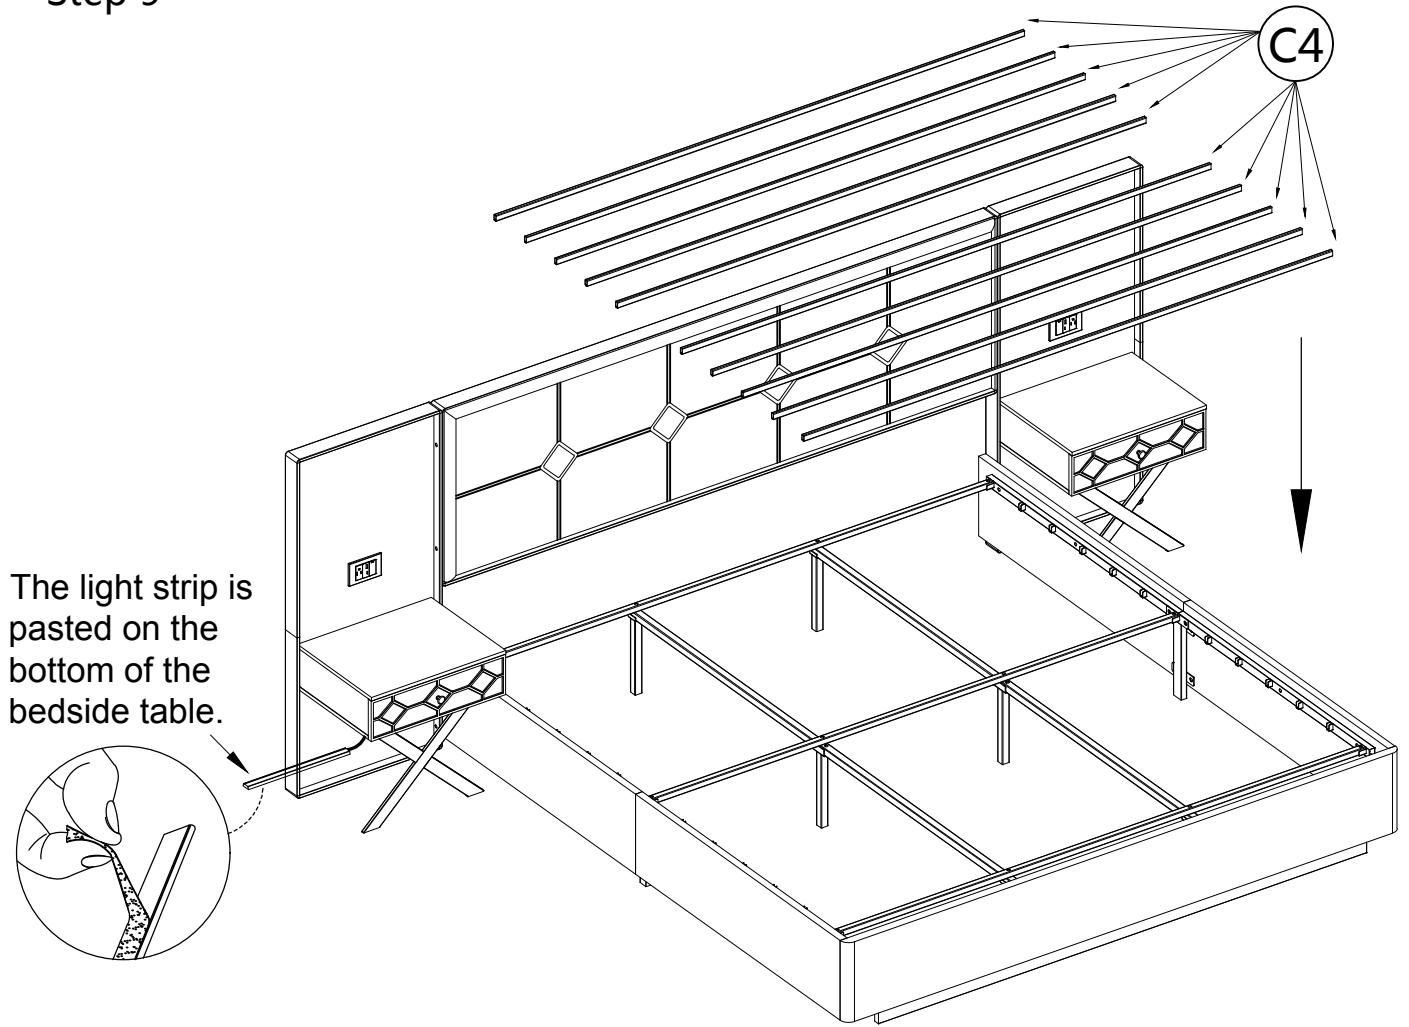

Assembly completed!

Please enjoy the bed