
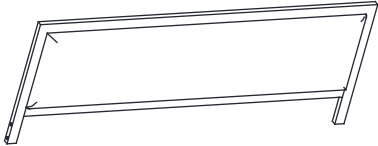
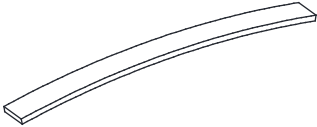
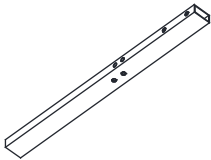
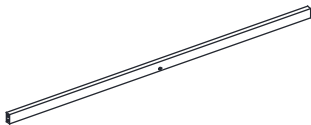
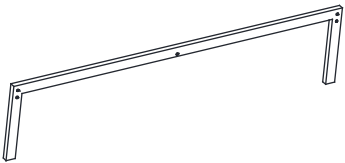
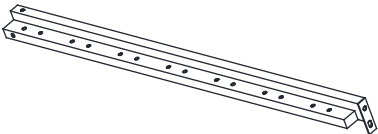




ASSEMBLY INSTRUCTION


WF198611



PARTS AND HARDWARE LIST

A		1PC	P		28PCS
B		2PCS	Q	 M6*50mm	1PC
C		2PCS	R	 M8*30mm	8PCS
D		1PC	S	 M6*60mm	4PCS
E		1PC	T	 M6*50mm	4PCS
F		2PCS	U	 M6*40mm	8PCS
G		2PCS	V	 M6*12mm	12PCS
H		1PC	W	 M8	4PCS
I		2PCS	X	 M6	4PCS
J		2PCS	Y		8PCS
K		1PC	1	 M8	1PC
L		2PCS	2	 M6	1PC
M		2PCS	3		1PC
N		28PCS			
O		14PCS			


STEP 1

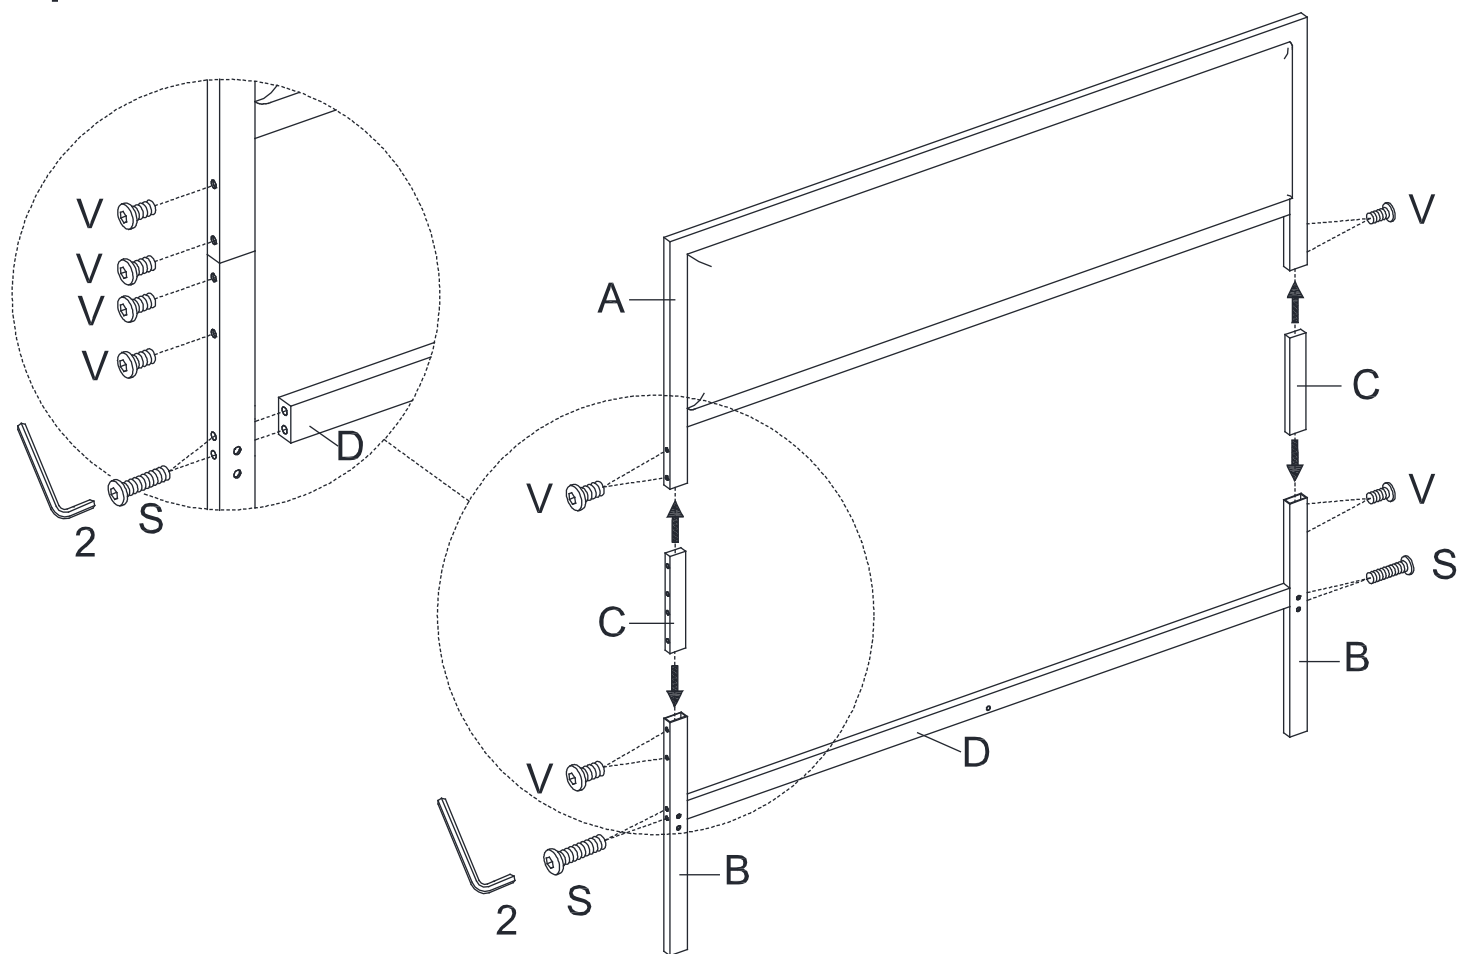

Insert C*2 into A*1, and B*2, then using Allen Key #2 to tighten them with bolts V*8.


Attach D*1 to B*2 with bolts S*4 and then tighten them with Allen Key #2.

STEP 2

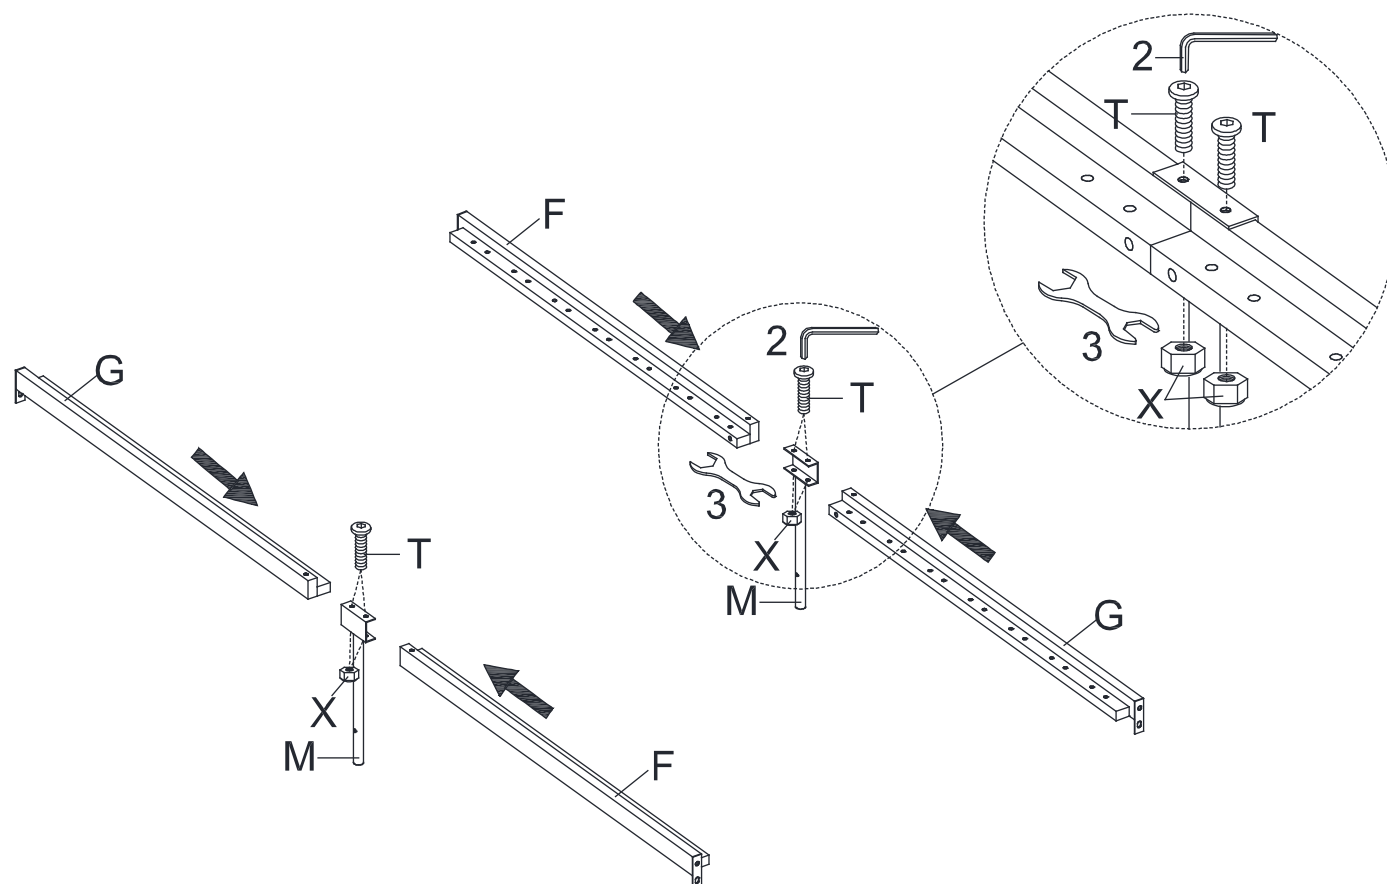

Attach F*1, G*1 to M*1 with bolts T*2, nuts X*2, and then tighten them with Spanner #3 and Allen Key #2. The other side do the same.


STEP 3

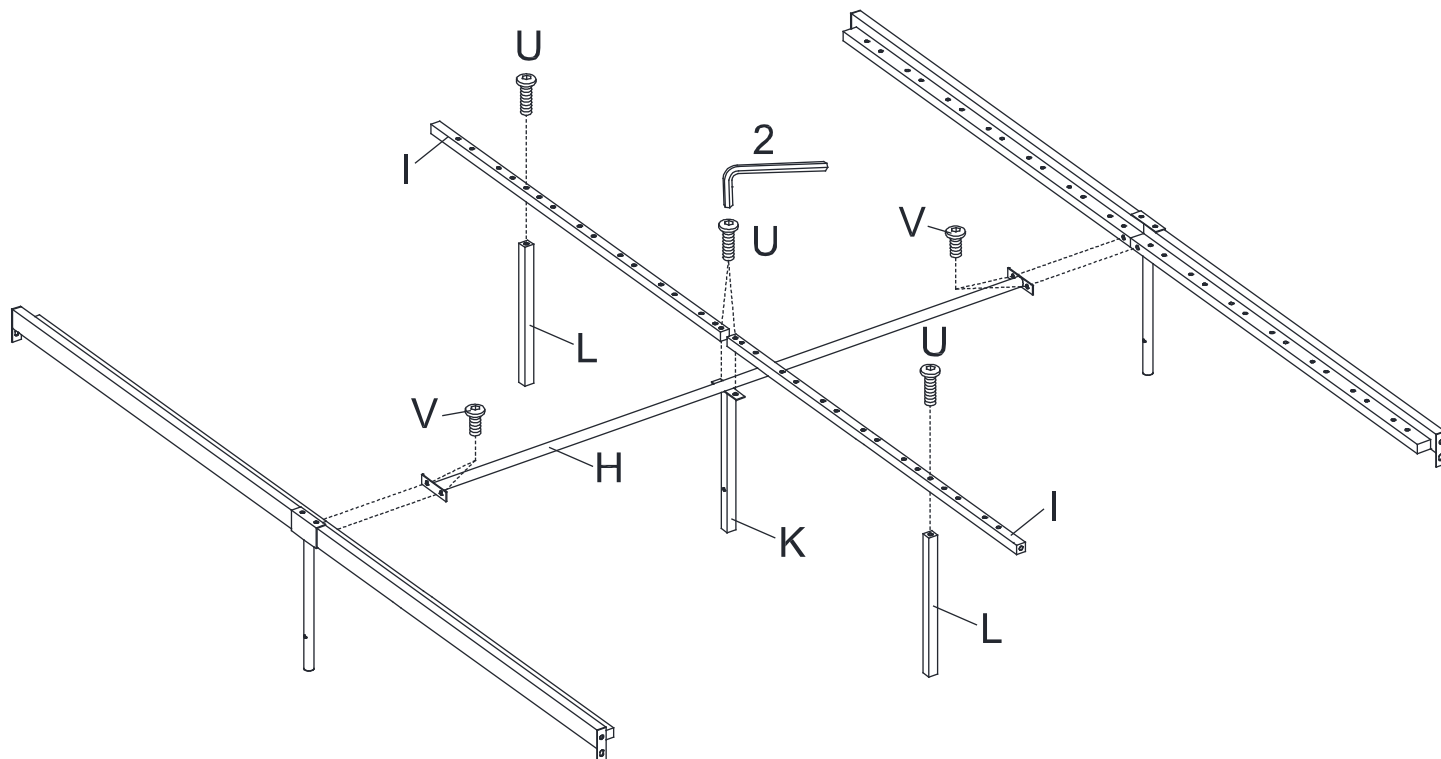

Attach cross bar H to the side rails (F+G), and tighten them with bolts V*4.


Connect cross bar H, inner support leg K to I*2 with bolts U*2, then attach inner support legs L*2 to I*2 with bolts U*2. DO NOT TIGHTEN THE BOLTS TOTALLY.

STEP 4

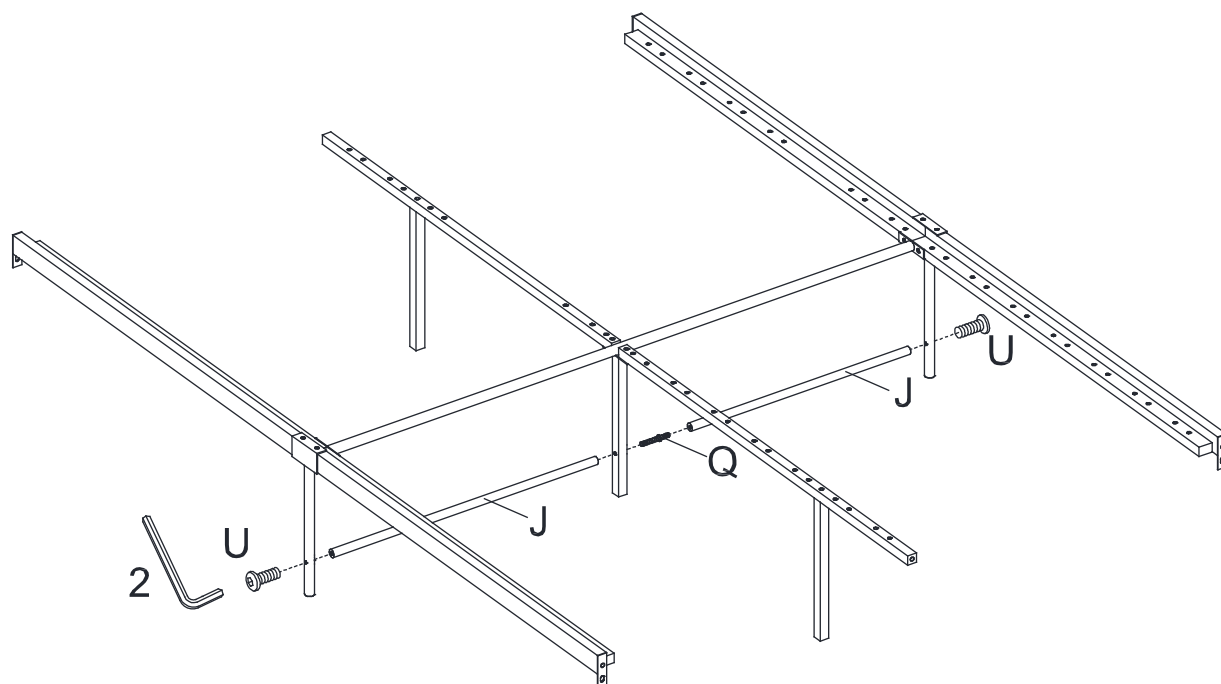

Attach J*2 to middle support legs (K), 2 side legs (M) with connector Q*1, bolts U*2, then tighten them with Allen Key #2. DO NOT TIGHTEN THE BOLTS TOTALLY.


STEP 5

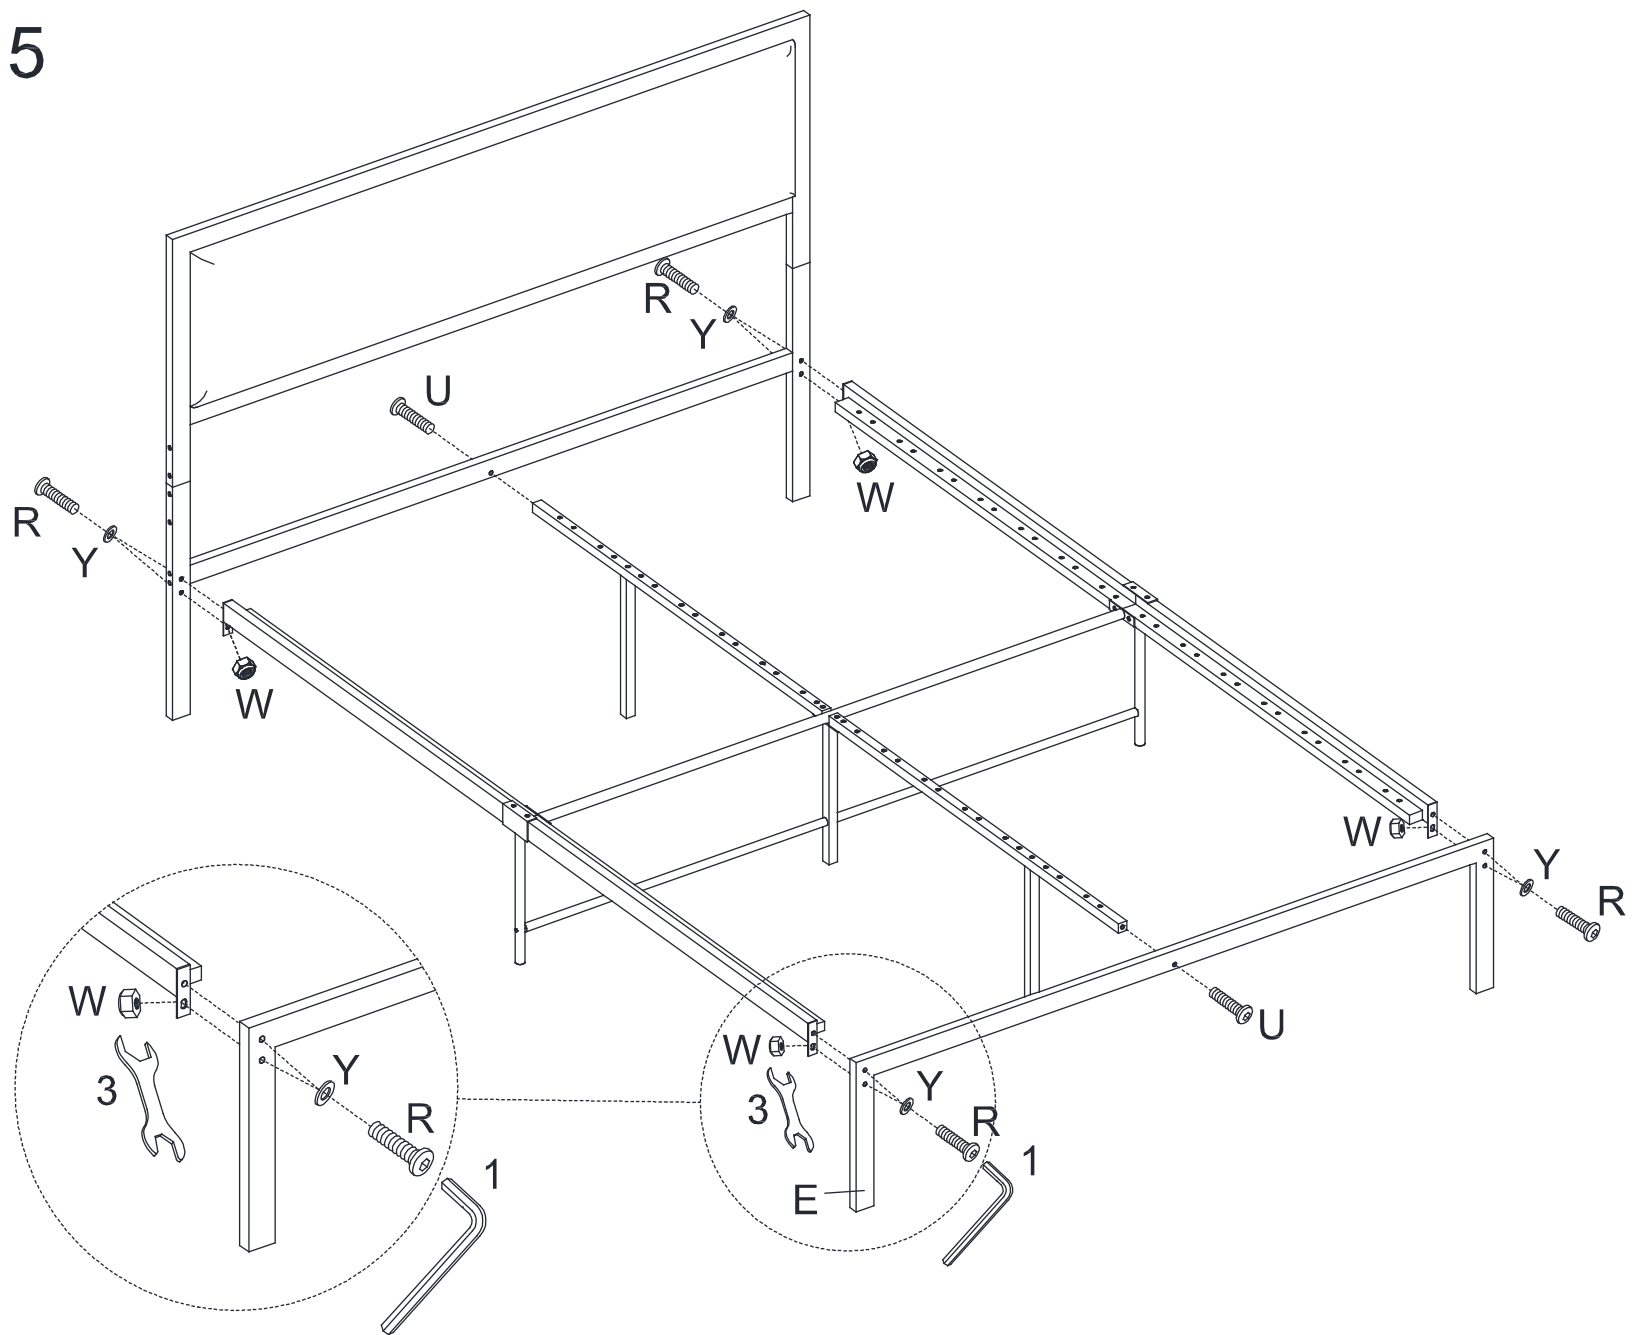

Attach the assembled headboard, footboard E*1 to the assembled bed frame with bolts R*8, washers Y*8, nuts W*4 and bolts U*2, then tighten them with Allen Key #1, Spanner #3. DO NOT TIGHTEN THE BOLTS TOTALLY.


Note: When you find that you cannot align the holes accurately, please adjust the tightness of the screws.

STEP 6

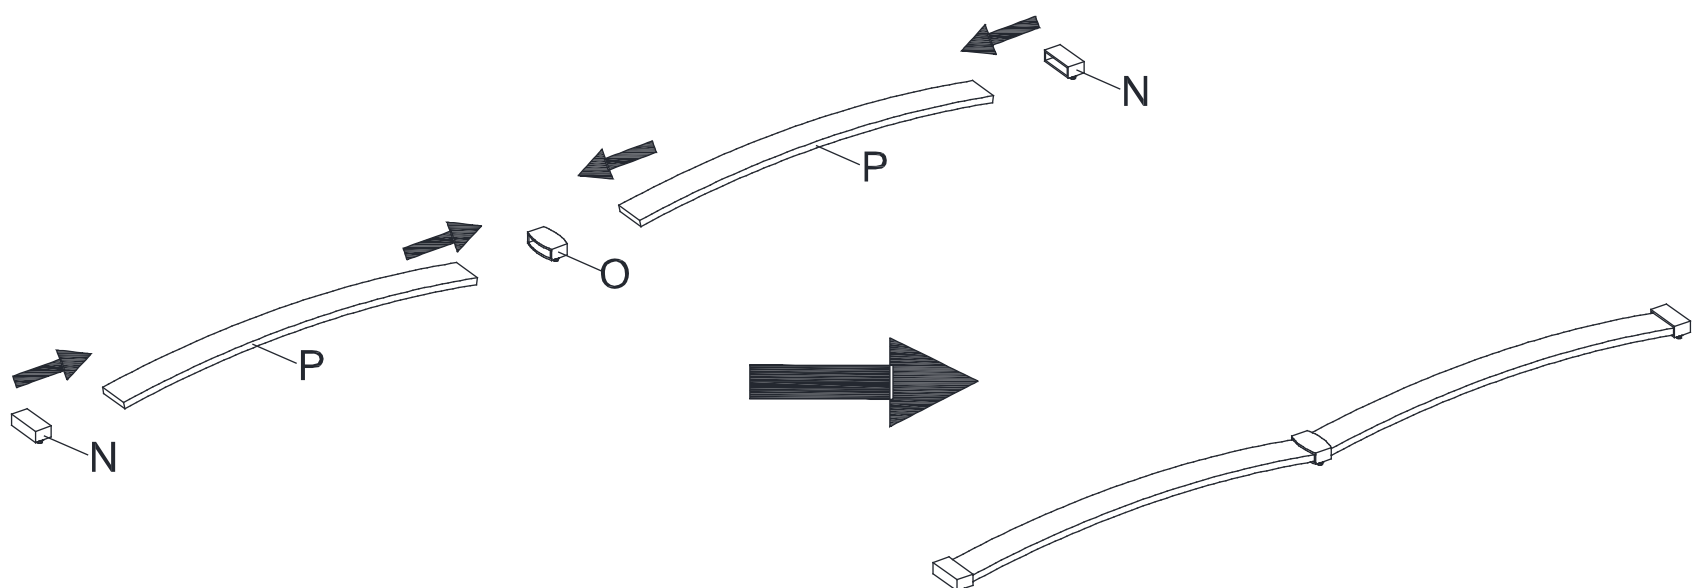

Attach P*2, to O*1 and N*2 as show in the picture. Following this method to assemble all the 14 bed slats.

STEP 7

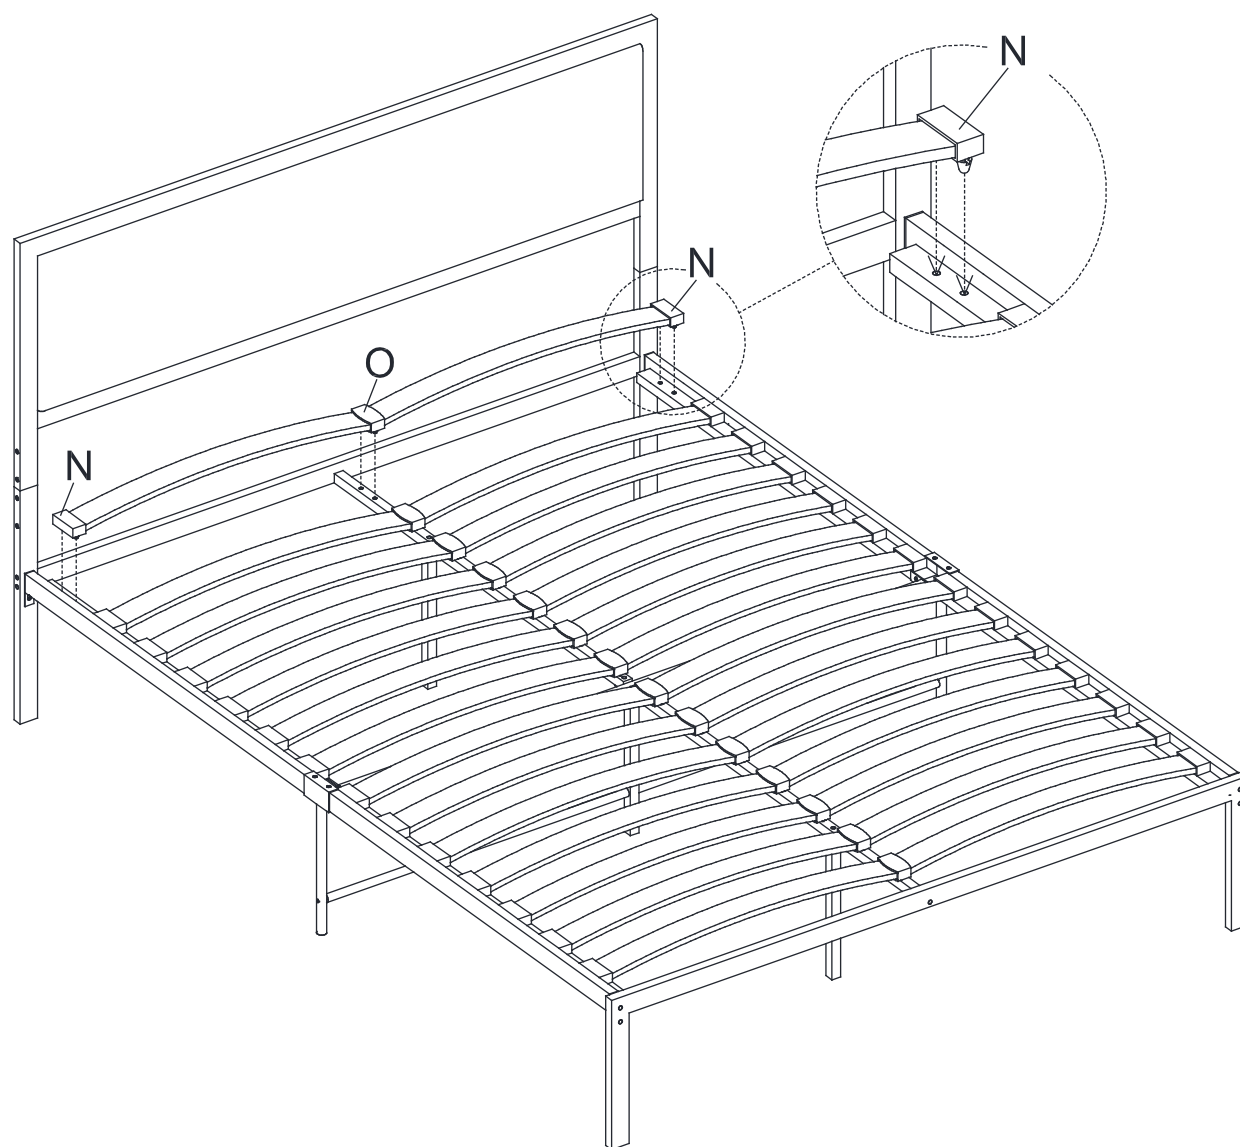

Attach 14 assembled slats to the bed frame, attach the parts N and O of the fittings tightly. NOW YOU CAN TIGHTEN ALL THE BOLTS.