Parts List

BED CARTON

(10) HEADBOARD PANEL
(11) FOOTBOARD PANEL

HARDWARE BAG FOR BED ATTACHMENT TO FRAME

(1)1/4-20 X 2 1/4" LONG FLAT ALLEN HEAD SCREW-
(2) 1/4-20 X 1" LONG FLAT ALLEN HEAD SCREW-4
(3) 1/4-20 HEX NUT-4
(4) 1/4" ID FLAT WASHER-8
(5) ALLEN WRENCH

(6) EXTENSION LEG-2
(7) FINIAL-4
(8) FOOT CASTING-2
(9) PLASTIC GLIDES-4


HEADBOARD CARTON

(10) HEADBOARD PANEL


HARDWARE BAG FOR HEADBOARD ATTACHMENT TO FRAME

(1)1/4-20 X 2 1/4" LONG FLAT ALLEN HEAD SCREW-4
(3) 1/4-20 HEX NUT-4
(4) 1/4" ID FLAT WASHER-4
(5) ALLEN WRENCH


(6) EXTENSION LEG-2
(7) FINIAL-2
(9) PLASTIC GLIDES-2

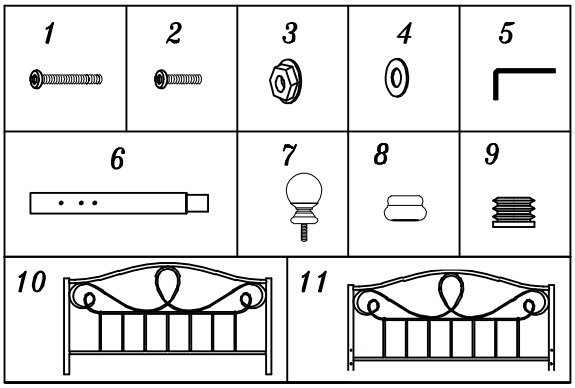


PRODUCT FULLY ASSEMBLED

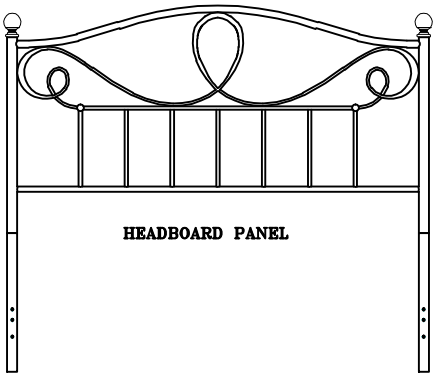

HEADBOARD PANEL

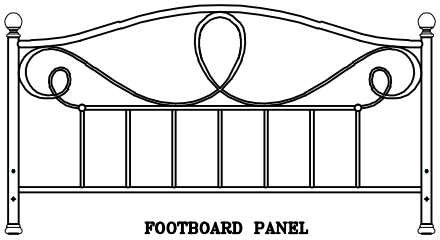


FOOTBOARD PANEL

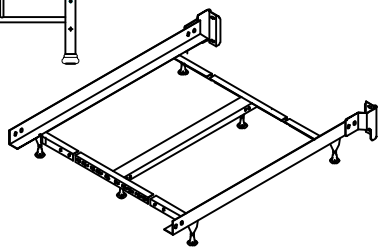


QUEEN – KING HEADBOARD ONLY FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

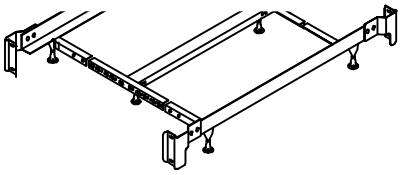


QUEEN – KING BED FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

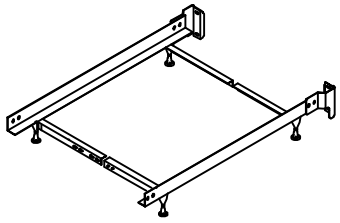

TWIN – FULL HEADBOARD ONLY FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

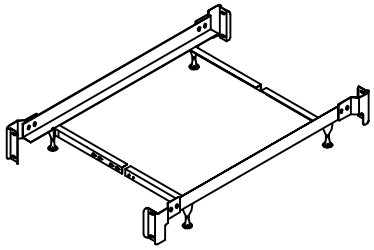

TWIN – FULL BED FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

FOR ASSISIANCE IN ASSEMBLY ONLY OF IHIS PRODUCT. CALL OUR HELP DESK AT PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.)
OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

HEADBOARD PANEL

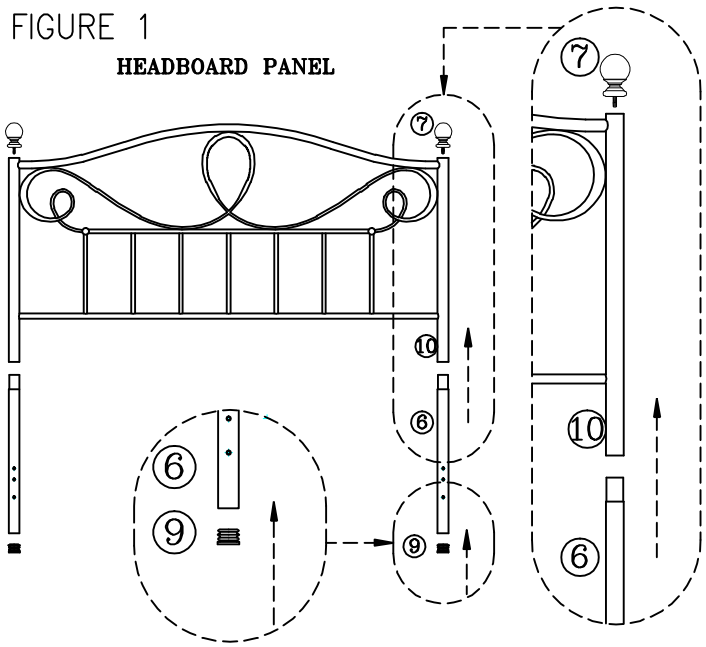
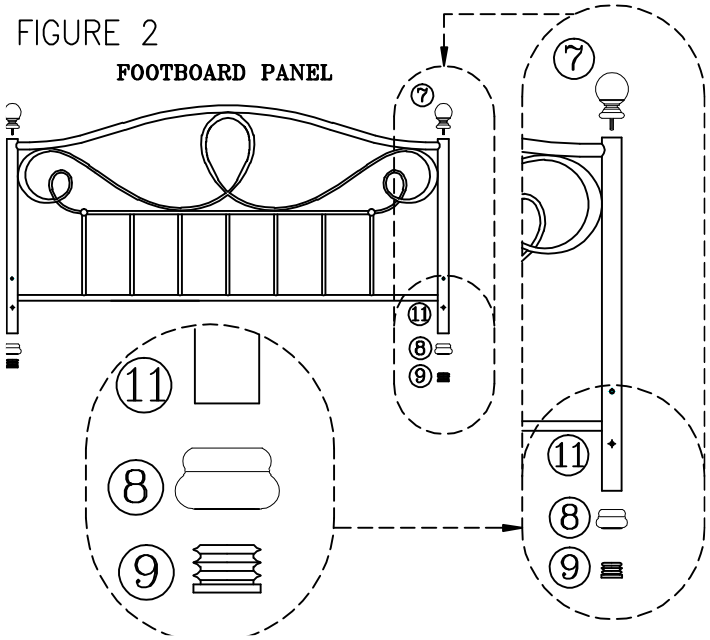


FIGURE 2

FOOTBOARD PANEL



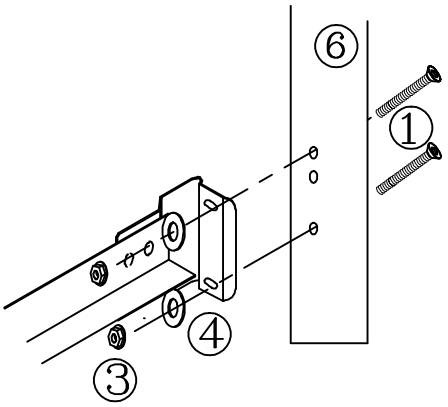


FIGURE 3

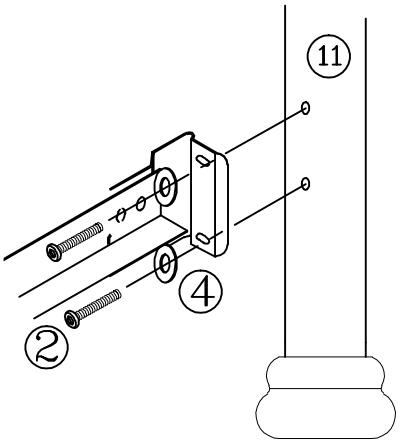


FIGURE 4

Step 1 Headboard Assembly

- Insert plastic glide (9) on extension leg (6). SEE FIGURE 1
- Align top reduction of extension legs (6) with bottom of headboard panel (10) posts. (SEE FIGURE 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (6) into bottom of headboard (10) posts.
- Screw in finials (7) on top of headboard Panel (10). (SEE FIGURE 1)

Step 2 Footboard Assembly

- Insert foot ring (8) into footboard panel post (11). (SEE FIGURE 2)
- Secure foot ring (8) with plastic glide (9).
- Screw in finials (7) on top of footboard Panel (11). (SEE FIGURE 2)

Step 3 Headboard Frame Assembly

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in extension leg (6). (SEE FIGURE 3)
- Align bed frame bracket over screws.
- Place a flat metal washer (4) over screws first and then a nut (3) on each screw. Hand tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).

Step 3 Footboard Frame Assembly

- Position footboard panel (11) and align holes in the post with holes in the frame bracket. (SEE FIGURE 4)
- Place flat metal washer (4) on each screw (2). Insert through bracket and into footboard post. Hand tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench (5).