



SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

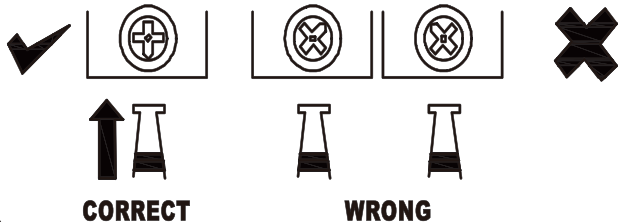


CAM-LOCK

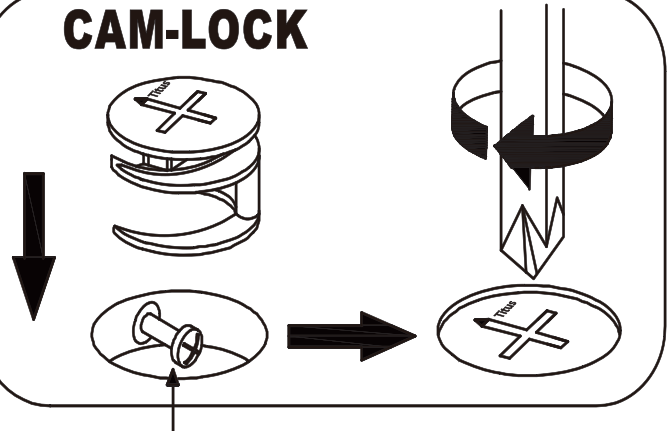

Quickfit head needs to be in centre


QUICKFIT

Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

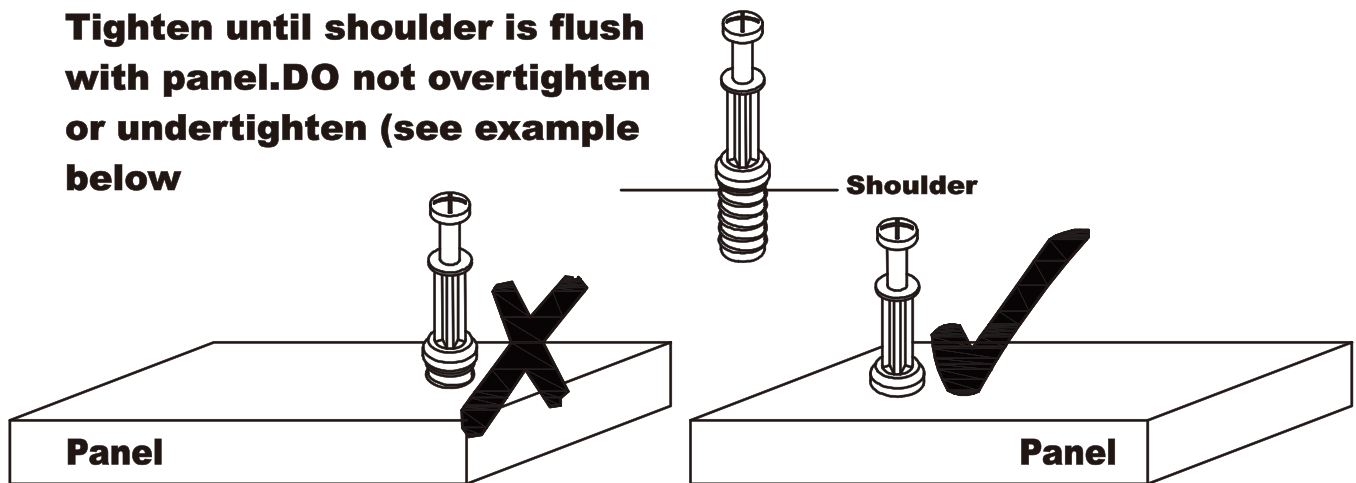


BOARD IDENTIFICATION

1

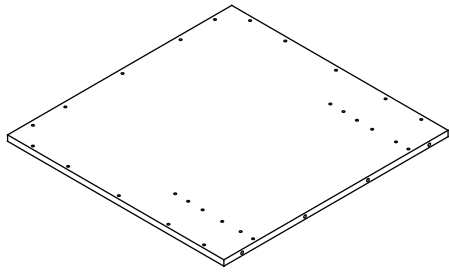


2 PCS

2

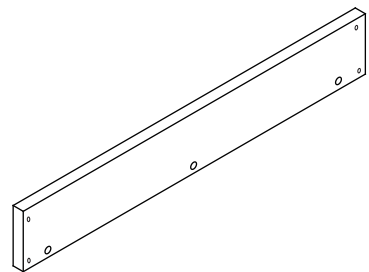


2 PCS

3

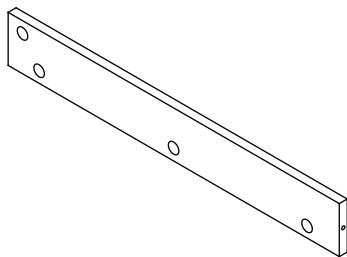


2 PCS

4

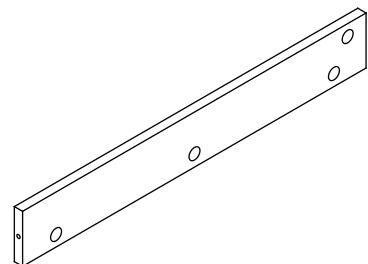


2 PCS

5

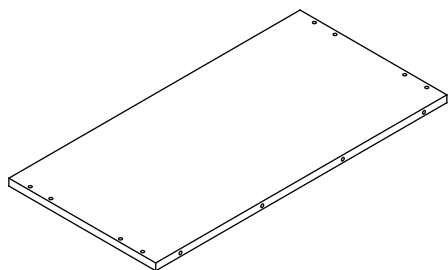


1 PC

6

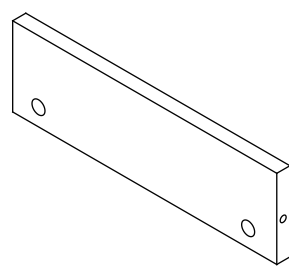


2 PCS

7

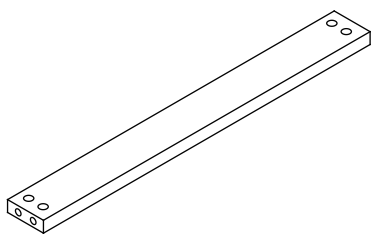

2 PCS


8

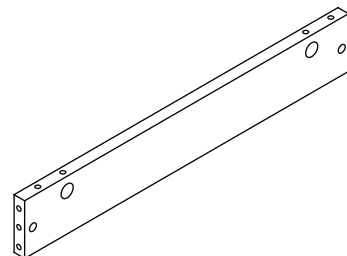

2 PCS


BOARD IDENTIFICATION

9

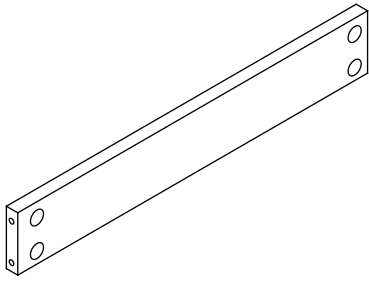


2 PCS

10

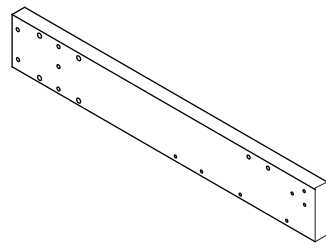


2 PCS

11

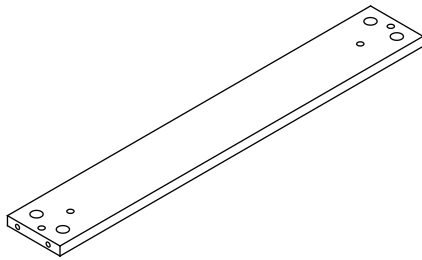


2 PCS

12

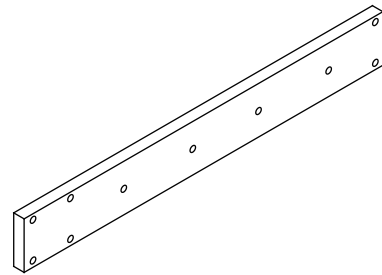


4 PCS

13

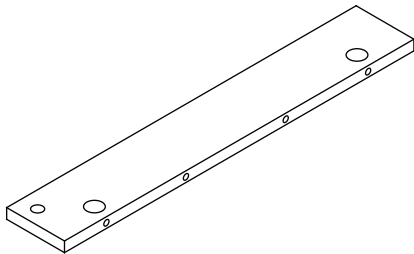


2 PCS

14

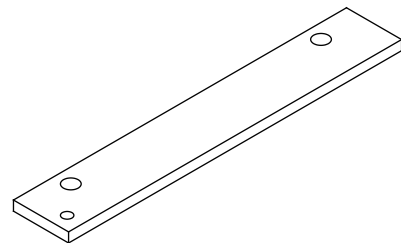

2 PCS


15

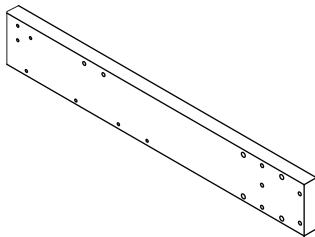

2 PCS


PART LIST

A




58 PCS

B

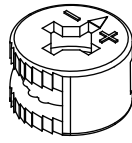


62 PCS

C

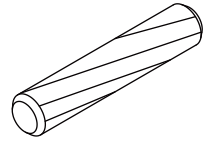


40 PCS

D

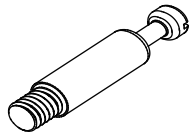


4 PCS

E



12 PCS


F

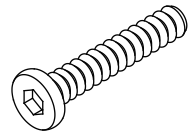

6*20MM

16 PCS

G

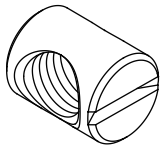


8 PCS

H




16 PCS

I

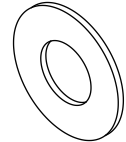

16 PCS


J

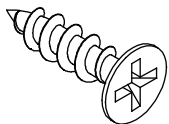

4*14MM

52 pcs


K

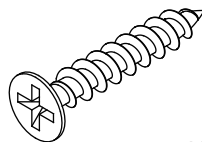

4*35MM


8 PCS

L

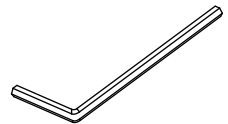


1 PC

M

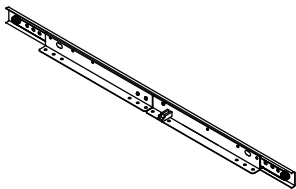

2 PCS


N

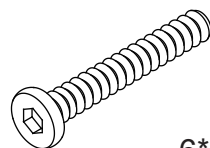

6*45MM


4 PCS

O

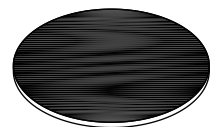


8 PCS

P

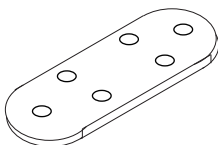


2 PCS

Q



12 PCS


R




8*30 MM

4 PCS

BOARD IDENTIFICATION


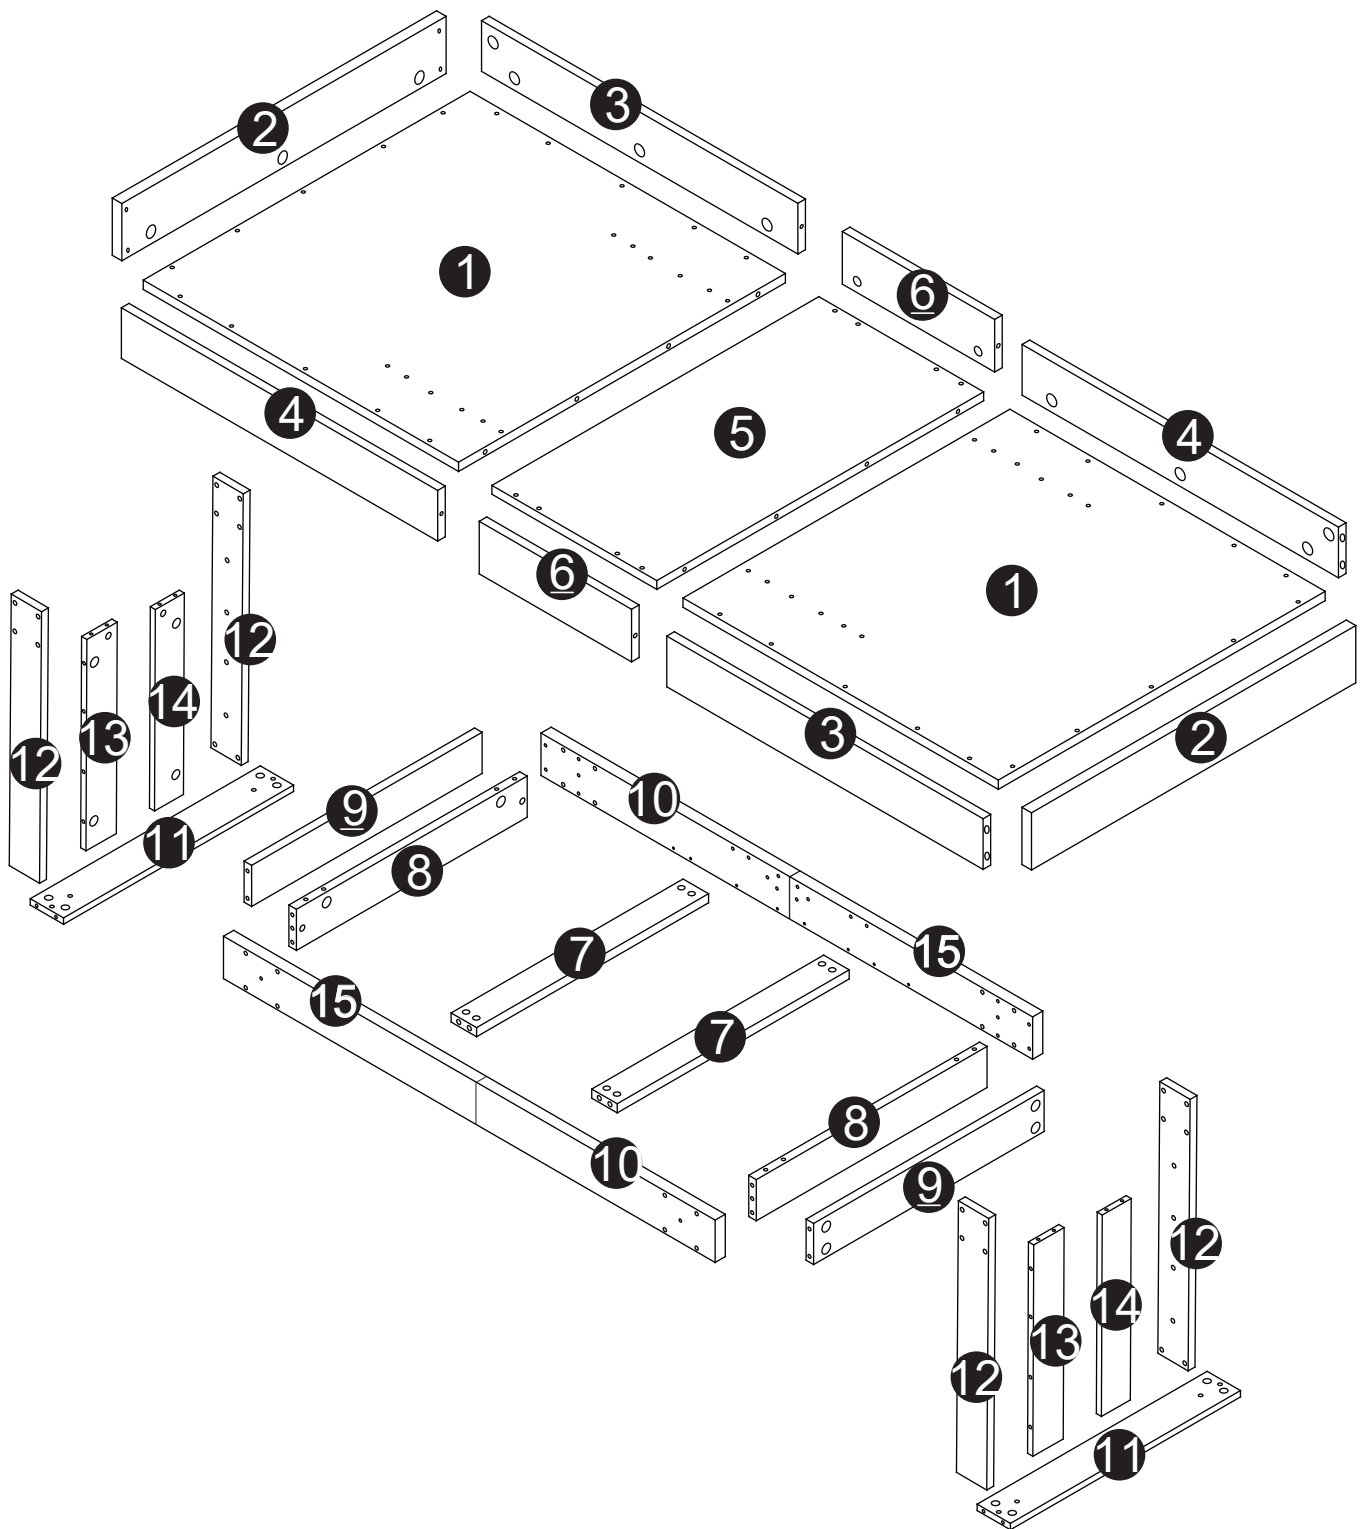


STEP 1

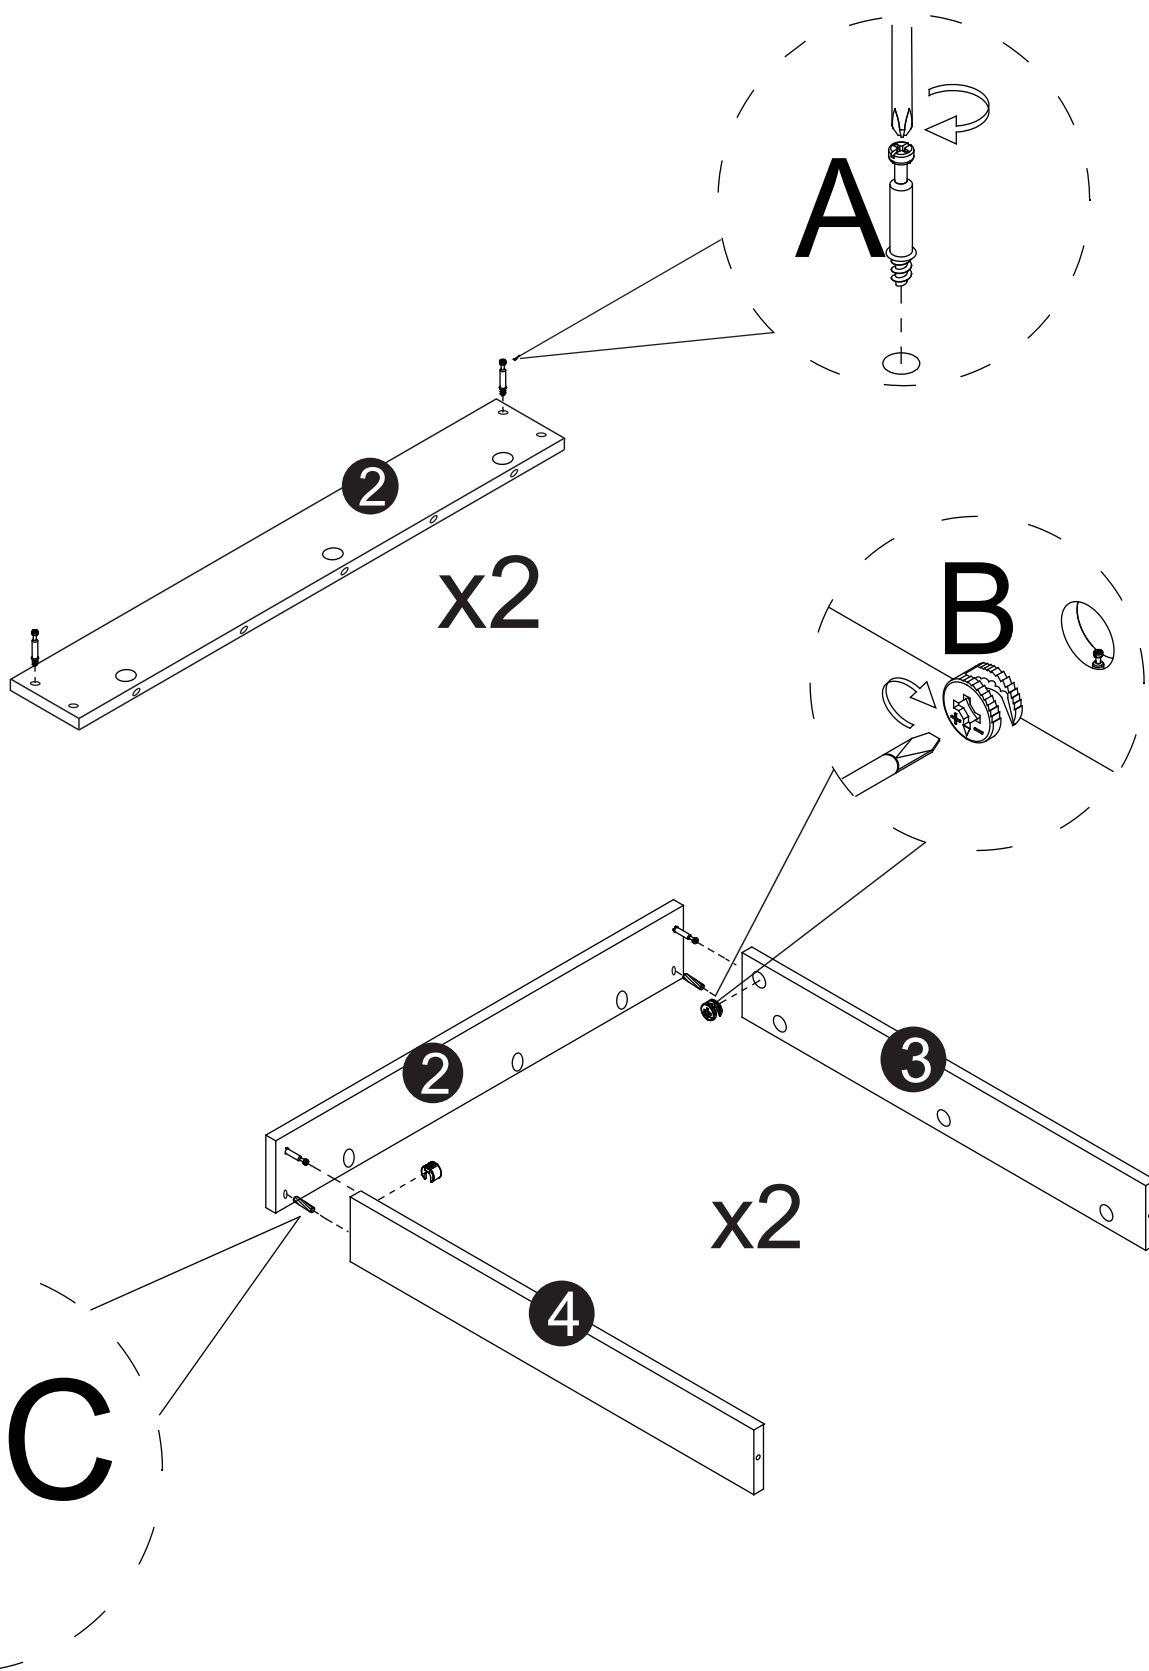


A		4 pcs
B		4 pcs
C		4 pcs

STEP 2

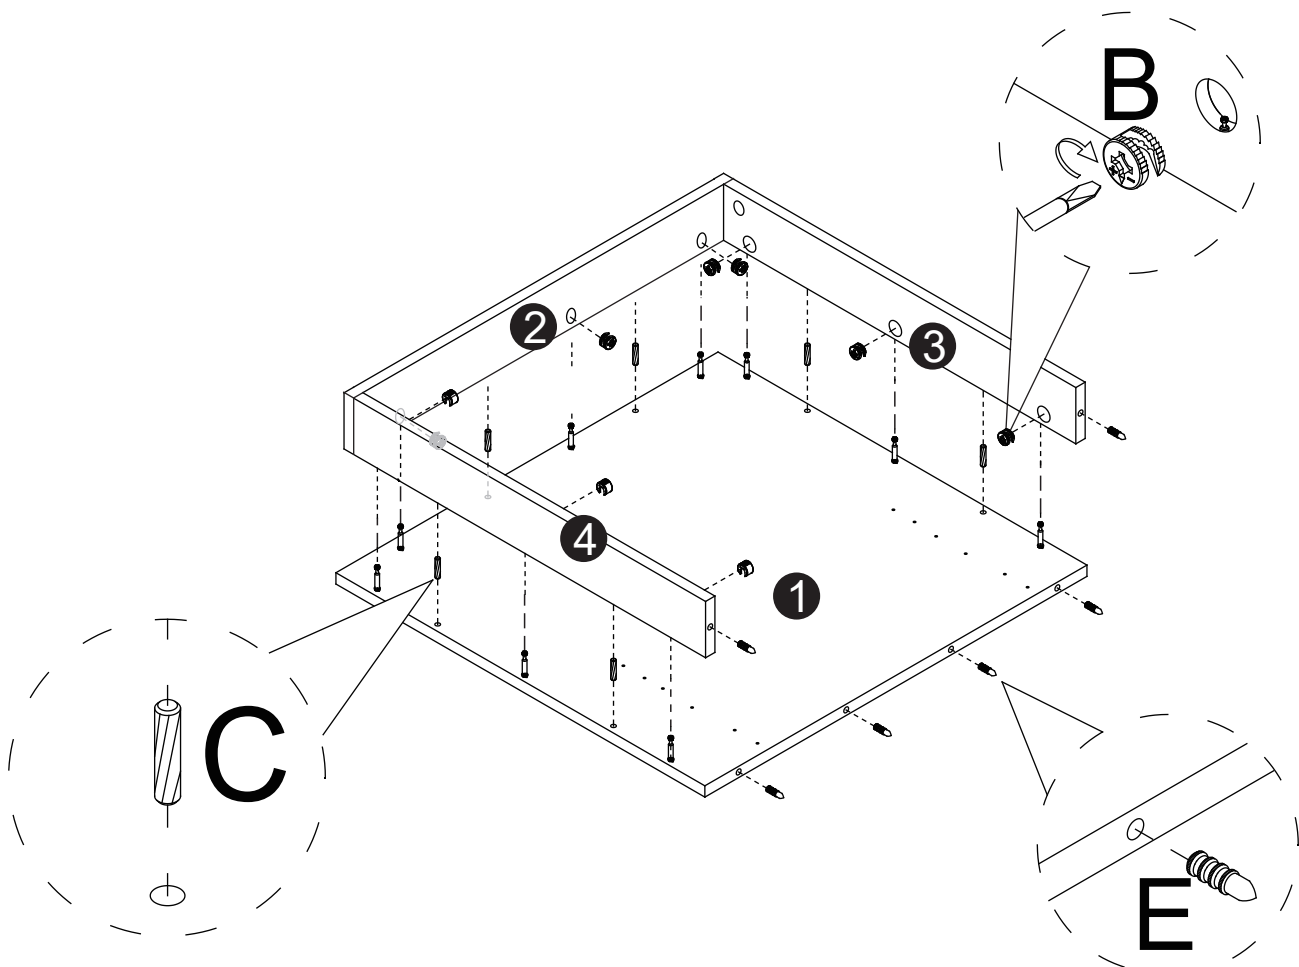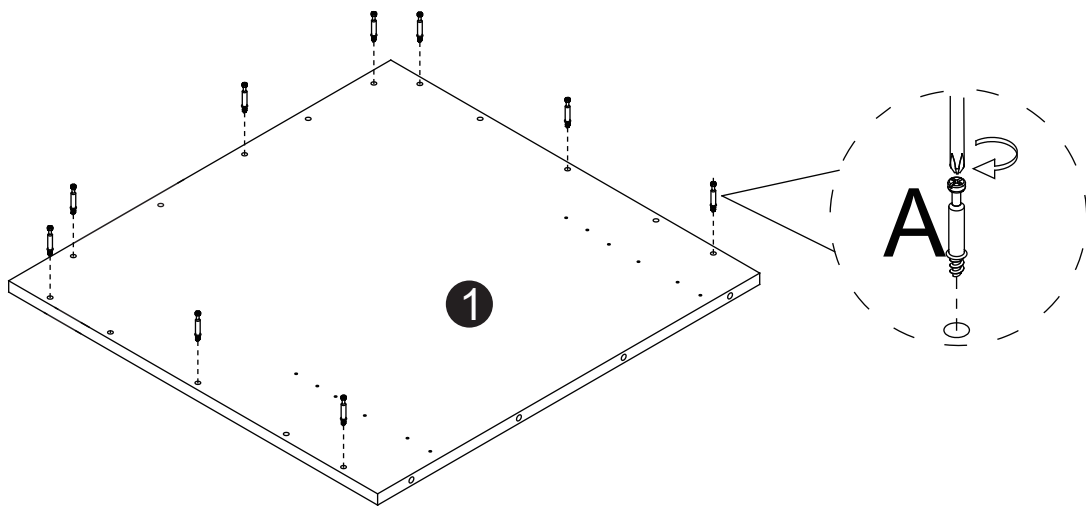


A		9 pcs
B		9 pcs
C		6 pcs
E		6 pcs

STEP 3

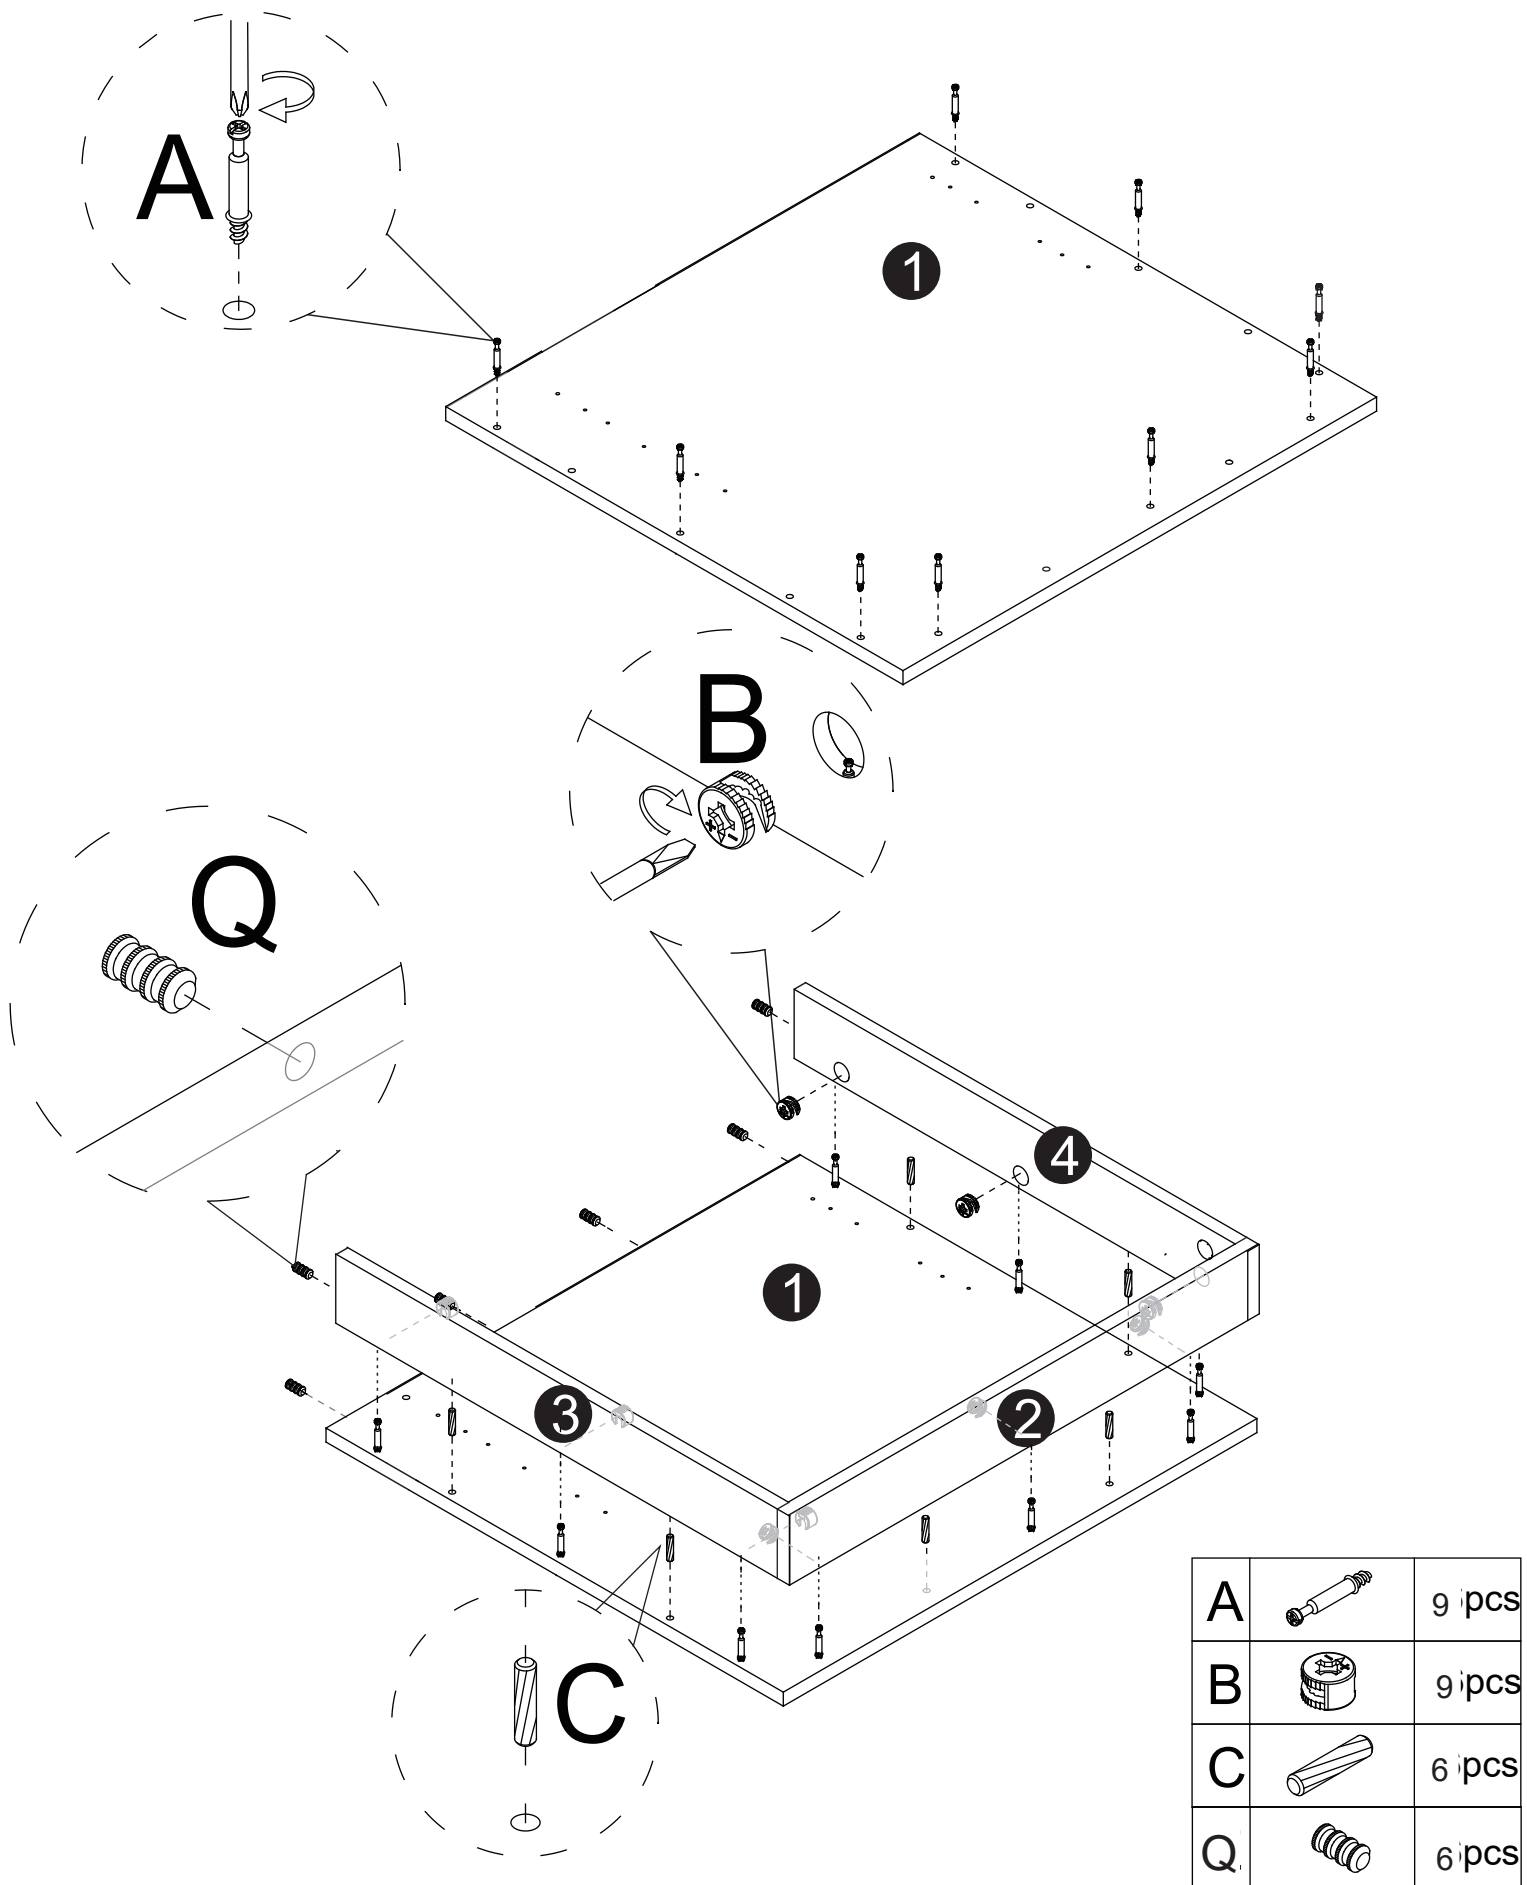


STEP 4

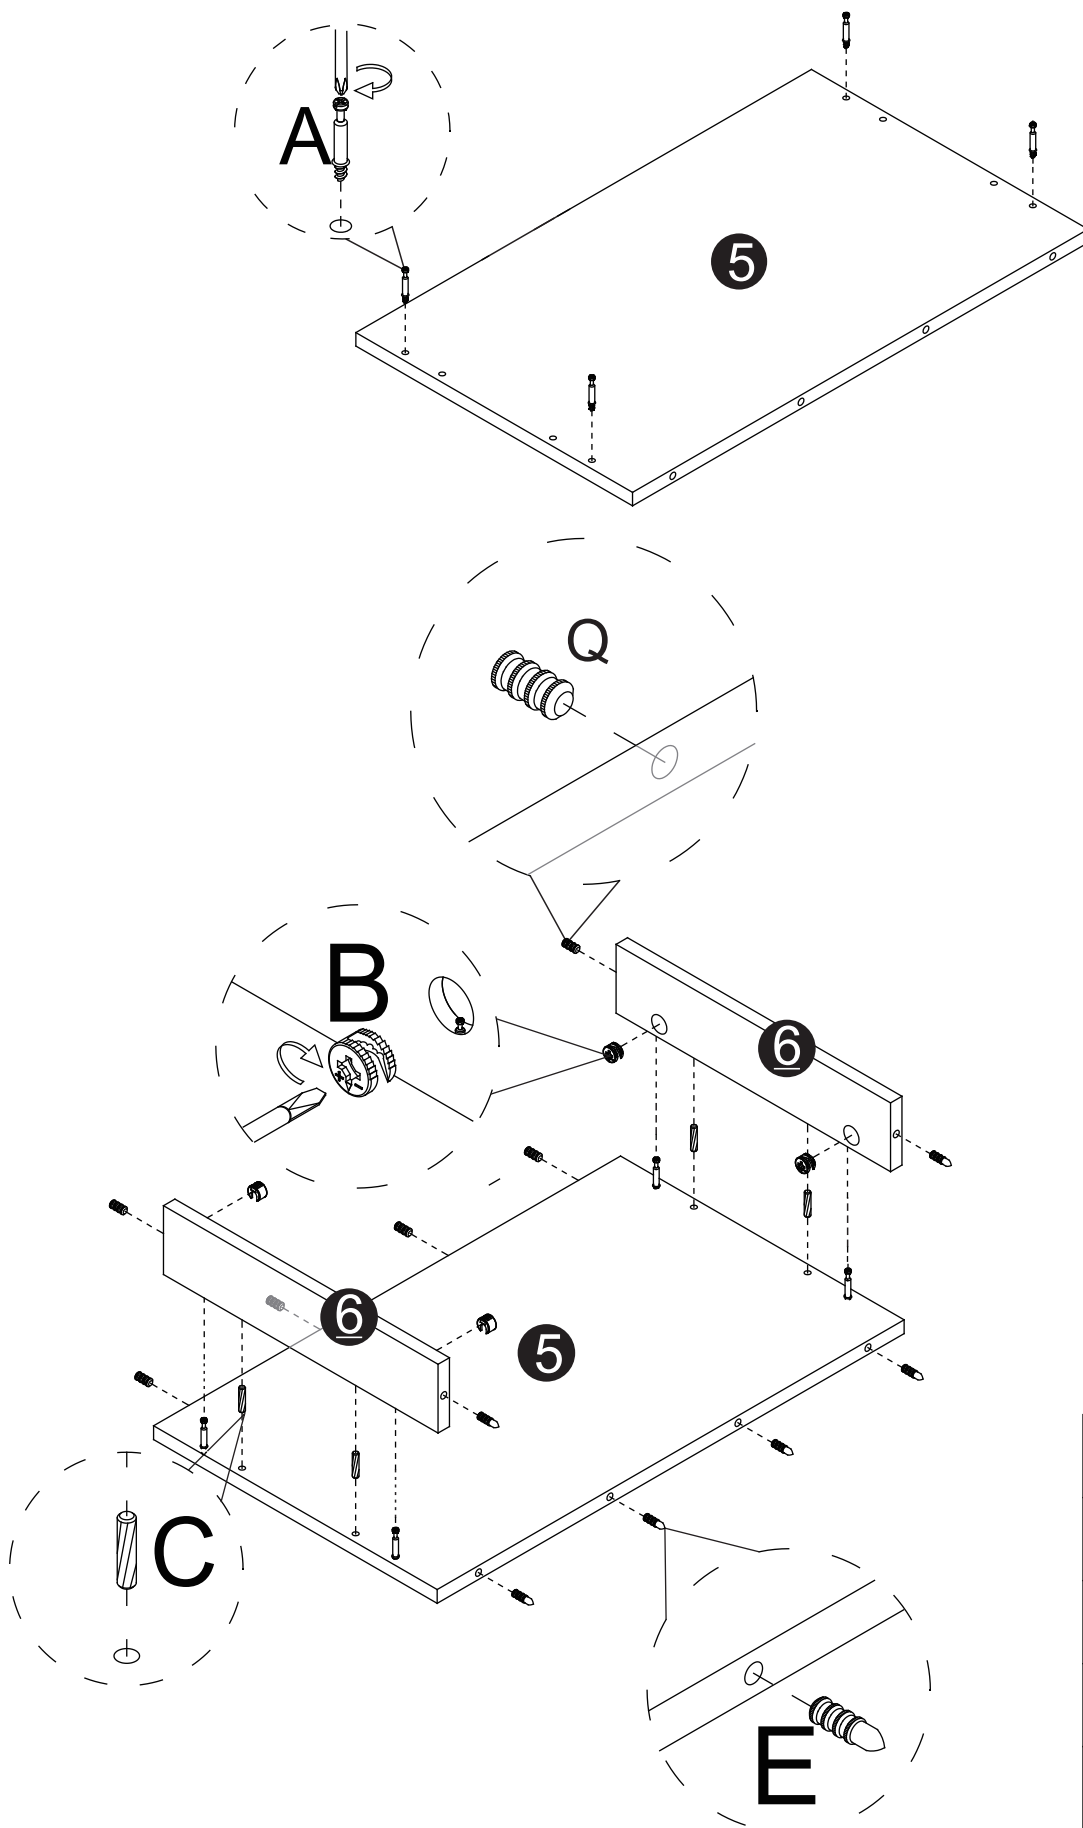



A		4 pcs
B		4 pcs
C		4 pcs
E		6 pcs
Q		6 pcs

STEP 5

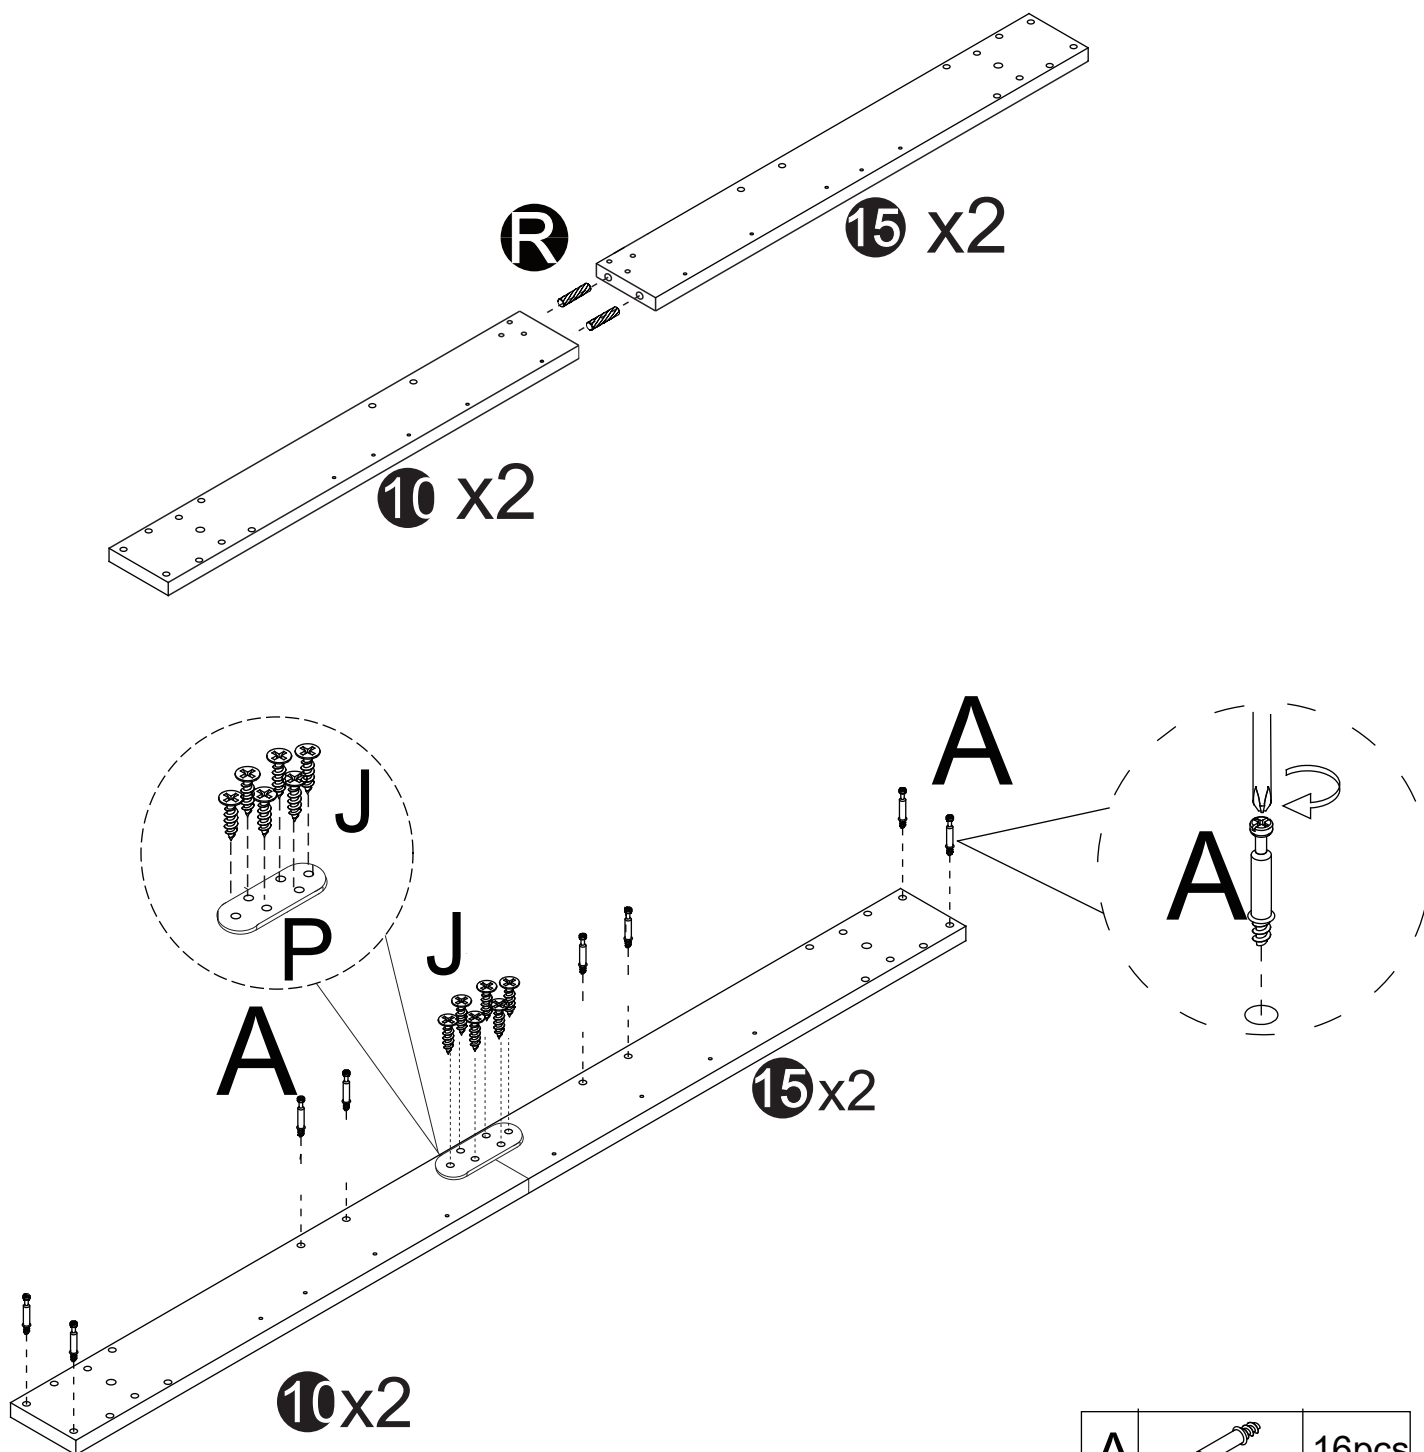

A		16pcs
P		2pcs
J		12pcs;
R	 8*30 MM	4pcs


STEP 6

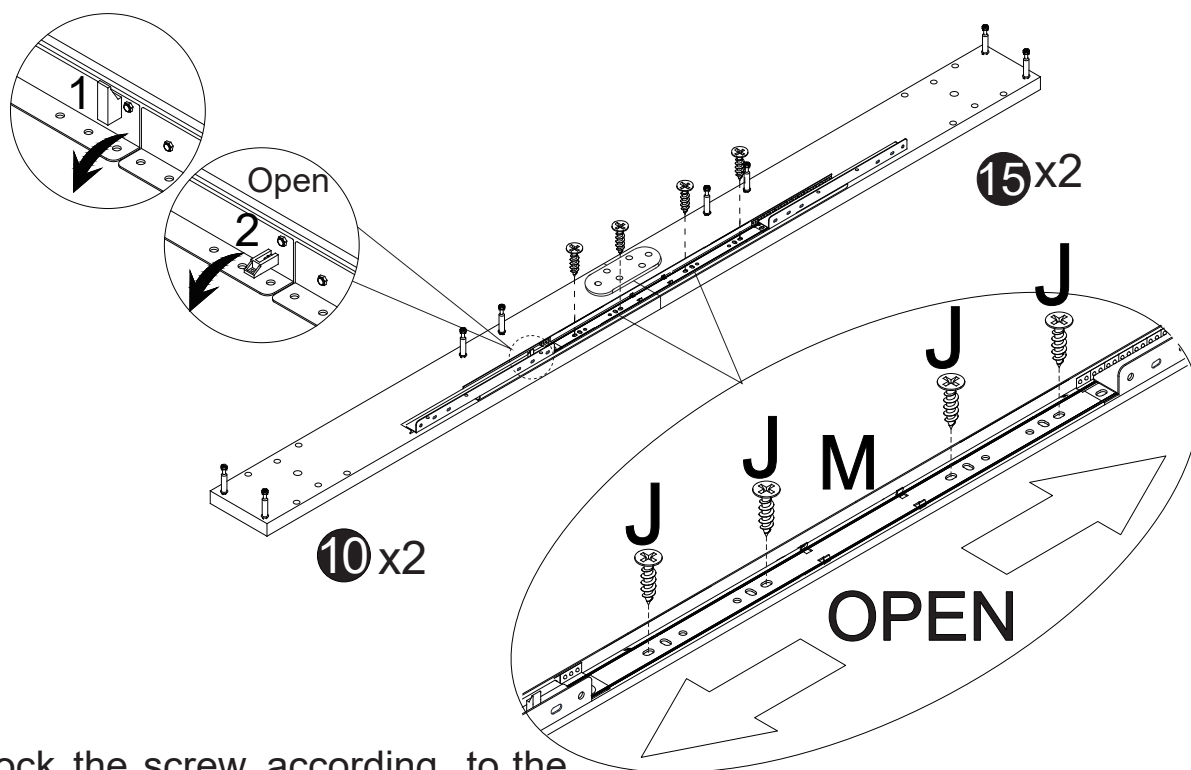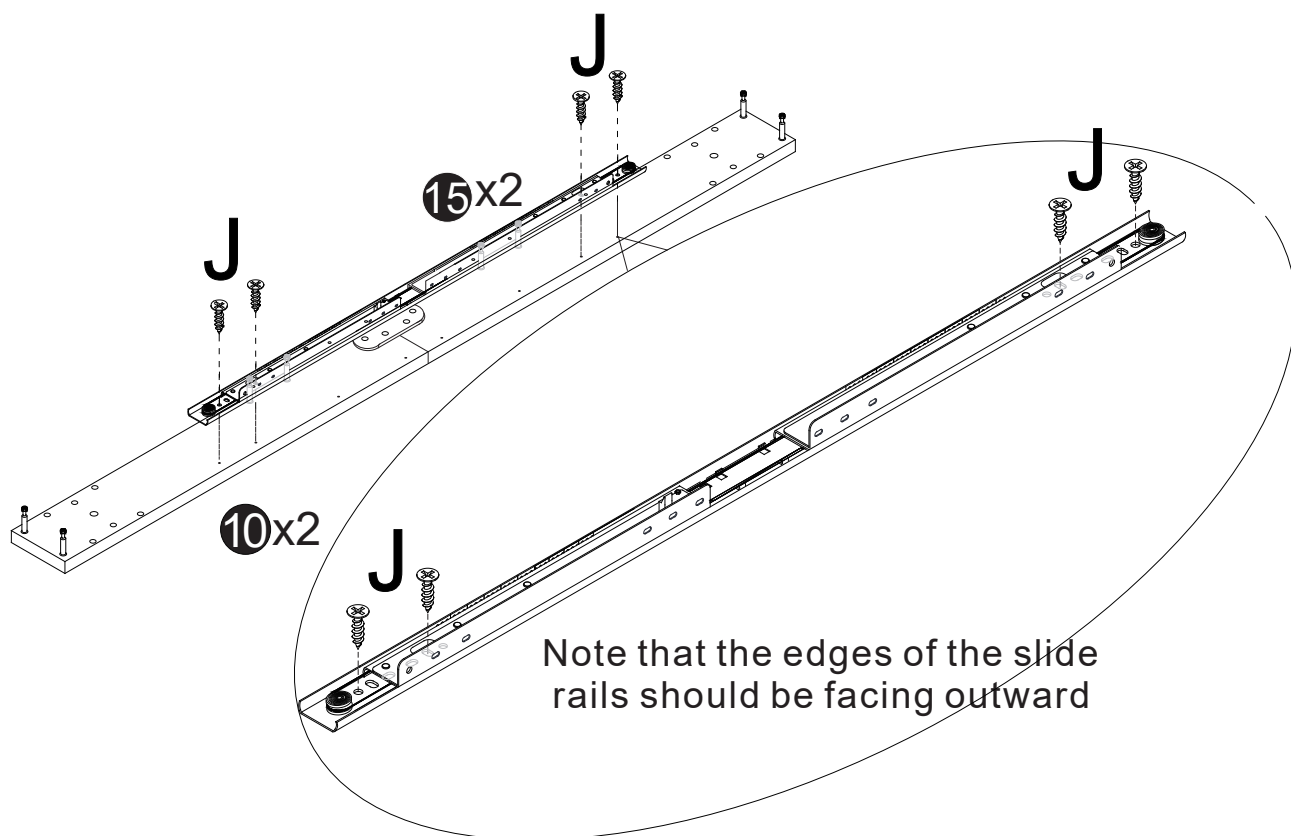

Lock the screw according to the position of the instruction manual.


M		2pcs
J		16pcs

STEP 7

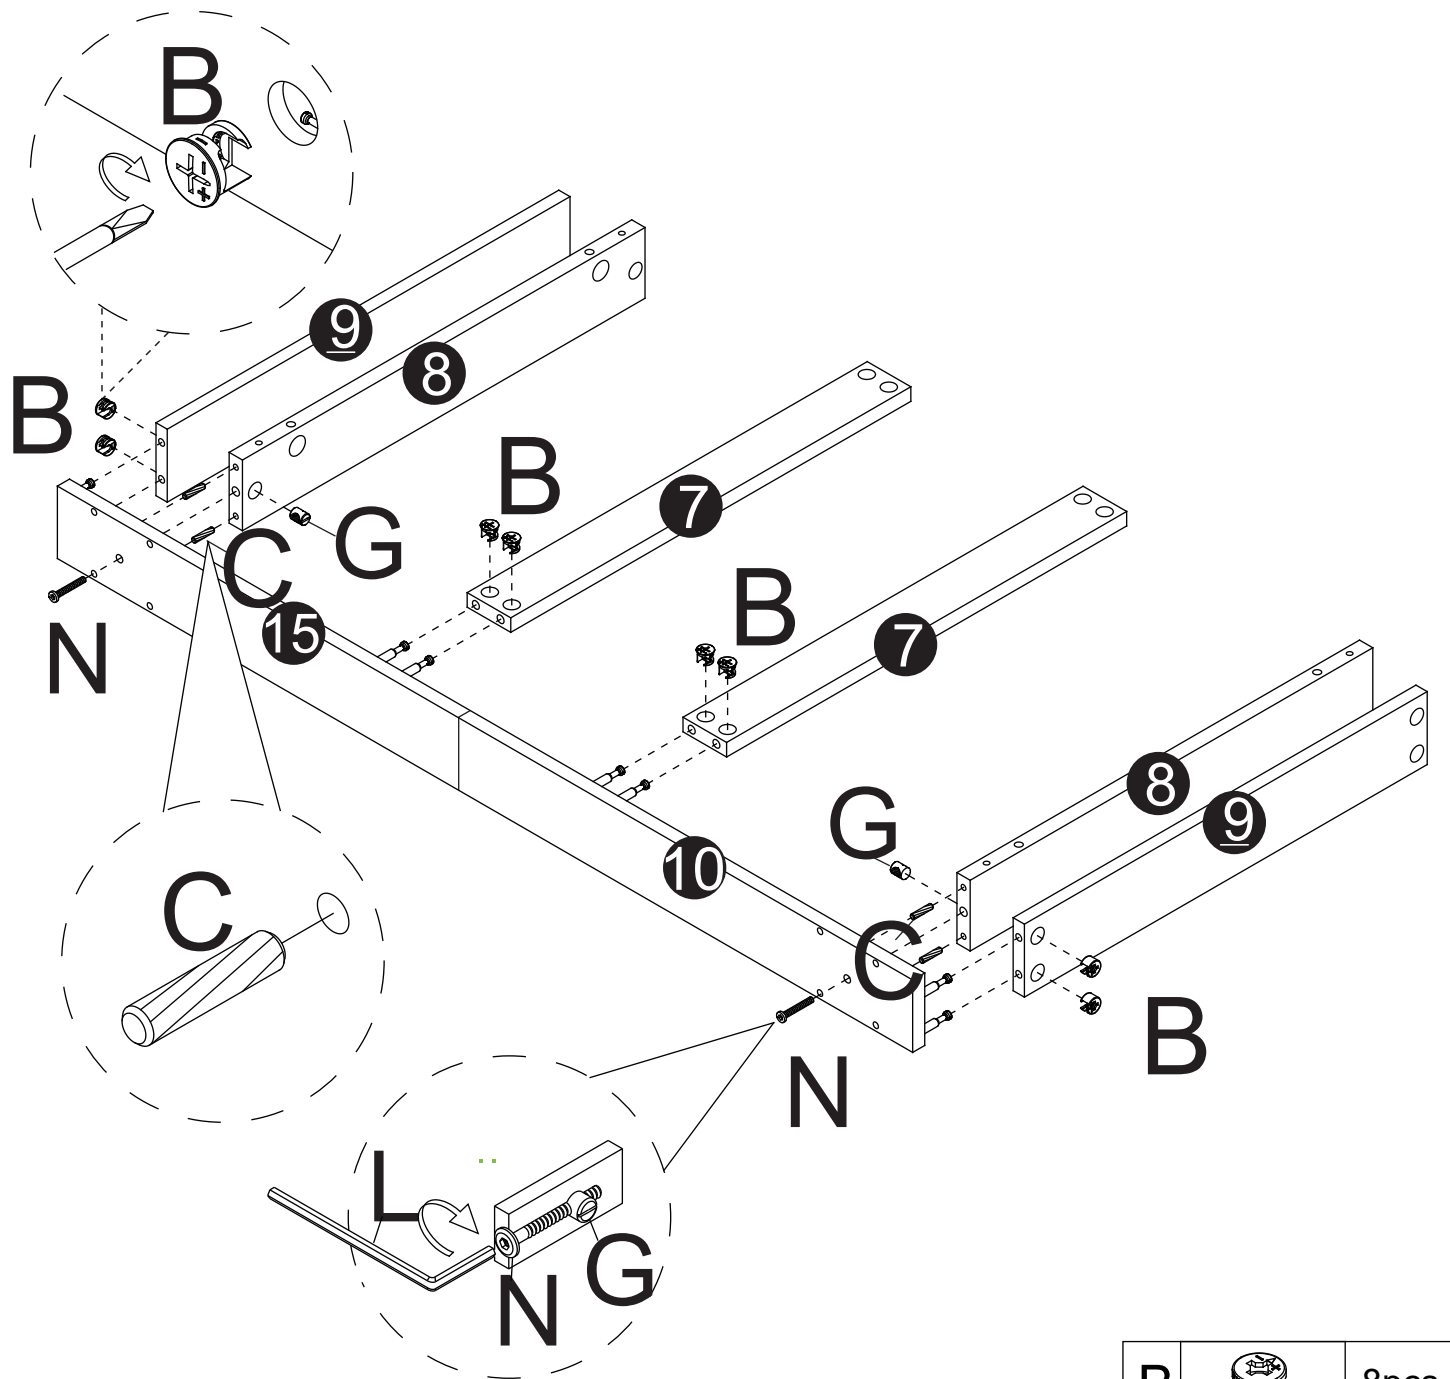


B		8pcs
C		4pcs
N		2pcs
G		2pcs
L		1pc

STEP 8

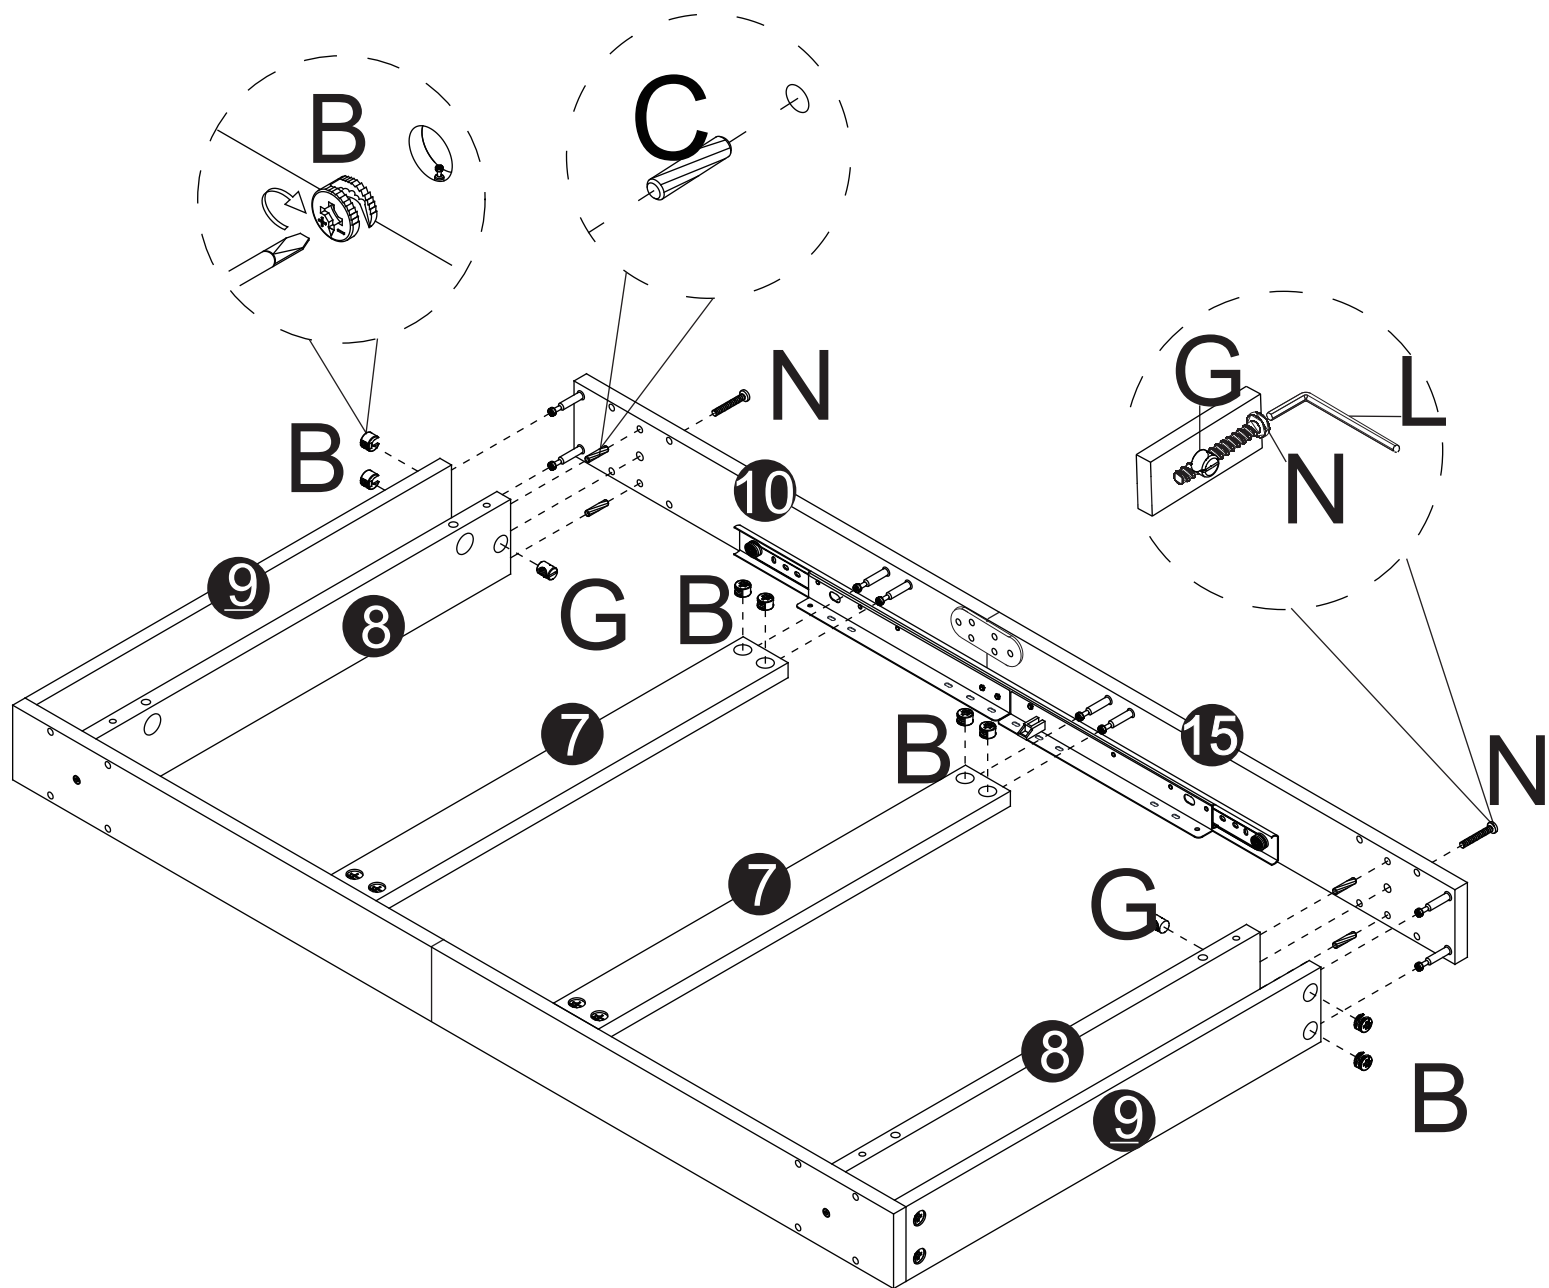



B		8pcs
C		4pcs
N		2pcs
G		2pcs
L		1pc

STEP 9

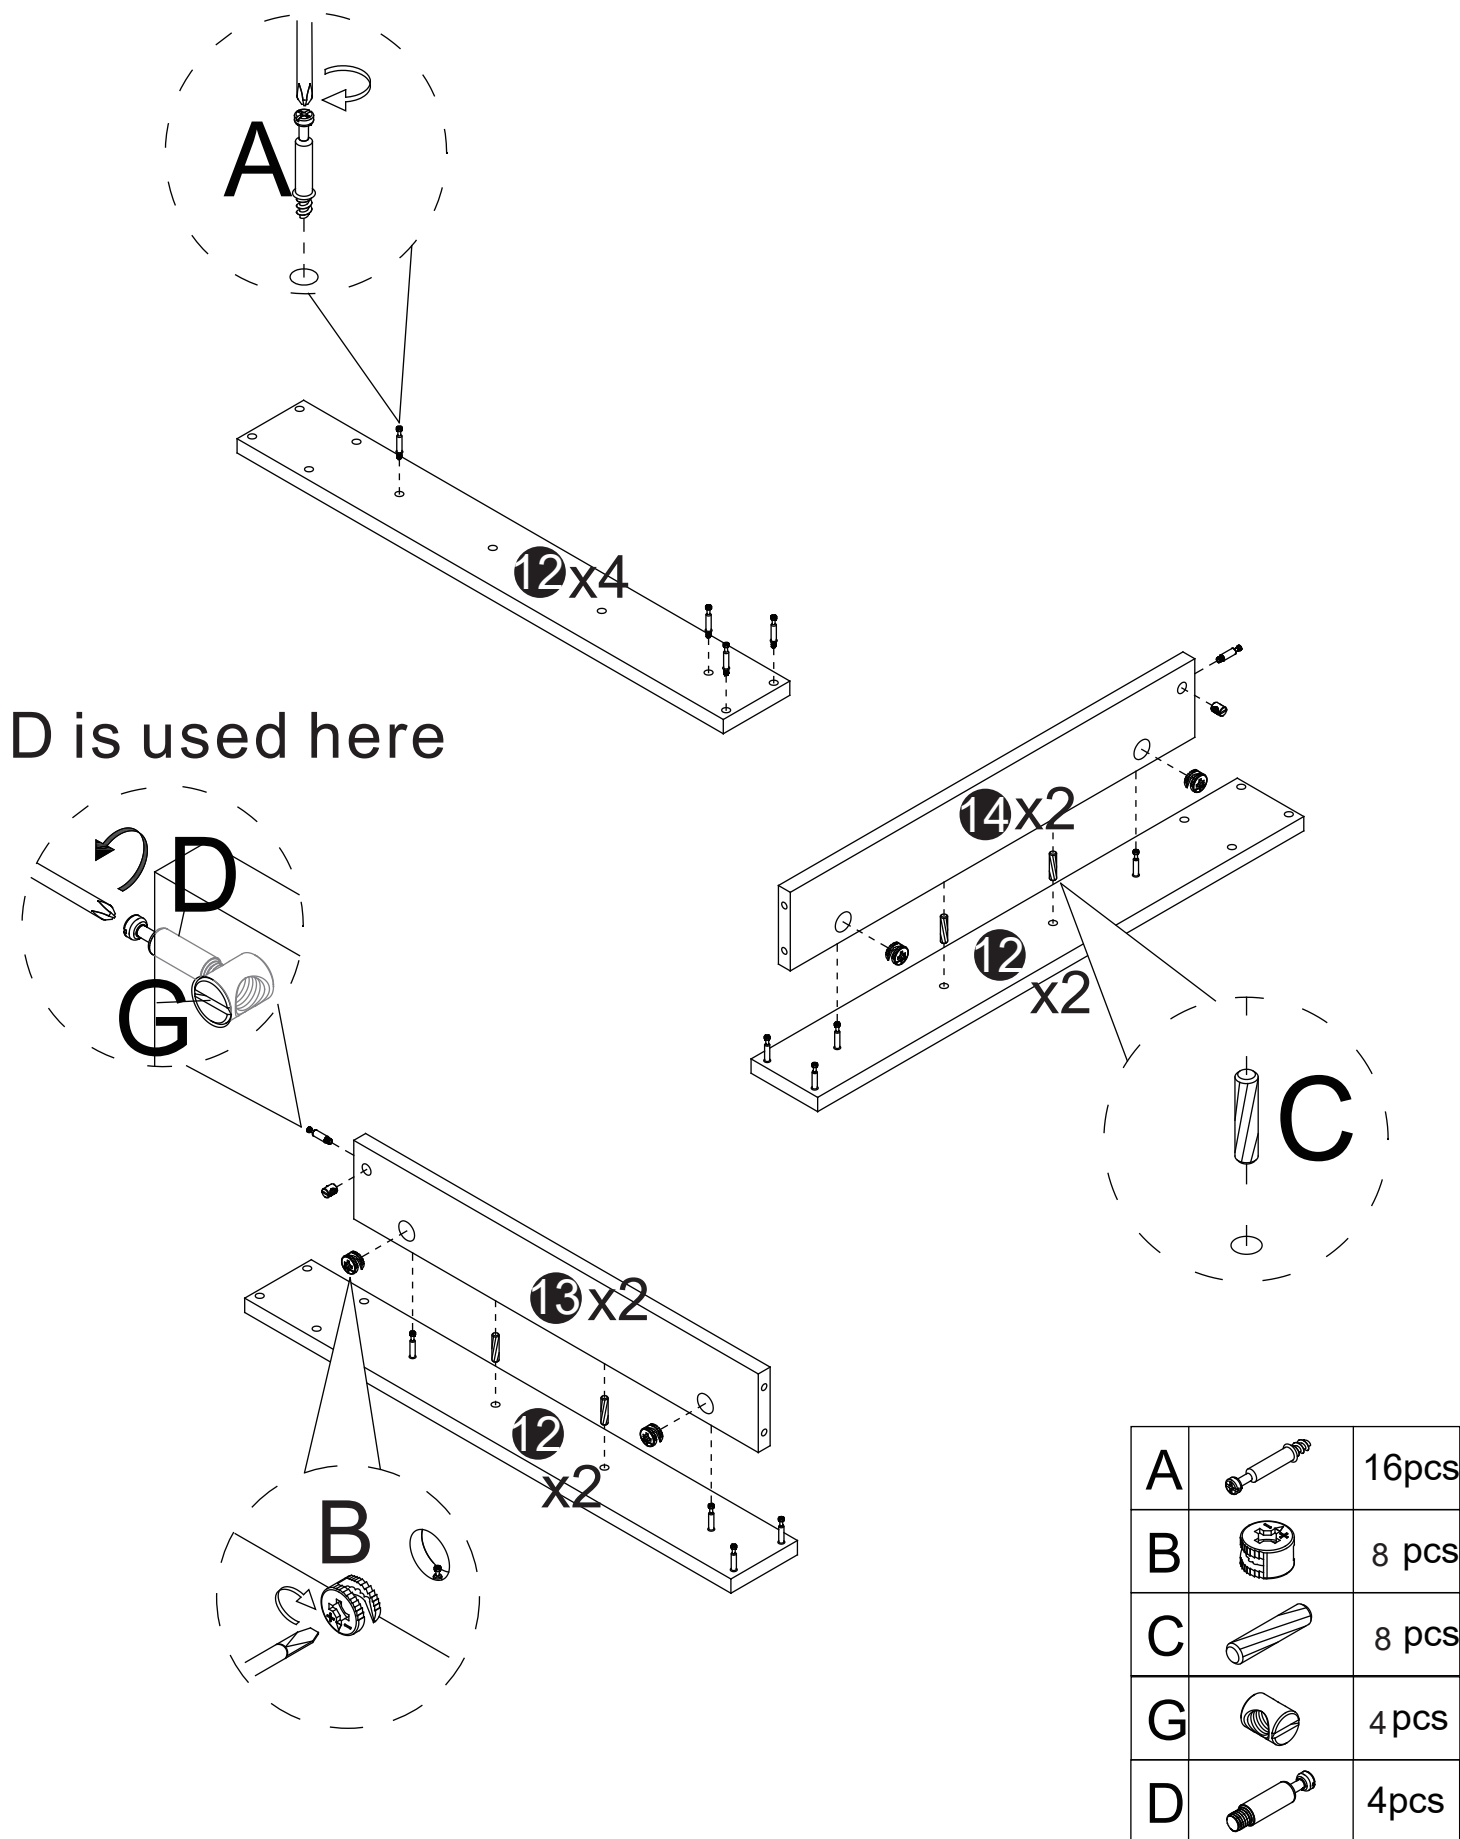


STEP 10

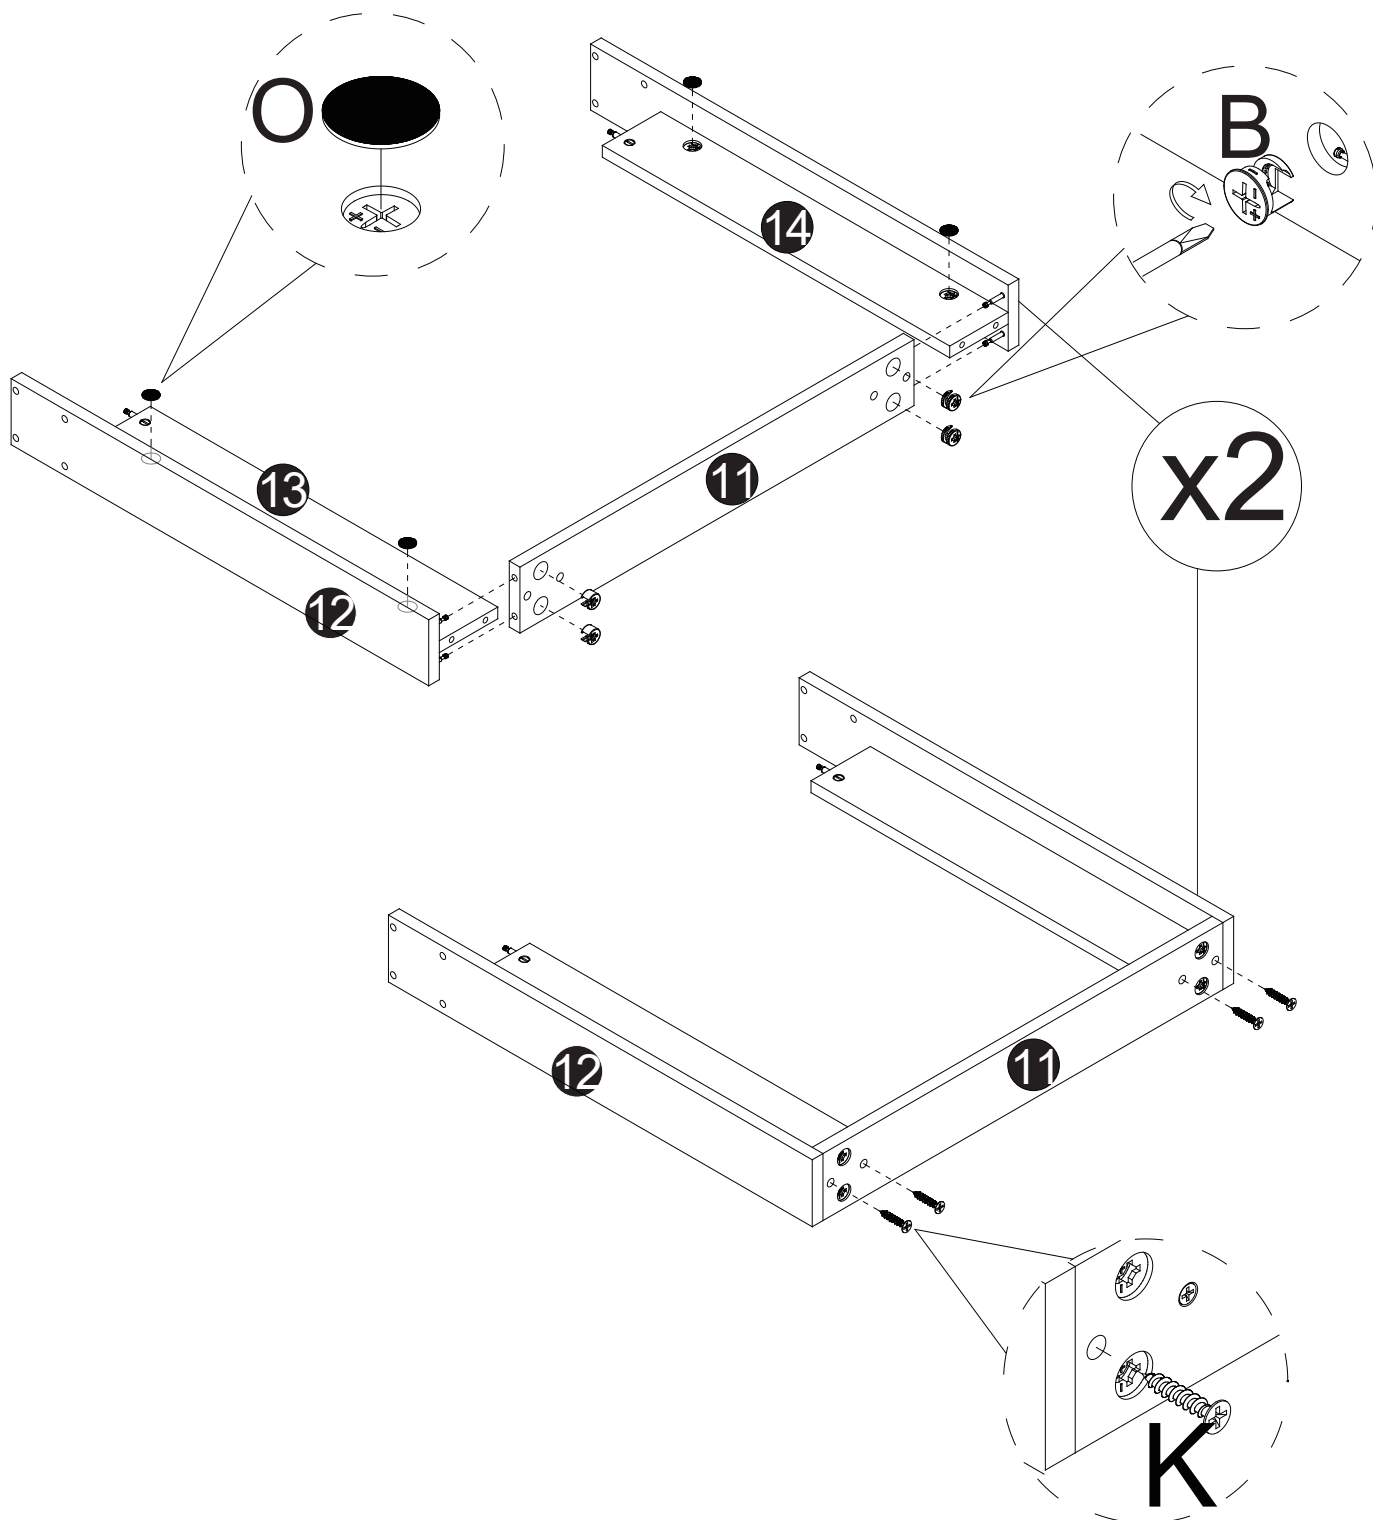


B		8pcs
K		8pc
O		8pcs

STEP 11

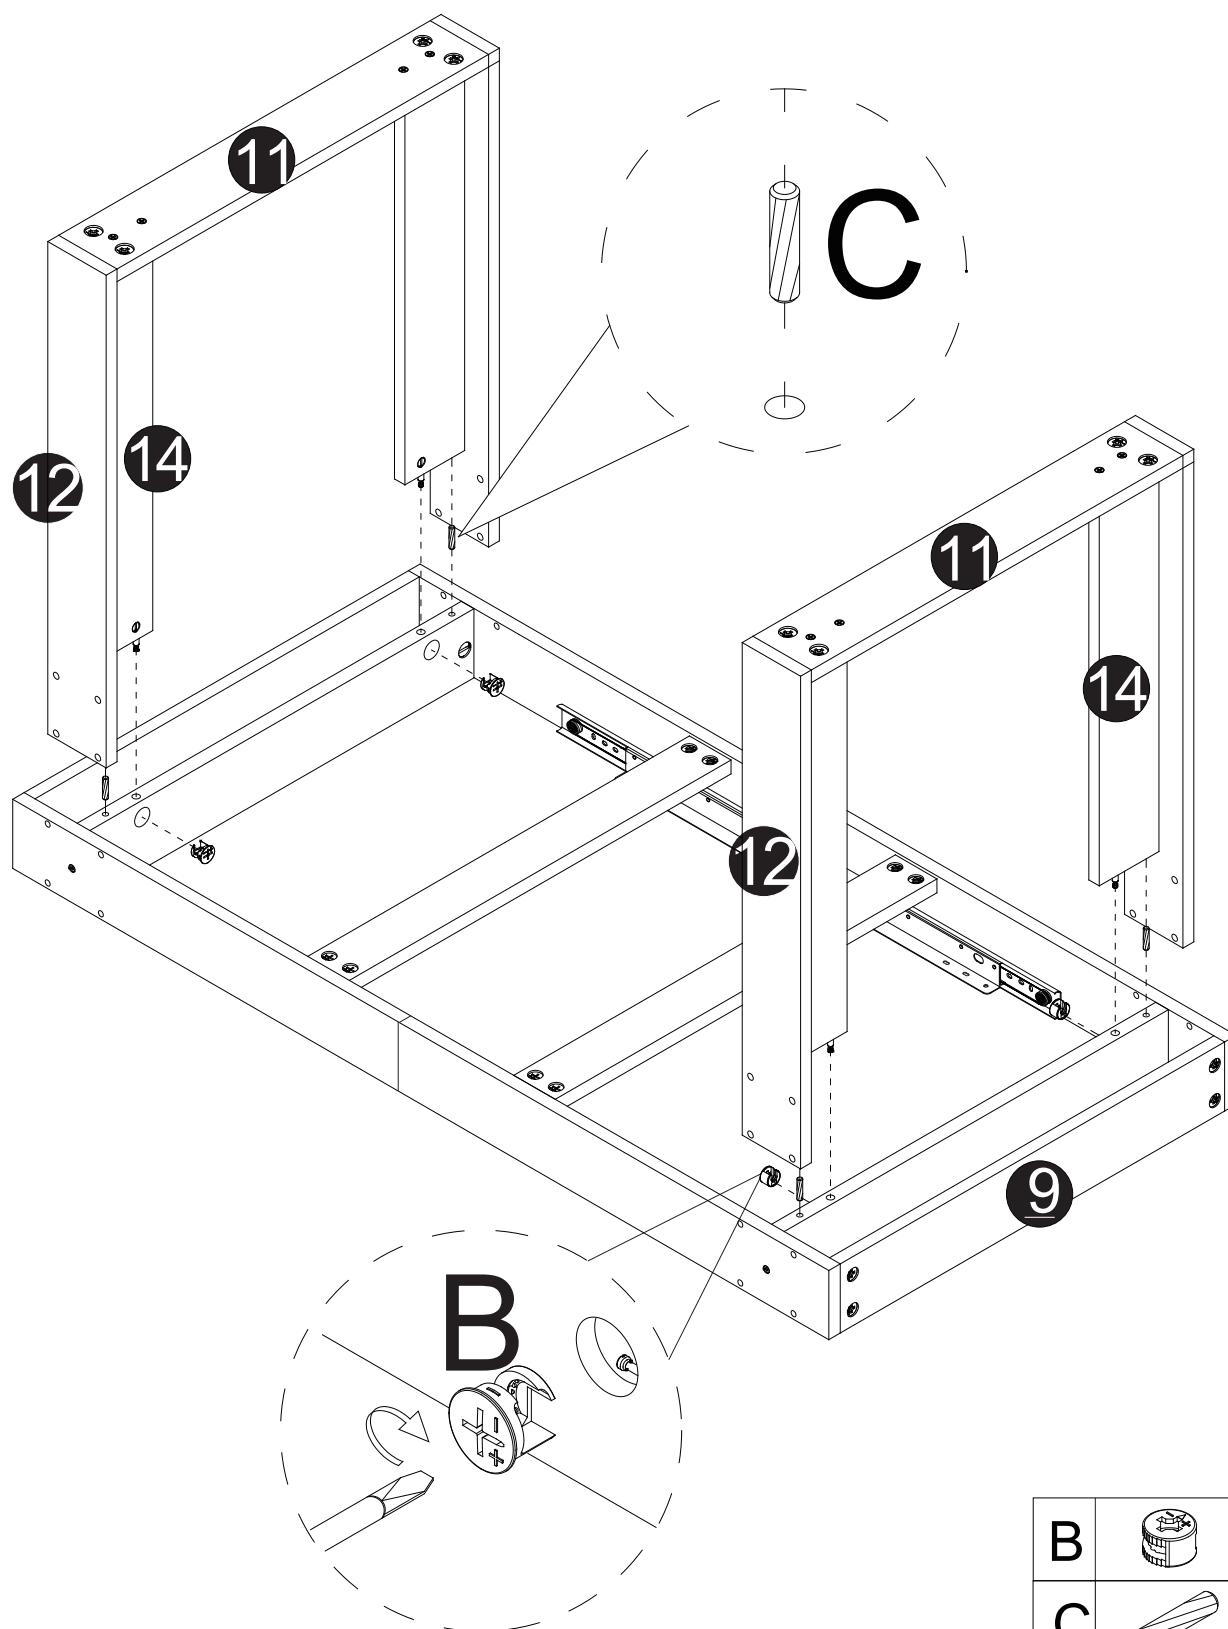



B		4pcs
C		4pcs

STEP 12

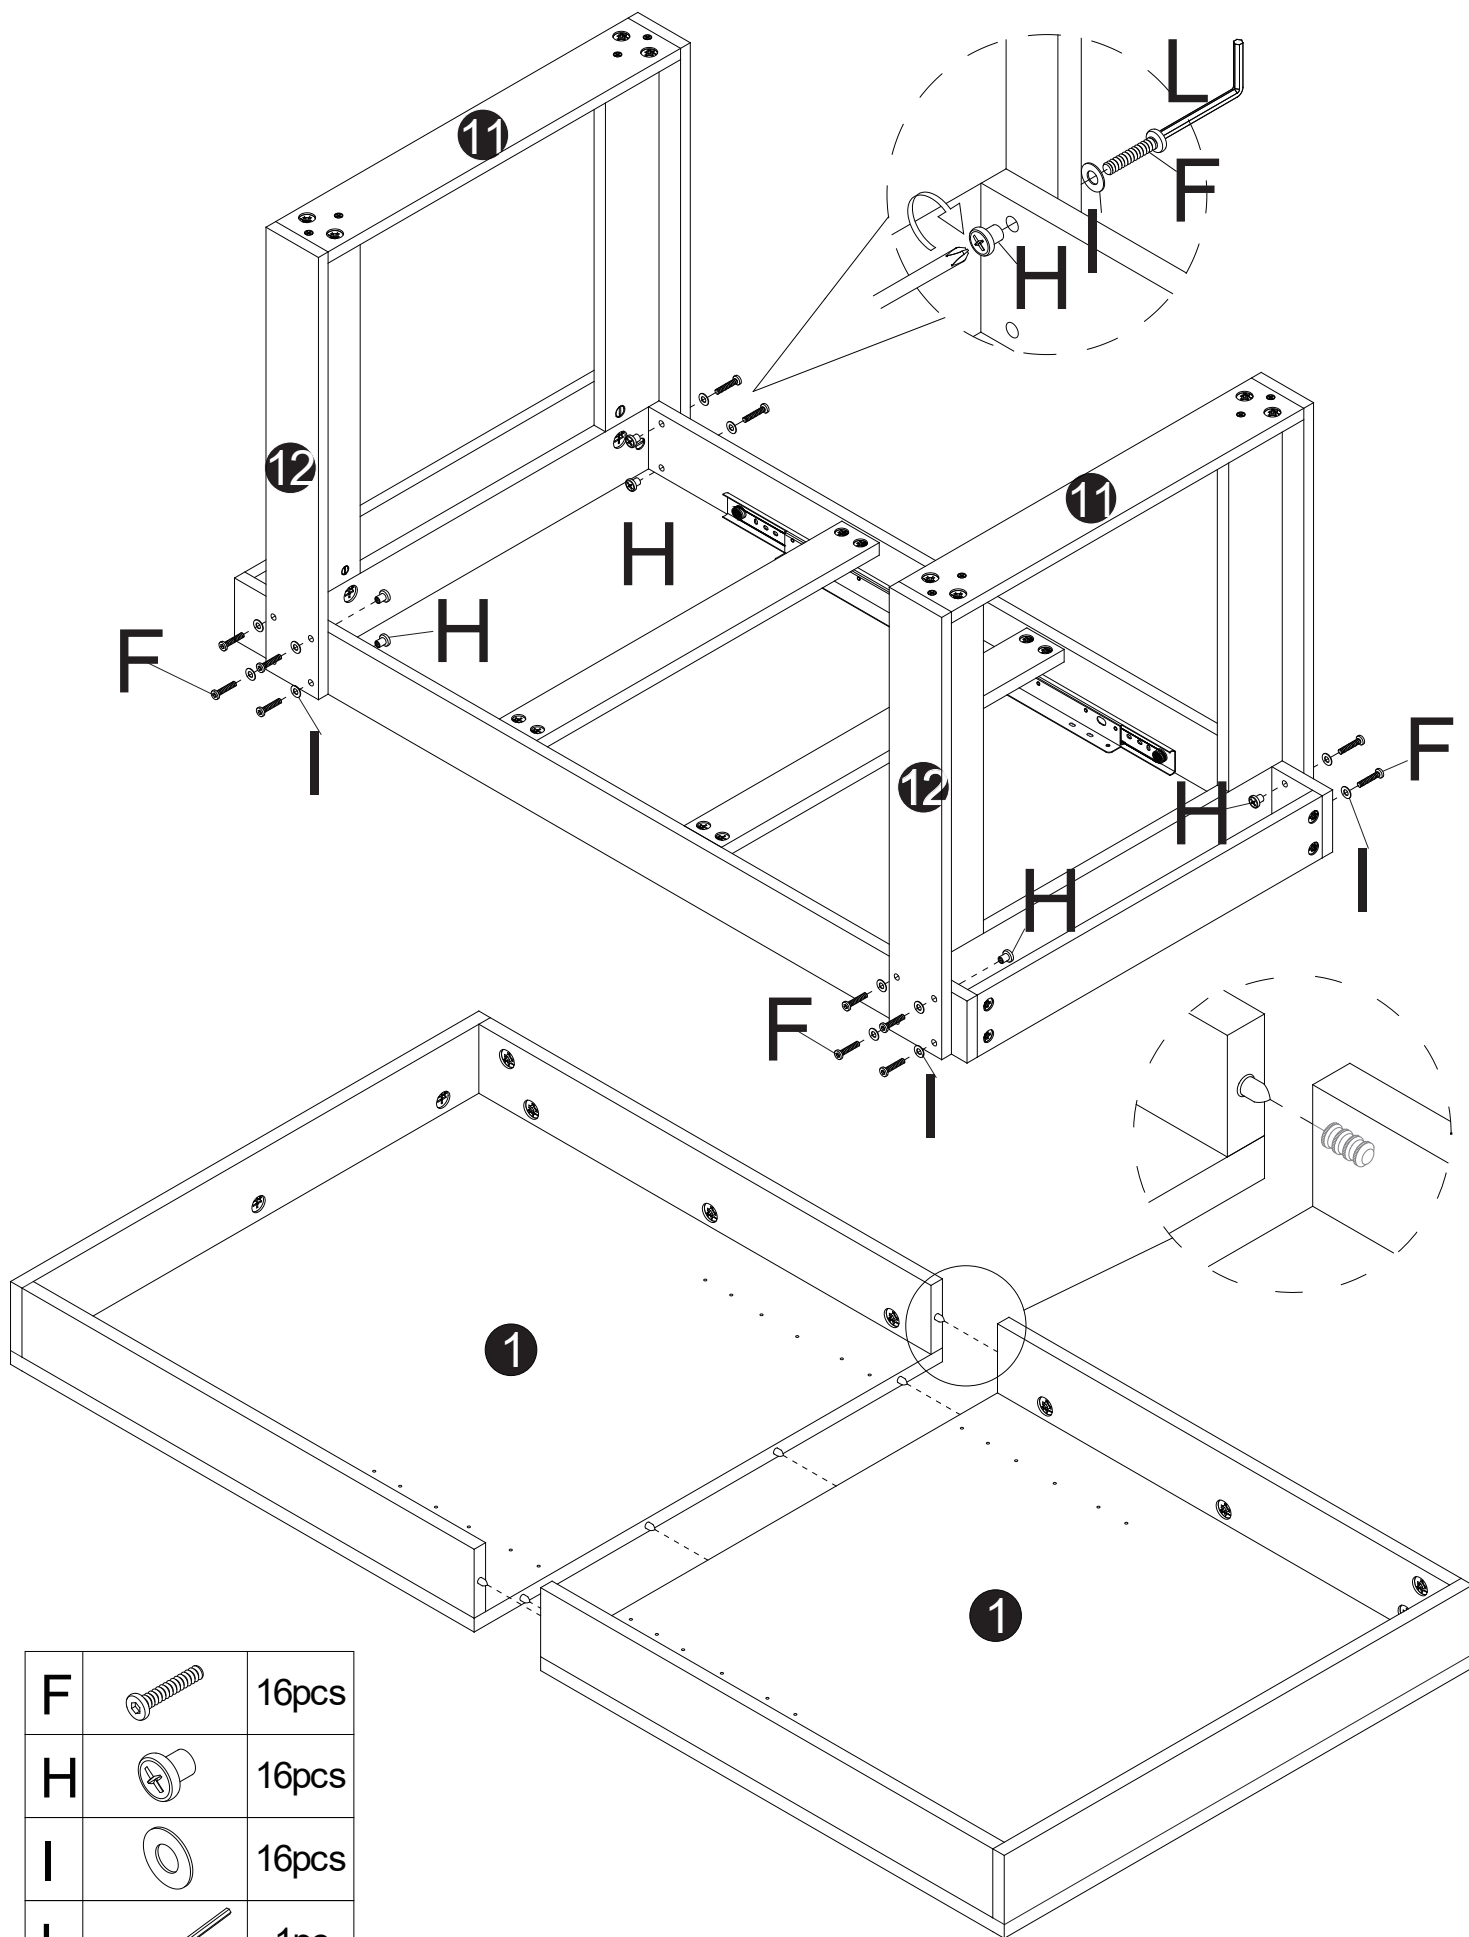


F		16pcs
H		16pcs
I		16pcs
L		1pc

STEP 13

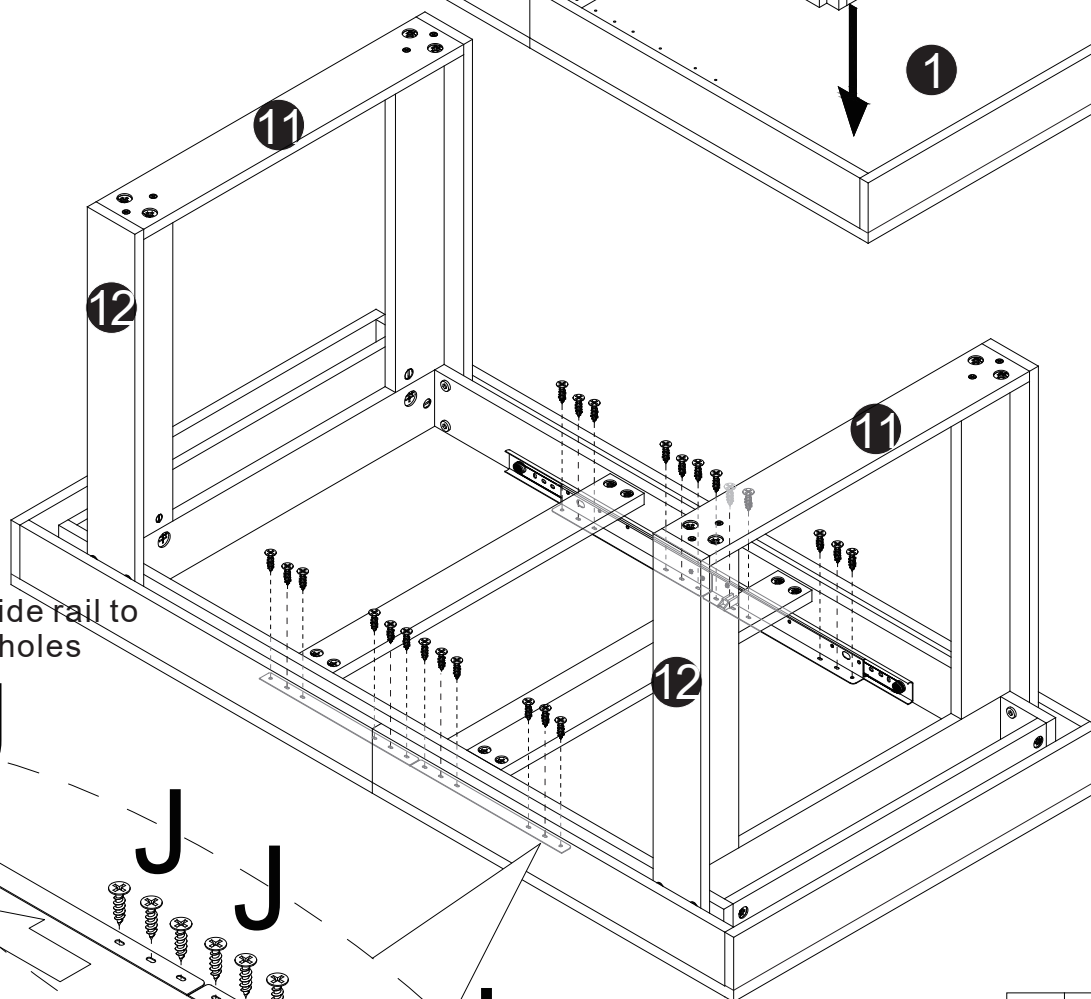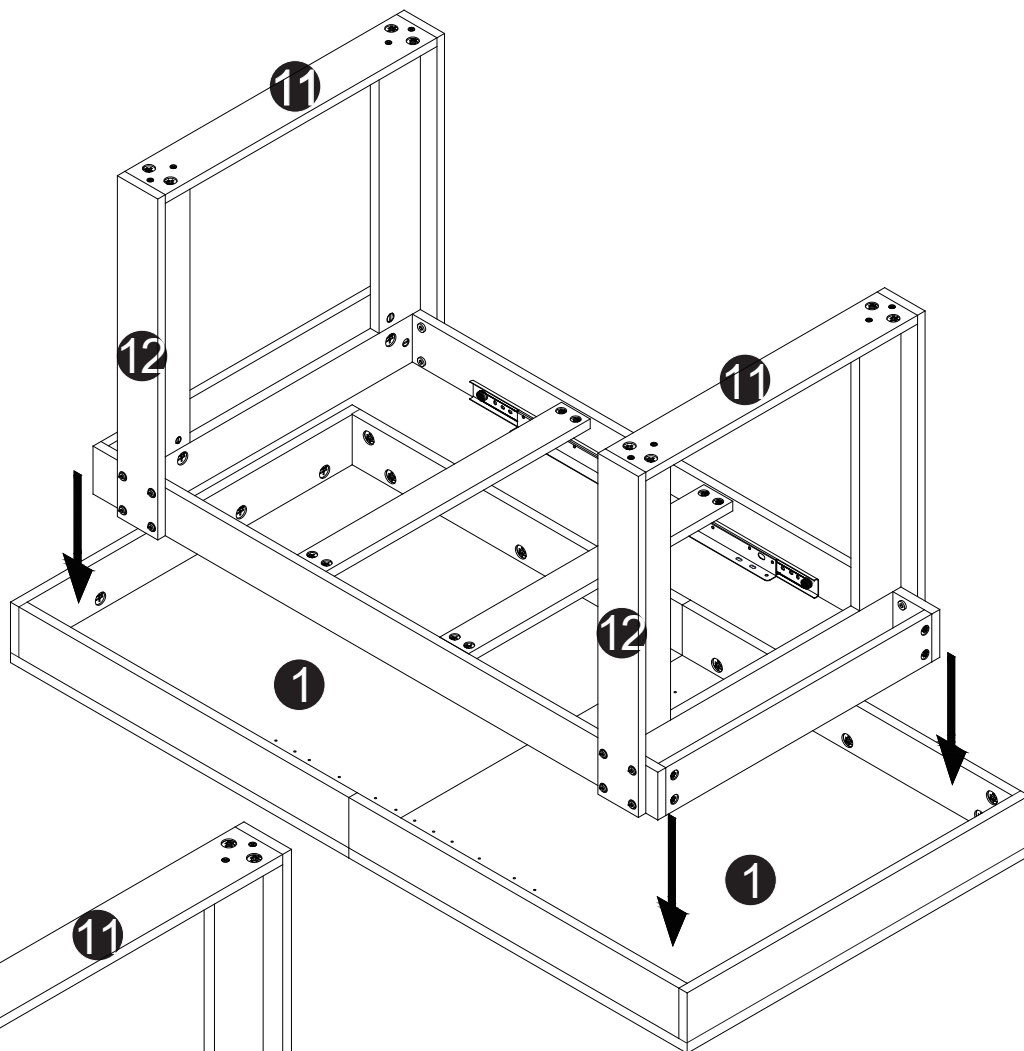

Move the slide rail to position its holes

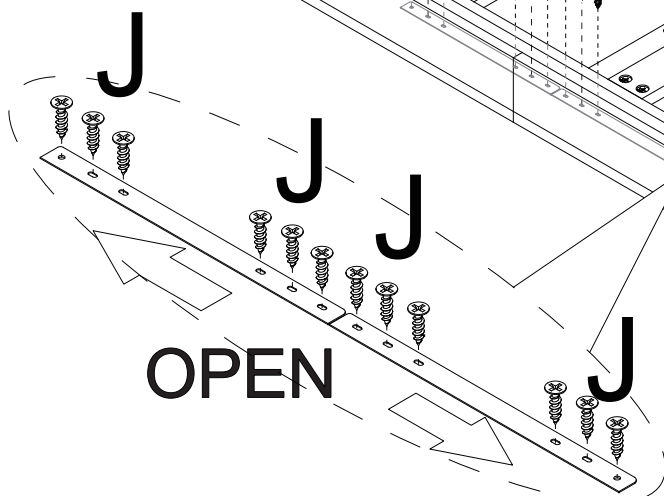

J		24pcs
---	---	-------

STEP 14

